

Cooper Lighting Solutions Photometric Lab
1121 Highway 74 South
Peachtree City, GA 30269



Scaled data based on original data using
LM-79-08 Approved Method: Electrical and Photometric Measurements of Solid-State
Lighting Products

Test Report Prepared for

Cooper Lighting Solutions

(formerly Eaton)

Brand: METALUX

Report Number: P859939

Luminaire Tested: **SPHB-18HE-M-L840-CD**

Issue Date: 7/11/2024

This test was performed under the Supervised Manufacturer's Testing Program. The results of this test have not been influenced by sources from within Cooper Lighting Solutions or from external interests.



Test Information

Test Method: LM-79-08
Report Number: P859939
TEST IS SCALED FROM IESNA LM-79-08 TEST DATA (G3-2404-343-1)
Test Lab: INNOVATION CENTER
Issue Date: 7/11/2024
Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)
Product Line: METALUX
Catalog Number: SPHB-18HE-M-L840-CD
Description: 18000 Lumen High Efficacy Select Pro High Bay with Medium Lens and, 4000K 80CRI LEDs
Light Source: -
Ballast/Driver: -

Luminaire Equipment: Sample No. Condition Description

Summary


Lumens per Lamp: N/A
Luminaire Lumens: 18038.0 lumens
Efficiency: N/A
Efficacy: 166.9 lumens/watt
Spacing Criteria (0/90/45): 1.25 / 1.16 / 1.22
Luminous Opening: Rectangular (W 1' x L: 1.38' x H: 0')
CIE Type: Direct

Input Watts (W): 108.1
Input Voltage (V): NR
Input Current (Ain): NR
Voltage Rise (V): NR
Power Factor: NR
Total Harmonic Distortion (THDi): NR
Frequency (hertz): 60
Stabilization Time: NR
Operation Time: NR
Ambient Temperature (°C): NR
Test Distance: 25 FT

TEST NUMBER: P859939

CATALOG NUMBER: SPHB-18HE-M-L840-CD

Luminous Intensity Polar Plot

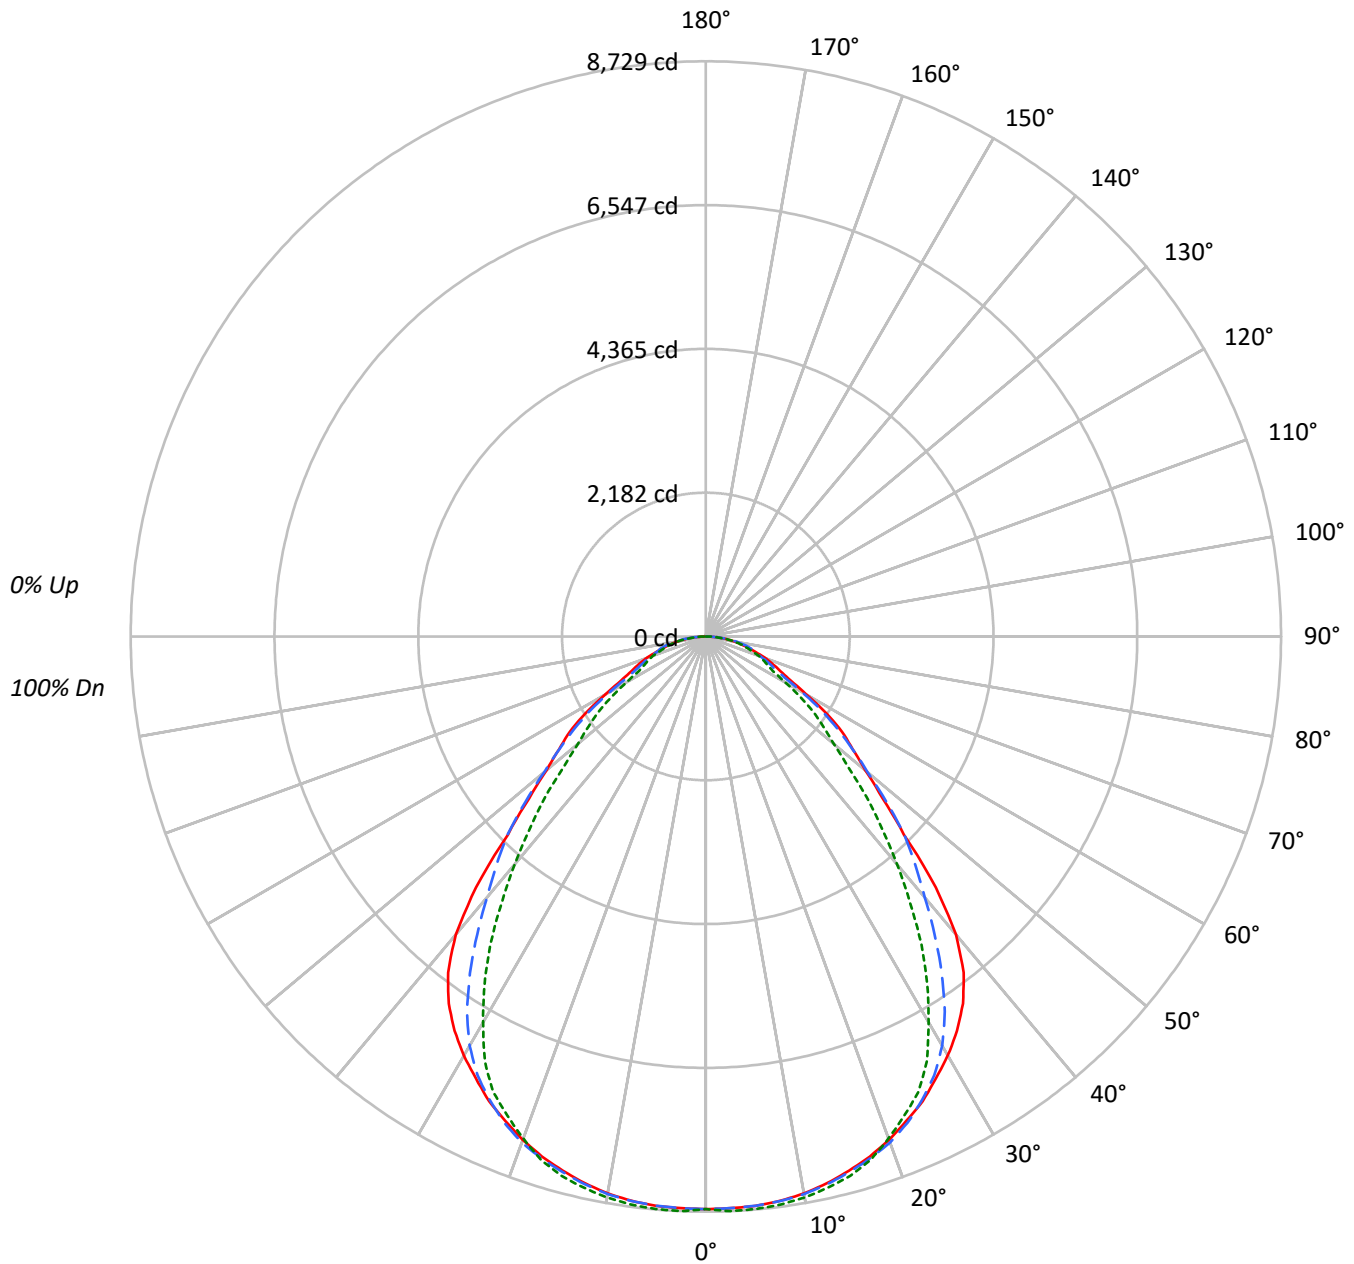



TEST NUMBER: P859939

CATALOG NUMBER: SPHB-18HE-M-L840-CD

COEFFICIENT OF UTILIZATION - ZONAL CAVITY METHOD:

RF	20				20					20					20					20
RC	80				70					50					30					0
RW	70	50	30	10	70	50	30	10	50	30	10	50	30	10	50	30	10	50	30	10
RCR																				
0	119	119	119	119	116	116	116	116	111	111	111	106	106	106	102	102	102	100		
1	110	106	103	99	108	104	101	98	100	97	95	96	94	92	92	91	89	87		
2	102	95	89	84	99	93	87	83	89	85	81	86	82	79	83	80	77	75		
3	94	85	78	72	92	83	77	71	80	75	70	78	73	69	75	71	68	66		
4	87	76	69	63	85	75	68	62	73	66	61	70	65	61	68	64	60	58		
5	81	69	61	55	79	68	61	55	66	59	54	64	58	54	62	57	53	51		
6	75	63	55	49	73	62	54	49	60	54	48	59	53	48	57	52	48	46		
7	70	58	50	44	68	57	49	44	55	49	44	54	48	43	53	47	43	41		
8	66	53	45	40	64	52	45	40	51	44	39	50	44	39	49	43	39	37		
9	61	49	41	36	60	48	41	36	47	41	36	46	40	36	45	40	36	34		
10	58	45	38	33	57	45	38	33	44	37	33	43	37	33	42	37	33	31		

AVERAGE LUMINANCE (cd/sqm):

	0°	45°	90°
0°	67785	67785	67785
5°	67917	67899	68285
10°	67976	68049	68467
15°	67778	67954	68426
20°	67482	67824	67282
25°	66989	66802	65667
30°	66141	64582	60896
35°	64752	59415	54275
40°	60092	52587	45970
45°	46882	47008	38044
50°	38289	38832	30723
55°	34307	33012	26996
60°	27464	25999	21600
65°	23015	21070	19102
70°	21852	20076	19449
75°	19827	21313	18757
80°	19926	21776	19768
85°	17335	20306	16512



TEST NUMBER: P859939

CATALOG NUMBER: SPHB-18HE-M-L840-CD

ZONAL LUMENS:

Zone	Lumens	% Fixture
0°-10°	826.3	4.6
10°-20°	2376.4	13.2
20°-30°	3547.6	19.7
30°-40°	3871.1	21.5
40°-50°	3166.7	17.6
50°-60°	2082.1	11.5
60°-70°	1194.6	6.6
70°-80°	723.9	4.0
80°-90°	243.1	1.3
90°-100°	6.3	0.0
100°-110°	0.0	0.0
110°-120°	0.0	0.0
120°-130°	0.0	0.0
130°-140°	0.0	0.0
140°-150°	0.0	0.0
150°-160°	0.0	0.0
160°-170°	0.0	0.0
170°-180°	0.0	0.0
0°-30°	6750.3	37.4
0°-40°	10621.4	58.9
0°-60°	15870.2	88.0
0°-90°	18031.7	100.0
90°-120°	6.3	0.0
90°-150°	6.3	0.0
90°-180°	6.0	0.0
0°-180°	18038.0	100.0

CANDELA DISTRIBUTION:

	0°	22.5°	45°	67.5°	90°	Flux
0°	8690	8690	8690	8690	8690	
5°	8674	8661	8672	8708	8721	825
15°	8394	8392	8415	8469	8474	2369
25°	7784	7802	7762	7668	7630	3581
35°	6800	6647	6240	5815	5700	4215
45°	4250	4568	4262	3762	3449	3374
55°	2523	2454	2428	2086	1985	2222
65°	1247	1229	1142	1111	1035	1275
75°	658	712	707	678	622	712
85°	194	220	227	198	184	210
90°	1	16	32	38	40	9
95°	1	2	3	3	2	0
105°	0	0	0	0	0	0
115°	0	0	0	0	0	0
125°	0	0	0	0	0	0
135°	0	0	0	0	0	0
145°	0	0	0	0	0	0
155°	0	0	0	0	0	0
165°	0	0	0	0	0	0
175°	0	0	0	0	0	0
180°	0	0	0	0	0	



TEST NUMBER: P859939

CATALOG NUMBER: SPHB-18HE-M-L840-CD

CANDELA DISTRIBUTION (FULL):

	0°	22.5°	45°	67.5°	90°
0°	8690.4	8690.4	8690.4	8690.4	8690.4
2.5°	8684.6	8672.0	8683.5	8719.0	8729.3
5°	8674.3	8660.6	8672.0	8707.6	8721.3
7.5°	8638.8	8630.8	8642.2	8677.8	8695.0
10°	8582.6	8573.5	8591.8	8622.7	8644.5
12.5°	8499.0	8495.5	8512.7	8557.4	8566.6
15°	8393.5	8392.4	8415.3	8469.2	8473.7
17.5°	8274.3	8273.2	8301.8	8337.3	8324.7
20°	8129.9	8137.9	8171.1	8137.9	8105.8
22.5°	7956.8	7982.0	7990.0	7885.7	7869.7
25°	7783.7	7802.1	7762.0	7668.0	7630.1
27.5°	7560.2	7582.0	7507.5	7373.4	7265.7
30°	7343.6	7323.0	7170.5	6911.5	6761.3
32.5°	7094.9	7021.5	6747.6	6390.0	6253.6
35°	6800.3	6646.7	6239.8	5814.6	5700.0
37.5°	6427.8	6147.0	5702.3	5258.7	5085.6
40°	5901.7	5577.3	5164.7	4706.2	4514.8
42.5°	5164.7	5044.4	4702.8	4187.0	3958.9
45°	4250.1	4567.5	4261.5	3761.8	3448.9
47.5°	3638.0	4079.3	3711.3	3350.3	2919.3
50°	3155.4	3459.2	3200.1	2874.6	2531.9
52.5°	2807.0	2898.7	2794.4	2436.8	2241.9
55°	2522.8	2454.0	2427.6	2086.1	1985.2
57.5°	2169.7	2131.9	2064.3	1819.0	1686.0
60°	1760.5	1840.8	1666.6	1596.6	1384.6
62.5°	1446.5	1525.6	1338.7	1334.2	1157.6
65°	1247.0	1228.7	1141.6	1110.7	1035.0
67.5°	1103.8	1046.5	1016.7	976.5	950.2
70°	958.2	934.1	880.3	888.3	852.8
72.5°	798.9	829.8	776.0	790.9	726.7
75°	657.9	711.8	707.2	678.5	622.4
77.5°	542.1	599.5	609.8	583.4	537.6
80°	443.6	482.5	484.8	468.8	440.1
82.5°	325.5	348.4	365.6	338.1	319.8
85°	193.7	220.1	226.9	198.3	184.5
87.5°	63.0	88.3	98.6	102.0	103.2
90°	1.1	16.0	32.1	37.8	40.1
92.5°	1.1	4.6	6.9	10.3	11.5
95°	1.1	2.3	3.4	3.4	2.3
97.5°	0.0	0.0	0.0	0.0	0.0
100°	0.0	0.0	0.0	0.0	0.0
102.5°	0.0	0.0	0.0	0.0	0.0
105°	0.0	0.0	0.0	0.0	0.0



TEST NUMBER: P859939

CATALOG NUMBER: SPHB-18HE-M-L840-CD

CANDELA DISTRIBUTION (continued):

	0°	22.5°	45°	67.5°	90°
112.5°	0.0	0.0	0.0	0.0	0.0
115°	0.0	0.0	0.0	0.0	0.0
117.5°	0.0	0.0	0.0	0.0	0.0
120°	0.0	0.0	0.0	0.0	0.0
122.5°	0.0	0.0	0.0	0.0	0.0
125°	0.0	0.0	0.0	0.0	0.0
127.5°	0.0	0.0	0.0	0.0	0.0
130°	0.0	0.0	0.0	0.0	0.0
132.5°	0.0	0.0	0.0	0.0	0.0
135°	0.0	0.0	0.0	0.0	0.0
137.5°	0.0	0.0	0.0	0.0	0.0
140°	0.0	0.0	0.0	0.0	0.0
142.5°	0.0	0.0	0.0	0.0	0.0
145°	0.0	0.0	0.0	0.0	0.0
147.5°	0.0	0.0	0.0	0.0	0.0
150°	0.0	0.0	0.0	0.0	0.0
152.5°	0.0	0.0	0.0	0.0	0.0
155°	0.0	0.0	0.0	0.0	0.0
157.5°	0.0	0.0	0.0	0.0	0.0
160°	0.0	0.0	0.0	0.0	0.0
162.5°	0.0	0.0	0.0	0.0	0.0
165°	0.0	0.0	0.0	0.0	0.0
167.5°	0.0	0.0	0.0	0.0	0.0
170°	0.0	0.0	0.0	0.0	0.0
172.5°	0.0	0.0	0.0	0.0	0.0
175°	0.0	0.0	0.0	0.0	0.0
177.5°	0.0	0.0	0.0	0.0	0.0
180°	0.0	0.0	0.0	0.0	0.0



Report Generated By 670246072 / DESKTOP-50001EG





— 0°-180° - - 45°-225° - - - 90°-270°







107.5°	0.0	0.0	0.0	0.0	0.0
110°	0.0	0.0	0.0	0.0	0.0



LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-State Lighting Products

Report Prepared for

Cooper Lighting Solutions

METALUX

Report Number: SP1-2309-187-7

Test Date: 10/09/2023

Luminaire Tested: SPHB-1224SE-M-UNV-L84050-CD-U (24K LUMEN 4000K)

Data in this report applies to families of products including SPHB-1224SE-M-UNV-L84050-CD-U (24K LUMEN 4000K).

Test Information


Test Method: LM-79-2019
 Report Number: SP1-2309-187-7
 Test Lab: COOPER LIGHTING SOLUTIONS
 Photometer: SP1 - 76IN SPHERE
 Measurement Geometry: 4π
 Issue Date: 10/09/2023
 Manufacturer: COOPER LIGHTING SOLUTIONS
 Product Line: METALUX
 Catalog Number: **SPHB-1224SE-M-UNV-L84050-CD-U (24K LUMEN 4000K)**
 Description: SPHB SELECT, MEDIUM LENS, 24K LUMENS, 4000K

Spectral Parameters

CCT (K): 3926
 CIE u': 0.2261
 CIE v': 0.5037
 Duv: 0.0006
 CIE x: 0.3841
 CIE y: 0.3802
 CIE z: 0.2357
 Peak Wavelength (nm): 454
 Dominant Wavelength (nm): 579
 Purity: 29.5
 Rf: 82.9
 Rg: 95

CRI (Ra): 82.0
 R1: 80.3
 R2: 88.4
 R3: 93.9
 R4: 80.2
 R5: 79.7
 R6: 83.3
 R7: 86.1
 R8: 64.3

R9: 8.2
 R10: 71.6
 R11: 78.1
 R12: 57.5
 R13: 82.3
 R14: 96.6

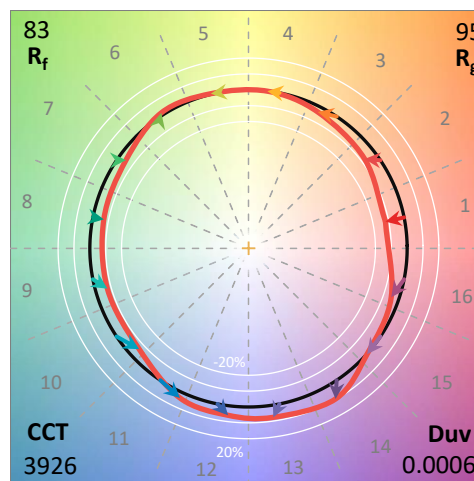

Test Conditions

Stabilization Time: 23M
 Operation Time: 12H
 Room Temperature (°C) / RH%: 25.5/33%
 Sphere Temperature (°C): 24.2

REPORT NUMBER: SP1-2309-187-7

Measurement and Test Equipment			
Instrument	Identification Number	Calibration Date	Calibration Due Date
Photometer	76INCH SPHERE IN0058	8/9/2023	2/9/2024
Power Meter	XITRON 2801 IN0071	11/29/2022	11/29/2023
AC Power Source	CHROMA 61603 IN0063	11/28/2022	11/28/2023
DC Power Source	AGILENT E3634A IN0208	11/28/2022	11/28/2023
Sphere Thermometer	ONSET IN0085	11/28/2022	11/28/2023
Room Thermometer	ONSET IN0046	11/28/2022	11/28/2023

REPORT NUMBER: SP1-2309-187-7

CIE 1931 Chromaticity Diagram



CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles



Point lies inside the ANSI 4000K 4-step quadrangle

REPORT NUMBER: SP1-2309-187-7

Photopic Flux vs. Wavelength



#####

λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)
360	10992	NR	490	118921	NR	620	356922	NR	750	19019	NR	880	13091	NR
365	9593	NR	495	138088	NR	625	337439	NR	755	17413	NR	885	13768	NR
370	10476	NR	500	166483	NR	630	313667	NR	760	16262	NR	890	11509	NR
375	11916	NR	505	198126	NR	635	289634	NR	765	14555	NR	895	10746	NR
380	10857	NR	510	225943	NR	640	267120	NR	770	13516	NR	900	11526	NR
385	9836	NR	515	249652	NR	645	244025	NR	775	12156	NR	905	11085	NR
390	9329	NR	520	270963	NR	650	221090	NR	780	11138	NR	910	12484	NR
395	8104	NR	525	285863	NR	655	198958	NR	785	10805	NR	915	12235	NR
400	6858	NR	530	297396	NR	660	178676	NR	790	10121	NR	920	9666	NR
405	6914	NR	535	307535	NR	665	155862	NR	795	10392	NR	925	11659	NR
410	8077	NR	540	315948	NR	670	138150	NR	800	9549	NR	930	12967	NR
415	11717	NR	545	324499	NR	675	120142	NR	805	10057	NR	935	13555	NR
420	19513	NR	550	333620	NR	680	105107	NR	810	9285	NR	940	12553	NR
425	34423	NR	555	345725	NR	685	91191	NR	815	9751	NR	945	9165	NR
430	59393	NR	560	355808	NR	690	79275	NR	820	10216	NR	950	7624	NR
435	101278	NR	565	369262	NR	695	68358	NR	825	10410	NR	955	11686	NR
440	162827	NR	570	381413	NR	700	60050	NR	830	10058	NR	960	9106	NR
445	260438	NR	575	393089	NR	705	51990	NR	835	9982	NR	965	11345	NR
450	399252	NR	580	402225	NR	710	46653	NR	840	9215	NR	970	10672	NR
455	445742	NR	585	409494	NR	715	42391	NR	845	11311	NR	975	11689	NR
460	330661	NR	590	413322	NR	720	37628	NR	850	10813	NR	980	14054	NR
465	233593	NR	595	413160	NR	725	33220	NR	855	11652	NR	985	17684	NR
470	187643	NR	600	408148	NR	730	29243	NR	860	11468	NR	990	17244	NR
475	140648	NR	605	401766	NR	735	25806	NR	865	12591	NR	995	11439	NR
480	111871	NR	610	390821	NR	740	23374	NR	870	9925	NR	1000	19016	NR
485	108472	NR	615	377363	NR	745	21294	NR	875	11284	NR			

REPORT NUMBER: SP1-2309-187-7

Scotopic Flux vs. Wavelength




Scotopic Lumens: 39237.7

S/P: 1.65

λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)
360	10992	NR	490	118921	NR	620	356922	NR	750	19019	NR	880	13091	NR
365	9593	NR	495	138088	NR	625	337439	NR	755	17413	NR	885	13768	NR
370	10476	NR	500	166483	NR	630	313667	NR	760	16262	NR	890	11509	NR
375	11916	NR	505	198126	NR	635	289634	NR	765	14555	NR	895	10746	NR
380	10857	NR	510	225943	NR	640	267120	NR	770	13516	NR	900	11526	NR
385	9836	NR	515	249652	NR	645	244025	NR	775	12156	NR	905	11085	NR
390	9329	NR	520	270963	NR	650	221090	NR	780	11138	NR	910	12484	NR
395	8104	NR	525	285863	NR	655	198958	NR	785	10805	NR	915	12235	NR
400	6858	NR	530	297396	NR	660	178676	NR	790	10121	NR	920	9666	NR
405	6914	NR	535	307535	NR	665	155862	NR	795	10392	NR	925	11659	NR
410	8077	NR	540	315948	NR	670	138150	NR	800	9549	NR	930	12967	NR
415	11717	NR	545	324499	NR	675	120142	NR	805	10057	NR	935	13555	NR
420	19513	NR	550	333620	NR	680	105107	NR	810	9285	NR	940	12553	NR
425	34423	NR	555	345725	NR	685	91191	NR	815	9751	NR	945	9165	NR
430	59393	NR	560	355808	NR	690	79275	NR	820	10216	NR	950	7624	NR
435	101278	NR	565	369262	NR	695	68358	NR	825	10410	NR	955	11686	NR
440	162827	NR	570	381413	NR	700	60050	NR	830	10058	NR	960	9106	NR
445	260438	NR	575	393089	NR	705	51990	NR	835	9982	NR	965	11345	NR
450	399252	NR	580	402225	NR	710	46653	NR	840	9215	NR	970	10672	NR
455	445742	NR	585	409494	NR	715	42391	NR	845	11311	NR	975	11689	NR
460	330661	NR	590	413322	NR	720	37628	NR	850	10813	NR	980	14054	NR
465	233593	NR	595	413160	NR	725	33220	NR	855	11652	NR	985	17684	NR
470	187643	NR	600	408148	NR	730	29243	NR	860	11468	NR	990	17244	NR
475	140648	NR	605	401766	NR	735	25806	NR	865	12591	NR	995	11439	NR
480	111871	NR	610	390821	NR	740	23374	NR	870	9925	NR	1000	19016	NR
485	108472	NR	615	377363	NR	745	21294	NR	875	11284	NR			

REPORT NUMBER: SP1-2309-187-7

Melanopic Flux vs. Wavelength

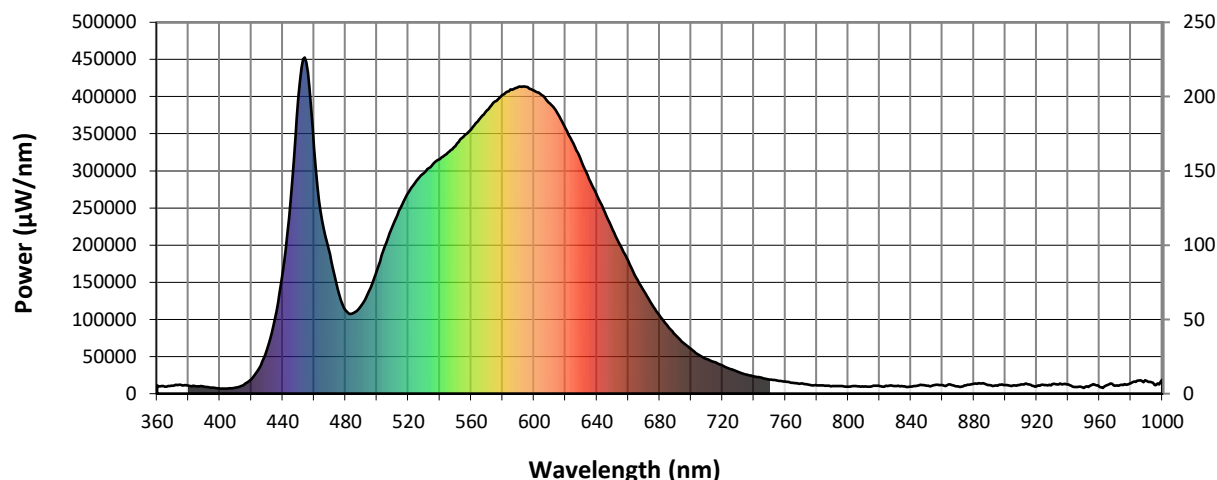

Melanopic Lumens: 15753

M/P: 0.66

λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)
360	10992	NR	490	118921	NR	620	356922	NR	750	19019	NR	880	13091	NR
365	9593	NR	495	138088	NR	625	337439	NR	755	17413	NR	885	13768	NR
370	10476	NR	500	166483	NR	630	313667	NR	760	16262	NR	890	11509	NR
375	11916	NR	505	198126	NR	635	289634	NR	765	14555	NR	895	10746	NR
380	10857	NR	510	225943	NR	640	267120	NR	770	13516	NR	900	11526	NR
385	9836	NR	515	249652	NR	645	244025	NR	775	12156	NR	905	11085	NR
390	9329	NR	520	270963	NR	650	221090	NR	780	11138	NR	910	12484	NR
395	8104	NR	525	285863	NR	655	198958	NR	785	10805	NR	915	12235	NR
400	6858	NR	530	297396	NR	660	178676	NR	790	10121	NR	920	9666	NR
405	6914	NR	535	307535	NR	665	155862	NR	795	10392	NR	925	11659	NR
410	8077	NR	540	315948	NR	670	138150	NR	800	9549	NR	930	12967	NR
415	11717	NR	545	324499	NR	675	120142	NR	805	10057	NR	935	13555	NR
420	19513	NR	550	333620	NR	680	105107	NR	810	9285	NR	940	12553	NR
425	34423	NR	555	345725	NR	685	91191	NR	815	9751	NR	945	9165	NR
430	59393	NR	560	355808	NR	690	79275	NR	820	10216	NR	950	7624	NR
435	101278	NR	565	369262	NR	695	68358	NR	825	10410	NR	955	11686	NR
440	162827	NR	570	381413	NR	700	60050	NR	830	10058	NR	960	9106	NR
445	260438	NR	575	393089	NR	705	51990	NR	835	9982	NR	965	11345	NR
450	399252	NR	580	402225	NR	710	46653	NR	840	9215	NR	970	10672	NR
455	445742	NR	585	409494	NR	715	42391	NR	845	11311	NR	975	11689	NR
460	330661	NR	590	413322	NR	720	37628	NR	850	10813	NR	980	14054	NR
465	233593	NR	595	413160	NR	725	33220	NR	855	11652	NR	985	17684	NR
470	187643	NR	600	408148	NR	730	29243	NR	860	11468	NR	990	17244	NR
475	140648	NR	605	401766	NR	735	25806	NR	865	12591	NR	995	11439	NR
480	111871	NR	610	390821	NR	740	23374	NR	870	9925	NR	1000	19016	NR
485	108472	NR	615	377363	NR	745	21294	NR	875	11284	NR			

REPORT NUMBER: SP1-2309-187-7


TM-30-18

Summary

$R_f = 82.9$
 $R_g = 95$
 $CIE R_a = 82.0$
 $R_9 = 8.2$



Color Vector Graphics

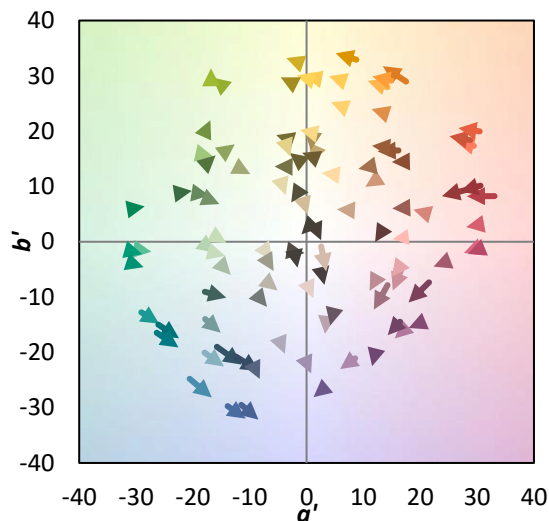

REPORT NUMBER: SP1-2309-187-7

TM-30-18

Individual Sample Fidelity Index ($R_{f,i}$)




CES01 = 86	CES26 = 81	CES51 = 92	CES76 = 73
CES02 = 61	CES27 = 92	CES52 = 92	CES77 = 81
CES03 = 31	CES28 = 90	CES53 = 88	CES78 = 72
CES04 = 70	CES29 = 88	CES54 = 89	CES79 = 91
CES05 = 48	CES30 = 92	CES55 = 86	CES80 = 88
CES06 = 50	CES31 = 89	CES56 = 83	CES81 = 82
CES07 = 41	CES32 = 80	CES57 = 82	CES82 = 95
CES08 = 40	CES33 = 96	CES58 = 82	CES83 = 96
CES09 = 29	CES34 = 85	CES59 = 90	CES84 = 90
CES10 = 74	CES35 = 91	CES60 = 89	CES85 = 78
CES11 = 57	CES36 = 80	CES61 = 85	CES86 = 76
CES12 = 63	CES37 = 90	CES62 = 80	CES87 = 84
CES13 = 42	CES38 = 87	CES63 = 81	CES88 = 89
CES14 = 74	CES39 = 98	CES64 = 74	CES89 = 78
CES15 = 71	CES40 = 96	CES65 = 74	CES90 = 90
CES16 = 47	CES41 = 97	CES66 = 69	CES91 = 69
CES17 = 49	CES42 = 91	CES67 = 68	CES92 = 65
CES18 = 56	CES43 = 89	CES68 = 75	CES93 = 79
CES19 = 71	CES44 = 99	CES69 = 80	CES94 = 64
CES20 = 65	CES45 = 93	CES70 = 71	CES95 = 72
CES21 = 86	CES46 = 91	CES71 = 63	CES96 = 84
CES22 = 78	CES47 = 96	CES72 = 88	CES97 = 90
CES23 = 91	CES48 = 85	CES73 = 65	CES98 = 85
CES24 = 90	CES49 = 90	CES74 = 90	CES99 = 77
CES25 = 71	CES50 = 93	CES75 = 67	



REPORT NUMBER: SP1-2309-187-7

TM-30-18



Color Rendition by Hue-Angle Bin

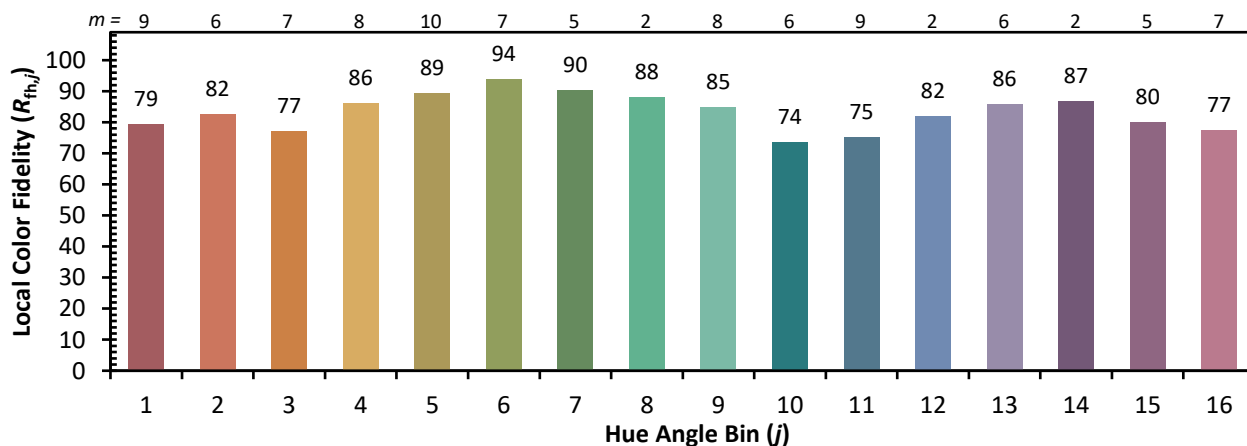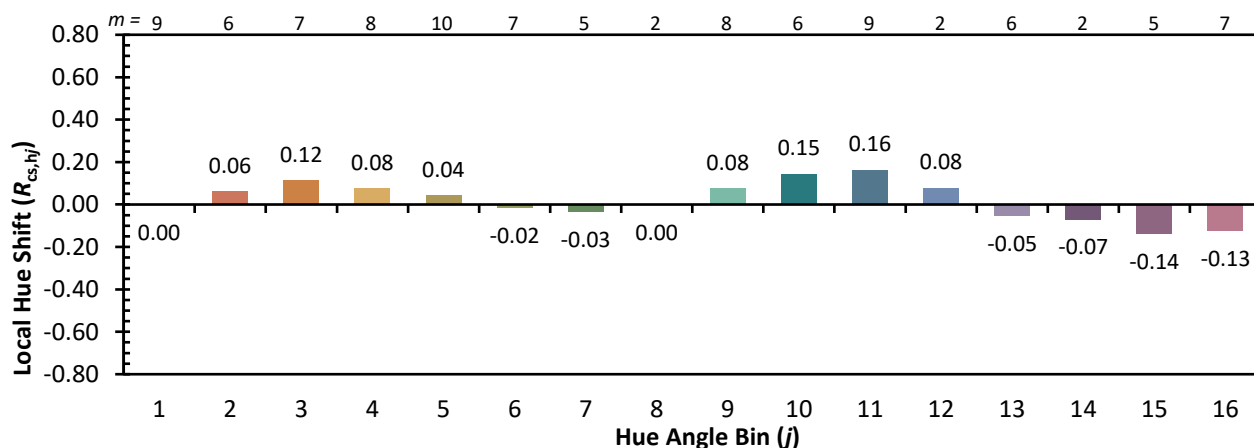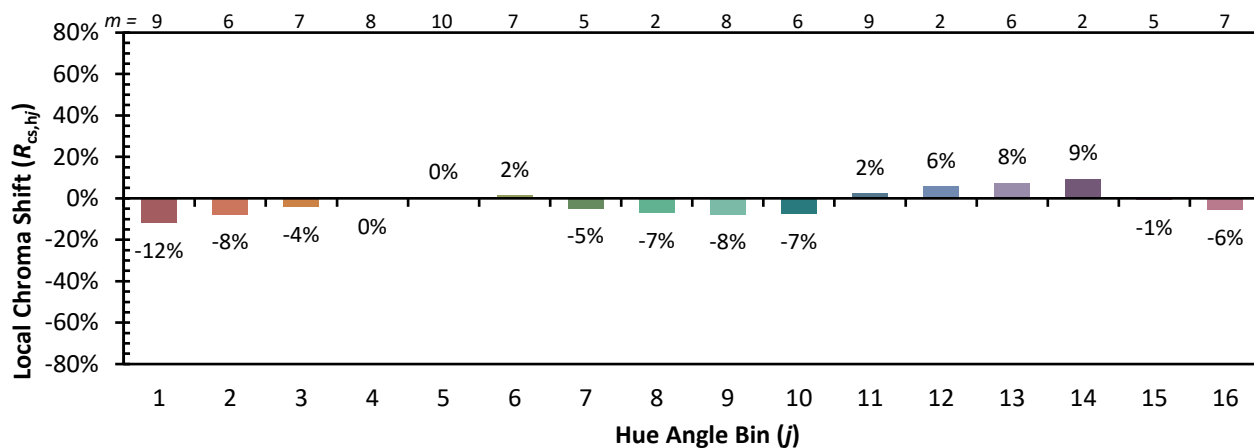

REPORT NUMBER: SP1-2309-187-7

TM-30-18

Measure Comparisons

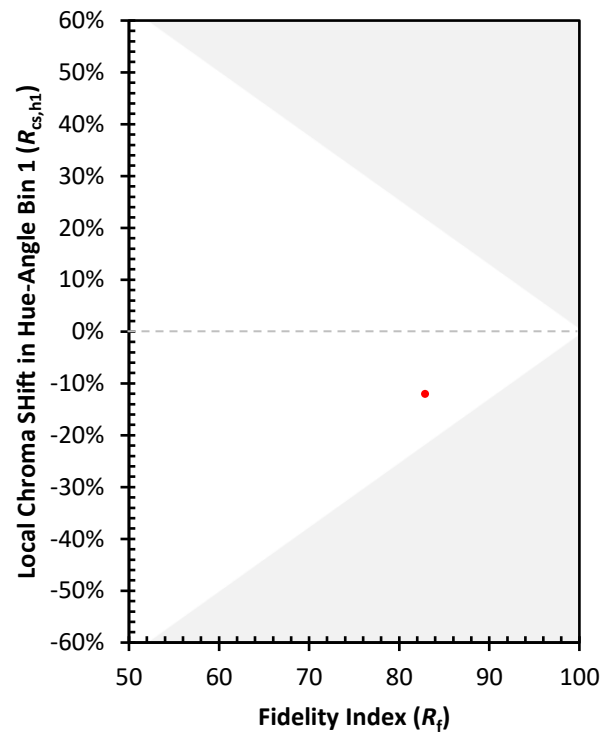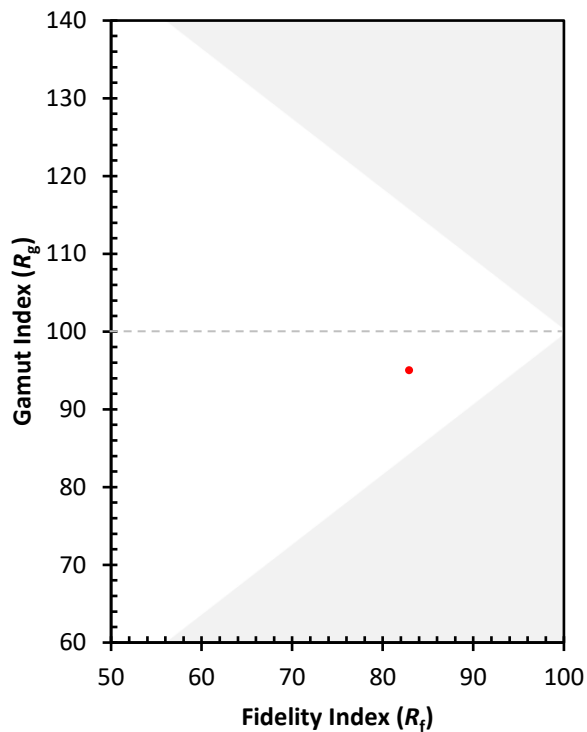

(END OF REPORT)