

Scaled data based on original data using
LM-79-08 Approved Method: Electrical and Photometric Measurements of Solid-State
Lighting Products

Test Report Prepared for

Cooper Lighting Solutions

(formerly Eaton)

Brand: METALUX

Report Number: P860048

Luminaire Tested: **SPHB-30HE-M-L850-CD**

Issue Date: 7/11/2024



Test Information

Test Method: LM-79-08
Report Number: P860048
TEST IS SCALED FROM IESNA LM-79-08 TEST DATA (G3-2404-343-1)
Test Lab: INNOVATION CENTER
Issue Date: 7/11/2024
Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)
Product Line: METALUX
Catalog Number: SPHB-30HE-M-L850-CD
Description: 30000 Lumen High Efficacy Select Pro High Bay with Medium Lens and,
5000K 80CRI LEDs
Light Source: -
Ballast/Driver: -

Luminaire Equipment: Sample No. Condition Description

Summary


Lumens per Lamp: N/A
Luminaire Lumens: 30195.0 lumens
Efficiency: N/A
Efficacy: 170.0 lumens/watt
Spacing Criteria (0/90/45): 1.25 / 1.16 / 1.22
Luminous Opening: Rectangular (W 1' x L: 2.04' x H: 0')
CIE Type: Direct

Input Watts (W): 177.6
Input Voltage (V): NR
Input Current (Ain): NR
Voltage Rise (V): NR
Power Factor: NR
Total Harmonic Distortion (THDi): NR
Frequency (hertz): 60
Stabilization Time: NR
Operation Time: NR
Ambient Temperature (°C): NR
Test Distance: 25 FT

TEST NUMBER: P860048

CATALOG NUMBER: SPHB-30HE-M-L850-CD

Luminous Intensity Polar Plot

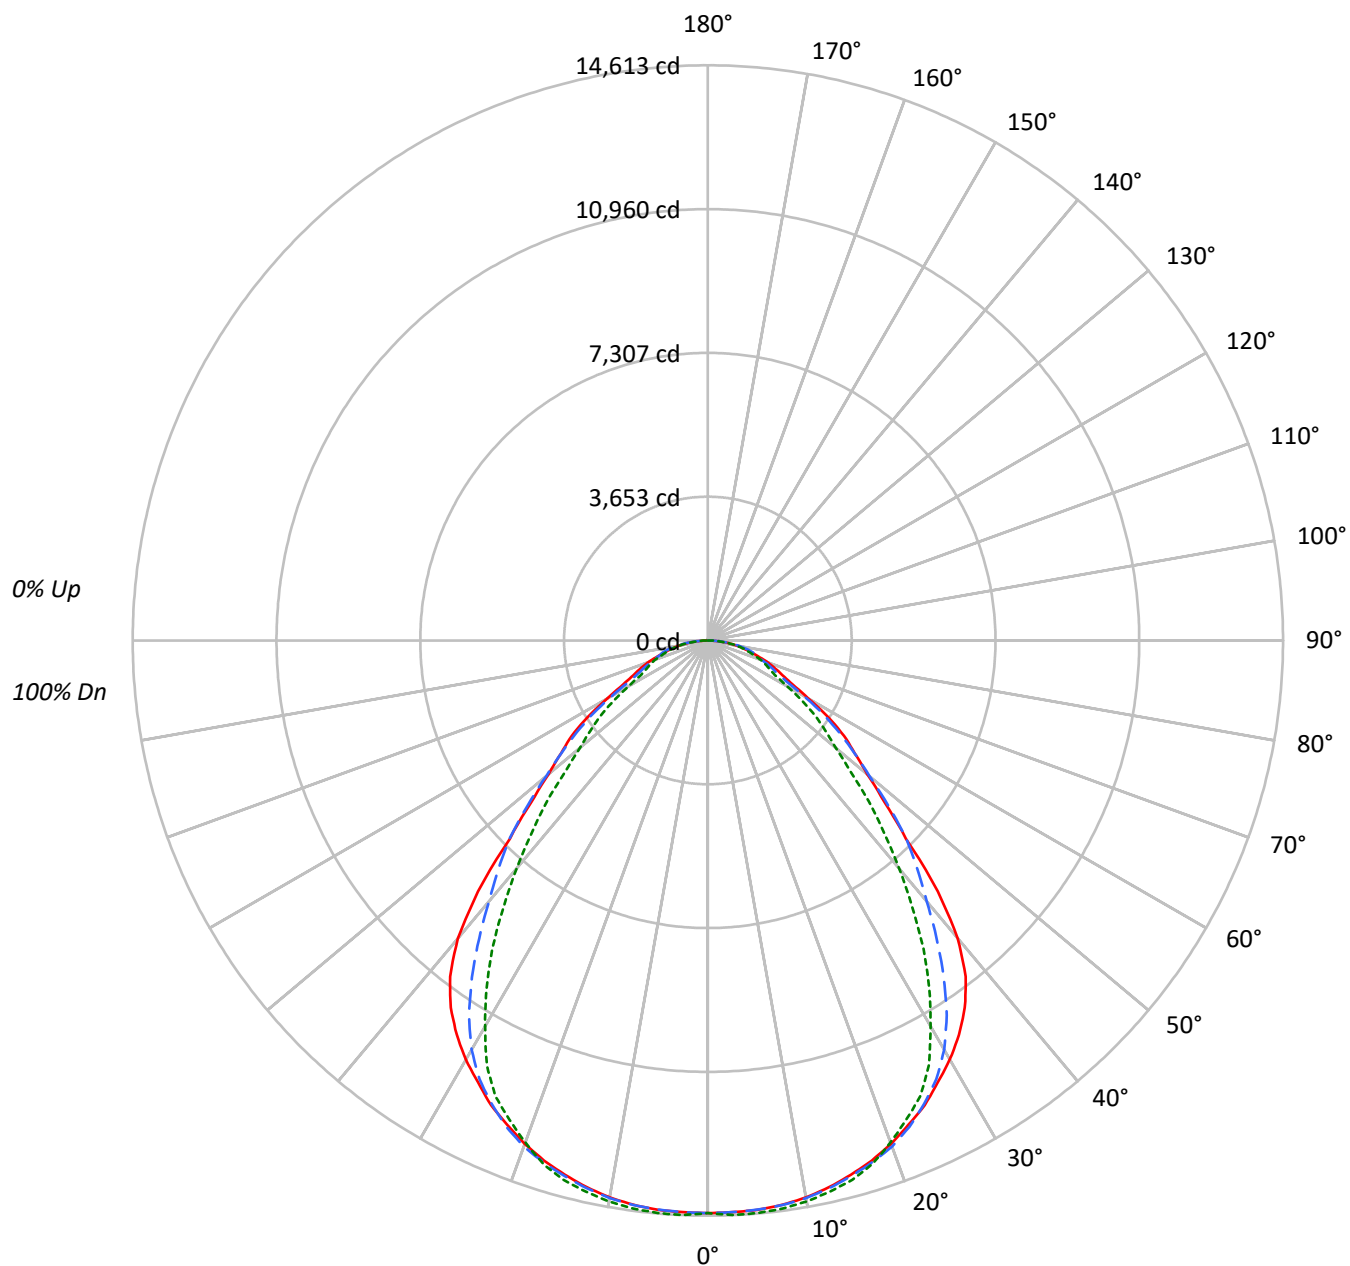



TEST NUMBER: P860048

CATALOG NUMBER: SPHB-30HE-M-L850-CD

COEFFICIENT OF UTILIZATION - ZONAL CAVITY METHOD:

RF	20				20					20					20					20
RC	80				70					50					30					10
RW	70	50	30	10	70	50	30	10	50	30	10	50	30	10	50	30	10	50	30	10
RCR																				
0	119	119	119	119	116	116	116	116	111	111	111	106	106	106	102	102	102	100		
1	110	106	103	99	108	104	101	98	100	97	95	96	94	92	92	91	89	87		
2	102	95	89	84	99	93	87	83	89	85	81	86	82	79	83	80	77	75		
3	94	85	78	72	92	83	77	71	80	75	70	78	73	69	75	71	68	66		
4	87	76	69	63	85	75	68	62	73	66	61	70	65	61	68	64	60	58		
5	81	69	61	55	79	68	61	55	66	59	54	64	58	54	62	57	53	51		
6	75	63	55	49	73	62	54	49	60	54	48	59	53	48	57	52	48	46		
7	70	58	50	44	68	57	49	44	55	49	44	54	48	43	53	47	43	41		
8	66	53	45	40	64	52	45	40	51	44	39	50	44	39	49	43	39	37		
9	61	49	41	36	60	48	41	36	47	41	36	46	40	36	45	40	36	34		
10	58	45	38	33	57	45	38	33	44	37	33	43	37	33	42	37	33	31		

AVERAGE LUMINANCE (cd/sqm):

	0°	45°	90°
0°	76758	76758	76758
5°	76909	76889	77326
10°	76976	77058	77531
15°	76751	76951	77485
20°	76416	76804	76190
25°	75858	75646	74361
30°	74897	73132	68959
35°	73325	67282	61461
40°	68047	59549	52057
45°	53088	53231	43080
50°	43359	43973	34791
55°	38848	37383	30570
60°	31100	29440	24459
65°	26063	23859	21632
70°	24745	22732	22022
75°	22452	24134	21239
80°	22561	24661	22388
85°	19633	22999	18701



TEST NUMBER: P860048

CATALOG NUMBER: SPHB-30HE-M-L850-CD

ZONAL LUMENS:

Zone	Lumens	% Fixture
0°-10°	1383.2	4.6
10°-20°	3978.1	13.2
20°-30°	5938.6	19.7
30°-40°	6480.0	21.5
40°-50°	5300.9	17.6
50°-60°	3485.4	11.5
60°-70°	1999.6	6.6
70°-80°	1211.7	4.0
80°-90°	406.9	1.3
90°-100°	10.6	0.0
100°-110°	0.0	0.0
110°-120°	0.0	0.0
120°-130°	0.0	0.0
130°-140°	0.0	0.0
140°-150°	0.0	0.0
150°-160°	0.0	0.0
160°-170°	0.0	0.0
170°-180°	0.0	0.0
0°-30°	11299.8	37.4
0°-40°	17779.9	58.9
0°-60°	26566.2	88.0
0°-90°	30184.4	100.0
90°-120°	10.6	0.0
90°-150°	10.6	0.0
90°-180°	11.0	0.0
0°-180°	30195.0	100.0

CANDELA DISTRIBUTION:

	0°	22.5°	45°	67.5°	90°	Flux
0°	14547	14547	14547	14547	14547	
5°	14520	14498	14517	14576	14599	###
15°	14050	14048	14087	14177	14185	3966
25°	13030	13060	12993	12836	12773	5994
35°	11384	11126	10445	9733	9542	7055
45°	7114	7646	7134	6297	5773	5647
55°	4223	4108	4064	3492	3323	3719
65°	2088	2057	1911	1859	1733	2134
75°	1101	1192	1184	1136	1042	1192
85°	324	368	380	332	309	352
90°	2	27	54	63	67	15
95°	2	4	6	6	4	1
105°	0	0	0	0	0	0
115°	0	0	0	0	0	0
125°	0	0	0	0	0	0
135°	0	0	0	0	0	0
145°	0	0	0	0	0	0
155°	0	0	0	0	0	0
165°	0	0	0	0	0	0
175°	0	0	0	0	0	0
180°	0	0	0	0	0	



TEST NUMBER: P860048

CATALOG NUMBER: SPHB-30HE-M-L850-CD

CANDELA DISTRIBUTION (FULL):

	0°	22.5°	45°	67.5°	90°
0°	14547.4	14547.4	14547.4	14547.4	14547.4
2.5°	14537.8	14516.7	14535.9	14595.3	14612.6
5°	14520.5	14497.5	14516.7	14576.2	14599.2
7.5°	14461.0	14447.6	14466.8	14526.3	14555.1
10°	14367.0	14351.7	14382.4	14434.2	14470.6
12.5°	14227.0	14221.2	14250.0	14324.8	14340.2
15°	14050.4	14048.5	14086.9	14177.1	14184.7
17.5°	13850.9	13849.0	13896.9	13956.4	13935.3
20°	13609.1	13622.6	13678.2	13622.6	13568.9
22.5°	13319.4	13361.6	13375.1	13200.5	13173.6
25°	13029.7	13060.4	12993.3	12835.9	12772.6
27.5°	12655.6	12692.0	12567.3	12342.8	12162.5
30°	12292.9	12258.4	12003.2	11569.6	11318.3
32.5°	11876.6	11753.8	11295.2	10696.6	10468.3
35°	11383.5	11126.4	10445.3	9733.4	9541.6
37.5°	10759.9	10289.8	9545.4	8802.9	8513.2
40°	9879.2	9336.3	8645.5	7878.1	7557.7
42.5°	8645.5	8444.1	7872.3	7008.9	6627.1
45°	7114.4	7645.9	7133.6	6297.1	5773.3
47.5°	6089.9	6828.6	6212.7	5608.3	4886.9
50°	5282.1	5790.6	5356.9	4812.0	4238.3
52.5°	4698.8	4852.3	4677.7	4079.1	3752.9
55°	4223.0	4107.9	4063.7	3492.0	3323.1
57.5°	3632.0	3568.7	3455.5	3044.9	2822.4
60°	2947.1	3081.4	2789.8	2672.7	2317.8
62.5°	2421.4	2553.8	2241.0	2233.3	1937.9
65°	2087.5	2056.8	1911.0	1859.2	1732.6
67.5°	1847.7	1751.7	1701.9	1634.7	1590.6
70°	1604.0	1563.7	1473.5	1487.0	1427.5
72.5°	1337.3	1389.1	1298.9	1323.9	1216.4
75°	1101.3	1191.5	1183.8	1135.9	1041.8
77.5°	907.5	1003.5	1020.7	976.6	899.9
80°	742.5	807.8	811.6	784.7	736.8
82.5°	544.9	583.3	612.1	566.0	535.3
85°	324.3	368.4	379.9	331.9	308.9
87.5°	105.5	147.7	165.0	170.8	172.7
90°	1.9	26.9	53.7	63.3	67.2
92.5°	1.9	7.7	11.5	17.3	19.2
95°	1.9	3.8	5.8	5.8	3.8
97.5°	0.0	0.0	0.0	0.0	0.0
100°	0.0	0.0	0.0	0.0	0.0
102.5°	0.0	0.0	0.0	0.0	0.0
105°	0.0	0.0	0.0	0.0	0.0



TEST NUMBER: P860048

CATALOG NUMBER: SPHB-30HE-M-L850-CD

CANDELA DISTRIBUTION (continued):

	0°	22.5°	45°	67.5°	90°
112.5°	0.0	0.0	0.0	0.0	0.0
115°	0.0	0.0	0.0	0.0	0.0
117.5°	0.0	0.0	0.0	0.0	0.0
120°	0.0	0.0	0.0	0.0	0.0
122.5°	0.0	0.0	0.0	0.0	0.0
125°	0.0	0.0	0.0	0.0	0.0
127.5°	0.0	0.0	0.0	0.0	0.0
130°	0.0	0.0	0.0	0.0	0.0
132.5°	0.0	0.0	0.0	0.0	0.0
135°	0.0	0.0	0.0	0.0	0.0
137.5°	0.0	0.0	0.0	0.0	0.0
140°	0.0	0.0	0.0	0.0	0.0
142.5°	0.0	0.0	0.0	0.0	0.0
145°	0.0	0.0	0.0	0.0	0.0
147.5°	0.0	0.0	0.0	0.0	0.0
150°	0.0	0.0	0.0	0.0	0.0
152.5°	0.0	0.0	0.0	0.0	0.0
155°	0.0	0.0	0.0	0.0	0.0
157.5°	0.0	0.0	0.0	0.0	0.0
160°	0.0	0.0	0.0	0.0	0.0
162.5°	0.0	0.0	0.0	0.0	0.0
165°	0.0	0.0	0.0	0.0	0.0
167.5°	0.0	0.0	0.0	0.0	0.0
170°	0.0	0.0	0.0	0.0	0.0
172.5°	0.0	0.0	0.0	0.0	0.0
175°	0.0	0.0	0.0	0.0	0.0
177.5°	0.0	0.0	0.0	0.0	0.0
180°	0.0	0.0	0.0	0.0	0.0



Report Generated By 670246072 / DESKTOP-50001EG





— 0°-180° - - 45°-225° - - - 90°-270°







107.5°	0.0	0.0	0.0	0.0	0.0
110°	0.0	0.0	0.0	0.0	0.0



LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-State Lighting Products

Report Prepared for

Cooper Lighting Solutions

METALUX

Report Number: SP1-2309-187-6

Test Date: 10/10/2023

Luminaire Tested: SPHB-2436SE-M-UNV-L84050-CD-U (36K LUMEN 5000K)


Data in this report applies to families of products including SPHB-2436SE-M-UNV-L84050-CD-U (36K LUMEN 5000K).

Test Information

Test Method: LM-79-2019
 Report Number: SP1-2309-187-6
 Test Lab: COOPER LIGHTING SOLUTIONS
 Photometer: SP1 - 76IN SPHERE
 Measurement Geometry: 4π
 Issue Date: 10/10/2023
 Manufacturer: COOPER LIGHTING SOLUTIONS
 Product Line: METALUX
 Catalog Number: **SPHB-2436SE-M-UNV-L84050-CD-U (36K LUMEN 5000K)**
 Description: SPHB SELECT, MEDIUM LENS, 36K LUMENS, 5000K

Spectral Parameters

CCT (K):	4957	CRI (Ra):	83.0		
CIE u':	0.2117	R1:	81.6	R9:	13.4
CIE v':	0.4855	R2:	88.2	R10:	70.8
Duv:	0.0002	R3:	91.8	R11:	80.4
CIE x:	0.3463	R4:	82.0	R12:	55.2
CIE y:	0.3530	R5:	81.2	R13:	83.4
CIE z:	0.3007	R6:	82.2	R14:	95.6
Peak Wavelength (nm):	452	R7:	88.1		
Dominant Wavelength (nm):	573	R8:	69.2		
Purity:	10				
Rf:	83				
Rg:	96.6				

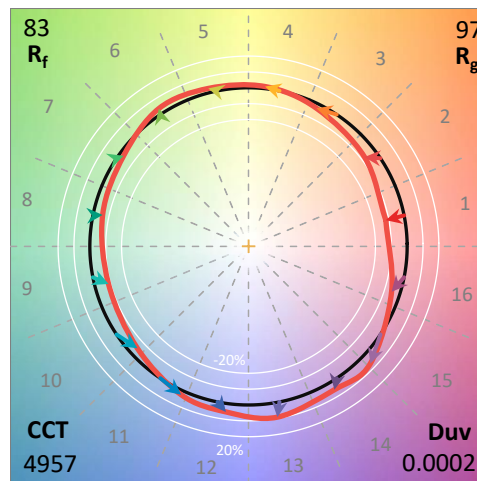

Test Conditions

Stabilization Time: 10M
 Operation Time: 12H
 Room Temperature (°C) / RH%: 25.8/38%
 Sphere Temperature (°C): 24.2

REPORT NUMBER: SP1-2309-187-6

Measurement and Test Equipment			
Instrument	Identification Number	Calibration Date	Calibration Due Date
Photometer	76INCH SPHERE IN0058	8/9/2023	2/9/2024
Power Meter	XITRON 2801 IN0071	11/29/2022	11/29/2023
AC Power Source	CHROMA 61603 IN0063	11/28/2022	11/28/2023
DC Power Source	AGILENT E3634A IN0208	11/28/2022	11/28/2023
Sphere Thermometer	ONSET IN0085	11/28/2022	11/28/2023
Room Thermometer	ONSET IN0046	11/28/2022	11/28/2023

REPORT NUMBER: SP1-2309-187-6

CIE 1931 Chromaticity Diagram



CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles



Point lies inside the ANSI 5000K 4-step quadrangle

REPORT NUMBER: SP1-2309-187-6

Photopic Flux vs. Wavelength



#####

λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)
360	16466	NR	490	226060	NR	620	461721	NR	750	25725	NR	880	22907	NR
365	15834	NR	495	262555	NR	625	431803	NR	755	23611	NR	885	20279	NR
370	15705	NR	500	311885	NR	630	403609	NR	760	23080	NR	890	16993	NR
375	16161	NR	505	357744	NR	635	372123	NR	765	19807	NR	895	19274	NR
380	17604	NR	510	398986	NR	640	341468	NR	770	19668	NR	900	19961	NR
385	15901	NR	515	433700	NR	645	309940	NR	775	19158	NR	905	18541	NR
390	15561	NR	520	460798	NR	650	281489	NR	780	15443	NR	910	17677	NR
395	13649	NR	525	477719	NR	655	251312	NR	785	15332	NR	915	22715	NR
400	12726	NR	530	489588	NR	660	226441	NR	790	15443	NR	920	20431	NR
405	12867	NR	535	500614	NR	665	197313	NR	795	12716	NR	925	18281	NR
410	14858	NR	540	509478	NR	670	174037	NR	800	14486	NR	930	24254	NR
415	22758	NR	545	518634	NR	675	150402	NR	805	13381	NR	935	22361	NR
420	40173	NR	550	526082	NR	680	133071	NR	810	13493	NR	940	21374	NR
425	73606	NR	555	535227	NR	685	115398	NR	815	13669	NR	945	28437	NR
430	132581	NR	560	544645	NR	690	99841	NR	820	13949	NR	950	12992	NR
435	230438	NR	565	553668	NR	695	87508	NR	825	15609	NR	955	16488	NR
440	382216	NR	570	563202	NR	700	76178	NR	830	16481	NR	960	22861	NR
445	630161	NR	575	570117	NR	705	66441	NR	835	17363	NR	965	29851	NR
450	918124	NR	580	573472	NR	710	60098	NR	840	16960	NR	970	10276	NR
455	893762	NR	585	571600	NR	715	54539	NR	845	20190	NR	975	29525	NR
460	612059	NR	590	567612	NR	720	48071	NR	850	20506	NR	980	26199	NR
465	443338	NR	595	561157	NR	725	42545	NR	855	18525	NR	985	27187	NR
470	344255	NR	600	547832	NR	730	38502	NR	860	19090	NR	990	30712	NR
475	249784	NR	605	530525	NR	735	33410	NR	865	17185	NR	995	15047	NR
480	207499	NR	610	513131	NR	740	29667	NR	870	18599	NR	1000	14588	NR
485	208029	NR	615	491003	NR	745	27521	NR	875	20800	NR			

REPORT NUMBER: SP1-2309-187-6

Scotopic Flux vs. Wavelength



Scotopic Lumens: 69332.4

S/P: 1.93

λ (nm)	Power (μW/nm)	Lumens (Φ/nm)	λ (nm)	Power (μW/nm)	Lumens (Φ/nm)	λ (nm)	Power (μW/nm)	Lumens (Φ/nm)	λ (nm)	Power (μW/nm)	Lumens (Φ/nm)	λ (nm)	Power (μW/nm)	Lumens (Φ/nm)
360	16466	NR	490	226060	NR	620	461721	NR	750	25725	NR	880	22907	NR
365	15834	NR	495	262555	NR	625	431803	NR	755	23611	NR	885	20279	NR
370	15705	NR	500	311885	NR	630	403609	NR	760	23080	NR	890	16993	NR
375	16161	NR	505	357744	NR	635	372123	NR	765	19807	NR	895	19274	NR
380	17604	NR	510	398986	NR	640	341468	NR	770	19668	NR	900	19961	NR
385	15901	NR	515	433700	NR	645	309940	NR	775	19158	NR	905	18541	NR
390	15561	NR	520	460798	NR	650	281489	NR	780	15443	NR	910	17677	NR
395	13649	NR	525	477719	NR	655	251312	NR	785	15332	NR	915	22715	NR
400	12726	NR	530	489588	NR	660	226441	NR	790	15443	NR	920	20431	NR
405	12867	NR	535	500614	NR	665	197313	NR	795	12716	NR	925	18281	NR
410	14858	NR	540	509478	NR	670	174037	NR	800	14486	NR	930	24254	NR
415	22758	NR	545	518634	NR	675	150402	NR	805	13381	NR	935	22361	NR
420	40173	NR	550	526082	NR	680	133071	NR	810	13493	NR	940	21374	NR
425	73606	NR	555	535227	NR	685	115398	NR	815	13669	NR	945	28437	NR
430	132581	NR	560	544645	NR	690	99841	NR	820	13949	NR	950	12992	NR
435	230438	NR	565	553668	NR	695	87508	NR	825	15609	NR	955	16488	NR
440	382216	NR	570	563202	NR	700	76178	NR	830	16481	NR	960	22861	NR
445	630161	NR	575	570117	NR	705	66441	NR	835	17363	NR	965	29851	NR
450	918124	NR	580	573472	NR	710	60098	NR	840	16960	NR	970	10276	NR
455	893762	NR	585	571600	NR	715	54539	NR	845	20190	NR	975	29525	NR
460	612059	NR	590	567612	NR	720	48071	NR	850	20506	NR	980	26199	NR
465	443338	NR	595	561157	NR	725	42545	NR	855	18525	NR	985	27187	NR
470	344255	NR	600	547832	NR	730	38502	NR	860	19090	NR	990	30712	NR
475	249784	NR	605	530525	NR	735	33410	NR	865	17185	NR	995	15047	NR
480	207499	NR	610	513131	NR	740	29667	NR	870	18599	NR	1000	14588	NR
485	208029	NR	615	491003	NR	745	27521	NR	875	20800	NR			

REPORT NUMBER: SP1-2309-187-6

Melanopic Flux vs. Wavelength



Melanopic Lumens: 29078.2 M/P: 0.81

λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)
360	16466	NR	490	226060	NR	620	461721	NR	750	25725	NR	880	22907	NR
365	15834	NR	495	262555	NR	625	431803	NR	755	23611	NR	885	20279	NR
370	15705	NR	500	311885	NR	630	403609	NR	760	23080	NR	890	16993	NR
375	16161	NR	505	357744	NR	635	372123	NR	765	19807	NR	895	19274	NR
380	17604	NR	510	398986	NR	640	341468	NR	770	19668	NR	900	19961	NR
385	15901	NR	515	433700	NR	645	309940	NR	775	19158	NR	905	18541	NR
390	15561	NR	520	460798	NR	650	281489	NR	780	15443	NR	910	17677	NR
395	13649	NR	525	477719	NR	655	251312	NR	785	15332	NR	915	22715	NR
400	12726	NR	530	489588	NR	660	226441	NR	790	15443	NR	920	20431	NR
405	12867	NR	535	500614	NR	665	197313	NR	795	12716	NR	925	18281	NR
410	14858	NR	540	509478	NR	670	174037	NR	800	14486	NR	930	24254	NR
415	22758	NR	545	518634	NR	675	150402	NR	805	13381	NR	935	22361	NR
420	40173	NR	550	526082	NR	680	133071	NR	810	13493	NR	940	21374	NR
425	73606	NR	555	535227	NR	685	115398	NR	815	13669	NR	945	28437	NR
430	132581	NR	560	544645	NR	690	99841	NR	820	13949	NR	950	12992	NR
435	230438	NR	565	553668	NR	695	87508	NR	825	15609	NR	955	16488	NR
440	382216	NR	570	563202	NR	700	76178	NR	830	16481	NR	960	22861	NR
445	630161	NR	575	570117	NR	705	66441	NR	835	17363	NR	965	29851	NR
450	918124	NR	580	573472	NR	710	60098	NR	840	16960	NR	970	10276	NR
455	893762	NR	585	571600	NR	715	54539	NR	845	20190	NR	975	29525	NR
460	612059	NR	590	567612	NR	720	48071	NR	850	20506	NR	980	26199	NR
465	443338	NR	595	561157	NR	725	42545	NR	855	18525	NR	985	27187	NR
470	344255	NR	600	547832	NR	730	38502	NR	860	19090	NR	990	30712	NR
475	249784	NR	605	530525	NR	735	33410	NR	865	17185	NR	995	15047	NR
480	207499	NR	610	513131	NR	740	29667	NR	870	18599	NR	1000	14588	NR
485	208029	NR	615	491003	NR	745	27521	NR	875	20800	NR			

REPORT NUMBER: SP1-2309-187-6


TM-30-18

Summary

$R_f = 83$
 $R_g = 96.6$
 CIE $R_a = 83.0$
 $R_9 = 13.4$



Color Vector Graphics

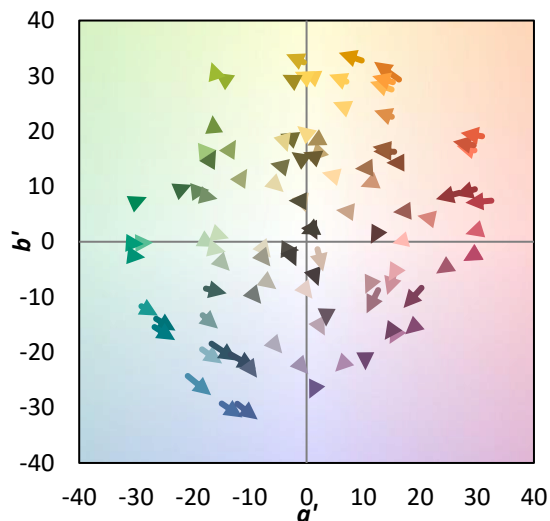

REPORT NUMBER: SP1-2309-187-6

TM-30-18

Individual Sample Fidelity Index ($R_{f,i}$)



CES01 = 85	CES26 = 78	CES51 = 94	CES76 = 69
CES02 = 60	CES27 = 93	CES52 = 94	CES77 = 78
CES03 = 30	CES28 = 88	CES53 = 89	CES78 = 69
CES04 = 69	CES29 = 83	CES54 = 90	CES79 = 89
CES05 = 47	CES30 = 96	CES55 = 88	CES80 = 86
CES06 = 50	CES31 = 85	CES56 = 85	CES81 = 85
CES07 = 40	CES32 = 77	CES57 = 84	CES82 = 94
CES08 = 39	CES33 = 92	CES58 = 84	CES83 = 95
CES09 = 29	CES34 = 81	CES59 = 91	CES84 = 89
CES10 = 73	CES35 = 89	CES60 = 90	CES85 = 80
CES11 = 56	CES36 = 84	CES61 = 87	CES86 = 80
CES12 = 62	CES37 = 87	CES62 = 83	CES87 = 84
CES13 = 42	CES38 = 93	CES63 = 83	CES88 = 89
CES14 = 74	CES39 = 98	CES64 = 76	CES89 = 80
CES15 = 71	CES40 = 95	CES65 = 75	CES90 = 90
CES16 = 46	CES41 = 99	CES66 = 72	CES91 = 72
CES17 = 49	CES42 = 87	CES67 = 70	CES92 = 68
CES18 = 56	CES43 = 86	CES68 = 75	CES93 = 80
CES19 = 71	CES44 = 99	CES69 = 80	CES94 = 66
CES20 = 64	CES45 = 92	CES70 = 70	CES95 = 73
CES21 = 85	CES46 = 91	CES71 = 63	CES96 = 84
CES22 = 77	CES47 = 95	CES72 = 88	CES97 = 91
CES23 = 91	CES48 = 88	CES73 = 63	CES98 = 86
CES24 = 90	CES49 = 90	CES74 = 91	CES99 = 77
CES25 = 71	CES50 = 94	CES75 = 65	



REPORT NUMBER: SP1-2309-187-6

TM-30-18



Color Rendition by Hue-Angle Bin

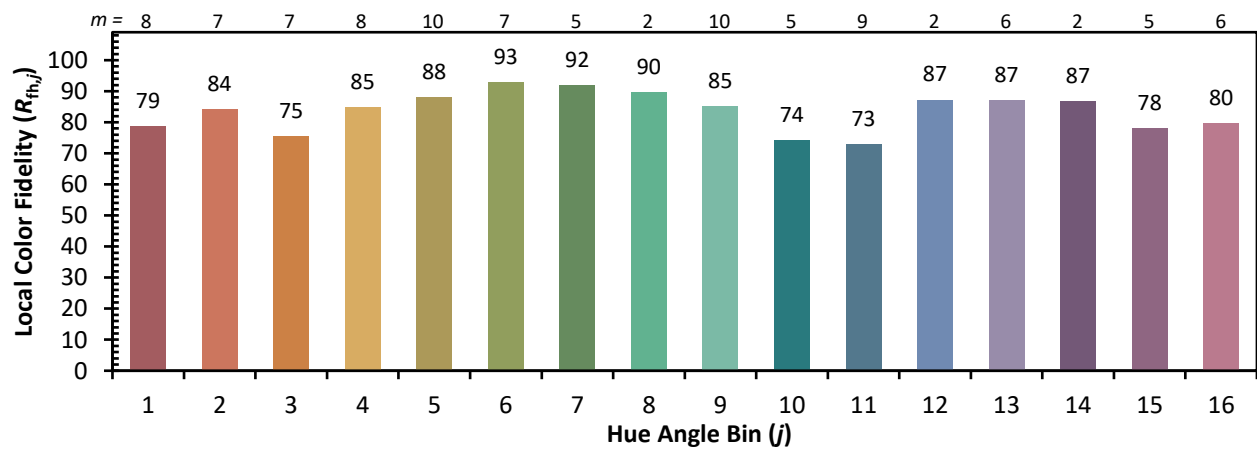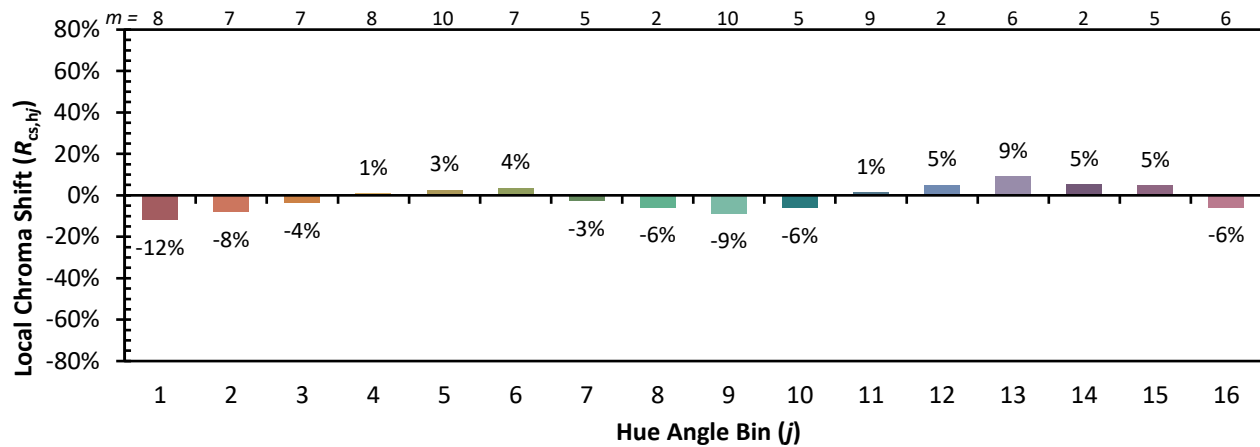

REPORT NUMBER: SP1-2309-187-6

TM-30-18

Measure Comparisons

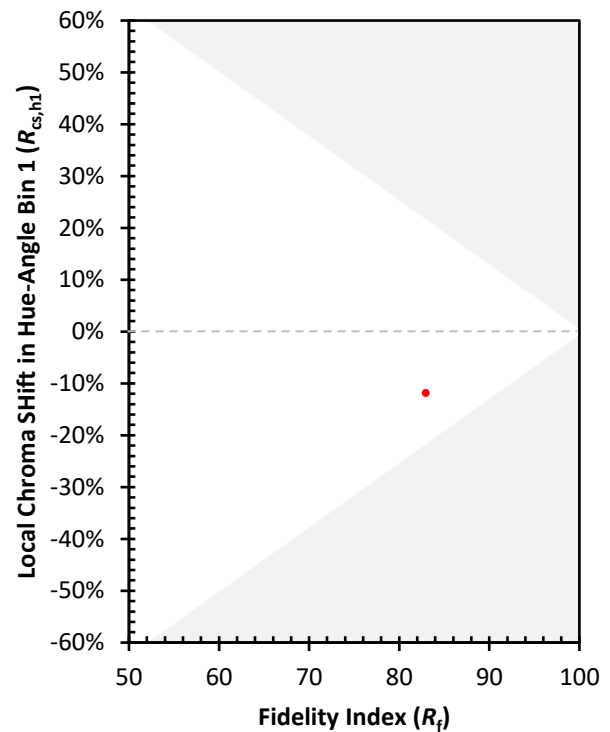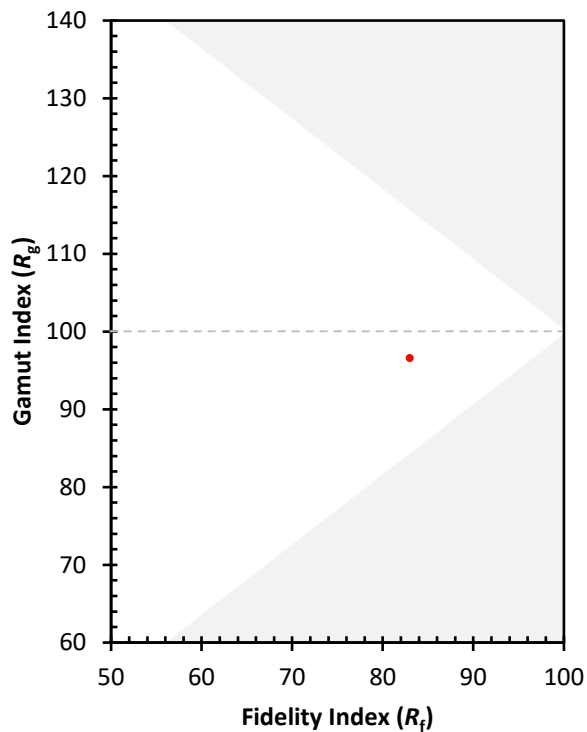

(END OF REPORT)