

Cooper Lighting Solutions Photometric Lab
1121 Highway 74 South
Peachtree City, GA 30269



Scaled data based on original data using
LM-79-08 Approved Method: Electrical and Photometric Measurements of Solid-State
Lighting Products

Test Report Prepared for

Cooper Lighting Solutions

(formerly Eaton)

Brand: METALUX

Report Number: P860228

Luminaire Tested: **SPHB-60HE-W-L850-CD**

Issue Date: 7/11/2024

This test was performed under the Supervised Manufacturer's Testing Program. The results of this test have not been influenced by sources from within Cooper Lighting Solutions or from external interests.



Test Information

Test Method: LM-79-08
Report Number: P860228
TEST IS SCALED FROM IESNA LM-79-08 TEST DATA (G3-2404-343-6)
Test Lab: INNOVATION CENTER
Issue Date: 7/11/2024
Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)
Product Line: METALUX
Catalog Number: SPHB-60HE-W-L850-CD
Description: 60000 Lumen High Efficacy Select Pro High Bay with Wide Lens and,
5000K 80CRI LEDs
Light Source: -
Ballast/Driver: -

Luminaire Equipment: Sample No. Condition Description

Summary


Lumens per Lamp: N/A
Luminaire Lumens: 60556.0 lumens
Efficiency: N/A
Efficacy: 166.8 lumens/watt
Spacing Criteria (0/90/45): 1.16 / 1.5 / 1.51
Luminous Opening: Rectangular (W 1' x L: 3.38' x H: 0')
CIE Type: Direct

Input Watts (W): 363
Input Voltage (V): NR
Input Current (Ain): NR
Voltage Rise (V): NR
Power Factor: NR
Total Harmonic Distortion (THDi): NR
Frequency (hertz): 60
Stabilization Time: NR
Operation Time: NR
Ambient Temperature (°C): NR
Test Distance: 25 FT

TEST NUMBER: P860228

CATALOG NUMBER: SPHB-60HE-W-L850-CD

Luminous Intensity Polar Plot

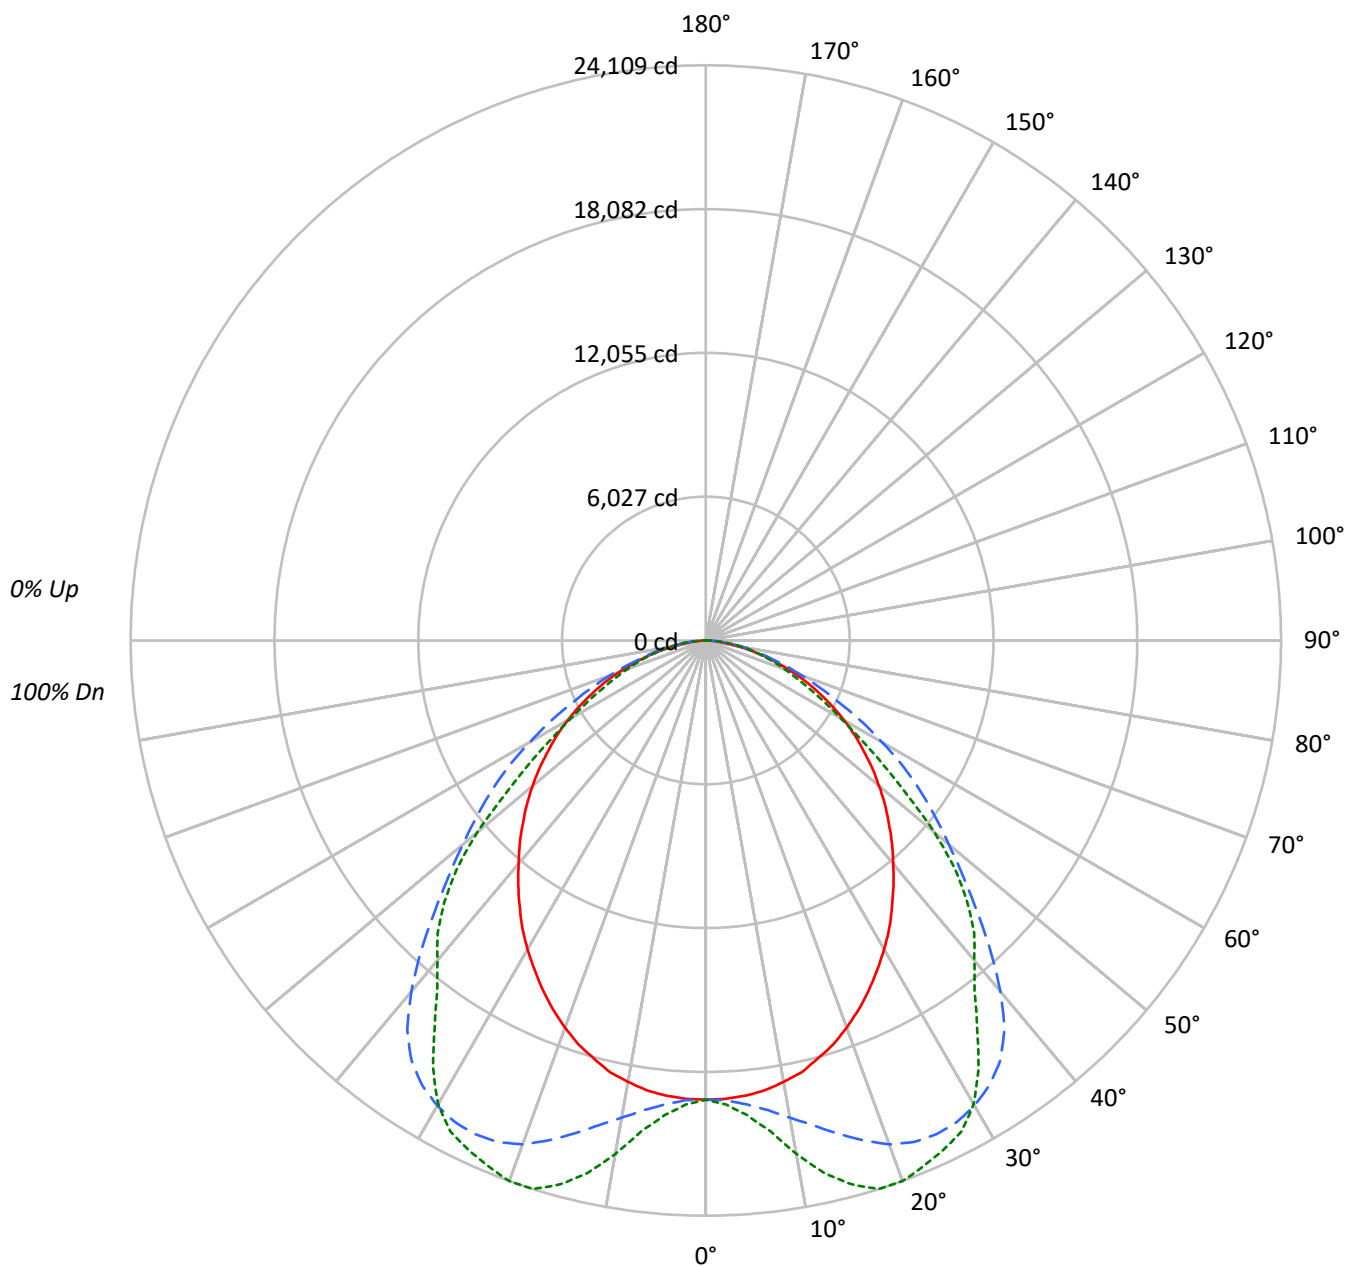



TEST NUMBER: P860228

CATALOG NUMBER: SPHB-60HE-W-L850-CD

COEFFICIENT OF UTILIZATION - ZONAL CAVITY METHOD:

RF	20				20					20					20					20
RC	80				70					50					30					10
RW	70	50	30	10	70	50	30	10	50	30	10	50	30	10	50	30	10	50	30	10
RCR																				
0	119	119	119	119	116	116	116	116	111	111	111	106	106	106	102	102	102	100		
1	110	105	101	98	107	103	99	96	99	96	93	95	92	90	91	89	87	85		
2	100	92	86	81	98	91	85	80	87	82	78	84	80	76	81	77	74	72		
3	92	82	74	68	89	80	73	67	77	71	66	74	69	65	72	67	64	62		
4	84	73	64	58	82	71	63	57	69	62	57	66	61	56	64	59	55	53		
5	77	65	56	50	75	64	56	50	62	55	49	60	54	49	58	52	48	46		
6	72	59	50	44	70	58	49	43	56	49	43	54	48	43	53	47	42	40		
7	66	53	45	39	65	52	44	38	51	43	38	49	43	38	48	42	38	36		
8	62	48	40	34	60	48	40	34	46	39	34	45	39	34	44	38	34	32		
9	58	44	36	31	56	44	36	31	43	36	31	42	35	30	41	35	30	29		
10	54	41	33	28	53	40	33	28	39	33	28	39	32	28	38	32	28	26		

AVERAGE LUMINANCE (cd/sqm):

	0°	45°	90°
0°	61289	61289	61289
5°	61223	62378	63857
10°	60739	65670	70648
15°	59790	70560	77819
20°	58496	76171	81706
25°	56807	80280	82777
30°	54958	82792	82553
35°	52896	83624	77031
40°	50765	79848	72757
45°	48844	72377	69805
50°	46940	65810	61883
55°	44794	60804	50358
60°	42578	54208	41474
65°	39646	46580	35961
70°	36068	39770	32525
75°	30975	33375	29819
80°	24210	28628	27656
85°	16373	24295	22797



TEST NUMBER: P860228

CATALOG NUMBER: SPHB-60HE-W-L850-CD

ZONAL LUMENS:

Zone	Lumens	% Fixture
0°-10°	1889.6	3.1
10°-20°	5991.7	9.9
20°-30°	9805.7	16.2
30°-40°	11962.3	19.8
40°-50°	11847.4	19.6
50°-60°	9474.0	15.6
60°-70°	5910.2	9.8
70°-80°	2895.7	4.8
80°-90°	759.5	1.3
90°-100°	20.0	0.0
100°-110°	0.0	0.0
110°-120°	0.0	0.0
120°-130°	0.0	0.0
130°-140°	0.0	0.0
140°-150°	0.0	0.0
150°-160°	0.0	0.0
160°-170°	0.0	0.0
170°-180°	0.0	0.0
0°-30°	17687.0	29.2
0°-40°	29649.2	49.0
0°-60°	50970.6	84.2
0°-90°	60536.0	100.0
90°-120°	20.0	0.0
90°-150°	20.0	0.0
90°-180°	20.0	0.0
0°-180°	60556.0	100.0

CANDELA DISTRIBUTION:

	0°	22.5°	45°	67.5°	90°	Flux
0°	19246	19246	19246	19246	19246	
5°	19152	19236	19513	19853	19976	###
15°	18135	19190	21402	23105	23604	5112
25°	16167	18904	22847	23510	23558	7440
35°	13606	18181	21510	20361	19814	8511
45°	10845	16849	16070	15531	15500	8377
55°	8068	12936	10951	9894	9070	7228
65°	5261	7258	6182	5126	4772	5217
75°	2517	3084	2712	2484	2424	2672
85°	448	636	665	631	624	555
90°	2	65	118	149	154	26
95°	2	10	10	7	5	1
105°	0	0	0	0	0	0
115°	0	0	0	0	0	0
125°	0	0	0	0	0	0
135°	0	0	0	0	0	0
145°	0	0	0	0	0	0
155°	0	0	0	0	0	0
165°	0	0	0	0	0	0
175°	0	0	0	0	0	0
180°	0	0	0	0	0	



TEST NUMBER: P860228

CATALOG NUMBER: SPHB-60HE-W-L850-CD

CANDELA DISTRIBUTION (FULL):

	0°	22.5°	45°	67.5°	90°
0°	19245.6	19245.6	19245.6	19245.6	19245.6
2.5°	19226.3	19219.1	19289.0	19416.6	19474.5
5°	19151.6	19236.0	19513.0	19852.7	19975.5
7.5°	19016.7	19243.2	19855.1	20479.0	20744.0
10°	18783.1	19248.0	20308.0	21408.9	21847.3
12.5°	18542.2	19231.1	20811.5	22370.1	22849.5
15°	18135.0	19190.2	21401.7	23104.8	23603.5
17.5°	17756.8	19142.0	21970.2	23728.8	24107.0
20°	17260.6	19072.2	22476.1	23919.1	24109.4
22.5°	16740.2	19016.7	22755.5	23791.4	23849.2
25°	16166.9	18903.5	22847.1	23509.6	23557.7
27.5°	15555.0	18802.3	22760.3	23160.2	23201.2
30°	14945.5	18619.3	22514.6	22615.8	22449.6
32.5°	14307.1	18436.2	22117.1	21661.8	21274.0
35°	13606.1	18180.8	21510.1	20361.0	19814.1
37.5°	12914.7	17935.1	20563.3	18905.9	18494.0
40°	12211.3	17631.6	19207.1	17547.2	17501.5
42.5°	11546.4	17303.9	17672.5	16489.7	16643.9
45°	10845.4	16848.6	16070.5	15530.9	15499.6
47.5°	10180.5	16219.9	14613.1	14470.9	14150.5
50°	9474.6	15352.6	13283.3	13148.4	12490.7
52.5°	8783.3	14246.9	12095.7	11589.8	10631.0
55°	8067.8	12936.4	10951.4	9893.8	9069.9
57.5°	7402.9	11495.8	9787.8	8417.1	7677.5
60°	6685.0	10035.9	8511.0	7121.0	6511.6
62.5°	5981.6	8597.8	7354.7	6017.7	5613.0
65°	5261.3	7258.4	6181.5	5126.4	4772.3
67.5°	4572.3	6099.6	5167.3	4321.8	4085.7
70°	3873.7	4948.1	4271.2	3630.4	3493.1
72.5°	3153.4	3953.2	3454.5	3064.3	2960.7
75°	2517.4	3083.5	2712.5	2483.7	2423.5
77.5°	1874.2	2293.4	2119.9	1985.0	1968.2
80°	1320.1	1655.0	1561.0	1534.5	1508.0
82.5°	843.2	1081.6	1110.6	1093.7	1074.4
85°	448.1	636.0	664.9	631.2	623.9
87.5°	180.7	277.0	298.7	330.0	339.7
90°	2.4	65.0	118.0	149.4	154.2
92.5°	2.4	14.5	16.9	16.9	14.5
95°	2.4	9.6	9.6	7.2	4.8
97.5°	0.0	0.0	0.0	0.0	0.0
100°	0.0	0.0	0.0	0.0	0.0
102.5°	0.0	0.0	0.0	0.0	0.0
105°	0.0	0.0	0.0	0.0	0.0



TEST NUMBER: P860228

CATALOG NUMBER: SPHB-60HE-W-L850-CD

CANDELA DISTRIBUTION (continued):

	0°	22.5°	45°	67.5°	90°
112.5°	0.0	0.0	0.0	0.0	0.0
115°	0.0	0.0	0.0	0.0	0.0
117.5°	0.0	0.0	0.0	0.0	0.0
120°	0.0	0.0	0.0	0.0	0.0
122.5°	0.0	0.0	0.0	0.0	0.0
125°	0.0	0.0	0.0	0.0	0.0
127.5°	0.0	0.0	0.0	0.0	0.0
130°	0.0	0.0	0.0	0.0	0.0
132.5°	0.0	0.0	0.0	0.0	0.0
135°	0.0	0.0	0.0	0.0	0.0
137.5°	0.0	0.0	0.0	0.0	0.0
140°	0.0	0.0	0.0	0.0	0.0
142.5°	0.0	0.0	0.0	0.0	0.0
145°	0.0	0.0	0.0	0.0	0.0
147.5°	0.0	0.0	0.0	0.0	0.0
150°	0.0	0.0	0.0	0.0	0.0
152.5°	0.0	0.0	0.0	0.0	0.0
155°	0.0	0.0	0.0	0.0	0.0
157.5°	0.0	0.0	0.0	0.0	0.0
160°	0.0	0.0	0.0	0.0	0.0
162.5°	0.0	0.0	0.0	0.0	0.0
165°	0.0	0.0	0.0	0.0	0.0
167.5°	0.0	0.0	0.0	0.0	0.0
170°	0.0	0.0	0.0	0.0	0.0
172.5°	0.0	0.0	0.0	0.0	0.0
175°	0.0	0.0	0.0	0.0	0.0
177.5°	0.0	0.0	0.0	0.0	0.0
180°	0.0	0.0	0.0	0.0	0.0



Report Generated By 670246072 / DESKTOP-50001EG





— 0°-180° - - 45°-225° - - - 90°-270°







107.5°	0.0	0.0	0.0	0.0	0.0
110°	0.0	0.0	0.0	0.0	0.0



LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-State Lighting Products

Report Prepared for

Cooper Lighting Solutions

METALUX

Report Number: SP1-2309-187-6

Test Date: 10/10/2023

Luminaire Tested: SPHB-2436SE-M-UNV-L84050-CD-U (36K LUMEN 5000K)

Data in this report applies to families of products including SPHB-2436SE-M-UNV-L84050-CD-U (36K LUMEN 5000K).


Test Information

Test Method: LM-79-2019
 Report Number: SP1-2309-187-6
 Test Lab: COOPER LIGHTING SOLUTIONS
 Photometer: SP1 - 76IN SPHERE
 Measurement Geometry: 4π
 Issue Date: 10/10/2023
 Manufacturer: COOPER LIGHTING SOLUTIONS
 Product Line: METALUX
 Catalog Number: **SPHB-2436SE-M-UNV-L84050-CD-U (36K LUMEN 5000K)**
 Description: SPHB SELECT, MEDIUM LENS, 36K LUMENS, 5000K

Spectral Parameters

CCT (K): 4957
 CIE u': 0.2117
 CIE v': 0.4855
 Duv: 0.0002
 CIE x: 0.3463
 CIE y: 0.3530
 CIE z: 0.3007
 Peak Wavelength (nm): 452
 Dominant Wavelength (nm): 573
 Purity: 10
 Rf: 83
 Rg: 96.6

CRI (Ra): 83.0
 R1: 81.6
 R2: 88.2
 R3: 91.8
 R4: 82.0
 R5: 81.2
 R6: 82.2
 R7: 88.1
 R8: 69.2
 R9: 13.4
 R10: 70.8
 R11: 80.4
 R12: 55.2
 R13: 83.4
 R14: 95.6

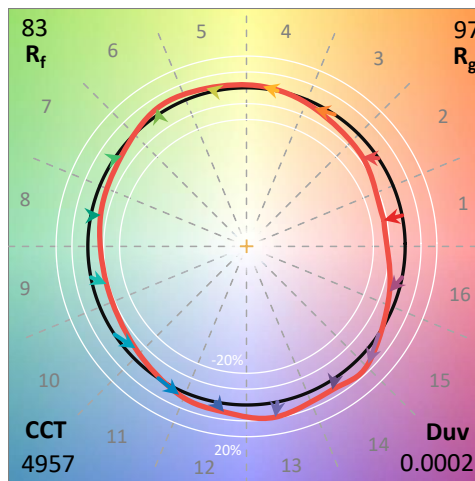

Test Conditions

Stabilization Time: 10M
 Operation Time: 12H
 Room Temperature (°C) / RH%: 25.8/38%
 Sphere Temperature (°C): 24.2

REPORT NUMBER: SP1-2309-187-6

Measurement and Test Equipment			
Instrument	Identification Number	Calibration Date	Calibration Due Date
Photometer	76INCH SPHERE IN0058	8/9/2023	2/9/2024
Power Meter	XITRON 2801 IN0071	11/29/2022	11/29/2023
AC Power Source	CHROMA 61603 IN0063	11/28/2022	11/28/2023
DC Power Source	AGILENT E3634A IN0208	11/28/2022	11/28/2023
Sphere Thermometer	ONSET IN0085	11/28/2022	11/28/2023
Room Thermometer	ONSET IN0046	11/28/2022	11/28/2023

REPORT NUMBER: SP1-2309-187-6

CIE 1931 Chromaticity Diagram



CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles



Point lies inside the ANSI 5000K 4-step quadrangle

REPORT NUMBER: SP1-2309-187-6

Photopic Flux vs. Wavelength



#####

λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)
360	16466	NR	490	226060	NR	620	461721	NR	750	25725	NR	880	22907	NR
365	15834	NR	495	262555	NR	625	431803	NR	755	23611	NR	885	20279	NR
370	15705	NR	500	311885	NR	630	403609	NR	760	23080	NR	890	16993	NR
375	16161	NR	505	357744	NR	635	372123	NR	765	19807	NR	895	19274	NR
380	17604	NR	510	398986	NR	640	341468	NR	770	19668	NR	900	19961	NR
385	15901	NR	515	433700	NR	645	309940	NR	775	19158	NR	905	18541	NR
390	15561	NR	520	460798	NR	650	281489	NR	780	15443	NR	910	17677	NR
395	13649	NR	525	477719	NR	655	251312	NR	785	15332	NR	915	22715	NR
400	12726	NR	530	489588	NR	660	226441	NR	790	15443	NR	920	20431	NR
405	12867	NR	535	500614	NR	665	197313	NR	795	12716	NR	925	18281	NR
410	14858	NR	540	509478	NR	670	174037	NR	800	14486	NR	930	24254	NR
415	22758	NR	545	518634	NR	675	150402	NR	805	13381	NR	935	22361	NR
420	40173	NR	550	526082	NR	680	133071	NR	810	13493	NR	940	21374	NR
425	73606	NR	555	535227	NR	685	115398	NR	815	13669	NR	945	28437	NR
430	132581	NR	560	544645	NR	690	99841	NR	820	13949	NR	950	12992	NR
435	230438	NR	565	553668	NR	695	87508	NR	825	15609	NR	955	16488	NR
440	382216	NR	570	563202	NR	700	76178	NR	830	16481	NR	960	22861	NR
445	630161	NR	575	570117	NR	705	66441	NR	835	17363	NR	965	29851	NR
450	918124	NR	580	573472	NR	710	60098	NR	840	16960	NR	970	10276	NR
455	893762	NR	585	571600	NR	715	54539	NR	845	20190	NR	975	29525	NR
460	612059	NR	590	567612	NR	720	48071	NR	850	20506	NR	980	26199	NR
465	443338	NR	595	561157	NR	725	42545	NR	855	18525	NR	985	27187	NR
470	344255	NR	600	547832	NR	730	38502	NR	860	19090	NR	990	30712	NR
475	249784	NR	605	530525	NR	735	33410	NR	865	17185	NR	995	15047	NR
480	207499	NR	610	513131	NR	740	29667	NR	870	18599	NR	1000	14588	NR
485	208029	NR	615	491003	NR	745	27521	NR	875	20800	NR			

REPORT NUMBER: SP1-2309-187-6

Scotopic Flux vs. Wavelength




Scotopic Lumens: 69332.4

S/P: 1.93

λ (nm)	Power (μW/nm)	Lumens (Φ/nm)	λ (nm)	Power (μW/nm)	Lumens (Φ/nm)	λ (nm)	Power (μW/nm)	Lumens (Φ/nm)	λ (nm)	Power (μW/nm)	Lumens (Φ/nm)	λ (nm)	Power (μW/nm)	Lumens (Φ/nm)
360	16466	NR	490	226060	NR	620	461721	NR	750	25725	NR	880	22907	NR
365	15834	NR	495	262555	NR	625	431803	NR	755	23611	NR	885	20279	NR
370	15705	NR	500	311885	NR	630	403609	NR	760	23080	NR	890	16993	NR
375	16161	NR	505	357744	NR	635	372123	NR	765	19807	NR	895	19274	NR
380	17604	NR	510	398986	NR	640	341468	NR	770	19668	NR	900	19961	NR
385	15901	NR	515	433700	NR	645	309940	NR	775	19158	NR	905	18541	NR
390	15561	NR	520	460798	NR	650	281489	NR	780	15443	NR	910	17677	NR
395	13649	NR	525	477719	NR	655	251312	NR	785	15332	NR	915	22715	NR
400	12726	NR	530	489588	NR	660	226441	NR	790	15443	NR	920	20431	NR
405	12867	NR	535	500614	NR	665	197313	NR	795	12716	NR	925	18281	NR
410	14858	NR	540	509478	NR	670	174037	NR	800	14486	NR	930	24254	NR
415	22758	NR	545	518634	NR	675	150402	NR	805	13381	NR	935	22361	NR
420	40173	NR	550	526082	NR	680	133071	NR	810	13493	NR	940	21374	NR
425	73606	NR	555	535227	NR	685	115398	NR	815	13669	NR	945	28437	NR
430	132581	NR	560	544645	NR	690	99841	NR	820	13949	NR	950	12992	NR
435	230438	NR	565	553668	NR	695	87508	NR	825	15609	NR	955	16488	NR
440	382216	NR	570	563202	NR	700	76178	NR	830	16481	NR	960	22861	NR
445	630161	NR	575	570117	NR	705	66441	NR	835	17363	NR	965	29851	NR
450	918124	NR	580	573472	NR	710	60098	NR	840	16960	NR	970	10276	NR
455	893762	NR	585	571600	NR	715	54539	NR	845	20190	NR	975	29525	NR
460	612059	NR	590	567612	NR	720	48071	NR	850	20506	NR	980	26199	NR
465	443338	NR	595	561157	NR	725	42545	NR	855	18525	NR	985	27187	NR
470	344255	NR	600	547832	NR	730	38502	NR	860	19090	NR	990	30712	NR
475	249784	NR	605	530525	NR	735	33410	NR	865	17185	NR	995	15047	NR
480	207499	NR	610	513131	NR	740	29667	NR	870	18599	NR	1000	14588	NR
485	208029	NR	615	491003	NR	745	27521	NR	875	20800	NR			

REPORT NUMBER: SP1-2309-187-6

Melanopic Flux vs. Wavelength

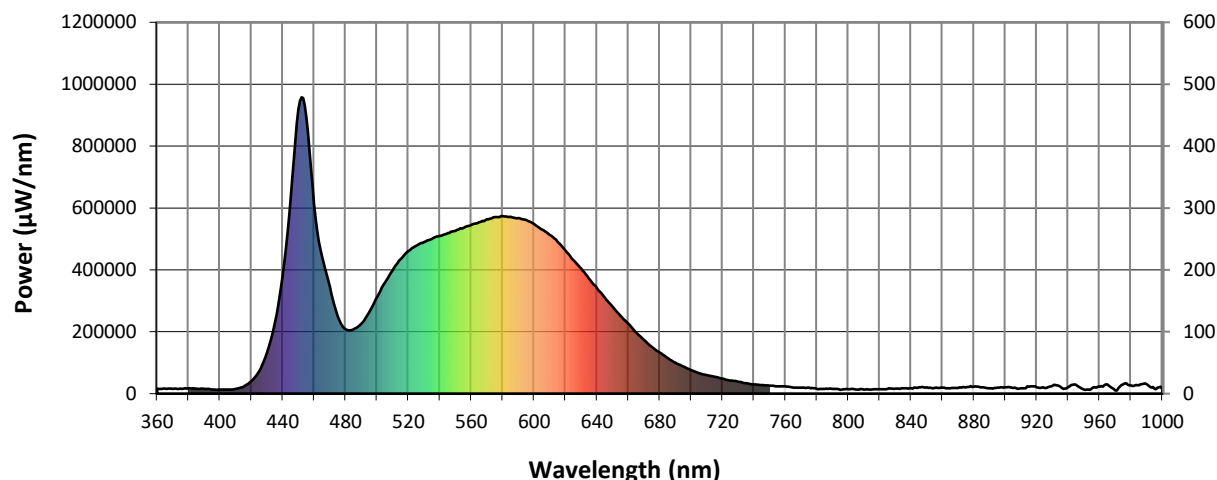

Melanopic Lumens: 29078.2 M/P: 0.81


λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)
360	16466	NR	490	226060	NR	620	461721	NR	750	25725	NR	880	22907	NR
365	15834	NR	495	262555	NR	625	431803	NR	755	23611	NR	885	20279	NR
370	15705	NR	500	311885	NR	630	403609	NR	760	23080	NR	890	16993	NR
375	16161	NR	505	357744	NR	635	372123	NR	765	19807	NR	895	19274	NR
380	17604	NR	510	398986	NR	640	341468	NR	770	19668	NR	900	19961	NR
385	15901	NR	515	433700	NR	645	309940	NR	775	19158	NR	905	18541	NR
390	15561	NR	520	460798	NR	650	281489	NR	780	15443	NR	910	17677	NR
395	13649	NR	525	477719	NR	655	251312	NR	785	15332	NR	915	22715	NR
400	12726	NR	530	489588	NR	660	226441	NR	790	15443	NR	920	20431	NR
405	12867	NR	535	500614	NR	665	197313	NR	795	12716	NR	925	18281	NR
410	14858	NR	540	509478	NR	670	174037	NR	800	14486	NR	930	24254	NR
415	22758	NR	545	518634	NR	675	150402	NR	805	13381	NR	935	22361	NR
420	40173	NR	550	526082	NR	680	133071	NR	810	13493	NR	940	21374	NR
425	73606	NR	555	535227	NR	685	115398	NR	815	13669	NR	945	28437	NR
430	132581	NR	560	544645	NR	690	99841	NR	820	13949	NR	950	12992	NR
435	230438	NR	565	553668	NR	695	87508	NR	825	15609	NR	955	16488	NR
440	382216	NR	570	563202	NR	700	76178	NR	830	16481	NR	960	22861	NR
445	630161	NR	575	570117	NR	705	66441	NR	835	17363	NR	965	29851	NR
450	918124	NR	580	573472	NR	710	60098	NR	840	16960	NR	970	10276	NR
455	893762	NR	585	571600	NR	715	54539	NR	845	20190	NR	975	29525	NR
460	612059	NR	590	567612	NR	720	48071	NR	850	20506	NR	980	26199	NR
465	443338	NR	595	561157	NR	725	42545	NR	855	18525	NR	985	27187	NR
470	344255	NR	600	547832	NR	730	38502	NR	860	19090	NR	990	30712	NR
475	249784	NR	605	530525	NR	735	33410	NR	865	17185	NR	995	15047	NR
480	207499	NR	610	513131	NR	740	29667	NR	870	18599	NR	1000	14588	NR
485	208029	NR	615	491003	NR	745	27521	NR	875	20800	NR			

REPORT NUMBER: SP1-2309-187-6


TM-30-18

Summary

$R_f = 83$
 $R_g = 96.6$
 CIE $R_a = 83.0$
 $R_g = 13.4$

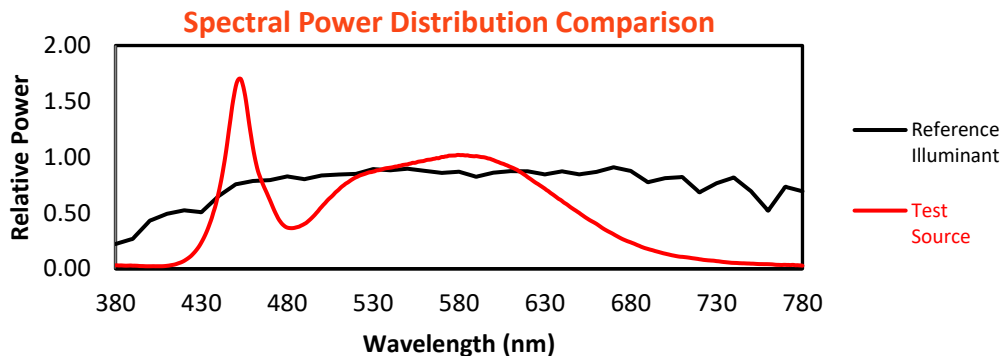

Color Vector Graphics

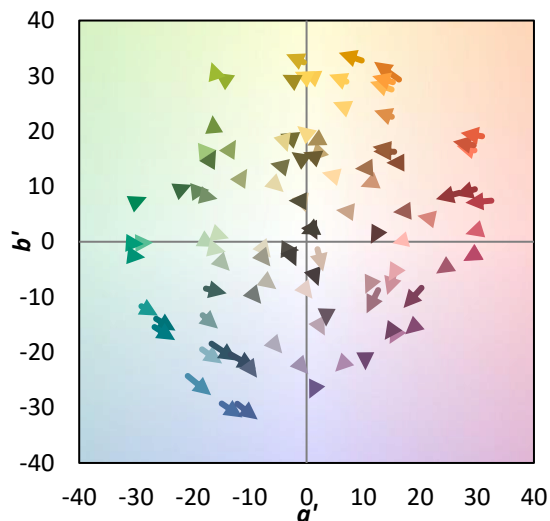

REPORT NUMBER: SP1-2309-187-6

TM-30-18

Individual Sample Fidelity Index ($R_{f,i}$)



CES01 = 85	CES26 = 78	CES51 = 94	CES76 = 69
CES02 = 60	CES27 = 93	CES52 = 94	CES77 = 78
CES03 = 30	CES28 = 88	CES53 = 89	CES78 = 69
CES04 = 69	CES29 = 83	CES54 = 90	CES79 = 89
CES05 = 47	CES30 = 96	CES55 = 88	CES80 = 86
CES06 = 50	CES31 = 85	CES56 = 85	CES81 = 85
CES07 = 40	CES32 = 77	CES57 = 84	CES82 = 94
CES08 = 39	CES33 = 92	CES58 = 84	CES83 = 95
CES09 = 29	CES34 = 81	CES59 = 91	CES84 = 89
CES10 = 73	CES35 = 89	CES60 = 90	CES85 = 80
CES11 = 56	CES36 = 84	CES61 = 87	CES86 = 80
CES12 = 62	CES37 = 87	CES62 = 83	CES87 = 84
CES13 = 42	CES38 = 93	CES63 = 83	CES88 = 89
CES14 = 74	CES39 = 98	CES64 = 76	CES89 = 80
CES15 = 71	CES40 = 95	CES65 = 75	CES90 = 90
CES16 = 46	CES41 = 99	CES66 = 72	CES91 = 72
CES17 = 49	CES42 = 87	CES67 = 70	CES92 = 68
CES18 = 56	CES43 = 86	CES68 = 75	CES93 = 80
CES19 = 71	CES44 = 99	CES69 = 80	CES94 = 66
CES20 = 64	CES45 = 92	CES70 = 70	CES95 = 73
CES21 = 85	CES46 = 91	CES71 = 63	CES96 = 84
CES22 = 77	CES47 = 95	CES72 = 88	CES97 = 91
CES23 = 91	CES48 = 88	CES73 = 63	CES98 = 86
CES24 = 90	CES49 = 90	CES74 = 91	CES99 = 77
CES25 = 71	CES50 = 94	CES75 = 65	



REPORT NUMBER: SP1-2309-187-6

TM-30-18



Color Rendition by Hue-Angle Bin

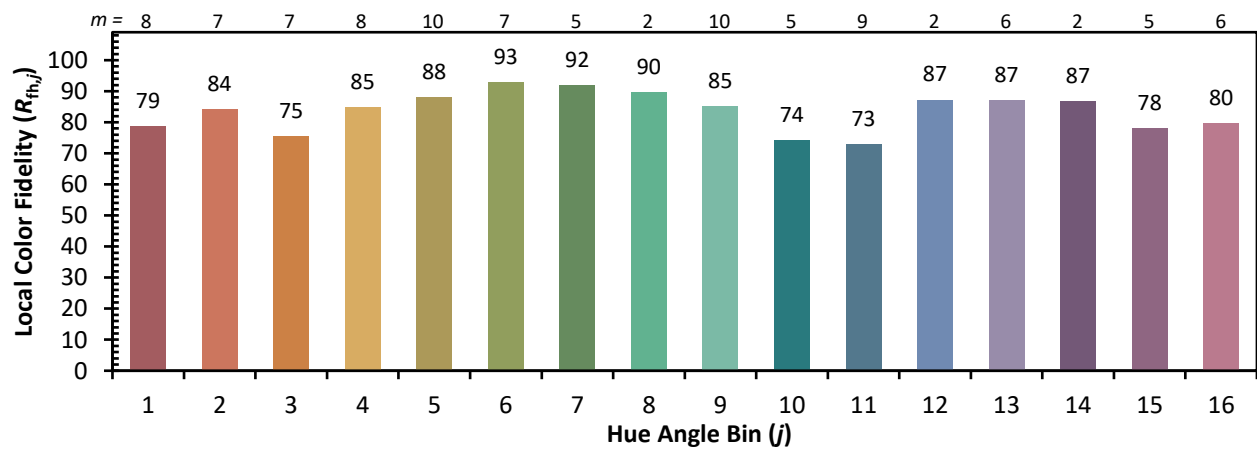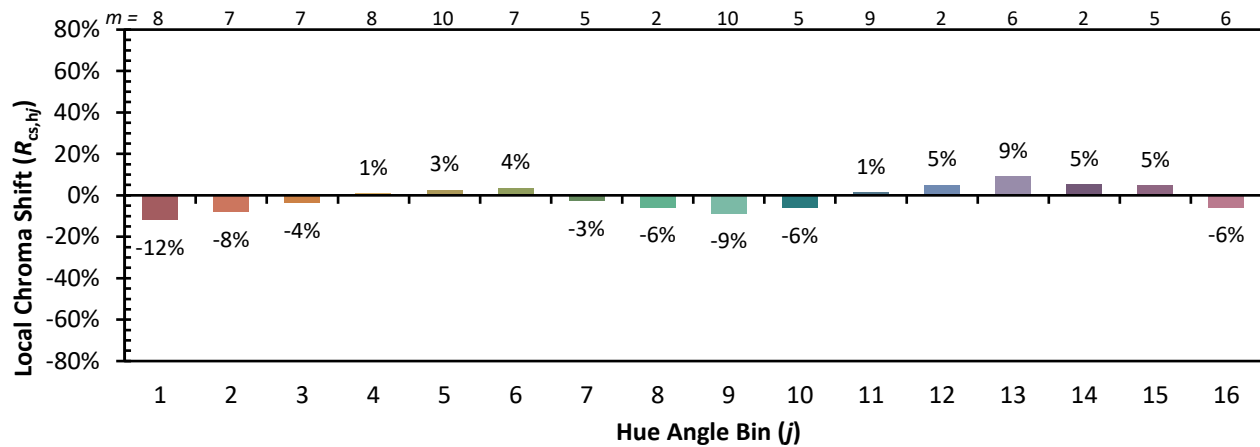

REPORT NUMBER: SP1-2309-187-6

TM-30-18

Measure Comparisons

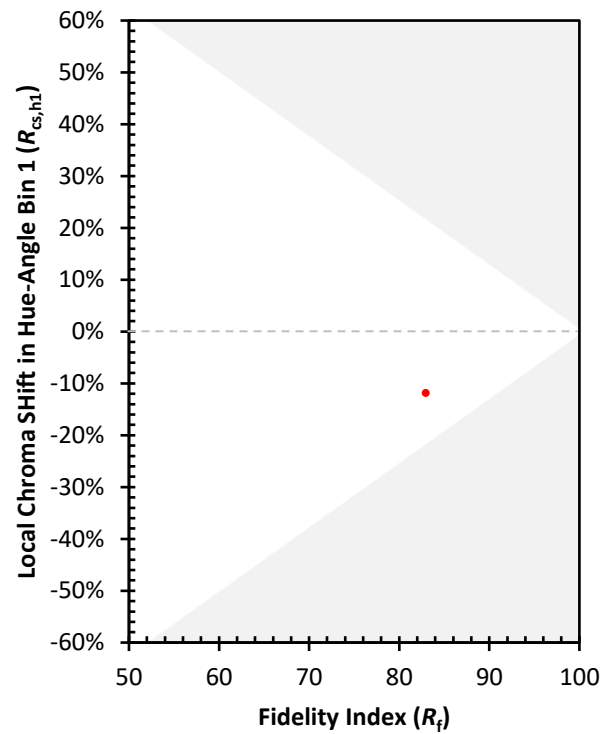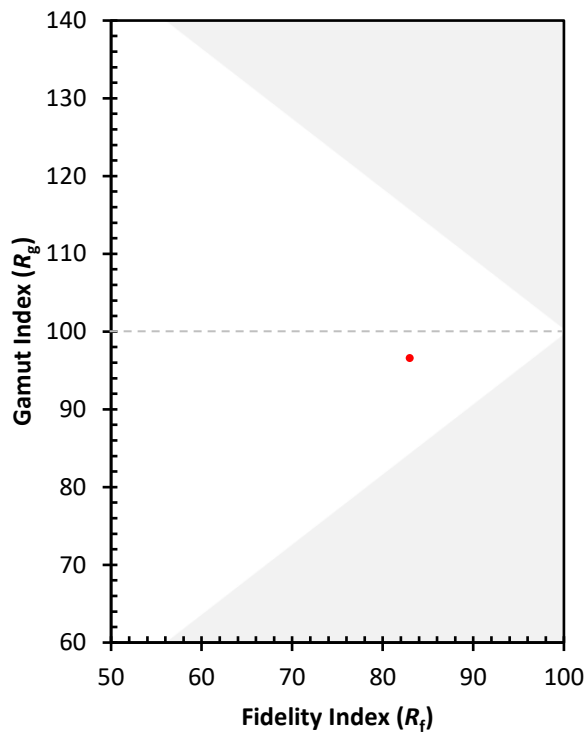

(END OF REPORT)