

Cooper Lighting Solutions Photometric Lab
1121 Highway 74 South
Peachtree City, GA 30269



Scaled data based on original data using
LM-79-08 Approved Method: Electrical and Photometric Measurements of Solid-State
Lighting Products

Test Report Prepared for

Cooper Lighting Solutions

(formerly Eaton)

Brand: METALUX

Report Number: P860092

Luminaire Tested: **SPHB-30SE-W-L840-CD**

Issue Date: 7/11/2024

This test was performed under the Supervised Manufacturer's Testing Program. The results of this test have not been influenced by sources from within Cooper Lighting Solutions or from external interests.



Test Information

Test Method: LM-79-08
Report Number: P860092
TEST IS SCALED FROM IESNA LM-79-08 TEST DATA (G3-2404-343-6)
Test Lab: INNOVATION CENTER
Issue Date: 7/11/2024
Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)
Product Line: METALUX
Catalog Number: SPHB-30SE-W-L840-CD
Description: 30000 Lumen Standard Efficacy Select Pro High Bay with Wide Lens
and, 4000K 80CRI LEDs
Light Source: -
Ballast/Driver: -

Luminaire Equipment: Sample No. Condition Description

Summary


Lumens per Lamp: N/A
Luminaire Lumens: 31618.0 lumens
Efficiency: N/A
Efficacy: 162.1 lumens/watt
Spacing Criteria (0/90/45): 1.16 / 1.5 / 1.51
Luminous Opening: Rectangular (W 1' x L: 2.04' x H: 0')
CIE Type: Direct

Input Watts (W): 195
Input Voltage (V): NR
Input Current (Ain): NR
Voltage Rise (V): NR
Power Factor: NR
Total Harmonic Distortion (THDi): NR
Frequency (hertz): 60
Stabilization Time: NR
Operation Time: NR
Ambient Temperature (°C): NR
Test Distance: 25 FT

TEST NUMBER: P860092

CATALOG NUMBER: SPHB-30SE-W-L840-CD

Luminous Intensity Polar Plot

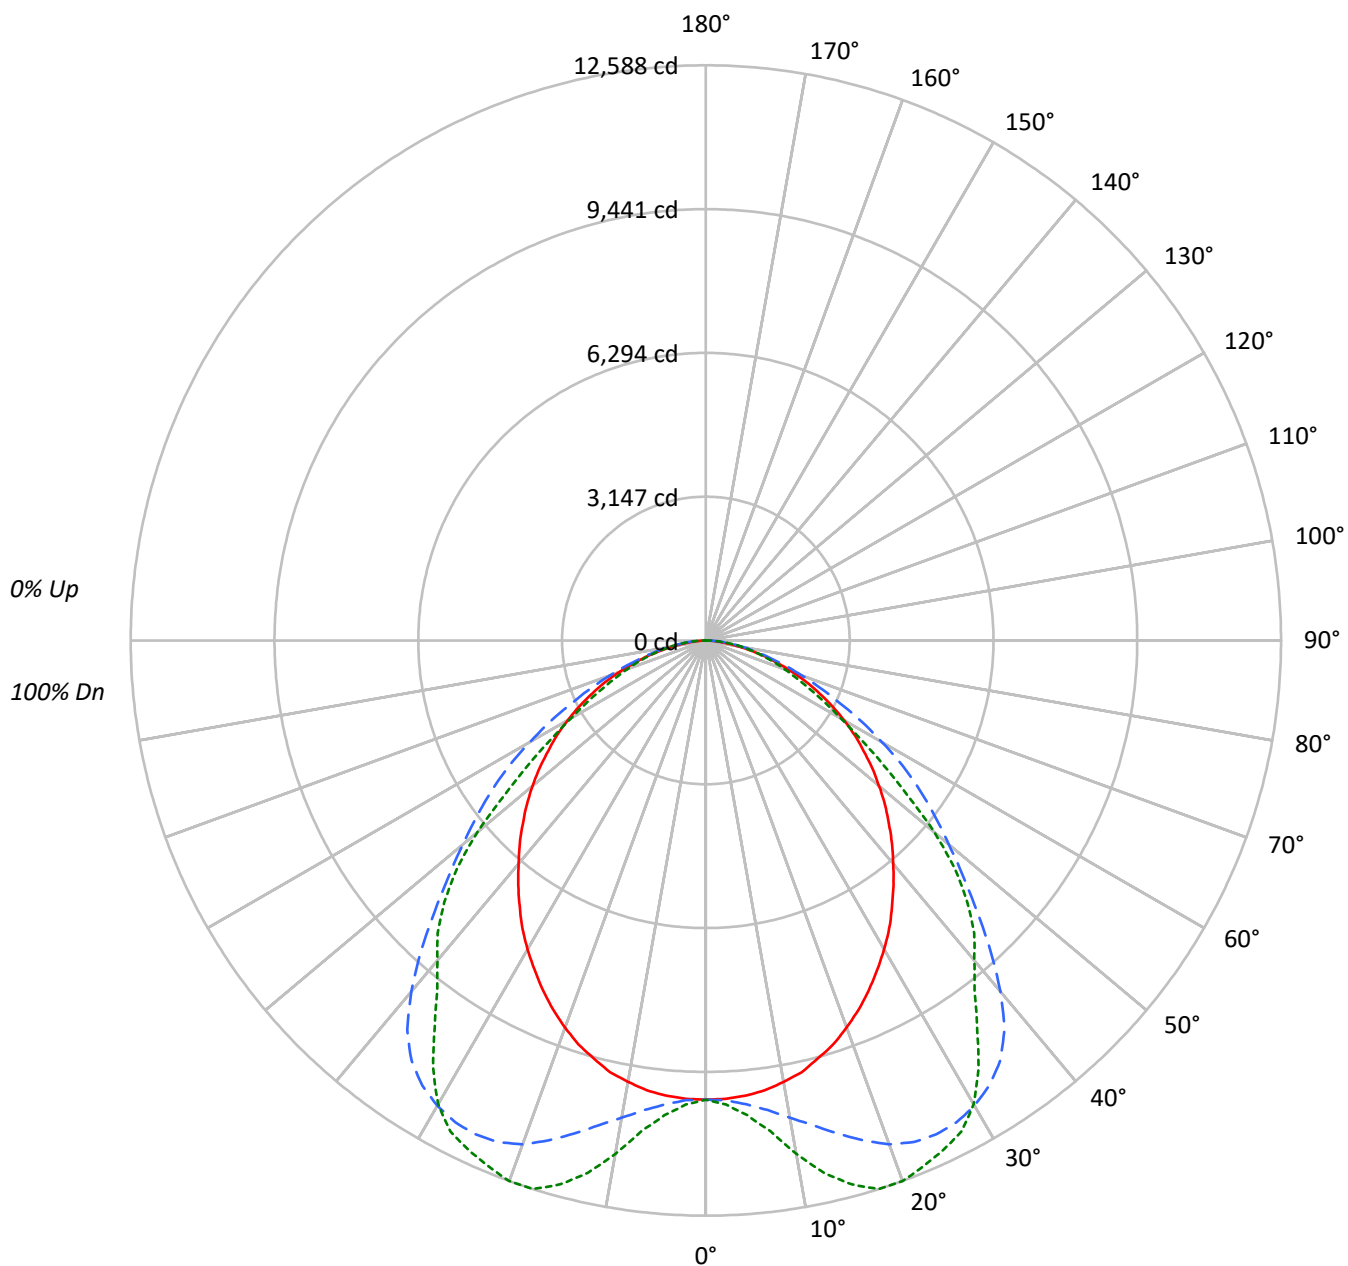



TEST NUMBER: P860092

CATALOG NUMBER: SPHB-30SE-W-L840-CD

COEFFICIENT OF UTILIZATION - ZONAL CAVITY METHOD:

RF	20				20					20					20					20
RC	80				70					50					30					0
RW	70	50	30	10	70	50	30	10	50	30	10	50	30	10	50	30	10	50	30	10
RCR																				
0	119	119	119	119	116	116	116	116	111	111	111	106	106	106	102	102	102	100		
1	110	105	101	98	107	103	99	96	99	96	93	95	92	90	91	89	87	85		
2	100	92	86	81	98	91	85	80	87	82	78	84	80	76	81	77	74	72		
3	92	82	74	68	89	80	73	67	77	71	66	74	69	65	72	67	64	62		
4	84	73	64	58	82	71	63	57	69	62	57	66	61	56	64	59	55	53		
5	77	65	56	50	75	64	56	50	62	55	49	60	54	49	58	52	48	46		
6	72	59	50	44	70	58	49	43	56	49	43	54	48	43	53	47	42	40		
7	66	53	45	39	65	52	44	38	51	43	38	49	43	38	48	42	38	36		
8	62	48	40	34	60	48	40	34	46	39	34	45	39	34	44	38	34	32		
9	58	44	36	31	56	44	36	31	43	36	31	42	35	30	41	35	30	29		
10	54	41	33	28	53	40	33	28	39	33	28	39	32	28	38	32	28	26		

AVERAGE LUMINANCE (cd/sqm):

	0°	45°	90°
0°	53021	53021	53021
5°	52964	53963	55242
10°	52545	56811	61117
15°	51724	61041	67321
20°	50604	65895	70683
25°	49144	69450	71610
30°	47544	71623	71416
35°	45760	72343	66639
40°	43916	69075	62942
45°	42255	62613	60388
50°	40608	56932	53535
55°	38751	52601	43565
60°	36834	46896	35879
65°	34298	40296	31109
70°	31203	34404	28136
75°	26796	28873	25797
80°	20945	24767	23926
85°	14166	21020	19724



TEST NUMBER: P860092

CATALOG NUMBER: SPHB-30SE-W-L840-CD

ZONAL LUMENS:

Zone	Lumens	% Fixture
0°-10°	986.6	3.1
10°-20°	3128.4	9.9
20°-30°	5119.8	16.2
30°-40°	6245.8	19.8
40°-50°	6185.8	19.6
50°-60°	4946.6	15.6
60°-70°	3085.9	9.8
70°-80°	1511.9	4.8
80°-90°	396.5	1.3
90°-100°	10.4	0.0
100°-110°	0.0	0.0
110°-120°	0.0	0.0
120°-130°	0.0	0.0
130°-140°	0.0	0.0
140°-150°	0.0	0.0
150°-160°	0.0	0.0
160°-170°	0.0	0.0
170°-180°	0.0	0.0
0°-30°	9234.9	29.2
0°-40°	15480.7	49.0
0°-60°	26613.2	84.2
0°-90°	31607.5	100.0
90°-120°	10.4	0.0
90°-150°	10.4	0.0
90°-180°	10.0	0.0
0°-180°	31618.0	100.0

CANDELA DISTRIBUTION:

	0°	22.5°	45°	67.5°	90°	Flux
0°	10049	10049	10049	10049	10049	
5°	10000	10044	10188	10366	10430	949
15°	9469	10020	11174	12064	12324	2669
25°	8441	9870	11929	12275	12300	3884
35°	7104	9493	11231	10631	10346	4444
45°	5663	8797	8391	8109	8093	4374
55°	4212	6754	5718	5166	4736	3774
65°	2747	3790	3228	2677	2492	2724
75°	1314	1610	1416	1297	1265	1395
85°	234	332	347	330	326	290
90°	1	34	62	78	80	13
95°	1	5	5	4	2	1
105°	0	0	0	0	0	0
115°	0	0	0	0	0	0
125°	0	0	0	0	0	0
135°	0	0	0	0	0	0
145°	0	0	0	0	0	0
155°	0	0	0	0	0	0
165°	0	0	0	0	0	0
175°	0	0	0	0	0	0
180°	0	0	0	0	0	0



TEST NUMBER: P860092

CATALOG NUMBER: SPHB-30SE-W-L840-CD

CANDELA DISTRIBUTION (FULL):

	0°	22.5°	45°	67.5°	90°
0°	10048.7	10048.7	10048.7	10048.7	10048.7
2.5°	10038.6	10034.8	10071.3	10138.0	10168.2
5°	9999.6	10043.6	10188.3	10365.6	10429.8
7.5°	9929.2	10047.4	10366.9	10692.7	10831.0
10°	9807.2	10049.9	10603.4	11178.2	11407.1
12.5°	9681.4	10041.1	10866.3	11680.1	11930.4
15°	9468.8	10019.7	11174.4	12063.7	12324.1
17.5°	9271.3	9994.6	11471.3	12389.5	12586.9
20°	9012.2	9958.1	11735.4	12488.8	12588.2
22.5°	8740.5	9929.2	11881.3	12422.2	12452.4
25°	8441.2	9870.1	11929.1	12275.0	12300.2
27.5°	8121.7	9817.2	11883.8	12092.6	12114.0
30°	7803.5	9721.6	11755.5	11808.4	11721.6
32.5°	7470.2	9626.0	11548.0	11310.3	11107.8
35°	7104.1	9492.7	11231.0	10631.0	10345.5
37.5°	6743.1	9364.4	10736.7	9871.3	9656.2
40°	6375.9	9205.9	10028.5	9161.9	9138.0
42.5°	6028.7	9034.9	9227.3	8609.7	8690.2
45°	5662.7	8797.1	8390.9	8109.1	8092.8
47.5°	5315.5	8468.9	7629.9	7555.7	7388.4
50°	4947.0	8016.0	6935.6	6865.1	6521.8
52.5°	4586.0	7438.7	6315.5	6051.3	5550.7
55°	4212.4	6754.5	5718.0	5165.8	4735.7
57.5°	3865.3	6002.3	5110.5	4394.8	4008.7
60°	3490.4	5240.1	4443.9	3718.1	3399.9
62.5°	3123.2	4489.1	3840.1	3142.0	2930.7
65°	2747.1	3789.8	3227.5	2676.6	2491.7
67.5°	2387.3	3184.8	2698.0	2256.5	2133.3
70°	2022.6	2583.5	2230.1	1895.5	1823.8
72.5°	1646.5	2064.1	1803.7	1599.9	1545.9
75°	1314.4	1610.0	1416.3	1296.8	1265.4
77.5°	978.6	1197.4	1106.9	1036.4	1027.6
80°	689.3	864.1	815.1	801.2	787.4
82.5°	440.2	564.8	579.9	571.0	561.0
85°	234.0	332.1	347.2	329.5	325.8
87.5°	94.3	144.6	156.0	172.3	177.4
90°	1.3	34.0	61.6	78.0	80.5
92.5°	1.3	7.5	8.8	8.8	7.5
95°	1.3	5.0	5.0	3.8	2.5
97.5°	0.0	0.0	0.0	0.0	0.0
100°	0.0	0.0	0.0	0.0	0.0
102.5°	0.0	0.0	0.0	0.0	0.0
105°	0.0	0.0	0.0	0.0	0.0



TEST NUMBER: P860092

CATALOG NUMBER: SPHB-30SE-W-L840-CD

CANDELA DISTRIBUTION (continued):

	0°	22.5°	45°	67.5°	90°
112.5°	0.0	0.0	0.0	0.0	0.0
115°	0.0	0.0	0.0	0.0	0.0
117.5°	0.0	0.0	0.0	0.0	0.0
120°	0.0	0.0	0.0	0.0	0.0
122.5°	0.0	0.0	0.0	0.0	0.0
125°	0.0	0.0	0.0	0.0	0.0
127.5°	0.0	0.0	0.0	0.0	0.0
130°	0.0	0.0	0.0	0.0	0.0
132.5°	0.0	0.0	0.0	0.0	0.0
135°	0.0	0.0	0.0	0.0	0.0
137.5°	0.0	0.0	0.0	0.0	0.0
140°	0.0	0.0	0.0	0.0	0.0
142.5°	0.0	0.0	0.0	0.0	0.0
145°	0.0	0.0	0.0	0.0	0.0
147.5°	0.0	0.0	0.0	0.0	0.0
150°	0.0	0.0	0.0	0.0	0.0
152.5°	0.0	0.0	0.0	0.0	0.0
155°	0.0	0.0	0.0	0.0	0.0
157.5°	0.0	0.0	0.0	0.0	0.0
160°	0.0	0.0	0.0	0.0	0.0
162.5°	0.0	0.0	0.0	0.0	0.0
165°	0.0	0.0	0.0	0.0	0.0
167.5°	0.0	0.0	0.0	0.0	0.0
170°	0.0	0.0	0.0	0.0	0.0
172.5°	0.0	0.0	0.0	0.0	0.0
175°	0.0	0.0	0.0	0.0	0.0
177.5°	0.0	0.0	0.0	0.0	0.0
180°	0.0	0.0	0.0	0.0	0.0



Report Generated By 670246072 / DESKTOP-50001EG





— 0°-180° - - 45°-225° - - - 90°-270°







107.5°	0.0	0.0	0.0	0.0	0.0
110°	0.0	0.0	0.0	0.0	0.0



LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-State Lighting Products

Report Prepared for

Cooper Lighting Solutions

METALUX

Report Number: SP1-2309-187-7

Test Date: 10/09/2023

Luminaire Tested: SPHB-1224SE-M-UNV-L84050-CD-U (24K LUMEN 4000K)

Data in this report applies to families of products including SPHB-1224SE-M-UNV-L84050-CD-U (24K LUMEN 4000K).

Test Information

Test Method: LM-79-2019
Report Number: SP1-2309-187-7
Test Lab: COOPER LIGHTING SOLUTIONS
Photometer: SP1 - 76IN SPHERE
Measurement Geometry: 4π
Issue Date: 10/09/2023
Manufacturer: COOPER LIGHTING SOLUTIONS
Product Line: METALUX
Catalog Number: **SPHB-1224SE-M-UNV-L84050-CD-U (24K LUMEN 4000K)**
Description: SPHB SELECT, MEDIUM LENS, 24K LUMENS, 4000K


Spectral Parameters

CCT (K): 3926
CIE u': 0.2261
CIE v': 0.5037
Duv: 0.0006
CIE x: 0.3841
CIE y: 0.3802
CIE z: 0.2357
Peak Wavelength (nm): 454
Dominant Wavelength (nm): 579
Purity: 29.5

Rf: 82.9
Rg: 95

CRI (Ra): 82.0
R1: 80.3
R2: 88.4
R3: 93.9
R4: 80.2
R5: 79.7
R6: 83.3
R7: 86.1
R8: 64.3

R9: 8.2
R10: 71.6
R11: 78.1
R12: 57.5
R13: 82.3
R14: 96.6

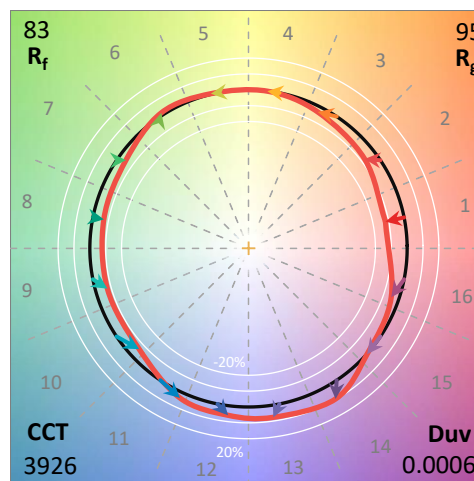

Test Conditions


Stabilization Time: 23M
Operation Time: 12H
Room Temperature (°C) / RH%: 25.5/33%
Sphere Temperature (°C): 24.2

REPORT NUMBER: SP1-2309-187-7

Measurement and Test Equipment			
Instrument	Identification Number	Calibration Date	Calibration Due Date
Photometer	76INCH SPHERE IN0058	8/9/2023	2/9/2024
Power Meter	XITRON 2801 IN0071	11/29/2022	11/29/2023
AC Power Source	CHROMA 61603 IN0063	11/28/2022	11/28/2023
DC Power Source	AGILENT E3634A IN0208	11/28/2022	11/28/2023
Sphere Thermometer	ONSET IN0085	11/28/2022	11/28/2023
Room Thermometer	ONSET IN0046	11/28/2022	11/28/2023

REPORT NUMBER: SP1-2309-187-7

CIE 1931 Chromaticity Diagram

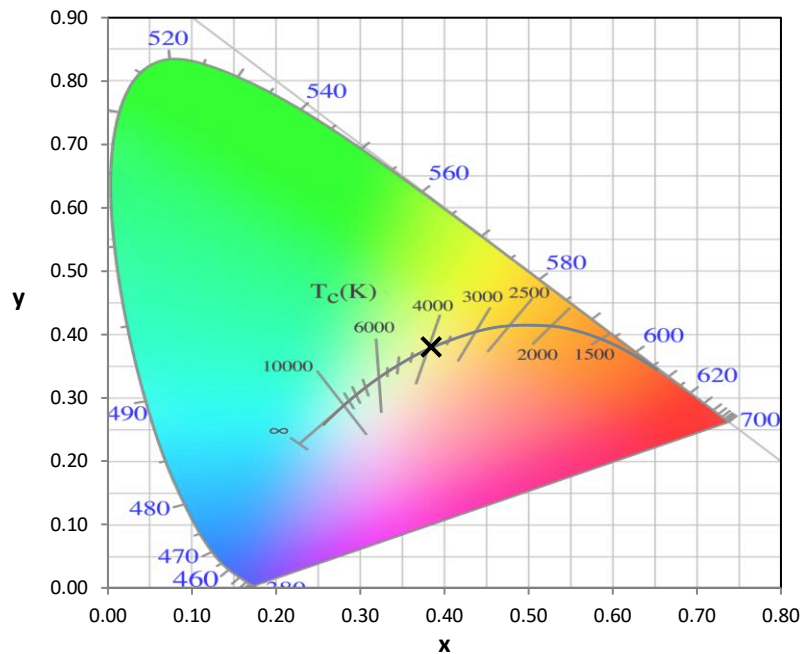

CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles



Point lies inside the ANSI 4000K 4-step quadrangle

REPORT NUMBER: SP1-2309-187-7

Photopic Flux vs. Wavelength




#####

λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)
360	10992	NR	490	118921	NR	620	356922	NR	750	19019	NR	880	13091	NR
365	9593	NR	495	138088	NR	625	337439	NR	755	17413	NR	885	13768	NR
370	10476	NR	500	166483	NR	630	313667	NR	760	16262	NR	890	11509	NR
375	11916	NR	505	198126	NR	635	289634	NR	765	14555	NR	895	10746	NR
380	10857	NR	510	225943	NR	640	267120	NR	770	13516	NR	900	11526	NR
385	9836	NR	515	249652	NR	645	244025	NR	775	12156	NR	905	11085	NR
390	9329	NR	520	270963	NR	650	221090	NR	780	11138	NR	910	12484	NR
395	8104	NR	525	285863	NR	655	198958	NR	785	10805	NR	915	12235	NR
400	6858	NR	530	297396	NR	660	178676	NR	790	10121	NR	920	9666	NR
405	6914	NR	535	307535	NR	665	155862	NR	795	10392	NR	925	11659	NR
410	8077	NR	540	315948	NR	670	138150	NR	800	9549	NR	930	12967	NR
415	11717	NR	545	324499	NR	675	120142	NR	805	10057	NR	935	13555	NR
420	19513	NR	550	333620	NR	680	105107	NR	810	9285	NR	940	12553	NR
425	34423	NR	555	345725	NR	685	91191	NR	815	9751	NR	945	9165	NR
430	59393	NR	560	355808	NR	690	79275	NR	820	10216	NR	950	7624	NR
435	101278	NR	565	369262	NR	695	68358	NR	825	10410	NR	955	11686	NR
440	162827	NR	570	381413	NR	700	60050	NR	830	10058	NR	960	9106	NR
445	260438	NR	575	393089	NR	705	51990	NR	835	9982	NR	965	11345	NR
450	399252	NR	580	402225	NR	710	46653	NR	840	9215	NR	970	10672	NR
455	445742	NR	585	409494	NR	715	42391	NR	845	11311	NR	975	11689	NR
460	330661	NR	590	413322	NR	720	37628	NR	850	10813	NR	980	14054	NR
465	233593	NR	595	413160	NR	725	33220	NR	855	11652	NR	985	17684	NR
470	187643	NR	600	408148	NR	730	29243	NR	860	11468	NR	990	17244	NR
475	140648	NR	605	401766	NR	735	25806	NR	865	12591	NR	995	11439	NR
480	111871	NR	610	390821	NR	740	23374	NR	870	9925	NR	1000	19016	NR
485	108472	NR	615	377363	NR	745	21294	NR	875	11284	NR			

REPORT NUMBER: SP1-2309-187-7

Scotopic Flux vs. Wavelength

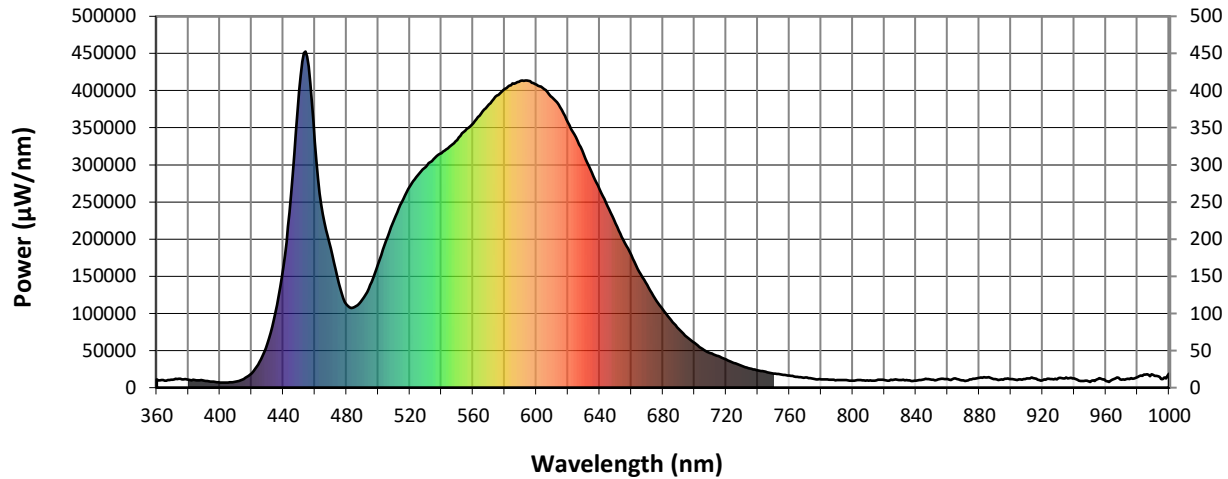

Scotopic Lumens: 39237.7

S/P: 1.65

λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)
360	10992	NR	490	118921	NR	620	356922	NR	750	19019	NR	880	13091	NR
365	9593	NR	495	138088	NR	625	337439	NR	755	17413	NR	885	13768	NR
370	10476	NR	500	166483	NR	630	313667	NR	760	16262	NR	890	11509	NR
375	11916	NR	505	198126	NR	635	289634	NR	765	14555	NR	895	10746	NR
380	10857	NR	510	225943	NR	640	267120	NR	770	13516	NR	900	11526	NR
385	9836	NR	515	249652	NR	645	244025	NR	775	12156	NR	905	11085	NR
390	9329	NR	520	270963	NR	650	221090	NR	780	11138	NR	910	12484	NR
395	8104	NR	525	285863	NR	655	198958	NR	785	10805	NR	915	12235	NR
400	6858	NR	530	297396	NR	660	178676	NR	790	10121	NR	920	9666	NR
405	6914	NR	535	307535	NR	665	155862	NR	795	10392	NR	925	11659	NR
410	8077	NR	540	315948	NR	670	138150	NR	800	9549	NR	930	12967	NR
415	11717	NR	545	324499	NR	675	120142	NR	805	10057	NR	935	13555	NR
420	19513	NR	550	333620	NR	680	105107	NR	810	9285	NR	940	12553	NR
425	34423	NR	555	345725	NR	685	91191	NR	815	9751	NR	945	9165	NR
430	59393	NR	560	355808	NR	690	79275	NR	820	10216	NR	950	7624	NR
435	101278	NR	565	369262	NR	695	68358	NR	825	10410	NR	955	11686	NR
440	162827	NR	570	381413	NR	700	60050	NR	830	10058	NR	960	9106	NR
445	260438	NR	575	393089	NR	705	51990	NR	835	9982	NR	965	11345	NR
450	399252	NR	580	402225	NR	710	46653	NR	840	9215	NR	970	10672	NR
455	445742	NR	585	409494	NR	715	42391	NR	845	11311	NR	975	11689	NR
460	330661	NR	590	413322	NR	720	37628	NR	850	10813	NR	980	14054	NR
465	233593	NR	595	413160	NR	725	33220	NR	855	11652	NR	985	17684	NR
470	187643	NR	600	408148	NR	730	29243	NR	860	11468	NR	990	17244	NR
475	140648	NR	605	401766	NR	735	25806	NR	865	12591	NR	995	11439	NR
480	111871	NR	610	390821	NR	740	23374	NR	870	9925	NR	1000	19016	NR
485	108472	NR	615	377363	NR	745	21294	NR	875	11284	NR			

REPORT NUMBER: SP1-2309-187-7

Melanopic Flux vs. Wavelength



Melanopic Lumens: 15753

M/P: 0.66

λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)
360	10992	NR	490	118921	NR	620	356922	NR	750	19019	NR	880	13091	NR
365	9593	NR	495	138088	NR	625	337439	NR	755	17413	NR	885	13768	NR
370	10476	NR	500	166483	NR	630	313667	NR	760	16262	NR	890	11509	NR
375	11916	NR	505	198126	NR	635	289634	NR	765	14555	NR	895	10746	NR
380	10857	NR	510	225943	NR	640	267120	NR	770	13516	NR	900	11526	NR
385	9836	NR	515	249652	NR	645	244025	NR	775	12156	NR	905	11085	NR
390	9329	NR	520	270963	NR	650	221090	NR	780	11138	NR	910	12484	NR
395	8104	NR	525	285863	NR	655	198958	NR	785	10805	NR	915	12235	NR
400	6858	NR	530	297396	NR	660	178676	NR	790	10121	NR	920	9666	NR
405	6914	NR	535	307535	NR	665	155862	NR	795	10392	NR	925	11659	NR
410	8077	NR	540	315948	NR	670	138150	NR	800	9549	NR	930	12967	NR
415	11717	NR	545	324499	NR	675	120142	NR	805	10057	NR	935	13555	NR
420	19513	NR	550	333620	NR	680	105107	NR	810	9285	NR	940	12553	NR
425	34423	NR	555	345725	NR	685	91191	NR	815	9751	NR	945	9165	NR
430	59393	NR	560	355808	NR	690	79275	NR	820	10216	NR	950	7624	NR
435	101278	NR	565	369262	NR	695	68358	NR	825	10410	NR	955	11686	NR
440	162827	NR	570	381413	NR	700	60050	NR	830	10058	NR	960	9106	NR
445	260438	NR	575	393089	NR	705	51990	NR	835	9982	NR	965	11345	NR
450	399252	NR	580	402225	NR	710	46653	NR	840	9215	NR	970	10672	NR
455	445742	NR	585	409494	NR	715	42391	NR	845	11311	NR	975	11689	NR
460	330661	NR	590	413322	NR	720	37628	NR	850	10813	NR	980	14054	NR
465	233593	NR	595	413160	NR	725	33220	NR	855	11652	NR	985	17684	NR
470	187643	NR	600	408148	NR	730	29243	NR	860	11468	NR	990	17244	NR
475	140648	NR	605	401766	NR	735	25806	NR	865	12591	NR	995	11439	NR
480	111871	NR	610	390821	NR	740	23374	NR	870	9925	NR	1000	19016	NR
485	108472	NR	615	377363	NR	745	21294	NR	875	11284	NR			

REPORT NUMBER: SP1-2309-187-7



TM-30-18

Summary

$R_f = 82.9$
 $R_g = 95$
 $CIE R_a = 82.0$
 $R_9 = 8.2$



Color Vector Graphics

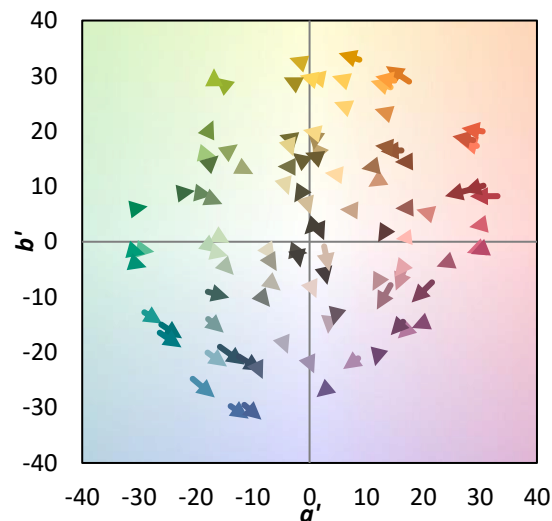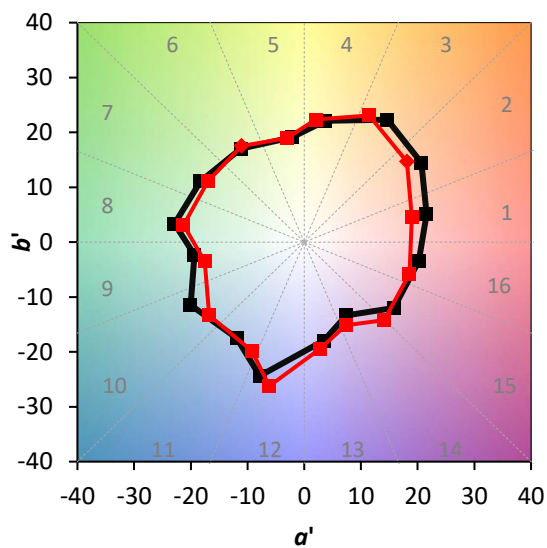


REPORT NUMBER: SP1-2309-187-7

TM-30-18

Individual Sample Fidelity Index ($R_{f,i}$)



CES01 = 86	CES26 = 81	CES51 = 92	CES76 = 73
CES02 = 61	CES27 = 92	CES52 = 92	CES77 = 81
CES03 = 31	CES28 = 90	CES53 = 88	CES78 = 72
CES04 = 70	CES29 = 88	CES54 = 89	CES79 = 91
CES05 = 48	CES30 = 92	CES55 = 86	CES80 = 88
CES06 = 50	CES31 = 89	CES56 = 83	CES81 = 82
CES07 = 41	CES32 = 80	CES57 = 82	CES82 = 95
CES08 = 40	CES33 = 96	CES58 = 82	CES83 = 96
CES09 = 29	CES34 = 85	CES59 = 90	CES84 = 90
CES10 = 74	CES35 = 91	CES60 = 89	CES85 = 78
CES11 = 57	CES36 = 80	CES61 = 85	CES86 = 76
CES12 = 63	CES37 = 90	CES62 = 80	CES87 = 84
CES13 = 42	CES38 = 87	CES63 = 81	CES88 = 89
CES14 = 74	CES39 = 98	CES64 = 74	CES89 = 78
CES15 = 71	CES40 = 96	CES65 = 74	CES90 = 90
CES16 = 47	CES41 = 97	CES66 = 69	CES91 = 69
CES17 = 49	CES42 = 91	CES67 = 68	CES92 = 65
CES18 = 56	CES43 = 89	CES68 = 75	CES93 = 79
CES19 = 71	CES44 = 99	CES69 = 80	CES94 = 64
CES20 = 65	CES45 = 93	CES70 = 71	CES95 = 72
CES21 = 86	CES46 = 91	CES71 = 63	CES96 = 84
CES22 = 78	CES47 = 96	CES72 = 88	CES97 = 90
CES23 = 91	CES48 = 85	CES73 = 65	CES98 = 85
CES24 = 90	CES49 = 90	CES74 = 90	CES99 = 77
CES25 = 71	CES50 = 93	CES75 = 67	

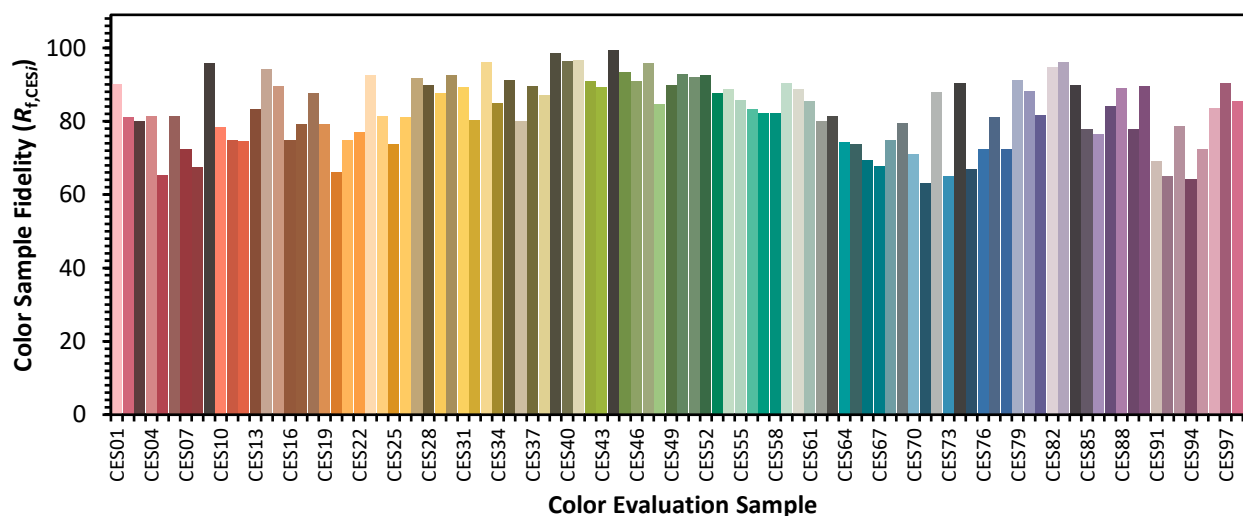

REPORT NUMBER: SP1-2309-187-7

TM-30-18



Color Rendition by Hue-Angle Bin

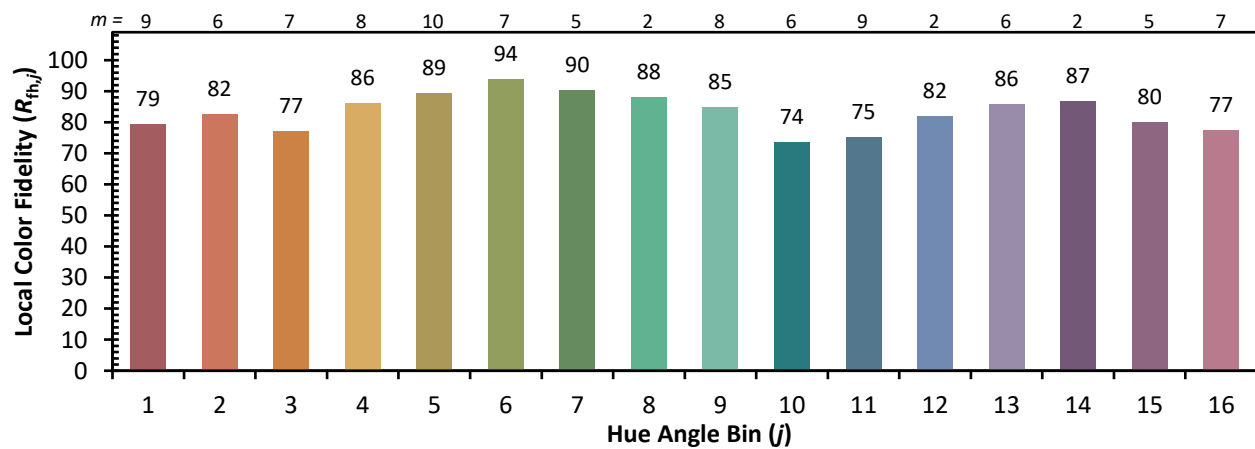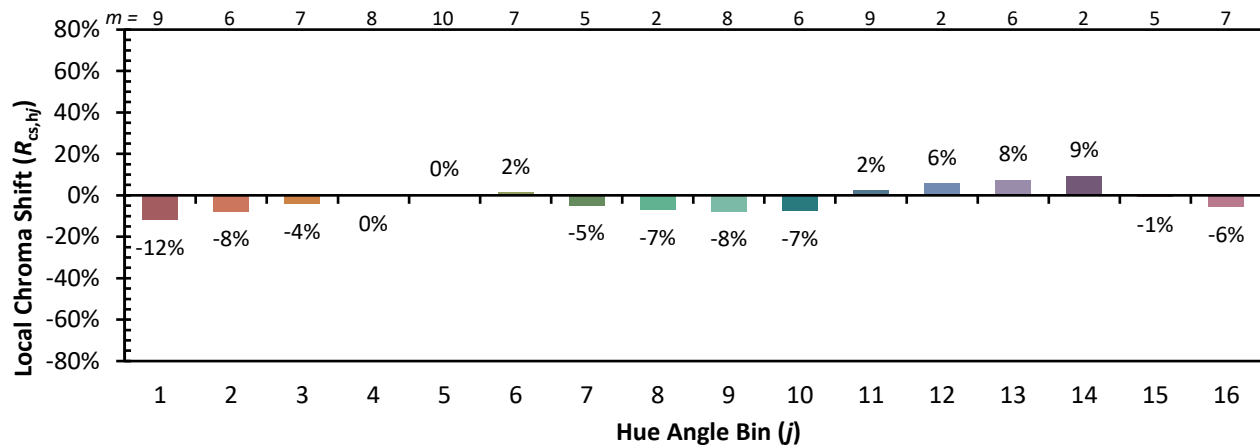

REPORT NUMBER: SP1-2309-187-7

TM-30-18

Measure Comparisons

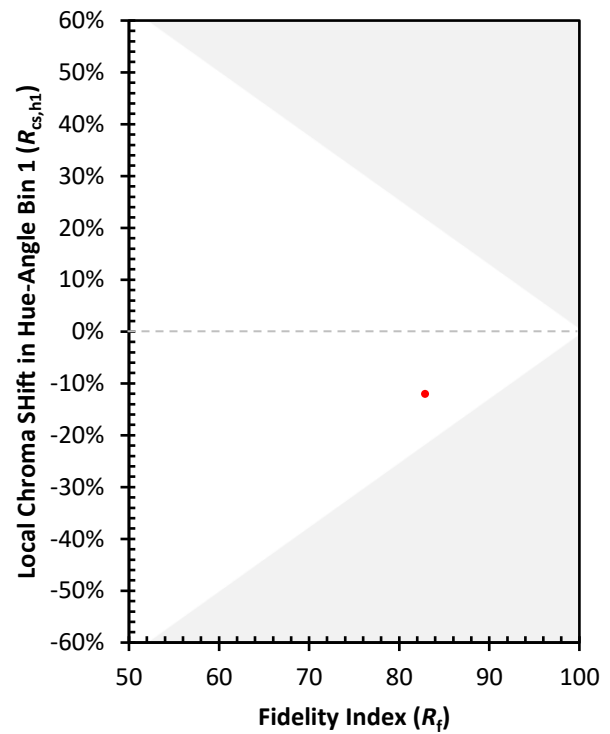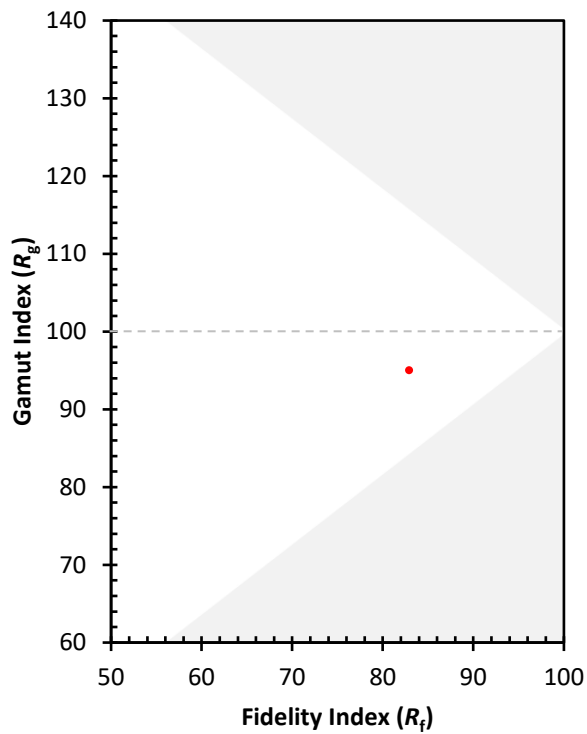

(END OF REPORT)