

Cooper Lighting Solutions Photometric Lab
1121 Highway 74 South
Peachtree City, GA 30269



Scaled data based on original data using
LM-79-2019 Approved Method: Electrical and Photometric Measurements of Solid-
State Lighting Products

Test Report Prepared for
Cooper Lighting Solutions

Brand: METALUX

Report Number: P982557

Luminaire Tested: 14CZ-LD5-25-UNV-L830-S-CD1-U

Issue Date: 04/23/2025

Test Information

Test Method: LM-79-2019
Report Number: P982557
Test Lab: INNOVATION CENTER(P3)
Issue Date: 04/23/2025
Manufacturer: COOPER LIGHTING SOLUTIONS
Product Line: METALUX
Catalog Number: 14CZ-LD5-25-UNV-L830-S-CD1-U
Description: METALUX CRUZE 1x4 2500LM PACKAGE 80CRI 3000K TROFFER SMOOTH LENS
Light Source: 3000K CCT, 80 CRI LEDS
Ballast/Driver: -

Summary


Lumens per Lamp: N/A
Luminaire Lumens: 2541.4 lumens
Efficiency: N/A
Efficacy: 133.8 lumens/watt
Spacing Criteria (0/90/45): 1.21 / 1.28 / 1.37
Luminous Opening: Rectangular (W 1' x L: 4' x H: 0')
CIE Type: Direct

Input Watts (W): 19
Input Voltage (V): 120
Input Current (Ain): NR
Voltage Rise (V): NR
Power Factor: NR
Total Harmonic Distortion (THDi): NR
Frequency (hertz): 60
Stabilization Time: NR
Operation Time: NR
Ambient Temperature (°C): NR
Test Distance: 28.75 FT

TEST NUMBER: P982557

CATALOG NUMBER: 14CZ-LD5-25-UNV-L830-S-CD1-U

Luminous Intensity Polar Plot

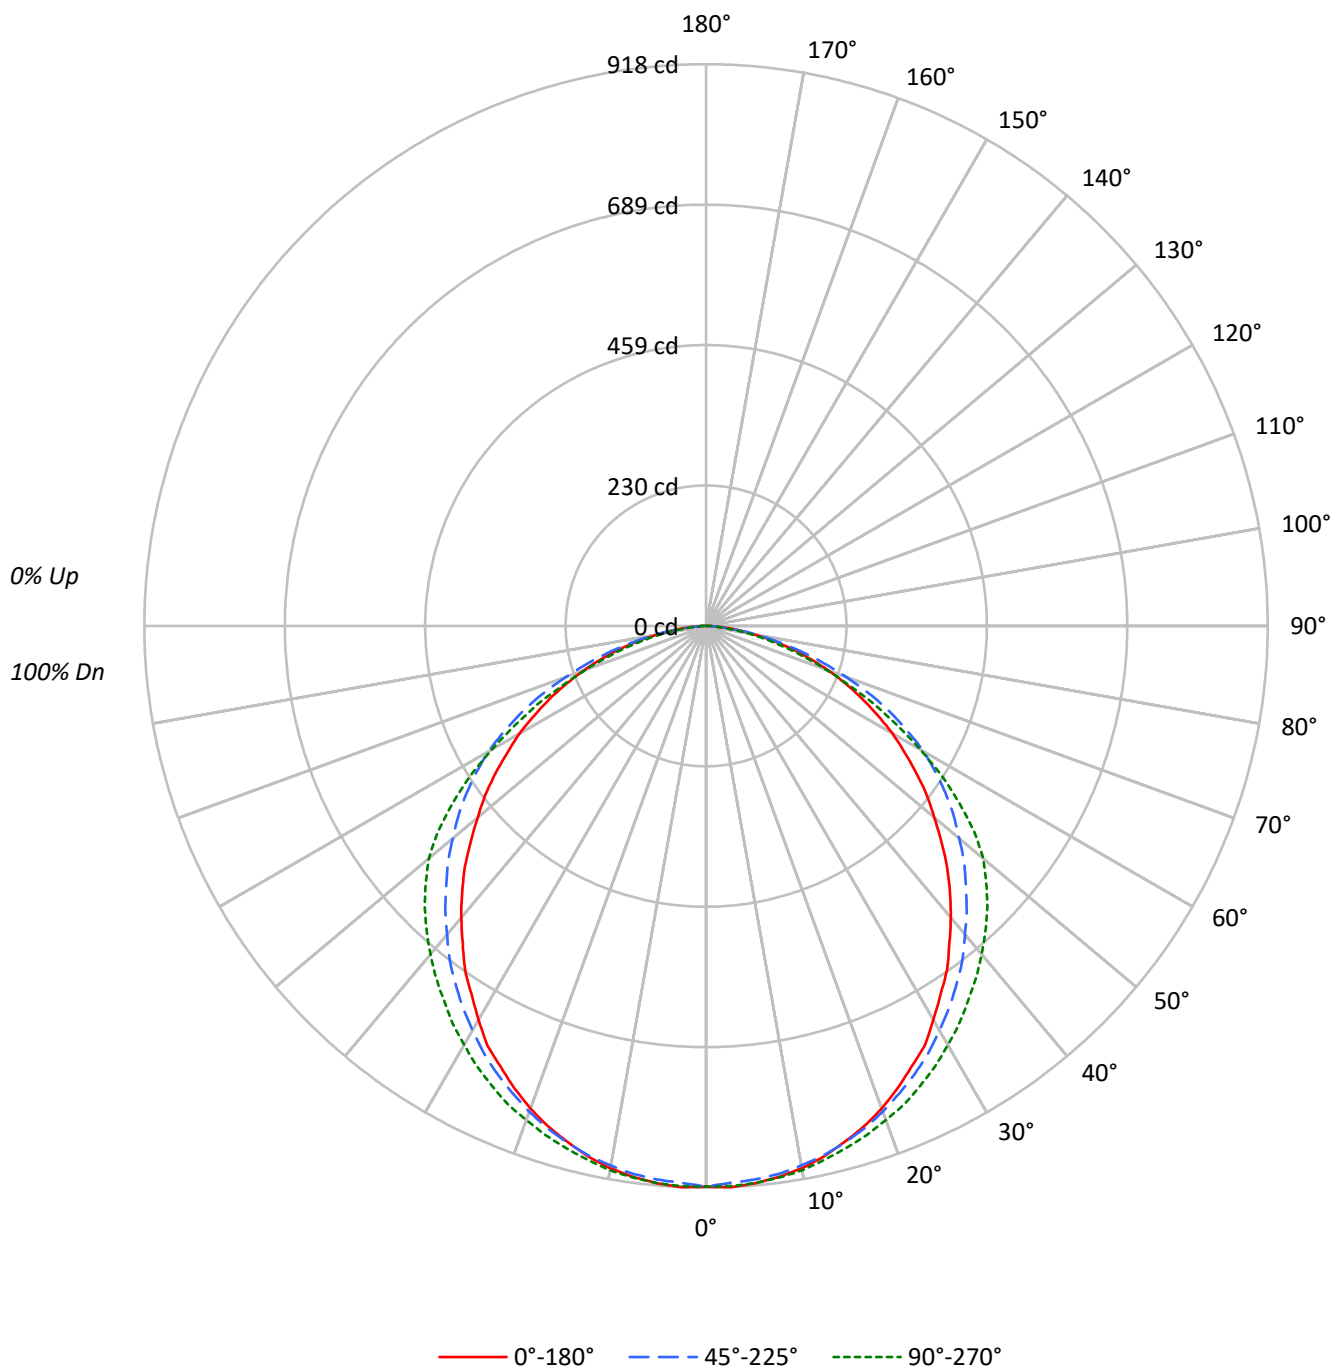

TEST NUMBER: P982557

CATALOG NUMBER: 14CZ-LD5-25-UNV-L830-S-CD1-U

COEFFICIENT OF UTILIZATION - ZONAL CAVITY METHOD:

RF	20				20					20					20					20
RC	80				70					50					30					10
RW	70	50	30	10	70	50	30	10	50	30	10	50	30	10	50	30	10	50	30	10
RCR																				
0	119	119	119	119	116	116	116	116	111	111	111	106	106	106	102	102	102	100		
1	109	104	100	96	106	102	98	95	98	95	92	94	91	89	90	88	86	84		
2	99	91	84	79	97	89	83	78	86	80	76	82	78	74	79	76	73	70		
3	90	80	72	66	88	78	71	65	75	69	64	73	67	63	70	66	62	59		
4	83	71	62	56	81	70	61	55	67	60	54	65	59	54	63	57	53	51		
5	76	63	54	48	74	62	54	48	60	53	47	58	52	46	56	51	46	44		
6	70	57	48	42	68	56	48	42	54	47	41	53	46	41	51	45	40	38		
7	65	52	43	37	63	51	43	37	49	42	36	48	41	36	47	40	36	34		
8	61	47	39	33	59	46	38	33	45	38	33	44	37	32	43	37	32	30		
9	57	43	35	30	55	43	35	29	42	34	29	40	34	29	39	33	29	27		
10	53	40	32	27	52	39	32	27	38	31	27	37	31	26	37	31	26	25		

AVERAGE LUMINANCE (cd/sqm):

	0°	45°	90°
0°	2466	2466	2466
5°	2471	2454	2469
10°	2460	2448	2469
15°	2433	2436	2462
20°	2403	2419	2461
25°	2360	2398	2461
30°	2310	2372	2457
35°	2256	2346	2454
40°	2186	2312	2461
45°	2121	2285	2475
50°	2038	2262	2475
55°	1970	2244	2372
60°	1894	2211	2175
65°	1792	2105	1934
70°	1674	1913	1636
75°	1510	1669	1370
80°	1215	1309	1046
85°	865	750	543

MAXIMUM LUMINANCE 45°-90°:

Horizontal Angle: 90°

Vertical Angle: 45°

Luminance: 2475 cd/sqm

TEST NUMBER: P982557

CATALOG NUMBER: 14CZ-LD5-25-UNV-L830-S-CD1-U

ZONAL LUMENS:

Zone	Lumens	% Fixture
0°-10°	86.7	3.4
10°-20°	247.7	9.7
20°-30°	373.7	14.7
30°-40°	448.1	17.6
40°-50°	465.0	18.3
50°-60°	419.8	16.5
60°-70°	305.7	12.0
70°-80°	160.4	6.3
80°-90°	34.3	1.3
90°-100°	0.0	0.0
100°-110°	0.0	0.0
110°-120°	0.0	0.0
120°-130°	0.0	0.0
130°-140°	0.0	0.0
140°-150°	0.0	0.0
150°-160°	0.0	0.0
160°-170°	0.0	0.0
170°-180°	0.0	0.0
0°-30°	708.1	27.9
0°-40°	1156.2	45.5
0°-60°	2041.0	80.3
0°-90°	2541.4	100.0
90°-120°	0.0	0.0
90°-150°	0.0	0.0
90°-180°	0.0	0.0
0°-180°	2541.4	100.0

CANDELA DISTRIBUTION:

	0°	22.5°	45°	67.5°	90°	Flux
0°	916	916	916	916	916	
5°	915	913	909	915	914	87
15°	873	873	874	884	884	246
25°	795	799	808	825	829	366
35°	687	693	714	741	747	428
45°	557	570	600	638	650	429
55°	420	435	478	507	506	375
65°	281	298	331	315	304	278
75°	145	166	160	139	132	153
85°	28	33	24	19	18	36
90°	0	0	0	0	0	

TEST NUMBER: P982557

CATALOG NUMBER: 14CZ-LD5-25-UNV-L830-S-CD1-U

CANDELA DISTRIBUTION (FULL):

	0°	22.5°	45°	67.5°	90°
0°	916.4	916.4	916.4	916.4	916.4
2.5°	918.3	915.8	911.0	917.0	916.4
5°	914.6	912.9	908.6	914.6	914.1
7.5°	908.6	907.3	903.6	910.4	909.8
10°	900.1	898.2	895.8	903.2	903.6
12.5°	888.5	887.9	886.7	894.6	893.9
15°	873.3	873.3	874.5	884.2	883.6
17.5°	858.1	858.1	861.1	872.1	872.7
20°	839.3	840.5	844.8	858.1	859.3
22.5°	818.0	819.2	826.5	843.6	846.5
25°	794.9	799.2	807.7	825.3	828.9
27.5°	773.7	774.3	787.0	806.5	811.4
30°	743.3	751.8	763.3	785.8	790.6
32.5°	713.5	721.9	739.6	764.0	770.6
35°	686.8	693.4	714.1	740.9	746.9
37.5°	653.3	664.3	688.5	716.5	725.0
40°	622.3	632.0	658.2	689.7	700.7
42.5°	590.1	601.0	630.8	664.8	675.9
45°	557.3	569.5	600.4	638.1	650.3
47.5°	521.4	536.7	571.9	610.1	621.1
50°	486.8	502.6	540.2	580.4	591.3
52.5°	455.2	469.2	510.5	547.6	552.4
55°	419.9	434.6	478.3	506.8	505.6
57.5°	384.7	401.1	444.9	462.4	457.7
60°	351.9	367.1	410.8	414.5	404.1
62.5°	315.4	333.1	370.1	364.7	351.9
65°	281.4	298.4	330.6	315.4	303.8
67.5°	246.7	265.0	288.1	265.6	252.2
70°	212.7	234.5	243.1	218.8	207.9
72.5°	178.0	201.1	200.5	177.4	168.3
75°	145.2	165.9	160.5	138.6	131.8
77.5°	110.6	131.2	120.9	104.6	98.4
80°	78.4	97.8	84.5	71.8	67.5
82.5°	53.4	65.0	52.8	41.9	40.1
85°	28.0	33.4	24.3	18.8	17.6
87.5°	10.3	9.7	8.5	7.9	7.9
90°	0.0	0.0	0.0	0.0	0.0

LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-State Lighting Products

Report Prepared for

Cooper Lighting Solutions

Metalux

Report Number: SP3-2508-516-5

Test Date: 09/03/2025

Luminaire Tested: 24CZ-LD5-65-S-UNV-L930-CD1-U

Data in this report applies to families of products including 24CZ-LD5-65-S-UNV-L930-CD1-U

Test Information

Test Method: LM-79-2019
 Report Number: SP3-2508-516-5
 Test Lab: COOPER LIGHTING SOLUTIONS
 Photometer: SP3 - 3M SPHERE
 Measurement Geometry: 4π
 Issue Date: 09/05/2025
 Manufacturer: COOPER LIGHTING SOLUTIONS
 Product Line: Metalux
 Catalog Number: **24CZ-LD5-65-S-UNV-L930-CD1-U**
 Description: 2X4 CRUZE SB 6500LM 930 SMOOTH LENS

Spectral Parameters

CCT (K): 2988
 CIE u' : 0.2517
 CIE v' : 0.5189
 Duv: -0.0019
 CIE x: 0.4350
 CIE y: 0.3986
 CIE z: 0.1665
 Peak Wavelength (nm): 630
 Dominant Wavelength (nm): 583
 Purity: 50.17903
 R_f: 91.6
 R_g: 101.1

CRI (Ra): 94.3
 R1: 96.3
 R2: 97.6
 R3: 97.5
 R4: 95.8
 R5: 96.1
 R6: 96.2
 R7: 91.6
 R8: 83.5
 R9: 61.9
 R10: 93.0
 R11: 96.3
 R12: 85.8
 R13: 96.7
 R14: 97.5
 R15: 91.8



Test Conditions

Stabilization Time: 21M
 Operation Time: 1H 21M
 Sphere Temperature (°C): 25.0

REPORT NUMBER: SP3-2508-516-5

Measurement and Test Equipment			
Instrument	Identification Number	Calibration Date	Calibration Due Date
Photometer	3M SPHERE IN02505	7/1/2025	1/1/2026
Power Meter	XITRON INXT2011006	1/20/2025	1/20/2026
AC Power Source	CHROMA 61604 IN6064A	10/22/2024	10/22/2025
DC Power Source	EYSIGHT N5770A IN0534	10/22/2024	10/22/2025
Sphere Thermometer	TANDD IN4036E	10/22/2024	10/22/2025

REPORT NUMBER: SP3-2508-516-5

CIE 1931 Chromaticity Diagram



CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles



Point lies inside the ANSI 3000K 4-step quadrangle

REPORT NUMBER: SP3-2508-516-5

Photopic Flux vs. Wavelength



Photopic Lumens: NR

λ (nm)	Power W [^] /nm	Lumens (φ/nm)	λ (nm)	Power W [^] /nm	Lumens (φ/nm)	λ (nm)	Power W [^] /nm	Lumens (φ/nm)	λ (nm)	Power W [^] /nm	Lumens (φ/nm)	λ (nm)	Power W [^] /nm	Lumens (φ/nm)
360	0	NR	490	101	NR	620	329	NR	750	8	NR	880	0	NR
365	0	NR	495	121	NR	625	331	NR	755	7	NR	885	0	NR
370	0	NR	500	143	NR	630	1000	NR	760	6	NR	890	0	NR
375	0	NR	505	161	NR	635	709	NR	765	5	NR	895	0	NR
380	0	NR	510	176	NR	640	220	NR	770	4	NR	900	0	NR
385	0	NR	515	189	NR	645	210	NR	775	3	NR	905	0	NR
390	0	NR	520	196	NR	650	188	NR	780	3	NR	910	0	NR
395	1	NR	525	203	NR	655	156	NR	785	2	NR	915	0	NR
400	1	NR	530	208	NR	660	134	NR	790	2	NR	920	0	NR
405	2	NR	535	213	NR	665	112	NR	795	2	NR	925	0	NR
410	3	NR	540	219	NR	670	104	NR	800	1	NR	930	0	NR
415	6	NR	545	226	NR	675	85	NR	805	1	NR	935	0	NR
420	10	NR	550	233	NR	680	72	NR	810	1	NR	940	0	NR
425	17	NR	555	241	NR	685	63	NR	815	1	NR	945	0	NR
430	30	NR	560	250	NR	690	53	NR	820	1	NR	950	0	NR
435	53	NR	565	260	NR	695	46	NR	825	1	NR	955	0	NR
440	92	NR	570	270	NR	700	39	NR	830	1	NR	960	0	NR
445	160	NR	575	280	NR	705	33	NR	835	1	NR	965	0	NR
450	214	NR	580	289	NR	710	28	NR	840	0	NR	970	0	NR
455	183	NR	585	298	NR	715	24	NR	845	0	NR	975	0	NR
460	133	NR	590	305	NR	720	20	NR	850	0	NR	980	0	NR
465	111	NR	595	309	NR	725	17	NR	855	0	NR	985	0	NR
470	91	NR	600	314	NR	730	15	NR	860	0	NR	990	0	NR
475	77	NR	605	318	NR	735	13	NR	865	0	NR	995	0	NR
480	76	NR	610	356	NR	740	11	NR	870	0	NR	1000	0	NR
485	86	NR	615	390	NR	745	9	NR	875	0	NR			

REPORT NUMBER: SP3-2508-516-5

Scotopic Flux vs. Wavelength



Scotopic Lumens: NR

S/P: 1.43

λ (nm)	Power W ^λ /nm	Lumens (Φ/nm)	λ (nm)	Power W ^λ /nm	Lumens (Φ/nm)	λ (nm)	Power W ^λ /nm	Lumens (Φ/nm)	λ (nm)	Power W ^λ /nm	Lumens (Φ/nm)	λ (nm)	Power W ^λ /nm	Lumens (Φ/nm)
360	0	NR	490	101	NR	620	329	NR	750	8	NR	880	0	NR
365	0	NR	495	121	NR	625	331	NR	755	7	NR	885	0	NR
370	0	NR	500	143	NR	630	1000	NR	760	6	NR	890	0	NR
375	0	NR	505	161	NR	635	709	NR	765	5	NR	895	0	NR
380	0	NR	510	176	NR	640	220	NR	770	4	NR	900	0	NR
385	0	NR	515	189	NR	645	210	NR	775	3	NR	905	0	NR
390	0	NR	520	196	NR	650	188	NR	780	3	NR	910	0	NR
395	1	NR	525	203	NR	655	156	NR	785	2	NR	915	0	NR
400	1	NR	530	208	NR	660	134	NR	790	2	NR	920	0	NR
405	2	NR	535	213	NR	665	112	NR	795	2	NR	925	0	NR
410	3	NR	540	219	NR	670	104	NR	800	1	NR	930	0	NR
415	6	NR	545	226	NR	675	85	NR	805	1	NR	935	0	NR
420	10	NR	550	233	NR	680	72	NR	810	1	NR	940	0	NR
425	17	NR	555	241	NR	685	63	NR	815	1	NR	945	0	NR
430	30	NR	560	250	NR	690	53	NR	820	1	NR	950	0	NR
435	53	NR	565	260	NR	695	46	NR	825	1	NR	955	0	NR
440	92	NR	570	270	NR	700	39	NR	830	1	NR	960	0	NR
445	160	NR	575	280	NR	705	33	NR	835	1	NR	965	0	NR
450	214	NR	580	289	NR	710	28	NR	840	0	NR	970	0	NR
455	183	NR	585	298	NR	715	24	NR	845	0	NR	975	0	NR
460	133	NR	590	305	NR	720	20	NR	850	0	NR	980	0	NR
465	111	NR	595	309	NR	725	17	NR	855	0	NR	985	0	NR
470	91	NR	600	314	NR	730	15	NR	860	0	NR	990	0	NR
475	77	NR	605	318	NR	735	13	NR	865	0	NR	995	0	NR
480	76	NR	610	356	NR	740	11	NR	870	0	NR	1000	0	NR
485	86	NR	615	390	NR	745	9	NR	875	0	NR			

REPORT NUMBER: SP3-2508-516-5

Melanopic Flux vs. Wavelength



Melanopic Lumens: NR

M/P: 2.8

λ (nm)	Power W ^λ /nm	Lumens (φ/nm)	λ (nm)	Power W ^λ /nm	Lumens (φ/nm)	λ (nm)	Power W ^λ /nm	Lumens (φ/nm)	λ (nm)	Power W ^λ /nm	Lumens (φ/nm)	λ (nm)	Power W ^λ /nm	Lumens (φ/nm)
360	0	NR	490	101	NR	620	329	NR	750	8	NR	880	0	NR
365	0	NR	495	121	NR	625	331	NR	755	7	NR	885	0	NR
370	0	NR	500	143	NR	630	1000	NR	760	6	NR	890	0	NR
375	0	NR	505	161	NR	635	709	NR	765	5	NR	895	0	NR
380	0	NR	510	176	NR	640	220	NR	770	4	NR	900	0	NR
385	0	NR	515	189	NR	645	210	NR	775	3	NR	905	0	NR
390	0	NR	520	196	NR	650	188	NR	780	3	NR	910	0	NR
395	1	NR	525	203	NR	655	156	NR	785	2	NR	915	0	NR
400	1	NR	530	208	NR	660	134	NR	790	2	NR	920	0	NR
405	2	NR	535	213	NR	665	112	NR	795	2	NR	925	0	NR
410	3	NR	540	219	NR	670	104	NR	800	1	NR	930	0	NR
415	6	NR	545	226	NR	675	85	NR	805	1	NR	935	0	NR
420	10	NR	550	233	NR	680	72	NR	810	1	NR	940	0	NR
425	17	NR	555	241	NR	685	63	NR	815	1	NR	945	0	NR
430	30	NR	560	250	NR	690	53	NR	820	1	NR	950	0	NR
435	53	NR	565	260	NR	695	46	NR	825	1	NR	955	0	NR
440	92	NR	570	270	NR	700	39	NR	830	1	NR	960	0	NR
445	160	NR	575	280	NR	705	33	NR	835	1	NR	965	0	NR
450	214	NR	580	289	NR	710	28	NR	840	0	NR	970	0	NR
455	183	NR	585	298	NR	715	24	NR	845	0	NR	975	0	NR
460	133	NR	590	305	NR	720	20	NR	850	0	NR	980	0	NR
465	111	NR	595	309	NR	725	17	NR	855	0	NR	985	0	NR
470	91	NR	600	314	NR	730	15	NR	860	0	NR	990	0	NR
475	77	NR	605	318	NR	735	13	NR	865	0	NR	995	0	NR
480	76	NR	610	356	NR	740	11	NR	870	0	NR	1000	0	NR
485	86	NR	615	390	NR	745	9	NR	875	0	NR			

REPORT NUMBER: SP3-2508-516-5


TM-30-18

Summary

$R_f = 91.6$
 $R_g = 101.1$
 $CIE R_a = 94.3$
 $R_9 = 61.9$



Color Vector Graphics

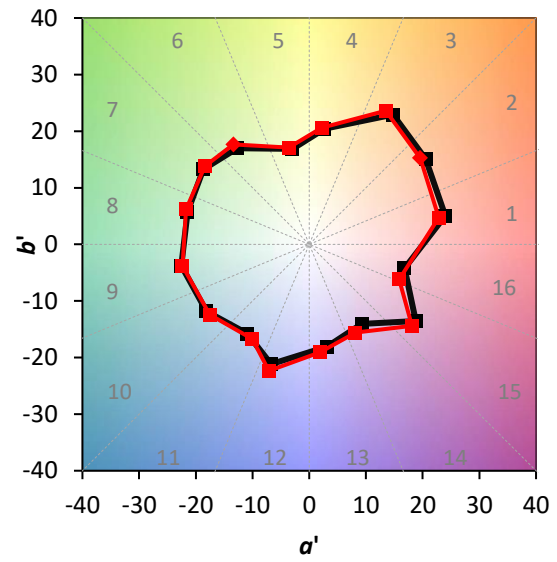

Individual Sample Fidelity Index ($R_{f,i}$)

CES01 = 86	CES26 = 92	CES51 = 97	CES76 = 89
CES02 = 63	CES27 = 95	CES52 = 96	CES77 = 85
CES03 = 32	CES28 = 96	CES53 = 94	CES78 = 86
CES04 = 70	CES29 = 92	CES54 = 97	CES79 = 89
CES05 = 51	CES30 = 99	CES55 = 96	CES80 = 91
CES06 = 51	CES31 = 93	CES56 = 96	CES81 = 72
CES07 = 44	CES32 = 85	CES57 = 96	CES82 = 96
CES08 = 42	CES33 = 94	CES58 = 96	CES83 = 93
CES09 = 29	CES34 = 93	CES59 = 99	CES84 = 96
CES10 = 76	CES35 = 96	CES60 = 95	CES85 = 80
CES11 = 59	CES36 = 87	CES61 = 95	CES86 = 78
CES12 = 65	CES37 = 94	CES62 = 93	CES87 = 91
CES13 = 44	CES38 = 96	CES63 = 94	CES88 = 97
CES14 = 74	CES39 = 98	CES64 = 95	CES89 = 82
CES15 = 72	CES40 = 95	CES65 = 91	CES90 = 98
CES16 = 48	CES41 = 96	CES66 = 93	CES91 = 81
CES17 = 50	CES42 = 92	CES67 = 92	CES92 = 78
CES18 = 57	CES43 = 90	CES68 = 92	CES93 = 87
CES19 = 72	CES44 = 99	CES69 = 93	CES94 = 73
CES20 = 67	CES45 = 94	CES70 = 89	CES95 = 85
CES21 = 86	CES46 = 94	CES71 = 88	CES96 = 92
CES22 = 79	CES47 = 88	CES72 = 95	CES97 = 94
CES23 = 92	CES48 = 95	CES73 = 85	CES98 = 94
CES24 = 91	CES49 = 92	CES74 = 90	CES99 = 93
CES25 = 72	CES50 = 97	CES75 = 88	



Color Rendition by Hue-Angle Bin


Measure Comparisons



(END OF REPORT)