

Cooper Lighting Solutions Photometric Lab
1121 Highway 74 South
Peachtree City, GA 30269



Scaled data based on original data using
LM-79-2019 Approved Method: Electrical and Photometric Measurements of Solid-
State Lighting Products

Test Report Prepared for
Cooper Lighting Solutions

Brand: METALUX

Report Number: P982807

Luminaire Tested: 22CZ-LD5-24SE-UNV-L830-SQP-CD1-U

Issue Date: 04/23/2025

Test Information

Test Method: LM-79-2019
Report Number: P982807
Test Lab: INNOVATION CENTER(P3)
Issue Date: 04/23/2025
Manufacturer: COOPER LIGHTING SOLUTIONS
Product Line: METALUX
Catalog Number: 22CZ-LD5-24SE-UNV-L830-SQP-CD1-U
Description: METALUX CRUZE 2x2 2400LM STANDARD EFFICACY PACKAGE 80CRI 3000K TROFFER LENS WITH PATTERN INSERT
Light Source: 3000K CCT, 80 CRI LEDS
Ballast/Driver: -

Summary


Lumens per Lamp: N/A
Luminaire Lumens: 1768.1 lumens
Efficiency: N/A
Efficacy: 95.6 lumens/watt
Spacing Criteria (0/90/45): 1.25 / 1.31 / 1.41
Luminous Opening: Rectangular (W 2' x L: 2' x H: 0')
CIE Type: Direct

Input Watts (W): 18.5
Input Voltage (V): 120
Input Current (Ain): NR
Voltage Rise (V): NR
Power Factor: NR
Total Harmonic Distortion (THDi): NR
Frequency (hertz): 60
Stabilization Time: NR
Operation Time: NR
Ambient Temperature (°C): NR
Test Distance: 28.75 FT

TEST NUMBER: P982807

CATALOG NUMBER: 22CZ-LD5-24SE-UNV-L830-SQP-CD1-U

Luminous Intensity Polar Plot

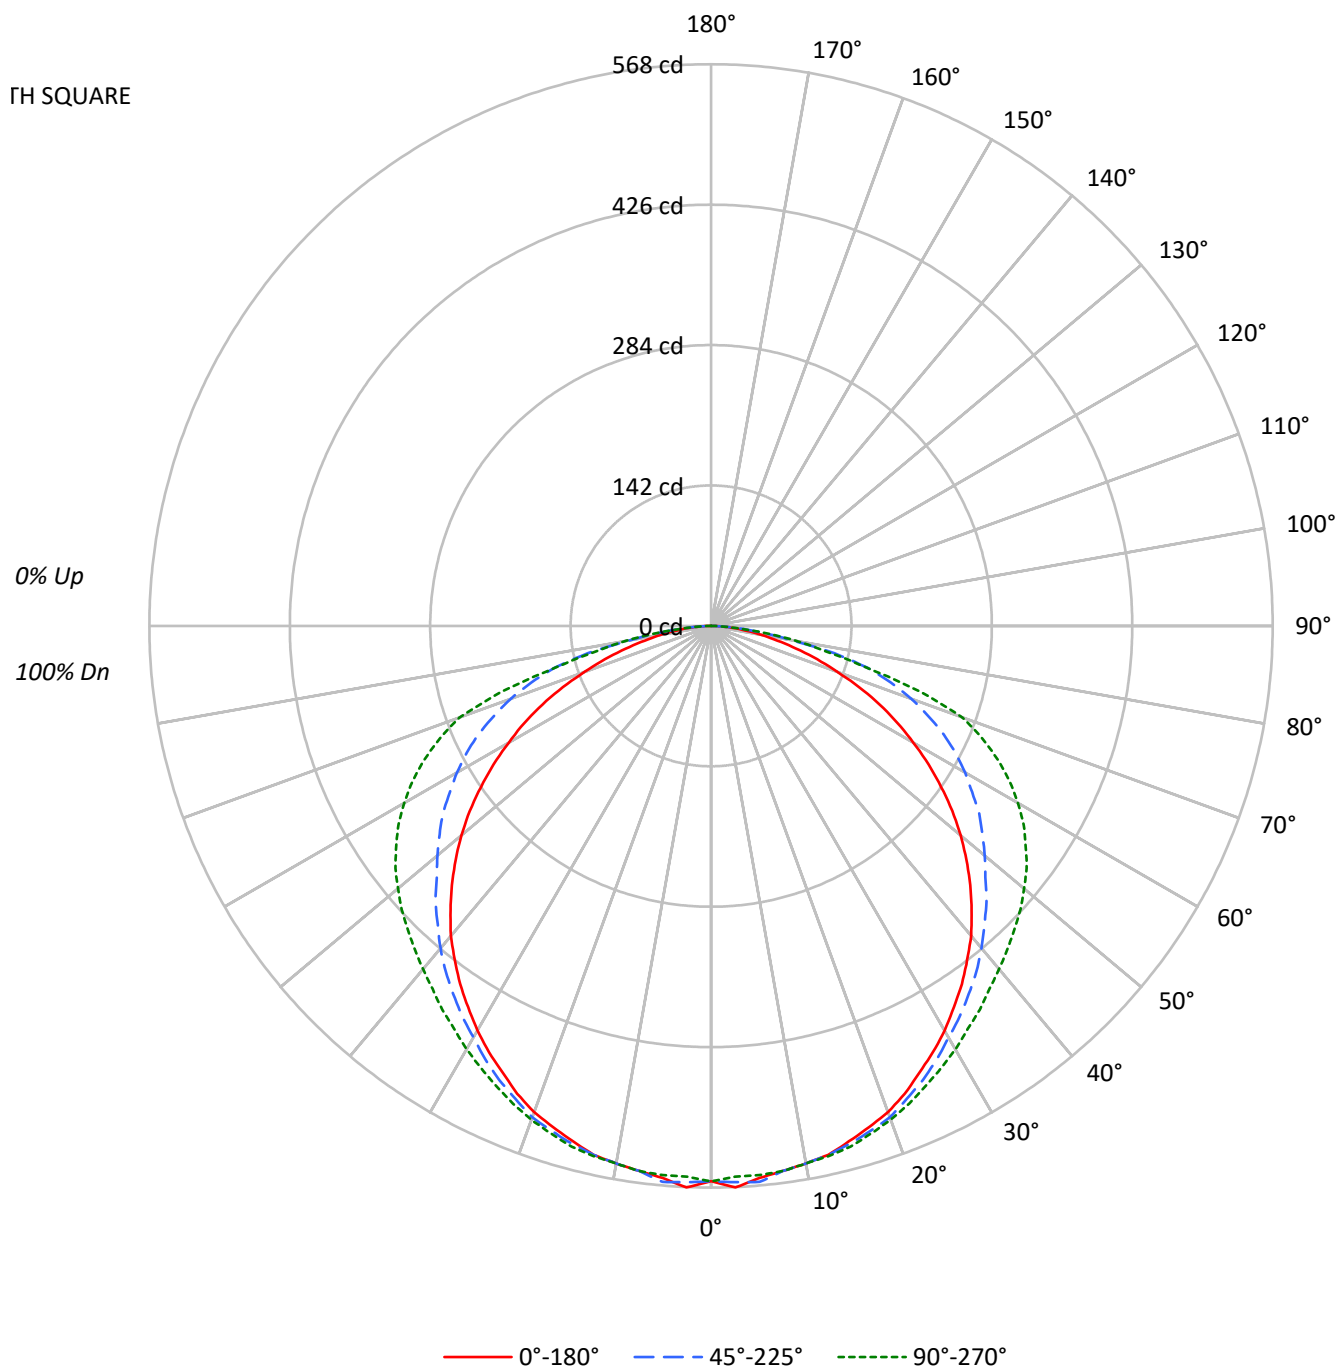

TEST NUMBER: P982807

CATALOG NUMBER: 22CZ-LD5-24SE-UNV-L830-SQP-CD1-U

COEFFICIENT OF UTILIZATION - ZONAL CAVITY METHOD:

RF	20				20				20				20				20
RC	80				70				50				30				10
RW	70	50	30	10	70	50	30	10	50	30	10	50	30	10	50	30	10
RCR																	
0	119	119	119	119	116	116	116	116	111	111	111	106	106	106	102	102	102
1	108	103	99	95	105	101	97	93	97	93	90	93	90	87	89	87	85
2	98	89	82	76	95	87	81	75	84	78	73	80	76	71	77	73	70
3	89	78	69	62	86	76	68	62	73	66	61	70	64	59	68	63	58
4	81	68	59	52	79	67	58	52	64	57	51	62	56	50	60	54	50
5	74	61	52	45	72	60	51	44	58	50	44	56	49	43	54	48	43
6	68	55	45	39	66	54	45	39	52	44	38	50	43	38	48	42	37
7	63	49	40	34	62	49	40	34	47	39	34	45	39	33	44	38	33
8	59	45	36	30	57	44	36	30	43	35	30	42	35	30	40	34	29
9	55	41	33	27	54	41	33	27	39	32	27	38	32	27	37	31	27
10	51	38	30	24	50	37	30	24	36	29	24	35	29	24	35	28	24

AVERAGE LUMINANCE (cd/sqm):

	0°	45°	90°
0°	1511	1511	1511
5°	1514	1525	1506
10°	1508	1508	1508
15°	1503	1511	1519
20°	1498	1514	1522
25°	1480	1504	1525
30°	1468	1493	1536
35°	1453	1493	1556
40°	1437	1495	1592
45°	1411	1499	1651
50°	1380	1512	1730
55°	1333	1553	1823
60°	1271	1596	1929
65°	1198	1652	2037
70°	1069	1696	2128
75°	928	1699	1684
80°	787	1255	1362
85°	676	849	763

MAXIMUM LUMINANCE 45°-90°:

Horizontal Angle: 90°

Vertical Angle: 70°

Luminance: 2128 cd/sqm

TEST NUMBER: P982807

CATALOG NUMBER: 22CZ-LD5-24SE-UNV-L830-SQP-CD1-U

ZONAL LUMENS:

Zone	Lumens	% Fixture
0°-10°	53.3	3.0
10°-20°	153.1	8.7
20°-30°	233.4	13.2
30°-40°	285.5	16.1
40°-50°	307.2	17.4
50°-60°	297.6	16.8
60°-70°	252.1	14.3
70°-80°	152.4	8.6
80°-90°	33.5	1.9
90°-100°	0.0	0.0
100°-110°	0.0	0.0
110°-120°	0.0	0.0
120°-130°	0.0	0.0
130°-140°	0.0	0.0
140°-150°	0.0	0.0
150°-160°	0.0	0.0
160°-170°	0.0	0.0
170°-180°	0.0	0.0
0°-30°	439.8	24.9
0°-40°	725.3	41.0
0°-60°	1330.2	75.2
0°-90°	1768.1	100.0
90°-120°	0.0	0.0
90°-150°	0.0	0.0
90°-180°	0.0	0.0
0°-180°	1768.1	100.0

CANDELA DISTRIBUTION:

	0°	22.5°	45°	67.5°	90°	Flux
0°	562	562	562	562	562	
5°	560	560	564	562	558	53
15°	540	541	542	544	545	152
25°	498	501	507	511	514	230
35°	442	445	454	467	474	277
45°	371	378	394	419	434	286
55°	284	297	331	369	389	254
65°	188	209	260	301	320	185
75°	89	121	163	166	162	96
85°	22	26	28	26	25	25
90°	0	0	0	0	0	

TEST NUMBER: P982807

CATALOG NUMBER: 22CZ-LD5-24SE-UNV-L830-SQP-CD1-U

CANDELA DISTRIBUTION (FULL):

	0°	22.5°	45°	67.5°	90°
0°	561.6	561.6	561.6	561.6	561.6
2.5°	568.4	567.2	563.0	560.3	557.5
5°	560.3	560.3	564.4	561.6	557.5
7.5°	556.1	556.1	556.1	563.0	556.1
10°	552.0	553.4	552.0	557.5	552.0
12.5°	547.9	547.9	547.9	549.2	549.2
15°	539.6	541.0	542.3	543.7	545.1
17.5°	531.4	532.8	535.6	536.9	538.3
20°	523.2	524.5	528.7	528.7	531.4
22.5°	512.1	512.1	517.6	519.0	523.2
25°	498.5	501.2	506.7	510.8	513.5
27.5°	486.1	488.8	494.3	499.8	504.0
30°	472.4	475.1	480.5	488.8	494.3
32.5°	457.2	460.0	468.3	477.9	483.3
35°	442.2	444.9	454.5	466.9	473.8
37.5°	425.6	429.8	440.8	454.5	462.7
40°	409.2	413.3	425.6	440.8	453.1
42.5°	390.0	395.4	409.2	429.8	443.6
45°	370.7	377.6	394.0	418.9	433.9
47.5°	350.2	357.0	376.2	407.8	424.3
50°	329.6	337.7	361.2	395.4	413.3
52.5°	307.5	315.8	346.0	383.1	402.3
55°	284.2	296.6	331.0	369.3	388.6
57.5°	260.9	274.7	313.0	354.3	374.9
60°	236.2	252.6	296.6	337.7	358.4
62.5°	212.9	230.7	278.7	319.9	340.5
65°	188.2	208.7	259.5	300.8	319.9
67.5°	162.0	188.2	237.6	277.3	296.6
70°	135.9	166.1	215.6	252.6	270.5
72.5°	112.6	144.2	190.8	222.4	222.4
75°	89.3	120.9	163.4	166.1	162.0
77.5°	68.7	98.9	127.7	116.7	119.5
80°	50.8	75.5	81.0	85.1	87.9
82.5°	34.3	50.8	52.2	54.9	54.9
85°	21.9	26.1	27.5	26.1	24.7
87.5°	9.6	11.0	8.3	5.5	4.1
90°	0.0	0.0	0.0	0.0	0.0

LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-State Lighting Products

Report Prepared for

Cooper Lighting Solutions

Metalux

Report Number: SP3-2508-516-5

Test Date: 09/03/2025

Luminaire Tested: 24CZ-LD5-65-S-UNV-L930-CD1-U

Data in this report applies to families of products including 24CZ-LD5-65-S-UNV-L930-CD1-U

Test Information

Test Method: LM-79-2019
 Report Number: SP3-2508-516-5
 Test Lab: COOPER LIGHTING SOLUTIONS
 Photometer: SP3 - 3M SPHERE
 Measurement Geometry: 4π
 Issue Date: 09/05/2025
 Manufacturer: COOPER LIGHTING SOLUTIONS
 Product Line: Metalux
 Catalog Number: **24CZ-LD5-65-S-UNV-L930-CD1-U**
 Description: 2X4 CRUZE SB 6500LM 930 SMOOTH LENS

Spectral Parameters

CCT (K): 2988
 CIE u' : 0.2517
 CIE v' : 0.5189
 Duv: -0.0019
 CIE x: 0.4350
 CIE y: 0.3986
 CIE z: 0.1665
 Peak Wavelength (nm): 630
 Dominant Wavelength (nm): 583
 Purity: 50.17903
 R_f: 91.6
 R_g: 101.1

CRI (Ra): 94.3
 R1: 96.3
 R2: 97.6
 R3: 97.5
 R4: 95.8
 R5: 96.1
 R6: 96.2
 R7: 91.6
 R8: 83.5
 R9: 61.9
 R10: 93.0
 R11: 96.3
 R12: 85.8
 R13: 96.7
 R14: 97.5
 R15: 91.8



Test Conditions

Stabilization Time: 21M
 Operation Time: 1H 21M
 Sphere Temperature (°C): 25.0

REPORT NUMBER: SP3-2508-516-5

Measurement and Test Equipment			
Instrument	Identification Number	Calibration Date	Calibration Due Date
Photometer	3M SPHERE IN02505	7/1/2025	1/1/2026
Power Meter	XITRON INXT2011006	1/20/2025	1/20/2026
AC Power Source	CHROMA 61604 IN6064A	10/22/2024	10/22/2025
DC Power Source	EYSIGHT N5770A IN0534	10/22/2024	10/22/2025
Sphere Thermometer	TANDD IN4036E	10/22/2024	10/22/2025

REPORT NUMBER: SP3-2508-516-5

CIE 1931 Chromaticity Diagram



CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles



Point lies inside the ANSI 3000K 4-step quadrangle

REPORT NUMBER: SP3-2508-516-5

Photopic Flux vs. Wavelength



Photopic Lumens: NR

λ (nm)	Power $\text{W}^{\wedge}/\text{nm}$	Lumens (ϕ/nm)	λ (nm)	Power $\text{W}^{\wedge}/\text{nm}$	Lumens (ϕ/nm)	λ (nm)	Power $\text{W}^{\wedge}/\text{nm}$	Lumens (ϕ/nm)	λ (nm)	Power $\text{W}^{\wedge}/\text{nm}$	Lumens (ϕ/nm)	λ (nm)	Power $\text{W}^{\wedge}/\text{nm}$	Lumens (ϕ/nm)
360	0	NR	490	101	NR	620	329	NR	750	8	NR	880	0	NR
365	0	NR	495	121	NR	625	331	NR	755	7	NR	885	0	NR
370	0	NR	500	143	NR	630	1000	NR	760	6	NR	890	0	NR
375	0	NR	505	161	NR	635	709	NR	765	5	NR	895	0	NR
380	0	NR	510	176	NR	640	220	NR	770	4	NR	900	0	NR
385	0	NR	515	189	NR	645	210	NR	775	3	NR	905	0	NR
390	0	NR	520	196	NR	650	188	NR	780	3	NR	910	0	NR
395	1	NR	525	203	NR	655	156	NR	785	2	NR	915	0	NR
400	1	NR	530	208	NR	660	134	NR	790	2	NR	920	0	NR
405	2	NR	535	213	NR	665	112	NR	795	2	NR	925	0	NR
410	3	NR	540	219	NR	670	104	NR	800	1	NR	930	0	NR
415	6	NR	545	226	NR	675	85	NR	805	1	NR	935	0	NR
420	10	NR	550	233	NR	680	72	NR	810	1	NR	940	0	NR
425	17	NR	555	241	NR	685	63	NR	815	1	NR	945	0	NR
430	30	NR	560	250	NR	690	53	NR	820	1	NR	950	0	NR
435	53	NR	565	260	NR	695	46	NR	825	1	NR	955	0	NR
440	92	NR	570	270	NR	700	39	NR	830	1	NR	960	0	NR
445	160	NR	575	280	NR	705	33	NR	835	1	NR	965	0	NR
450	214	NR	580	289	NR	710	28	NR	840	0	NR	970	0	NR
455	183	NR	585	298	NR	715	24	NR	845	0	NR	975	0	NR
460	133	NR	590	305	NR	720	20	NR	850	0	NR	980	0	NR
465	111	NR	595	309	NR	725	17	NR	855	0	NR	985	0	NR
470	91	NR	600	314	NR	730	15	NR	860	0	NR	990	0	NR
475	77	NR	605	318	NR	735	13	NR	865	0	NR	995	0	NR
480	76	NR	610	356	NR	740	11	NR	870	0	NR	1000	0	NR
485	86	NR	615	390	NR	745	9	NR	875	0	NR			

REPORT NUMBER: SP3-2508-516-5

Scotopic Flux vs. Wavelength



Scotopic Lumens: NR

S/P: 1.43

λ (nm)	Power W ^λ /nm	Lumens (Φ/nm)	λ (nm)	Power W ^λ /nm	Lumens (Φ/nm)	λ (nm)	Power W ^λ /nm	Lumens (Φ/nm)	λ (nm)	Power W ^λ /nm	Lumens (Φ/nm)	λ (nm)	Power W ^λ /nm	Lumens (Φ/nm)
360	0	NR	490	101	NR	620	329	NR	750	8	NR	880	0	NR
365	0	NR	495	121	NR	625	331	NR	755	7	NR	885	0	NR
370	0	NR	500	143	NR	630	1000	NR	760	6	NR	890	0	NR
375	0	NR	505	161	NR	635	709	NR	765	5	NR	895	0	NR
380	0	NR	510	176	NR	640	220	NR	770	4	NR	900	0	NR
385	0	NR	515	189	NR	645	210	NR	775	3	NR	905	0	NR
390	0	NR	520	196	NR	650	188	NR	780	3	NR	910	0	NR
395	1	NR	525	203	NR	655	156	NR	785	2	NR	915	0	NR
400	1	NR	530	208	NR	660	134	NR	790	2	NR	920	0	NR
405	2	NR	535	213	NR	665	112	NR	795	2	NR	925	0	NR
410	3	NR	540	219	NR	670	104	NR	800	1	NR	930	0	NR
415	6	NR	545	226	NR	675	85	NR	805	1	NR	935	0	NR
420	10	NR	550	233	NR	680	72	NR	810	1	NR	940	0	NR
425	17	NR	555	241	NR	685	63	NR	815	1	NR	945	0	NR
430	30	NR	560	250	NR	690	53	NR	820	1	NR	950	0	NR
435	53	NR	565	260	NR	695	46	NR	825	1	NR	955	0	NR
440	92	NR	570	270	NR	700	39	NR	830	1	NR	960	0	NR
445	160	NR	575	280	NR	705	33	NR	835	1	NR	965	0	NR
450	214	NR	580	289	NR	710	28	NR	840	0	NR	970	0	NR
455	183	NR	585	298	NR	715	24	NR	845	0	NR	975	0	NR
460	133	NR	590	305	NR	720	20	NR	850	0	NR	980	0	NR
465	111	NR	595	309	NR	725	17	NR	855	0	NR	985	0	NR
470	91	NR	600	314	NR	730	15	NR	860	0	NR	990	0	NR
475	77	NR	605	318	NR	735	13	NR	865	0	NR	995	0	NR
480	76	NR	610	356	NR	740	11	NR	870	0	NR	1000	0	NR
485	86	NR	615	390	NR	745	9	NR	875	0	NR			

REPORT NUMBER: SP3-2508-516-5

Melanopic Flux vs. Wavelength



Melanopic Lumens: NR

M/P: 2.8

λ (nm)	Power W ^λ /nm	Lumens (φ/nm)	λ (nm)	Power W ^λ /nm	Lumens (φ/nm)	λ (nm)	Power W ^λ /nm	Lumens (φ/nm)	λ (nm)	Power W ^λ /nm	Lumens (φ/nm)	λ (nm)	Power W ^λ /nm	Lumens (φ/nm)
360	0	NR	490	101	NR	620	329	NR	750	8	NR	880	0	NR
365	0	NR	495	121	NR	625	331	NR	755	7	NR	885	0	NR
370	0	NR	500	143	NR	630	1000	NR	760	6	NR	890	0	NR
375	0	NR	505	161	NR	635	709	NR	765	5	NR	895	0	NR
380	0	NR	510	176	NR	640	220	NR	770	4	NR	900	0	NR
385	0	NR	515	189	NR	645	210	NR	775	3	NR	905	0	NR
390	0	NR	520	196	NR	650	188	NR	780	3	NR	910	0	NR
395	1	NR	525	203	NR	655	156	NR	785	2	NR	915	0	NR
400	1	NR	530	208	NR	660	134	NR	790	2	NR	920	0	NR
405	2	NR	535	213	NR	665	112	NR	795	2	NR	925	0	NR
410	3	NR	540	219	NR	670	104	NR	800	1	NR	930	0	NR
415	6	NR	545	226	NR	675	85	NR	805	1	NR	935	0	NR
420	10	NR	550	233	NR	680	72	NR	810	1	NR	940	0	NR
425	17	NR	555	241	NR	685	63	NR	815	1	NR	945	0	NR
430	30	NR	560	250	NR	690	53	NR	820	1	NR	950	0	NR
435	53	NR	565	260	NR	695	46	NR	825	1	NR	955	0	NR
440	92	NR	570	270	NR	700	39	NR	830	1	NR	960	0	NR
445	160	NR	575	280	NR	705	33	NR	835	1	NR	965	0	NR
450	214	NR	580	289	NR	710	28	NR	840	0	NR	970	0	NR
455	183	NR	585	298	NR	715	24	NR	845	0	NR	975	0	NR
460	133	NR	590	305	NR	720	20	NR	850	0	NR	980	0	NR
465	111	NR	595	309	NR	725	17	NR	855	0	NR	985	0	NR
470	91	NR	600	314	NR	730	15	NR	860	0	NR	990	0	NR
475	77	NR	605	318	NR	735	13	NR	865	0	NR	995	0	NR
480	76	NR	610	356	NR	740	11	NR	870	0	NR	1000	0	NR
485	86	NR	615	390	NR	745	9	NR	875	0	NR			

REPORT NUMBER: SP3-2508-516-5

TM-30-18

Summary

$R_f = 91.6$
 $R_g = 101.1$
 CIE $R_a = 94.3$
 $R_9 = 61.9$



Color Vector Graphics



Individual Sample Fidelity Index ($R_{f,i}$)

CES01 = 86	CES26 = 92	CES51 = 97	CES76 = 89
CES02 = 63	CES27 = 95	CES52 = 96	CES77 = 85
CES03 = 32	CES28 = 96	CES53 = 94	CES78 = 86
CES04 = 70	CES29 = 92	CES54 = 97	CES79 = 89
CES05 = 51	CES30 = 99	CES55 = 96	CES80 = 91
CES06 = 51	CES31 = 93	CES56 = 96	CES81 = 72
CES07 = 44	CES32 = 85	CES57 = 96	CES82 = 96
CES08 = 42	CES33 = 94	CES58 = 96	CES83 = 93
CES09 = 29	CES34 = 93	CES59 = 99	CES84 = 96
CES10 = 76	CES35 = 96	CES60 = 95	CES85 = 80
CES11 = 59	CES36 = 87	CES61 = 95	CES86 = 78
CES12 = 65	CES37 = 94	CES62 = 93	CES87 = 91
CES13 = 44	CES38 = 96	CES63 = 94	CES88 = 97
CES14 = 74	CES39 = 98	CES64 = 95	CES89 = 82
CES15 = 72	CES40 = 95	CES65 = 91	CES90 = 98
CES16 = 48	CES41 = 96	CES66 = 93	CES91 = 81
CES17 = 50	CES42 = 92	CES67 = 92	CES92 = 78
CES18 = 57	CES43 = 90	CES68 = 92	CES93 = 87
CES19 = 72	CES44 = 99	CES69 = 93	CES94 = 73
CES20 = 67	CES45 = 94	CES70 = 89	CES95 = 85
CES21 = 86	CES46 = 94	CES71 = 88	CES96 = 92
CES22 = 79	CES47 = 88	CES72 = 95	CES97 = 94
CES23 = 92	CES48 = 95	CES73 = 85	CES98 = 94
CES24 = 91	CES49 = 92	CES74 = 90	CES99 = 93
CES25 = 72	CES50 = 97	CES75 = 88	



Color Rendition by Hue-Angle Bin



Measure Comparisons



(END OF REPORT)