

Cooper Lighting Solutions Photometric Lab
1121 Highway 74 South
Peachtree City, GA 30269



Scaled data based on original data using
LM-79-2019 Approved Method: Electrical and Photometric Measurements of Solid-
State Lighting Products

Test Report Prepared for
Cooper Lighting Solutions

Brand: METALUX

Report Number: P982816

Luminaire Tested: 22CZ-LD5-20SE-UNV-L835-SQP-CD1-U

Issue Date: 04/23/2025

Test Information

Test Method: LM-79-2019
Report Number: P982816
Test Lab: INNOVATION CENTER(P3)
Issue Date: 04/23/2025
Manufacturer: COOPER LIGHTING SOLUTIONS
Product Line: METALUX
Catalog Number: 22CZ-LD5-20SE-UNV-L835-SQP-CD1-U
Description: METALUX CRUZE 2x2 2000LM STANDARD EFFICACY PACKAGE 80CRI 3500K TROFFER LENS WITH PATTERN INSERT
Light Source: 3500K CCT, 80 CRI LEDS
Ballast/Driver: -

Summary


Lumens per Lamp: N/A
Luminaire Lumens: 1559.1 lumens
Efficiency: N/A
Efficacy: 96.2 lumens/watt
Spacing Criteria (0/90/45): 1.25 / 1.31 / 1.41
Luminous Opening: Rectangular (W 2' x L: 2' x H: 0')
CIE Type: Direct

Input Watts (W): 16.2
Input Voltage (V): 120
Input Current (Ain): NR
Voltage Rise (V): NR
Power Factor: NR
Total Harmonic Distortion (THDi): NR
Frequency (hertz): 60
Stabilization Time: NR
Operation Time: NR
Ambient Temperature (°C): NR
Test Distance: 28.75 FT

TEST NUMBER: P982816

CATALOG NUMBER: 22CZ-LD5-20SE-UNV-L835-SQP-CD1-U

Luminous Intensity Polar Plot

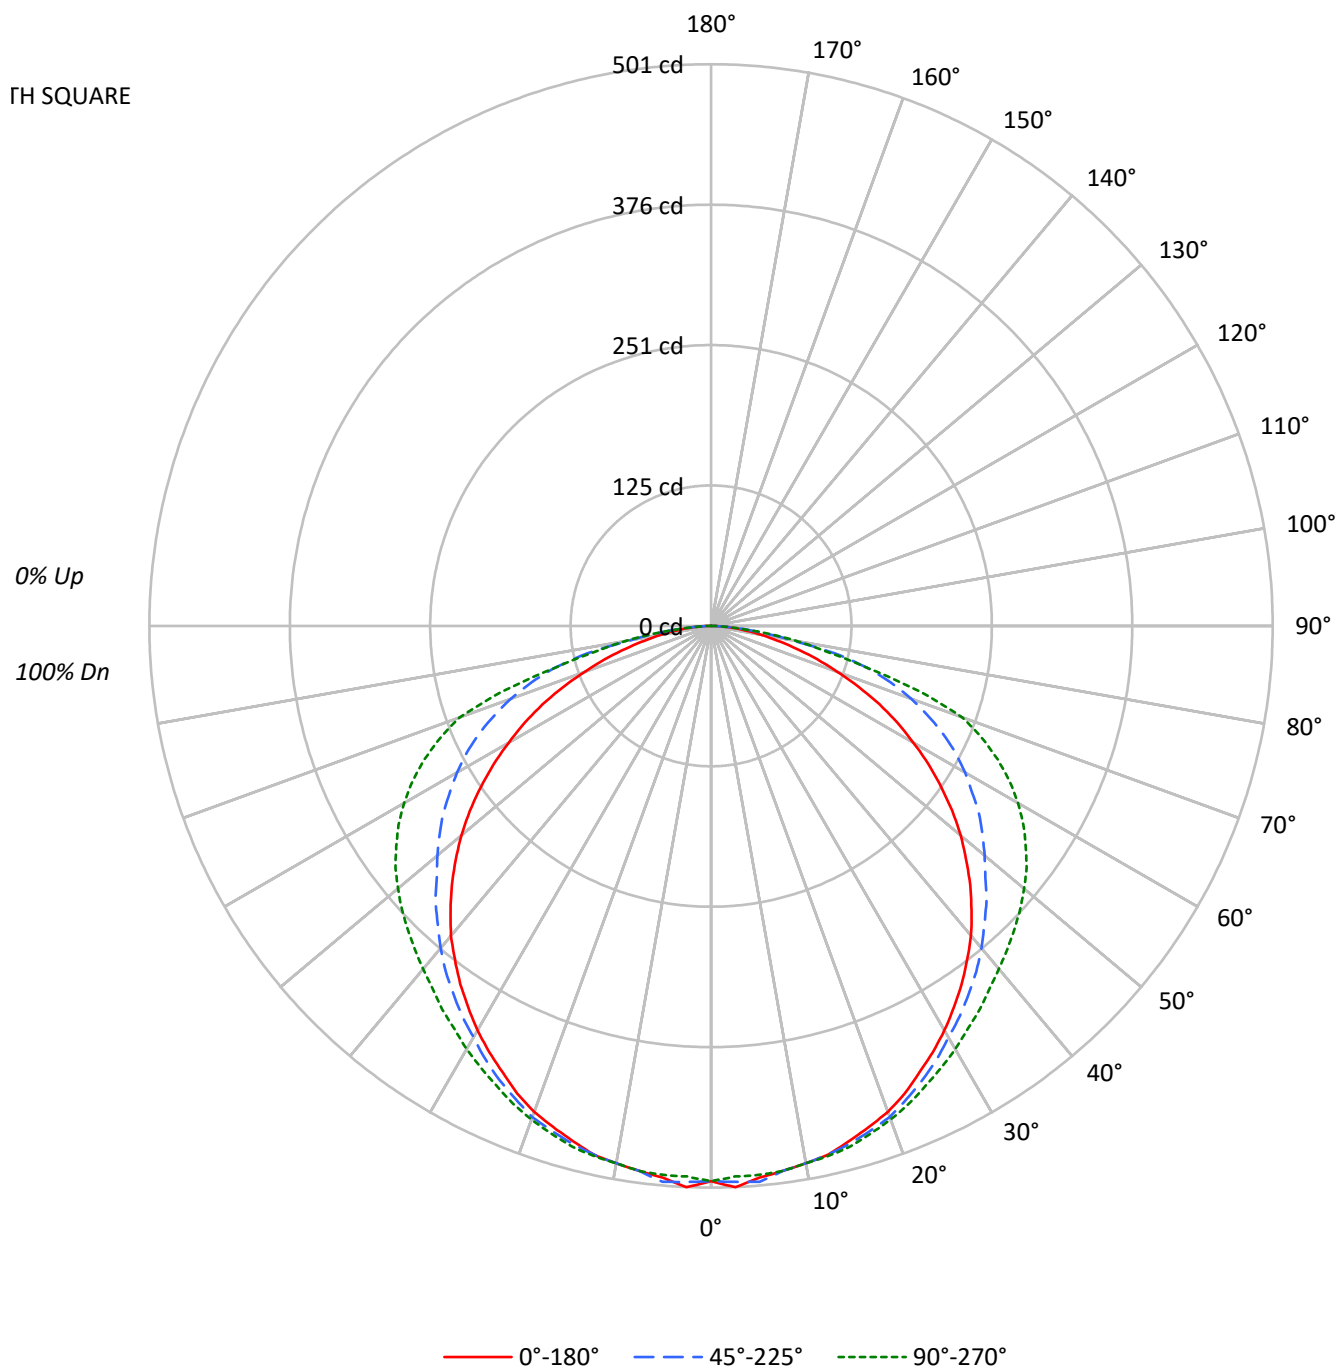

TEST NUMBER: P982816

CATALOG NUMBER: 22CZ-LD5-20SE-UNV-L835-SQP-CD1-U

COEFFICIENT OF UTILIZATION - ZONAL CAVITY METHOD:

RF	20				20				20				20				20
RC	80				70				50				30				10
RW	70	50	30	10	70	50	30	10	50	30	10		50	30	10		50
RCR																	
0	119	119	119	119	116	116	116	116	111	111	111		106	106	106		102
1	108	103	99	95	105	101	97	93	97	93	90		93	90	87		89
2	98	89	82	76	95	87	81	75	84	78	73		80	76	71		77
3	89	78	69	62	86	76	68	62	73	66	61		70	64	59		68
4	81	68	59	52	79	67	58	52	64	57	51		62	56	50		60
5	74	61	52	45	72	60	51	44	58	50	44		56	49	43		54
6	68	55	45	39	66	54	45	39	52	44	38		50	43	38		48
7	63	49	40	34	62	49	40	34	47	39	34		45	39	33		44
8	59	45	36	30	57	44	36	30	43	35	30		42	35	30		40
9	55	41	33	27	54	41	33	27	39	32	27		38	32	27		37
10	51	38	30	24	50	37	30	24	36	29	24		35	29	24		35

AVERAGE LUMINANCE (cd/sqm):

	0°	45°	90°
0°	1333	1333	1333
5°	1334	1344	1328
10°	1330	1330	1330
15°	1326	1332	1339
20°	1321	1335	1342
25°	1305	1327	1344
30°	1294	1317	1354
35°	1281	1316	1373
40°	1267	1318	1403
45°	1244	1322	1456
50°	1217	1333	1526
55°	1176	1369	1608
60°	1121	1408	1701
65°	1056	1457	1796
70°	943	1496	1877
75°	818	1497	1485
80°	694	1106	1201
85°	596	747	673

MAXIMUM LUMINANCE 45°-90°:

Horizontal Angle: 90°

Vertical Angle: 70°

Luminance: 1877 cd/sqm

TEST NUMBER: P982816

CATALOG NUMBER: 22CZ-LD5-20SE-UNV-L835-SQP-CD1-U

ZONAL LUMENS:

Zone	Lumens	% Fixture
0°-10°	47.0	3.0
10°-20°	135.0	8.7
20°-30°	205.8	13.2
30°-40°	251.8	16.1
40°-50°	270.9	17.4
50°-60°	262.4	16.8
60°-70°	222.3	14.3
70°-80°	134.4	8.6
80°-90°	29.5	1.9
90°-100°	0.0	0.0
100°-110°	0.0	0.0
110°-120°	0.0	0.0
120°-130°	0.0	0.0
130°-140°	0.0	0.0
140°-150°	0.0	0.0
150°-160°	0.0	0.0
160°-170°	0.0	0.0
170°-180°	0.0	0.0
0°-30°	387.8	24.9
0°-40°	639.6	41.0
0°-60°	1172.9	75.2
0°-90°	1559.1	100.0
90°-120°	0.0	0.0
90°-150°	0.0	0.0
90°-180°	0.0	0.0
0°-180°	1559.1	100.0

CANDELA DISTRIBUTION:

	0°	22.5°	45°	67.5°	90°	Flux
0°	495	495	495	495	495	
5°	494	494	498	495	492	47
15°	476	477	478	480	481	134
25°	440	442	447	450	453	203
35°	390	392	401	412	418	244
45°	327	333	348	369	383	252
55°	251	262	292	326	343	224
65°	166	184	229	265	282	163
75°	79	107	144	146	143	85
85°	19	23	24	23	22	22
90°	0	0	0	0	0	

TEST NUMBER: P982816

CATALOG NUMBER: 22CZ-LD5-20SE-UNV-L835-SQP-CD1-U

CANDELA DISTRIBUTION (FULL):

	0°	22.5°	45°	67.5°	90°
0°	495.3	495.3	495.3	495.3	495.3
2.5°	501.2	500.1	496.5	494.0	491.6
5°	494.0	494.0	497.7	495.3	491.6
7.5°	490.4	490.4	490.4	496.5	490.4
10°	486.7	488.0	486.7	491.6	486.7
12.5°	483.1	483.1	483.1	484.3	484.3
15°	475.8	477.0	478.2	479.5	480.7
17.5°	468.6	469.8	472.3	473.5	474.7
20°	461.3	462.5	466.2	466.2	468.6
22.5°	451.6	451.6	456.5	457.7	461.3
25°	439.5	442.0	446.8	450.4	452.8
27.5°	428.6	431.0	435.9	440.8	444.4
30°	416.5	419.0	423.7	431.0	435.9
32.5°	403.2	405.6	412.9	421.4	426.2
35°	389.9	392.3	400.7	411.7	417.8
37.5°	375.3	379.0	388.7	400.7	408.0
40°	360.8	364.5	375.3	388.7	399.5
42.5°	343.9	348.7	360.8	379.0	391.1
45°	326.9	333.0	347.5	369.3	382.6
47.5°	308.8	314.8	331.8	359.6	374.1
50°	290.6	297.8	318.5	348.7	364.5
52.5°	271.2	278.5	305.1	337.8	354.8
55°	250.6	261.6	291.8	325.7	342.7
57.5°	230.1	242.2	276.0	312.4	330.5
60°	208.3	222.8	261.6	297.8	316.1
62.5°	187.7	203.4	245.8	282.1	300.3
65°	165.9	184.1	228.8	265.2	282.1
67.5°	142.8	165.9	209.5	244.5	261.6
70°	119.8	146.5	190.1	222.8	238.6
72.5°	99.3	127.1	168.3	196.1	196.1
75°	78.7	106.6	144.0	146.5	142.8
77.5°	60.6	87.2	112.6	102.9	105.4
80°	44.8	66.6	71.4	75.1	77.5
82.5°	30.3	44.8	46.0	48.4	48.4
85°	19.3	23.0	24.2	23.0	21.8
87.5°	8.5	9.7	7.3	4.9	3.6
90°	0.0	0.0	0.0	0.0	0.0

LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-State Lighting Products

Report Prepared for

Cooper Lighting Solutions

Metalux

Report Number: SP3-2508-516-6

Test Date: 09/03/2025

Luminaire Tested: 24CZ-LD5-65-S-UNV-L935-CD1-U

Data in this report applies to families of products including 24CZ-LD5-65-S-UNV-L935-CD1-U

Test Information

Test Method: LM-79-2019
 Report Number: SP3-2508-516-6
 Test Lab: COOPER LIGHTING SOLUTIONS
 Photometer: SP3 - 3M SPHERE
 Measurement Geometry: 4π
 Issue Date: 09/05/2025
 Manufacturer: COOPER LIGHTING SOLUTIONS
 Product Line: Metalux
 Catalog Number: **24CZ-LD5-65-S-UNV-L935-CD1-U**
 Description: 2X4 CRUZE SB 6500LM 935 SMOOTH LENS

Spectral Parameters

CCT (K): 3412
 CIE u' : 0.2386
 CIE v' : 0.5111
 Duv: -0.0015
 CIE x: 0.4087
 CIE y: 0.3890
 CIE z: 0.2023
 Peak Wavelength (nm): 630
 Dominant Wavelength (nm): 581
 Purity: 39.41044
 R_f: 92.6
 R_g: 102

CRI (Ra): 96.3
 R1: 99.2
 R2: 97.9
 R3: 94.7
 R4: 96.6
 R5: 98.4
 R6: 96.1
 R7: 95.6
 R8: 92.0
 R9: 78.4
 R10: 93.0
 R11: 94.5
 R12: 81.5
 R13: 99.0
 R14: 95.8
 R15: 96.7



Test Conditions

Stabilization Time: 20M
 Operation Time: 1H 20M
 Sphere Temperature (°C): 25.0

REPORT NUMBER: SP3-2508-516-6

Measurement and Test Equipment			
Instrument	Identification Number	Calibration Date	Calibration Due Date
Photometer	3M SPHERE IN02505	7/1/2025	1/1/2026
Power Meter	XITRON INXT2011006	1/20/2025	1/20/2026
AC Power Source	CHROMA 61604 IN6064A	10/22/2024	10/22/2025
DC Power Source	EYSIGHT N5770A IN0534	10/22/2024	10/22/2025
Sphere Thermometer	TANDD IN4036E	10/22/2024	10/22/2025

REPORT NUMBER: SP3-2508-516-6

CIE 1931 Chromaticity Diagram



CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles



Point lies inside the ANSI 3500K 4-step quadrangle

REPORT NUMBER: SP3-2508-516-6

Photopic Flux vs. Wavelength



Photopic Lumens: NR

λ (nm)	Power W [^] /nm	Lumens (φ/nm)	λ (nm)	Power W [^] /nm	Lumens (φ/nm)	λ (nm)	Power W [^] /nm	Lumens (φ/nm)	λ (nm)	Power W [^] /nm	Lumens (φ/nm)	λ (nm)	Power W [^] /nm	Lumens (φ/nm)
360	0	NR	490	112	NR	620	281	NR	750	6	NR	880	0	NR
365	0	NR	495	134	NR	625	286	NR	755	5	NR	885	0	NR
370	0	NR	500	157	NR	630	1000	NR	760	4	NR	890	0	NR
375	0	NR	505	178	NR	635	695	NR	765	4	NR	895	0	NR
380	0	NR	510	193	NR	640	181	NR	770	3	NR	900	0	NR
385	0	NR	515	206	NR	645	175	NR	775	3	NR	905	0	NR
390	0	NR	520	213	NR	650	156	NR	780	2	NR	910	0	NR
395	1	NR	525	219	NR	655	127	NR	785	2	NR	915	0	NR
400	2	NR	530	223	NR	660	108	NR	790	2	NR	920	0	NR
405	2	NR	535	226	NR	665	89	NR	795	2	NR	925	0	NR
410	4	NR	540	230	NR	670	84	NR	800	1	NR	930	0	NR
415	6	NR	545	235	NR	675	67	NR	805	1	NR	935	0	NR
420	11	NR	550	239	NR	680	57	NR	810	1	NR	940	0	NR
425	19	NR	555	243	NR	685	50	NR	815	1	NR	945	0	NR
430	34	NR	560	248	NR	690	42	NR	820	1	NR	950	0	NR
435	60	NR	565	253	NR	695	36	NR	825	1	NR	955	0	NR
440	106	NR	570	256	NR	700	31	NR	830	0	NR	960	0	NR
445	193	NR	575	260	NR	705	26	NR	835	0	NR	965	0	NR
450	283	NR	580	263	NR	710	22	NR	840	0	NR	970	0	NR
455	234	NR	585	266	NR	715	19	NR	845	0	NR	975	0	NR
460	157	NR	590	267	NR	720	16	NR	850	0	NR	980	0	NR
465	134	NR	595	266	NR	725	14	NR	855	0	NR	985	0	NR
470	107	NR	600	268	NR	730	12	NR	860	0	NR	990	0	NR
475	85	NR	605	269	NR	735	10	NR	865	0	NR	995	0	NR
480	85	NR	610	309	NR	740	8	NR	870	0	NR	1000	0	NR
485	96	NR	615	345	NR	745	7	NR	875	0	NR			

REPORT NUMBER: SP3-2508-516-6

Scotopic Flux vs. Wavelength



Scotopic Lumens: NR

S/P: 1.61

λ (nm)	Power W ^λ /nm	Lumens (Φ/nm)	λ (nm)	Power W ^λ /nm	Lumens (Φ/nm)	λ (nm)	Power W ^λ /nm	Lumens (Φ/nm)	λ (nm)	Power W ^λ /nm	Lumens (Φ/nm)	λ (nm)	Power W ^λ /nm	Lumens (Φ/nm)
360	0	NR	490	112	NR	620	281	NR	750	6	NR	880	0	NR
365	0	NR	495	134	NR	625	286	NR	755	5	NR	885	0	NR
370	0	NR	500	157	NR	630	1000	NR	760	4	NR	890	0	NR
375	0	NR	505	178	NR	635	695	NR	765	4	NR	895	0	NR
380	0	NR	510	193	NR	640	181	NR	770	3	NR	900	0	NR
385	0	NR	515	206	NR	645	175	NR	775	3	NR	905	0	NR
390	0	NR	520	213	NR	650	156	NR	780	2	NR	910	0	NR
395	1	NR	525	219	NR	655	127	NR	785	2	NR	915	0	NR
400	2	NR	530	223	NR	660	108	NR	790	2	NR	920	0	NR
405	2	NR	535	226	NR	665	89	NR	795	2	NR	925	0	NR
410	4	NR	540	230	NR	670	84	NR	800	1	NR	930	0	NR
415	6	NR	545	235	NR	675	67	NR	805	1	NR	935	0	NR
420	11	NR	550	239	NR	680	57	NR	810	1	NR	940	0	NR
425	19	NR	555	243	NR	685	50	NR	815	1	NR	945	0	NR
430	34	NR	560	248	NR	690	42	NR	820	1	NR	950	0	NR
435	60	NR	565	253	NR	695	36	NR	825	1	NR	955	0	NR
440	106	NR	570	256	NR	700	31	NR	830	0	NR	960	0	NR
445	193	NR	575	260	NR	705	26	NR	835	0	NR	965	0	NR
450	283	NR	580	263	NR	710	22	NR	840	0	NR	970	0	NR
455	234	NR	585	266	NR	715	19	NR	845	0	NR	975	0	NR
460	157	NR	590	267	NR	720	16	NR	850	0	NR	980	0	NR
465	134	NR	595	266	NR	725	14	NR	855	0	NR	985	0	NR
470	107	NR	600	268	NR	730	12	NR	860	0	NR	990	0	NR
475	85	NR	605	269	NR	735	10	NR	865	0	NR	995	0	NR
480	85	NR	610	309	NR	740	8	NR	870	0	NR	1000	0	NR
485	96	NR	615	345	NR	745	7	NR	875	0	NR			

REPORT NUMBER: SP3-2508-516-6

Melanopic Flux vs. Wavelength



Melanopic Lumens: NR

M/P: 3.24

λ (nm)	Power W ^λ /nm	Lumens (φ/nm)	λ (nm)	Power W ^λ /nm	Lumens (φ/nm)	λ (nm)	Power W ^λ /nm	Lumens (φ/nm)	λ (nm)	Power W ^λ /nm	Lumens (φ/nm)	λ (nm)	Power W ^λ /nm	Lumens (φ/nm)
360	0	NR	490	112	NR	620	281	NR	750	6	NR	880	0	NR
365	0	NR	495	134	NR	625	286	NR	755	5	NR	885	0	NR
370	0	NR	500	157	NR	630	1000	NR	760	4	NR	890	0	NR
375	0	NR	505	178	NR	635	695	NR	765	4	NR	895	0	NR
380	0	NR	510	193	NR	640	181	NR	770	3	NR	900	0	NR
385	0	NR	515	206	NR	645	175	NR	775	3	NR	905	0	NR
390	0	NR	520	213	NR	650	156	NR	780	2	NR	910	0	NR
395	1	NR	525	219	NR	655	127	NR	785	2	NR	915	0	NR
400	2	NR	530	223	NR	660	108	NR	790	2	NR	920	0	NR
405	2	NR	535	226	NR	665	89	NR	795	2	NR	925	0	NR
410	4	NR	540	230	NR	670	84	NR	800	1	NR	930	0	NR
415	6	NR	545	235	NR	675	67	NR	805	1	NR	935	0	NR
420	11	NR	550	239	NR	680	57	NR	810	1	NR	940	0	NR
425	19	NR	555	243	NR	685	50	NR	815	1	NR	945	0	NR
430	34	NR	560	248	NR	690	42	NR	820	1	NR	950	0	NR
435	60	NR	565	253	NR	695	36	NR	825	1	NR	955	0	NR
440	106	NR	570	256	NR	700	31	NR	830	0	NR	960	0	NR
445	193	NR	575	260	NR	705	26	NR	835	0	NR	965	0	NR
450	283	NR	580	263	NR	710	22	NR	840	0	NR	970	0	NR
455	234	NR	585	266	NR	715	19	NR	845	0	NR	975	0	NR
460	157	NR	590	267	NR	720	16	NR	850	0	NR	980	0	NR
465	134	NR	595	266	NR	725	14	NR	855	0	NR	985	0	NR
470	107	NR	600	268	NR	730	12	NR	860	0	NR	990	0	NR
475	85	NR	605	269	NR	735	10	NR	865	0	NR	995	0	NR
480	85	NR	610	309	NR	740	8	NR	870	0	NR	1000	0	NR
485	96	NR	615	345	NR	745	7	NR	875	0	NR			

REPORT NUMBER: SP3-2508-516-6

TM-30-18

Summary

$R_f = 92.6$
 $R_g = 102$
 $\text{CIE } R_a = 96.3$
 $R_9 = 78.4$



Color Vector Graphics



Individual Sample Fidelity Index ($R_{f,i}$)

CES01 = 86	CES26 = 94	CES51 = 97	CES76 = 88
CES02 = 63	CES27 = 93	CES52 = 96	CES77 = 88
CES03 = 32	CES28 = 96	CES53 = 95	CES78 = 84
CES04 = 70	CES29 = 95	CES54 = 95	CES79 = 92
CES05 = 50	CES30 = 96	CES55 = 95	CES80 = 92
CES06 = 51	CES31 = 95	CES56 = 98	CES81 = 77
CES07 = 43	CES32 = 87	CES57 = 98	CES82 = 96
CES08 = 42	CES33 = 97	CES58 = 98	CES83 = 95
CES09 = 29	CES34 = 93	CES59 = 100	CES84 = 95
CES10 = 75	CES35 = 96	CES60 = 94	CES85 = 82
CES11 = 58	CES36 = 84	CES61 = 95	CES86 = 84
CES12 = 64	CES37 = 93	CES62 = 90	CES87 = 92
CES13 = 44	CES38 = 91	CES63 = 95	CES88 = 99
CES14 = 74	CES39 = 98	CES64 = 95	CES89 = 86
CES15 = 72	CES40 = 96	CES65 = 92	CES90 = 98
CES16 = 48	CES41 = 97	CES66 = 93	CES91 = 77
CES17 = 49	CES42 = 90	CES67 = 92	CES92 = 81
CES18 = 56	CES43 = 91	CES68 = 91	CES93 = 88
CES19 = 71	CES44 = 99	CES69 = 92	CES94 = 78
CES20 = 67	CES45 = 94	CES70 = 89	CES95 = 86
CES21 = 86	CES46 = 95	CES71 = 85	CES96 = 93
CES22 = 78	CES47 = 90	CES72 = 95	CES97 = 93
CES23 = 91	CES48 = 96	CES73 = 84	CES98 = 96
CES24 = 90	CES49 = 93	CES74 = 91	CES99 = 97
CES25 = 71	CES50 = 97	CES75 = 86	



Color Rendition by Hue-Angle Bin



Measure Comparisons



(END OF REPORT)