

Cooper Lighting Solutions Photometric Lab
1121 Highway 74 South
Peachtree City, GA 30269



Scaled data based on original data using
LM-79-2019 Approved Method: Electrical and Photometric Measurements of Solid-
State Lighting Products

Test Report Prepared for
Cooper Lighting Solutions

Brand: METALUX

Report Number: P982729

Luminaire Tested: 22CZ-LD5-24-UNV-L835-HRP-CD1-U

Issue Date: 04/23/2025

Test Information

Test Method: LM-79-2019
Report Number: P982729
Test Lab: INNOVATION CENTER(P3)
Issue Date: 04/23/2025
Manufacturer: COOPER LIGHTING SOLUTIONS
Product Line: METALUX
Catalog Number: 22CZ-LD5-24-UNV-L835-HRP-CD1-U
Description: METALUX CRUZE 2x2 2400LM PACKAGE 80CRI 3500K TROFFER LENS WITH HRP FILM INSERT
Light Source: 3500K CCT, 80 CRI LEDS
Ballast/Driver: -

Summary


Lumens per Lamp: N/A
Luminaire Lumens: 1833.5 lumens
Efficiency: N/A
Efficacy: 101.3 lumens/watt
Spacing Criteria (0/90/45): 1.24 / 1.3 / 1.4
Luminous Opening: Rectangular (W 2' x L: 2' x H: 0')
CIE Type: Direct

Input Watts (W): 18.1
Input Voltage (V): 120
Input Current (Ain): NR
Voltage Rise (V): NR
Power Factor: NR
Total Harmonic Distortion (THDi): NR
Frequency (hertz): 60
Stabilization Time: NR
Operation Time: NR
Ambient Temperature (°C): NR
Test Distance: 28.75 FT

TEST NUMBER: P982729

CATALOG NUMBER: 22CZ-LD5-24-UNV-L835-HRP-CD1-U

Luminous Intensity Polar Plot

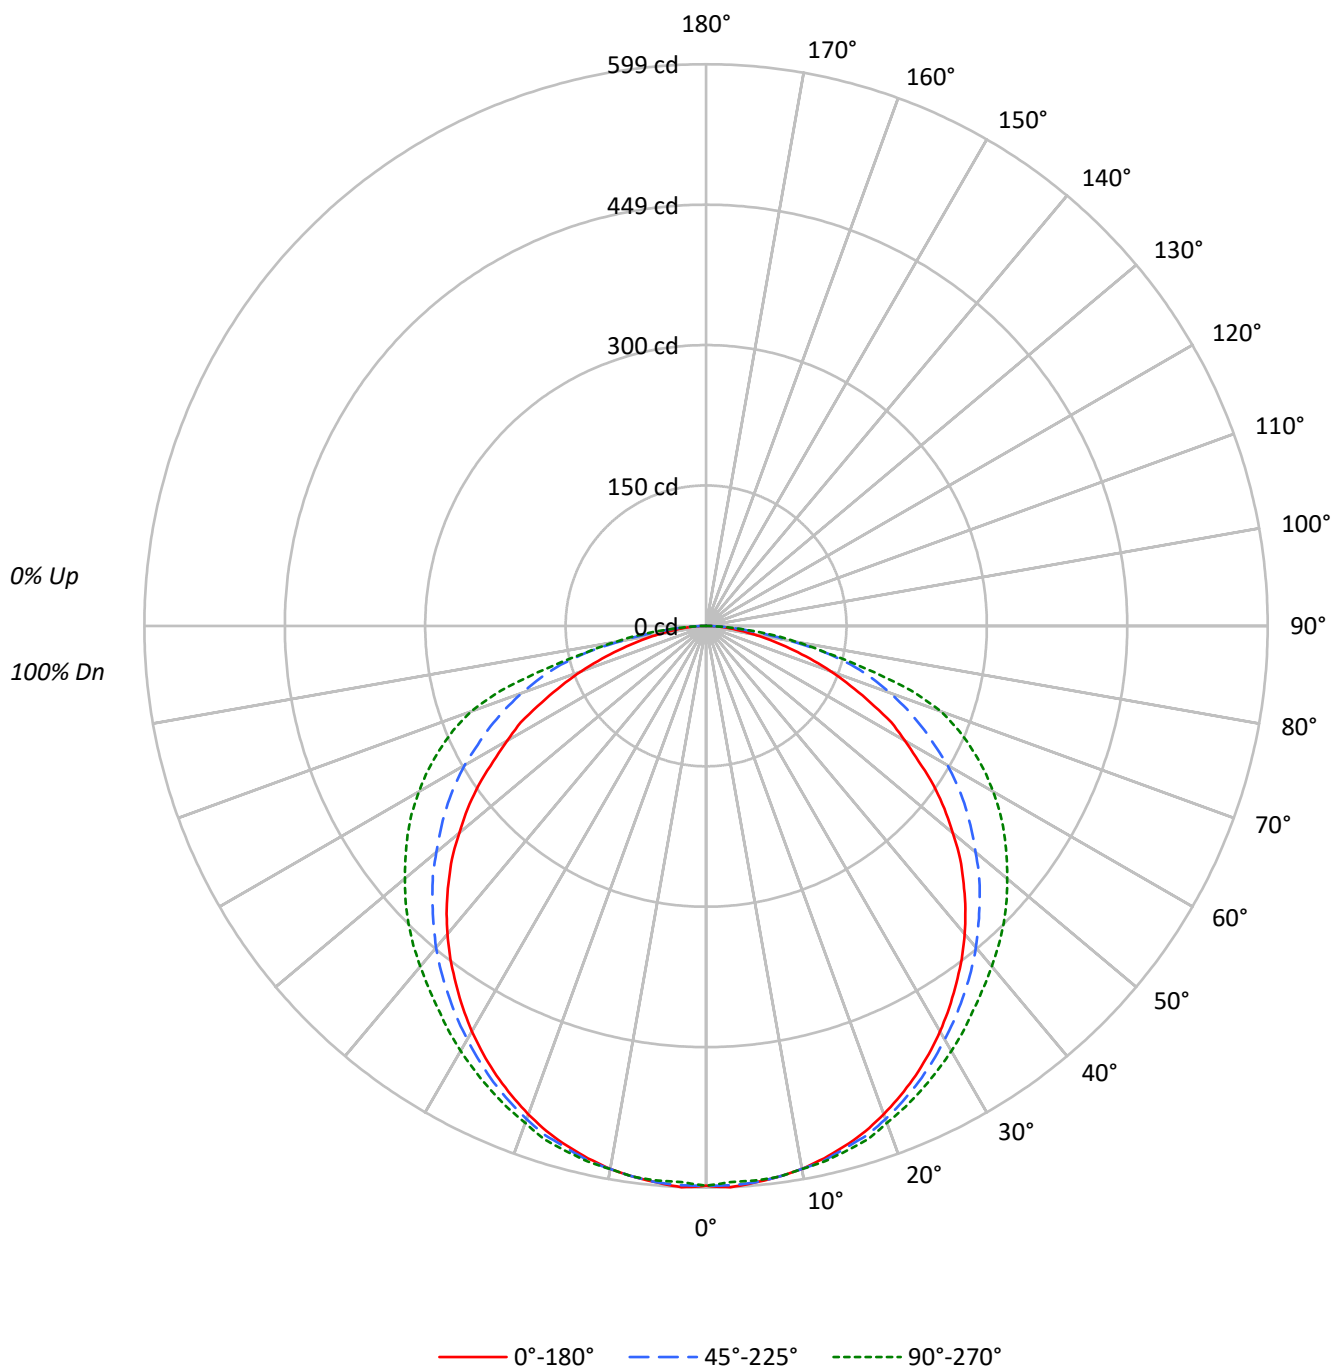

TEST NUMBER: P982729

CATALOG NUMBER: 22CZ-LD5-24-UNV-L835-HRP-CD1-U

COEFFICIENT OF UTILIZATION - ZONAL CAVITY METHOD:

RF	20				20				20				20				20
RC	80				70				50				30				10
RW	70	50	30	10	70	50	30	10	50	30	10		50	30	10		50
RCR																	
0	119	119	119	119	116	116	116	116	111	111	111		106	106	106		102
1	108	103	99	95	105	101	97	93	97	93	90		93	90	87		89
2	98	89	82	76	95	87	81	75	84	78	73		80	76	72		77
3	89	78	69	63	86	76	68	62	73	67	61		71	65	60		68
4	81	69	60	53	79	67	59	52	65	57	52		63	56	51		60
5	75	61	52	45	72	60	51	45	58	50	44		56	49	44		54
6	69	55	46	39	67	54	45	39	52	44	39		50	44	38		49
7	64	50	41	34	62	49	40	34	47	40	34		46	39	34		45
8	59	45	37	31	58	45	36	31	43	36	30		42	35	30		41
9	55	42	33	28	54	41	33	27	40	32	27		39	32	27		38
10	52	38	30	25	50	38	30	25	37	30	25		36	29	25		35

AVERAGE LUMINANCE (cd/sqm):

	0°	45°	90°
0°	1607	1607	1607
5°	1610	1610	1604
10°	1607	1607	1607
15°	1599	1605	1614
20°	1587	1603	1615
25°	1571	1594	1619
30°	1551	1582	1627
35°	1529	1576	1637
40°	1507	1573	1665
45°	1478	1571	1708
50°	1438	1572	1755
55°	1390	1586	1823
60°	1317	1601	1902
65°	1230	1615	1999
70°	1114	1640	2098
75°	958	1666	1837
80°	783	1395	1514
85°	645	1016	1118

MAXIMUM LUMINANCE 45°-90°:

Horizontal Angle: 90°

Vertical Angle: 70°

Luminance: 2098 cd/sqm

TEST NUMBER: P982729

CATALOG NUMBER: 22CZ-LD5-24-UNV-L835-HRP-CD1-U

ZONAL LUMENS:

Zone	Lumens	% Fixture
0°-10°	56.6	3.1
10°-20°	162.8	8.9
20°-30°	247.4	13.5
30°-40°	301.1	16.4
40°-50°	320.8	17.5
50°-60°	303.4	16.5
60°-70°	250.1	13.6
70°-80°	153.8	8.4
80°-90°	37.5	2.0
90°-100°	0.0	0.0
100°-110°	0.0	0.0
110°-120°	0.0	0.0
120°-130°	0.0	0.0
130°-140°	0.0	0.0
140°-150°	0.0	0.0
150°-160°	0.0	0.0
160°-170°	0.0	0.0
170°-180°	0.0	0.0
0°-30°	466.8	25.5
0°-40°	767.9	41.9
0°-60°	1392.1	75.9
0°-90°	1833.5	100.0
90°-120°	0.0	0.0
90°-150°	0.0	0.0
90°-180°	0.0	0.0
0°-180°	1833.5	100.0

CANDELA DISTRIBUTION:

	0°	22.5°	45°	67.5°	90°	Flux
0°	597	597	597	597	597	
5°	596	596	596	595	594	57
15°	574	575	576	578	580	162
25°	529	531	537	542	545	244
35°	465	470	480	492	498	291
45°	388	395	413	436	449	300
55°	296	307	338	371	388	264
65°	193	212	254	294	314	192
75°	92	117	160	174	177	99
85°	21	28	33	35	36	24
90°	0	0	0	0	0	

TEST NUMBER: P982729

CATALOG NUMBER: 22CZ-LD5-24-UNV-L835-HRP-CD1-U

CANDELA DISTRIBUTION (FULL):

	0°	22.5°	45°	67.5°	90°
0°	597.1	597.1	597.1	597.1	597.1
2.5°	599.3	598.2	597.1	594.9	593.7
5°	596.0	596.0	596.0	594.9	593.7
7.5°	592.6	592.6	592.6	592.6	592.6
10°	588.2	588.2	588.2	588.2	588.2
12.5°	581.6	582.7	583.8	583.8	584.9
15°	574.0	575.1	576.2	578.4	579.5
17.5°	565.2	566.3	569.6	571.8	574.0
20°	554.2	555.3	559.8	561.9	564.1
22.5°	542.1	544.3	548.7	553.1	555.3
25°	529.0	531.2	536.7	542.1	545.4
27.5°	514.7	516.9	523.5	531.2	534.5
30°	499.3	501.5	509.2	518.1	523.5
32.5°	482.9	486.2	495.0	505.9	511.4
35°	465.3	469.7	479.6	491.7	498.3
37.5°	447.8	452.2	464.2	478.5	486.2
40°	429.1	434.6	447.8	464.2	474.1
42.5°	409.4	416.0	430.2	450.0	462.0
45°	388.5	395.1	412.7	435.7	448.9
47.5°	367.7	375.4	395.1	420.3	434.6
50°	343.5	352.3	375.4	405.0	419.2
52.5°	320.4	331.5	356.6	388.5	403.9
55°	296.3	307.3	338.0	371.0	388.5
57.5°	268.9	282.0	318.2	353.4	372.1
60°	244.7	257.9	297.4	334.8	353.4
62.5°	222.8	234.8	274.4	315.0	334.8
65°	193.2	211.9	253.6	294.2	313.9
67.5°	166.8	187.7	231.6	270.0	292.0
70°	141.6	163.5	208.5	245.8	266.7
72.5°	116.3	140.5	185.5	218.4	229.4
75°	92.1	117.4	160.2	174.5	176.7
77.5°	70.3	95.4	129.5	128.4	130.6
80°	50.5	72.4	90.0	93.2	97.7
82.5°	34.0	50.5	58.2	63.7	68.1
85°	20.9	27.5	32.9	35.1	36.2
87.5°	9.9	10.9	10.9	8.8	8.8
90°	0.0	0.0	0.0	0.0	0.0

LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-State Lighting Products

Report Prepared for

Cooper Lighting Solutions

Metalux

Report Number: SP3-2508-516-6

Test Date: 09/03/2025

Luminaire Tested: 24CZ-LD5-65-S-UNV-L935-CD1-U

Data in this report applies to families of products including 24CZ-LD5-65-S-UNV-L935-CD1-U

Test Information

Test Method: LM-79-2019
 Report Number: SP3-2508-516-6
 Test Lab: COOPER LIGHTING SOLUTIONS
 Photometer: SP3 - 3M SPHERE
 Measurement Geometry: 4π
 Issue Date: 09/05/2025
 Manufacturer: COOPER LIGHTING SOLUTIONS
 Product Line: Metalux
 Catalog Number: **24CZ-LD5-65-S-UNV-L935-CD1-U**
 Description: 2X4 CRUZE SB 6500LM 935 SMOOTH LENS

Spectral Parameters

CCT (K): 3412
 CIE u' : 0.2386
 CIE v' : 0.5111
 Duv: -0.0015
 CIE x: 0.4087
 CIE y: 0.3890
 CIE z: 0.2023
 Peak Wavelength (nm): 630
 Dominant Wavelength (nm): 581
 Purity: 39.41044
 R_f: 92.6
 R_g: 102

CRI (Ra): 96.3
 R1: 99.2
 R2: 97.9
 R3: 94.7
 R4: 96.6
 R5: 98.4
 R6: 96.1
 R7: 95.6
 R8: 92.0
 R9: 78.4
 R10: 93.0
 R11: 94.5
 R12: 81.5
 R13: 99.0
 R14: 95.8
 R15: 96.7



Test Conditions

Stabilization Time: 20M
 Operation Time: 1H 20M
 Sphere Temperature (°C): 25.0

REPORT NUMBER: SP3-2508-516-6

Measurement and Test Equipment			
Instrument	Identification Number	Calibration Date	Calibration Due Date
Photometer	3M SPHERE IN02505	7/1/2025	1/1/2026
Power Meter	XITRON INXT2011006	1/20/2025	1/20/2026
AC Power Source	CHROMA 61604 IN6064A	10/22/2024	10/22/2025
DC Power Source	EYSIGHT N5770A IN0534	10/22/2024	10/22/2025
Sphere Thermometer	TANDD IN4036E	10/22/2024	10/22/2025

REPORT NUMBER: SP3-2508-516-6

CIE 1931 Chromaticity Diagram



CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles



Point lies inside the ANSI 3500K 4-step quadrangle

REPORT NUMBER: SP3-2508-516-6

Photopic Flux vs. Wavelength



Photopic Lumens: NR

λ (nm)	Power $\text{W}^\wedge/\text{nm}$	Lumens (ϕ/nm)	λ (nm)	Power $\text{W}^\wedge/\text{nm}$	Lumens (ϕ/nm)	λ (nm)	Power $\text{W}^\wedge/\text{nm}$	Lumens (ϕ/nm)	λ (nm)	Power $\text{W}^\wedge/\text{nm}$	Lumens (ϕ/nm)	λ (nm)	Power $\text{W}^\wedge/\text{nm}$	Lumens (ϕ/nm)
360	0	NR	490	112	NR	620	281	NR	750	6	NR	880	0	NR
365	0	NR	495	134	NR	625	286	NR	755	5	NR	885	0	NR
370	0	NR	500	157	NR	630	1000	NR	760	4	NR	890	0	NR
375	0	NR	505	178	NR	635	695	NR	765	4	NR	895	0	NR
380	0	NR	510	193	NR	640	181	NR	770	3	NR	900	0	NR
385	0	NR	515	206	NR	645	175	NR	775	3	NR	905	0	NR
390	0	NR	520	213	NR	650	156	NR	780	2	NR	910	0	NR
395	1	NR	525	219	NR	655	127	NR	785	2	NR	915	0	NR
400	2	NR	530	223	NR	660	108	NR	790	2	NR	920	0	NR
405	2	NR	535	226	NR	665	89	NR	795	2	NR	925	0	NR
410	4	NR	540	230	NR	670	84	NR	800	1	NR	930	0	NR
415	6	NR	545	235	NR	675	67	NR	805	1	NR	935	0	NR
420	11	NR	550	239	NR	680	57	NR	810	1	NR	940	0	NR
425	19	NR	555	243	NR	685	50	NR	815	1	NR	945	0	NR
430	34	NR	560	248	NR	690	42	NR	820	1	NR	950	0	NR
435	60	NR	565	253	NR	695	36	NR	825	1	NR	955	0	NR
440	106	NR	570	256	NR	700	31	NR	830	0	NR	960	0	NR
445	193	NR	575	260	NR	705	26	NR	835	0	NR	965	0	NR
450	283	NR	580	263	NR	710	22	NR	840	0	NR	970	0	NR
455	234	NR	585	266	NR	715	19	NR	845	0	NR	975	0	NR
460	157	NR	590	267	NR	720	16	NR	850	0	NR	980	0	NR
465	134	NR	595	266	NR	725	14	NR	855	0	NR	985	0	NR
470	107	NR	600	268	NR	730	12	NR	860	0	NR	990	0	NR
475	85	NR	605	269	NR	735	10	NR	865	0	NR	995	0	NR
480	85	NR	610	309	NR	740	8	NR	870	0	NR	1000	0	NR
485	96	NR	615	345	NR	745	7	NR	875	0	NR			

REPORT NUMBER: SP3-2508-516-6

Scotopic Flux vs. Wavelength




Scotopic Lumens: NR

S/P: 1.61

λ (nm)	Power W [^] /nm	Lumens (Φ/nm)	λ (nm)	Power W [^] /nm	Lumens (Φ/nm)	λ (nm)	Power W [^] /nm	Lumens (Φ/nm)	λ (nm)	Power W [^] /nm	Lumens (Φ/nm)	λ (nm)	Power W [^] /nm	Lumens (Φ/nm)
360	0	NR	490	112	NR	620	281	NR	750	6	NR	880	0	NR
365	0	NR	495	134	NR	625	286	NR	755	5	NR	885	0	NR
370	0	NR	500	157	NR	630	1000	NR	760	4	NR	890	0	NR
375	0	NR	505	178	NR	635	695	NR	765	4	NR	895	0	NR
380	0	NR	510	193	NR	640	181	NR	770	3	NR	900	0	NR
385	0	NR	515	206	NR	645	175	NR	775	3	NR	905	0	NR
390	0	NR	520	213	NR	650	156	NR	780	2	NR	910	0	NR
395	1	NR	525	219	NR	655	127	NR	785	2	NR	915	0	NR
400	2	NR	530	223	NR	660	108	NR	790	2	NR	920	0	NR
405	2	NR	535	226	NR	665	89	NR	795	2	NR	925	0	NR
410	4	NR	540	230	NR	670	84	NR	800	1	NR	930	0	NR
415	6	NR	545	235	NR	675	67	NR	805	1	NR	935	0	NR
420	11	NR	550	239	NR	680	57	NR	810	1	NR	940	0	NR
425	19	NR	555	243	NR	685	50	NR	815	1	NR	945	0	NR
430	34	NR	560	248	NR	690	42	NR	820	1	NR	950	0	NR
435	60	NR	565	253	NR	695	36	NR	825	1	NR	955	0	NR
440	106	NR	570	256	NR	700	31	NR	830	0	NR	960	0	NR
445	193	NR	575	260	NR	705	26	NR	835	0	NR	965	0	NR
450	283	NR	580	263	NR	710	22	NR	840	0	NR	970	0	NR
455	234	NR	585	266	NR	715	19	NR	845	0	NR	975	0	NR
460	157	NR	590	267	NR	720	16	NR	850	0	NR	980	0	NR
465	134	NR	595	266	NR	725	14	NR	855	0	NR	985	0	NR
470	107	NR	600	268	NR	730	12	NR	860	0	NR	990	0	NR
475	85	NR	605	269	NR	735	10	NR	865	0	NR	995	0	NR
480	85	NR	610	309	NR	740	8	NR	870	0	NR	1000	0	NR
485	96	NR	615	345	NR	745	7	NR	875	0	NR			

REPORT NUMBER: SP3-2508-516-6

Melanopic Flux vs. Wavelength

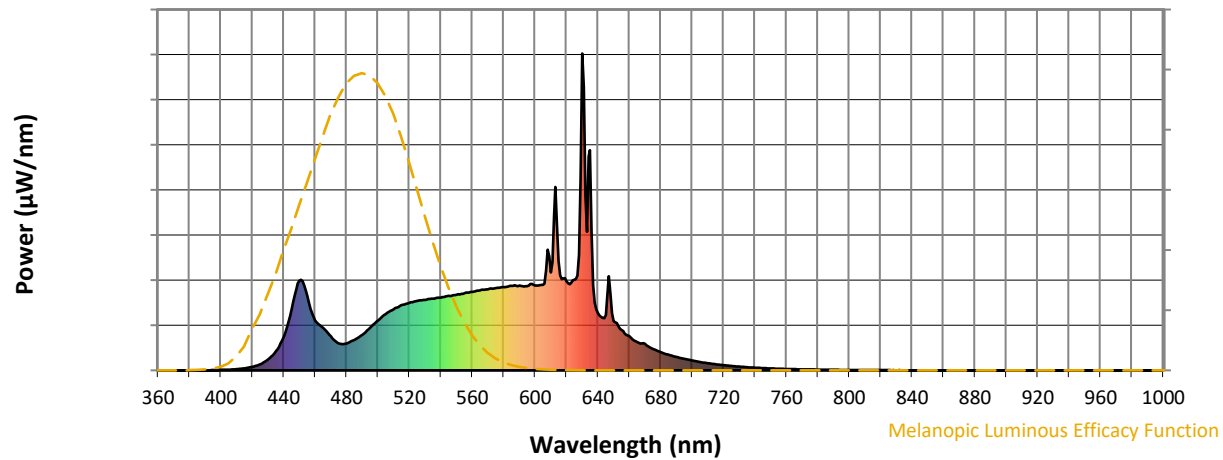

Melanopic Lumens: NR

M/P: 3.24

λ (nm)	Power W ^λ /nm	Lumens (φ/nm)	λ (nm)	Power W ^λ /nm	Lumens (φ/nm)	λ (nm)	Power W ^λ /nm	Lumens (φ/nm)	λ (nm)	Power W ^λ /nm	Lumens (φ/nm)	λ (nm)	Power W ^λ /nm	Lumens (φ/nm)
360	0	NR	490	112	NR	620	281	NR	750	6	NR	880	0	NR
365	0	NR	495	134	NR	625	286	NR	755	5	NR	885	0	NR
370	0	NR	500	157	NR	630	1000	NR	760	4	NR	890	0	NR
375	0	NR	505	178	NR	635	695	NR	765	4	NR	895	0	NR
380	0	NR	510	193	NR	640	181	NR	770	3	NR	900	0	NR
385	0	NR	515	206	NR	645	175	NR	775	3	NR	905	0	NR
390	0	NR	520	213	NR	650	156	NR	780	2	NR	910	0	NR
395	1	NR	525	219	NR	655	127	NR	785	2	NR	915	0	NR
400	2	NR	530	223	NR	660	108	NR	790	2	NR	920	0	NR
405	2	NR	535	226	NR	665	89	NR	795	2	NR	925	0	NR
410	4	NR	540	230	NR	670	84	NR	800	1	NR	930	0	NR
415	6	NR	545	235	NR	675	67	NR	805	1	NR	935	0	NR
420	11	NR	550	239	NR	680	57	NR	810	1	NR	940	0	NR
425	19	NR	555	243	NR	685	50	NR	815	1	NR	945	0	NR
430	34	NR	560	248	NR	690	42	NR	820	1	NR	950	0	NR
435	60	NR	565	253	NR	695	36	NR	825	1	NR	955	0	NR
440	106	NR	570	256	NR	700	31	NR	830	0	NR	960	0	NR
445	193	NR	575	260	NR	705	26	NR	835	0	NR	965	0	NR
450	283	NR	580	263	NR	710	22	NR	840	0	NR	970	0	NR
455	234	NR	585	266	NR	715	19	NR	845	0	NR	975	0	NR
460	157	NR	590	267	NR	720	16	NR	850	0	NR	980	0	NR
465	134	NR	595	266	NR	725	14	NR	855	0	NR	985	0	NR
470	107	NR	600	268	NR	730	12	NR	860	0	NR	990	0	NR
475	85	NR	605	269	NR	735	10	NR	865	0	NR	995	0	NR
480	85	NR	610	309	NR	740	8	NR	870	0	NR	1000	0	NR
485	96	NR	615	345	NR	745	7	NR	875	0	NR			

REPORT NUMBER: SP3-2508-516-6

TM-30-18

Summary

$R_f = 92.6$
 $R_g = 102$
 $\text{CIE } R_a = 96.3$
 $R_9 = 78.4$



Color Vector Graphics



Individual Sample Fidelity Index ($R_{f,i}$)

CES01 = 86	CES26 = 94	CES51 = 97	CES76 = 88
CES02 = 63	CES27 = 93	CES52 = 96	CES77 = 88
CES03 = 32	CES28 = 96	CES53 = 95	CES78 = 84
CES04 = 70	CES29 = 95	CES54 = 95	CES79 = 92
CES05 = 50	CES30 = 96	CES55 = 95	CES80 = 92
CES06 = 51	CES31 = 95	CES56 = 98	CES81 = 77
CES07 = 43	CES32 = 87	CES57 = 98	CES82 = 96
CES08 = 42	CES33 = 97	CES58 = 98	CES83 = 95
CES09 = 29	CES34 = 93	CES59 = 100	CES84 = 95
CES10 = 75	CES35 = 96	CES60 = 94	CES85 = 82
CES11 = 58	CES36 = 84	CES61 = 95	CES86 = 84
CES12 = 64	CES37 = 93	CES62 = 90	CES87 = 92
CES13 = 44	CES38 = 91	CES63 = 95	CES88 = 99
CES14 = 74	CES39 = 98	CES64 = 95	CES89 = 86
CES15 = 72	CES40 = 96	CES65 = 92	CES90 = 98
CES16 = 48	CES41 = 97	CES66 = 93	CES91 = 77
CES17 = 49	CES42 = 90	CES67 = 92	CES92 = 81
CES18 = 56	CES43 = 91	CES68 = 91	CES93 = 88
CES19 = 71	CES44 = 99	CES69 = 92	CES94 = 78
CES20 = 67	CES45 = 94	CES70 = 89	CES95 = 86
CES21 = 86	CES46 = 95	CES71 = 85	CES96 = 93
CES22 = 78	CES47 = 90	CES72 = 95	CES97 = 93
CES23 = 91	CES48 = 96	CES73 = 84	CES98 = 96
CES24 = 90	CES49 = 93	CES74 = 91	CES99 = 97
CES25 = 71	CES50 = 97	CES75 = 86	



Color Rendition by Hue-Angle Bin


Measure Comparisons



(END OF REPORT)