

Cooper Lighting Solutions Photometric Lab  
1121 Highway 74 South  
Peachtree City, GA 30269



Scaled data based on original data using  
LM-79-2019 Approved Method: Electrical and Photometric Measurements of Solid-  
State Lighting Products

Test Report Prepared for  
Cooper Lighting Solutions

Brand: METALUX

Report Number: P982736

Luminaire Tested: 22CZ-LD5-44-UNV-L935-HRP-CD1-U

Issue Date: 04/23/2025

**Test Information**

Test Method: LM-79-2019  
Report Number: P982736  
Test Lab: INNOVATION CENTER(P3)  
Issue Date: 04/23/2025  
Manufacturer: COOPER LIGHTING SOLUTIONS  
Product Line: METALUX  
Catalog Number: 22CZ-LD5-44-UNV-L935-HRP-CD1-U  
Description: METALUX CRUZE 2x2 4400LM PACKAGE 90CRI 3500K TROFFER LENS WITH HRP FILM INSERT  
Light Source: 3500K CCT, 90 CRI LEDS  
Ballast/Driver: -

**Summary**


Lumens per Lamp: N/A  
Luminaire Lumens: 3384.9 lumens  
Efficiency: N/A  
Efficacy: 103.2 lumens/watt  
Spacing Criteria (0/90/45): 1.24 / 1.3 / 1.4  
Luminous Opening: Rectangular (W 2' x L: 2' x H: 0')  
CIE Type: Direct

Input Watts (W): 32.8  
Input Voltage (V): 120  
Input Current (Ain): NR  
Voltage Rise (V): NR  
Power Factor: NR  
Total Harmonic Distortion (THDi): NR  
Frequency (hertz): 60  
Stabilization Time: NR  
Operation Time: NR  
Ambient Temperature (°C): NR  
Test Distance: 28.75 FT

TEST NUMBER: P982736

CATALOG NUMBER: 22CZ-LD5-44-UNV-L935-HRP-CD1-U

### Luminous Intensity Polar Plot

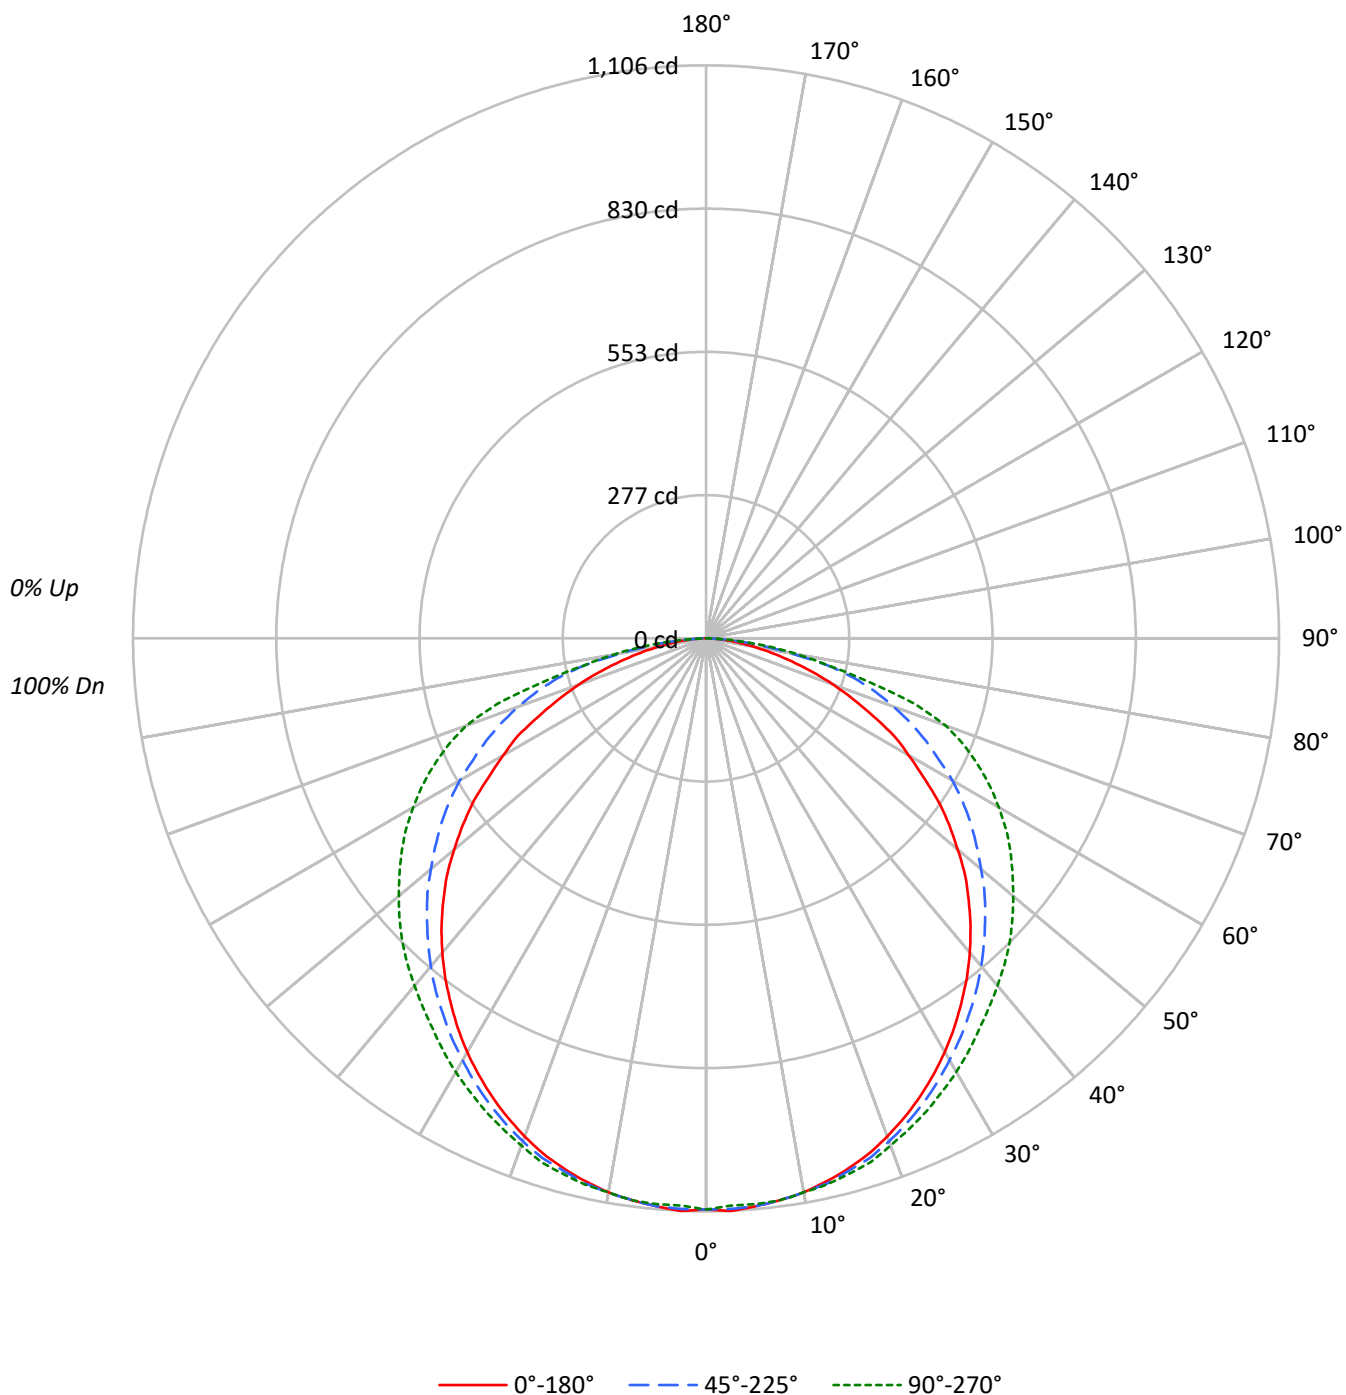

TEST NUMBER: P982736

CATALOG NUMBER: 22CZ-LD5-44-UNV-L935-HRP-CD1-U

**COEFFICIENT OF UTILIZATION - ZONAL CAVITY METHOD:**

|     |     |     |     |     |     |     |     |     |     |     |     |  |     |     |     |  |     |     |     |     |
|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|--|-----|-----|-----|--|-----|-----|-----|-----|
| RF  | 20  |     |     |     | 20  |     |     |     | 20  |     |     |  | 20  |     |     |  | 20  |     |     |     |
| RC  | 80  |     |     |     | 70  |     |     |     | 50  |     |     |  | 30  |     |     |  | 10  |     |     | 0   |
| RW  | 70  | 50  | 30  | 10  | 70  | 50  | 30  | 10  | 50  | 30  | 10  |  | 50  | 30  | 10  |  | 50  | 30  | 10  | 0   |
| RCR |     |     |     |     |     |     |     |     |     |     |     |  |     |     |     |  |     |     |     |     |
| 0   | 119 | 119 | 119 | 119 | 116 | 116 | 116 | 116 | 111 | 111 | 111 |  | 106 | 106 | 106 |  | 102 | 102 | 102 | 100 |
| 1   | 108 | 103 | 99  | 95  | 105 | 101 | 97  | 93  | 97  | 93  | 90  |  | 93  | 90  | 87  |  | 89  | 87  | 85  | 83  |
| 2   | 98  | 89  | 82  | 76  | 95  | 87  | 81  | 75  | 84  | 78  | 73  |  | 80  | 76  | 72  |  | 77  | 74  | 70  | 68  |
| 3   | 89  | 78  | 69  | 63  | 86  | 76  | 68  | 62  | 73  | 67  | 61  |  | 71  | 65  | 60  |  | 68  | 63  | 59  | 57  |
| 4   | 81  | 69  | 60  | 53  | 79  | 67  | 59  | 52  | 65  | 57  | 52  |  | 63  | 56  | 51  |  | 60  | 55  | 50  | 48  |
| 5   | 75  | 61  | 52  | 45  | 72  | 60  | 51  | 45  | 58  | 50  | 44  |  | 56  | 49  | 44  |  | 54  | 48  | 43  | 41  |
| 6   | 69  | 55  | 46  | 39  | 67  | 54  | 45  | 39  | 52  | 44  | 39  |  | 50  | 44  | 38  |  | 49  | 43  | 38  | 36  |
| 7   | 64  | 50  | 41  | 34  | 62  | 49  | 40  | 34  | 47  | 40  | 34  |  | 46  | 39  | 34  |  | 45  | 38  | 34  | 32  |
| 8   | 59  | 45  | 37  | 31  | 58  | 45  | 36  | 31  | 43  | 36  | 30  |  | 42  | 35  | 30  |  | 41  | 35  | 30  | 28  |
| 9   | 55  | 42  | 33  | 28  | 54  | 41  | 33  | 27  | 40  | 32  | 27  |  | 39  | 32  | 27  |  | 38  | 32  | 27  | 25  |
| 10  | 52  | 38  | 30  | 25  | 50  | 38  | 30  | 25  | 37  | 30  | 25  |  | 36  | 29  | 25  |  | 35  | 29  | 24  | 23  |

**AVERAGE LUMINANCE (cd/sqm):**

|     | 0°   | 45°  | 90°  |
|-----|------|------|------|
| 0°  | 2966 | 2966 | 2966 |
| 5°  | 2972 | 2972 | 2961 |
| 10° | 2967 | 2967 | 2967 |
| 15° | 2952 | 2963 | 2980 |
| 20° | 2930 | 2959 | 2983 |
| 25° | 2900 | 2942 | 2990 |
| 30° | 2865 | 2921 | 3003 |
| 35° | 2822 | 2909 | 3022 |
| 40° | 2783 | 2904 | 3074 |
| 45° | 2729 | 2900 | 3154 |
| 50° | 2655 | 2901 | 3240 |
| 55° | 2567 | 2928 | 3365 |
| 60° | 2432 | 2955 | 3511 |
| 65° | 2271 | 2981 | 3689 |
| 70° | 2057 | 3028 | 3874 |
| 75° | 1769 | 3075 | 3393 |
| 80° | 1443 | 2574 | 2796 |
| 85° | 1192 | 1877 | 2066 |

**MAXIMUM LUMINANCE 45°-90°:**

Horizontal Angle: 90°

Vertical Angle: 70°

Luminance: 3874 cd/sqm

TEST NUMBER: P982736

CATALOG NUMBER: 22CZ-LD5-44-UNV-L935-HRP-CD1-U

**ZONAL LUMENS:**

| Zone      | Lumens | % Fixture |
|-----------|--------|-----------|
| 0°-10°    | 104.5  | 3.1       |
| 10°-20°   | 300.5  | 8.9       |
| 20°-30°   | 456.8  | 13.5      |
| 30°-40°   | 555.9  | 16.4      |
| 40°-50°   | 592.1  | 17.5      |
| 50°-60°   | 560.1  | 16.5      |
| 60°-70°   | 461.7  | 13.6      |
| 70°-80°   | 283.9  | 8.4       |
| 80°-90°   | 69.3   | 2.0       |
| 90°-100°  | 0.0    | 0.0       |
| 100°-110° | 0.0    | 0.0       |
| 110°-120° | 0.0    | 0.0       |
| 120°-130° | 0.0    | 0.0       |
| 130°-140° | 0.0    | 0.0       |
| 140°-150° | 0.0    | 0.0       |
| 150°-160° | 0.0    | 0.0       |
| 160°-170° | 0.0    | 0.0       |
| 170°-180° | 0.0    | 0.0       |
| 0°-30°    | 861.8  | 25.5      |
| 0°-40°    | 1417.7 | 41.9      |
| 0°-60°    | 2570.0 | 75.9      |
| 0°-90°    | 3384.9 | 100.0     |
| 90°-120°  | 0.0    | 0.0       |
| 90°-150°  | 0.0    | 0.0       |
| 90°-180°  | 0.0    | 0.0       |
| 0°-180°   | 3384.9 | 100.0     |

**CANDELA DISTRIBUTION:**

|     | 0°   | 22.5° | 45°  | 67.5° | 90°  | Flux |
|-----|------|-------|------|-------|------|------|
| 0°  | 1102 | 1102  | 1102 | 1102  | 1102 |      |
| 5°  | 1100 | 1100  | 1100 | 1098  | 1096 | 105  |
| 15° | 1060 | 1062  | 1064 | 1068  | 1070 | 299  |
| 25° | 977  | 981   | 991  | 1001  | 1007 | 450  |
| 35° | 859  | 867   | 886  | 908   | 920  | 538  |
| 45° | 717  | 729   | 762  | 804   | 829  | 553  |
| 55° | 547  | 567   | 624  | 685   | 717  | 487  |
| 65° | 357  | 391   | 468  | 543   | 579  | 354  |
| 75° | 170  | 217   | 296  | 322   | 326  | 182  |
| 85° | 39   | 51    | 61   | 65    | 67   | 45   |
| 90° | 0    | 0     | 0    | 0     | 0    |      |

TEST NUMBER: P982736

CATALOG NUMBER: 22CZ-LD5-44-UNV-L935-HRP-CD1-U

**CANDELA DISTRIBUTION (FULL):**

|       | 0°     | 22.5°  | 45°    | 67.5°  | 90°    |
|-------|--------|--------|--------|--------|--------|
| 0°    | 1102.3 | 1102.3 | 1102.3 | 1102.3 | 1102.3 |
| 2.5°  | 1106.3 | 1104.3 | 1102.3 | 1098.2 | 1096.0 |
| 5°    | 1100.3 | 1100.3 | 1100.3 | 1098.2 | 1096.0 |
| 7.5°  | 1094.0 | 1094.0 | 1094.0 | 1094.0 | 1094.0 |
| 10°   | 1085.9 | 1085.9 | 1085.9 | 1085.9 | 1085.9 |
| 12.5° | 1073.8 | 1075.8 | 1077.8 | 1077.8 | 1079.9 |
| 15°   | 1059.7 | 1061.7 | 1063.7 | 1067.7 | 1069.8 |
| 17.5° | 1043.5 | 1045.5 | 1051.6 | 1055.6 | 1059.7 |
| 20°   | 1023.1 | 1025.1 | 1033.4 | 1037.4 | 1041.5 |
| 22.5° | 1000.9 | 1004.9 | 1013.0 | 1021.1 | 1025.1 |
| 25°   | 976.6  | 980.7  | 990.8  | 1000.9 | 1006.9 |
| 27.5° | 950.2  | 954.2  | 966.5  | 980.7  | 986.7  |
| 30°   | 921.9  | 925.9  | 940.1  | 956.4  | 966.5  |
| 32.5° | 891.6  | 897.6  | 913.8  | 934.0  | 944.1  |
| 35°   | 859.0  | 867.1  | 885.5  | 907.7  | 919.9  |
| 37.5° | 826.7  | 834.8  | 857.0  | 883.3  | 897.6  |
| 40°   | 792.2  | 802.3  | 826.7  | 857.0  | 875.2  |
| 42.5° | 755.8  | 767.9  | 794.2  | 830.8  | 853.0  |
| 45°   | 717.2  | 729.3  | 761.9  | 804.3  | 828.7  |
| 47.5° | 678.8  | 693.0  | 729.3  | 776.0  | 802.3  |
| 50°   | 634.2  | 650.3  | 693.0  | 747.7  | 774.0  |
| 52.5° | 591.6  | 611.9  | 658.4  | 717.2  | 745.7  |
| 55°   | 547.1  | 567.3  | 624.1  | 684.9  | 717.2  |
| 57.5° | 496.4  | 520.6  | 587.5  | 652.4  | 686.9  |
| 60°   | 451.8  | 476.2  | 549.1  | 618.0  | 652.4  |
| 62.5° | 411.3  | 433.6  | 506.5  | 581.5  | 618.0  |
| 65°   | 356.6  | 391.1  | 468.1  | 543.1  | 579.4  |
| 67.5° | 307.9  | 346.5  | 427.5  | 498.4  | 539.0  |
| 70°   | 261.4  | 301.8  | 384.9  | 453.8  | 492.4  |
| 72.5° | 214.8  | 259.4  | 342.4  | 403.3  | 423.5  |
| 75°   | 170.1  | 216.8  | 295.8  | 322.2  | 326.3  |
| 77.5° | 129.7  | 176.2  | 239.0  | 237.0  | 241.0  |
| 80°   | 93.1   | 133.7  | 166.1  | 172.1  | 180.4  |
| 82.5° | 62.8   | 93.1   | 107.5  | 117.6  | 125.7  |
| 85°   | 38.6   | 50.7   | 60.8   | 64.9   | 66.9   |
| 87.5° | 18.2   | 20.2   | 20.2   | 16.2   | 16.2   |
| 90°   | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    |

LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-  
State Lighting Products

Report Prepared for

Cooper Lighting Solutions

Metalux

Report Number: SP3-2508-516-6

Test Date: 09/03/2025

Luminaire Tested: 24CZ-LD5-65-S-UNV-L935-CD1-U

Data in this report applies to families of products including 24CZ-LD5-65-S-UNV-L935-CD1-U

### Test Information

Test Method: LM-79-2019  
 Report Number: SP3-2508-516-6  
 Test Lab: COOPER LIGHTING SOLUTIONS  
 Photometer: SP3 - 3M SPHERE  
 Measurement Geometry:  $4\pi$   
 Issue Date: 09/05/2025  
 Manufacturer: COOPER LIGHTING SOLUTIONS  
 Product Line: Metalux  
 Catalog Number: **24CZ-LD5-65-S-UNV-L935-CD1-U**  
 Description: 2X4 CRUZE SB 6500LM 935 SMOOTH LENS

### Spectral Parameters

CCT (K): 3412  
 CIE  $u'$ : 0.2386  
 CIE  $v'$ : 0.5111  
 Duv: -0.0015  
 CIE x: 0.4087  
 CIE y: 0.3890  
 CIE z: 0.2023  
 Peak Wavelength (nm): 630  
 Dominant Wavelength (nm): 581  
 Purity: 39.41044  
 R<sub>f</sub>: 92.6  
 R<sub>g</sub>: 102

CRI (Ra): 96.3  
 R1: 99.2  
 R2: 97.9  
 R3: 94.7  
 R4: 96.6  
 R5: 98.4  
 R6: 96.1  
 R7: 95.6  
 R8: 92.0  
 R9: 78.4  
 R10: 93.0  
 R11: 94.5  
 R12: 81.5  
 R13: 99.0  
 R14: 95.8  
 R15: 96.7



### Test Conditions

Stabilization Time: 20M  
 Operation Time: 1H 20M  
 Sphere Temperature (°C): 25.0

REPORT NUMBER: SP3-2508-516-6

| Measurement and Test Equipment |                       |                  |                      |
|--------------------------------|-----------------------|------------------|----------------------|
| Instrument                     | Identification Number | Calibration Date | Calibration Due Date |
| Photometer                     | 3M SPHERE IN02505     | 7/1/2025         | 1/1/2026             |
| Power Meter                    | XITRON INXT2011006    | 1/20/2025        | 1/20/2026            |
| AC Power Source                | CHROMA 61604 IN6064A  | 10/22/2024       | 10/22/2025           |
| DC Power Source                | EYSIGHT N5770A IN0534 | 10/22/2024       | 10/22/2025           |
| Sphere Thermometer             | TANDD IN4036E         | 10/22/2024       | 10/22/2025           |
|                                |                       |                  |                      |

REPORT NUMBER: SP3-2508-516-6

**CIE 1931 Chromaticity Diagram**



**CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles**



Point lies inside the ANSI 3500K 4-step quadrangle

REPORT NUMBER: SP3-2508-516-6

### Photopic Flux vs. Wavelength



### Photopic Lumens: NR

| $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) |
|-------------------|----------------------------------------|--------------------------------|-------------------|----------------------------------------|--------------------------------|-------------------|----------------------------------------|--------------------------------|-------------------|----------------------------------------|--------------------------------|-------------------|----------------------------------------|--------------------------------|
| 360               | 0                                      | NR                             | 490               | 112                                    | NR                             | 620               | 281                                    | NR                             | 750               | 6                                      | NR                             | 880               | 0                                      | NR                             |
| 365               | 0                                      | NR                             | 495               | 134                                    | NR                             | 625               | 286                                    | NR                             | 755               | 5                                      | NR                             | 885               | 0                                      | NR                             |
| 370               | 0                                      | NR                             | 500               | 157                                    | NR                             | 630               | 1000                                   | NR                             | 760               | 4                                      | NR                             | 890               | 0                                      | NR                             |
| 375               | 0                                      | NR                             | 505               | 178                                    | NR                             | 635               | 695                                    | NR                             | 765               | 4                                      | NR                             | 895               | 0                                      | NR                             |
| 380               | 0                                      | NR                             | 510               | 193                                    | NR                             | 640               | 181                                    | NR                             | 770               | 3                                      | NR                             | 900               | 0                                      | NR                             |
| 385               | 0                                      | NR                             | 515               | 206                                    | NR                             | 645               | 175                                    | NR                             | 775               | 3                                      | NR                             | 905               | 0                                      | NR                             |
| 390               | 0                                      | NR                             | 520               | 213                                    | NR                             | 650               | 156                                    | NR                             | 780               | 2                                      | NR                             | 910               | 0                                      | NR                             |
| 395               | 1                                      | NR                             | 525               | 219                                    | NR                             | 655               | 127                                    | NR                             | 785               | 2                                      | NR                             | 915               | 0                                      | NR                             |
| 400               | 2                                      | NR                             | 530               | 223                                    | NR                             | 660               | 108                                    | NR                             | 790               | 2                                      | NR                             | 920               | 0                                      | NR                             |
| 405               | 2                                      | NR                             | 535               | 226                                    | NR                             | 665               | 89                                     | NR                             | 795               | 2                                      | NR                             | 925               | 0                                      | NR                             |
| 410               | 4                                      | NR                             | 540               | 230                                    | NR                             | 670               | 84                                     | NR                             | 800               | 1                                      | NR                             | 930               | 0                                      | NR                             |
| 415               | 6                                      | NR                             | 545               | 235                                    | NR                             | 675               | 67                                     | NR                             | 805               | 1                                      | NR                             | 935               | 0                                      | NR                             |
| 420               | 11                                     | NR                             | 550               | 239                                    | NR                             | 680               | 57                                     | NR                             | 810               | 1                                      | NR                             | 940               | 0                                      | NR                             |
| 425               | 19                                     | NR                             | 555               | 243                                    | NR                             | 685               | 50                                     | NR                             | 815               | 1                                      | NR                             | 945               | 0                                      | NR                             |
| 430               | 34                                     | NR                             | 560               | 248                                    | NR                             | 690               | 42                                     | NR                             | 820               | 1                                      | NR                             | 950               | 0                                      | NR                             |
| 435               | 60                                     | NR                             | 565               | 253                                    | NR                             | 695               | 36                                     | NR                             | 825               | 1                                      | NR                             | 955               | 0                                      | NR                             |
| 440               | 106                                    | NR                             | 570               | 256                                    | NR                             | 700               | 31                                     | NR                             | 830               | 0                                      | NR                             | 960               | 0                                      | NR                             |
| 445               | 193                                    | NR                             | 575               | 260                                    | NR                             | 705               | 26                                     | NR                             | 835               | 0                                      | NR                             | 965               | 0                                      | NR                             |
| 450               | 283                                    | NR                             | 580               | 263                                    | NR                             | 710               | 22                                     | NR                             | 840               | 0                                      | NR                             | 970               | 0                                      | NR                             |
| 455               | 234                                    | NR                             | 585               | 266                                    | NR                             | 715               | 19                                     | NR                             | 845               | 0                                      | NR                             | 975               | 0                                      | NR                             |
| 460               | 157                                    | NR                             | 590               | 267                                    | NR                             | 720               | 16                                     | NR                             | 850               | 0                                      | NR                             | 980               | 0                                      | NR                             |
| 465               | 134                                    | NR                             | 595               | 266                                    | NR                             | 725               | 14                                     | NR                             | 855               | 0                                      | NR                             | 985               | 0                                      | NR                             |
| 470               | 107                                    | NR                             | 600               | 268                                    | NR                             | 730               | 12                                     | NR                             | 860               | 0                                      | NR                             | 990               | 0                                      | NR                             |
| 475               | 85                                     | NR                             | 605               | 269                                    | NR                             | 735               | 10                                     | NR                             | 865               | 0                                      | NR                             | 995               | 0                                      | NR                             |
| 480               | 85                                     | NR                             | 610               | 309                                    | NR                             | 740               | 8                                      | NR                             | 870               | 0                                      | NR                             | 1000              | 0                                      | NR                             |
| 485               | 96                                     | NR                             | 615               | 345                                    | NR                             | 745               | 7                                      | NR                             | 875               | 0                                      | NR                             |                   |                                        |                                |

REPORT NUMBER: SP3-2508-516-6

### Scotopic Flux vs. Wavelength



Scotopic Lumens: NR

S/P: 1.61

| λ<br>(nm) | Power<br>W <sup>^</sup> /nm | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>W <sup>^</sup> /nm | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>W <sup>^</sup> /nm | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>W <sup>^</sup> /nm | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>W <sup>^</sup> /nm | Lumens<br>(φ/nm) |
|-----------|-----------------------------|------------------|-----------|-----------------------------|------------------|-----------|-----------------------------|------------------|-----------|-----------------------------|------------------|-----------|-----------------------------|------------------|
| 360       | 0                           | NR               | 490       | 112                         | NR               | 620       | 281                         | NR               | 750       | 6                           | NR               | 880       | 0                           | NR               |
| 365       | 0                           | NR               | 495       | 134                         | NR               | 625       | 286                         | NR               | 755       | 5                           | NR               | 885       | 0                           | NR               |
| 370       | 0                           | NR               | 500       | 157                         | NR               | 630       | 1000                        | NR               | 760       | 4                           | NR               | 890       | 0                           | NR               |
| 375       | 0                           | NR               | 505       | 178                         | NR               | 635       | 695                         | NR               | 765       | 4                           | NR               | 895       | 0                           | NR               |
| 380       | 0                           | NR               | 510       | 193                         | NR               | 640       | 181                         | NR               | 770       | 3                           | NR               | 900       | 0                           | NR               |
| 385       | 0                           | NR               | 515       | 206                         | NR               | 645       | 175                         | NR               | 775       | 3                           | NR               | 905       | 0                           | NR               |
| 390       | 0                           | NR               | 520       | 213                         | NR               | 650       | 156                         | NR               | 780       | 2                           | NR               | 910       | 0                           | NR               |
| 395       | 1                           | NR               | 525       | 219                         | NR               | 655       | 127                         | NR               | 785       | 2                           | NR               | 915       | 0                           | NR               |
| 400       | 2                           | NR               | 530       | 223                         | NR               | 660       | 108                         | NR               | 790       | 2                           | NR               | 920       | 0                           | NR               |
| 405       | 2                           | NR               | 535       | 226                         | NR               | 665       | 89                          | NR               | 795       | 2                           | NR               | 925       | 0                           | NR               |
| 410       | 4                           | NR               | 540       | 230                         | NR               | 670       | 84                          | NR               | 800       | 1                           | NR               | 930       | 0                           | NR               |
| 415       | 6                           | NR               | 545       | 235                         | NR               | 675       | 67                          | NR               | 805       | 1                           | NR               | 935       | 0                           | NR               |
| 420       | 11                          | NR               | 550       | 239                         | NR               | 680       | 57                          | NR               | 810       | 1                           | NR               | 940       | 0                           | NR               |
| 425       | 19                          | NR               | 555       | 243                         | NR               | 685       | 50                          | NR               | 815       | 1                           | NR               | 945       | 0                           | NR               |
| 430       | 34                          | NR               | 560       | 248                         | NR               | 690       | 42                          | NR               | 820       | 1                           | NR               | 950       | 0                           | NR               |
| 435       | 60                          | NR               | 565       | 253                         | NR               | 695       | 36                          | NR               | 825       | 1                           | NR               | 955       | 0                           | NR               |
| 440       | 106                         | NR               | 570       | 256                         | NR               | 700       | 31                          | NR               | 830       | 0                           | NR               | 960       | 0                           | NR               |
| 445       | 193                         | NR               | 575       | 260                         | NR               | 705       | 26                          | NR               | 835       | 0                           | NR               | 965       | 0                           | NR               |
| 450       | 283                         | NR               | 580       | 263                         | NR               | 710       | 22                          | NR               | 840       | 0                           | NR               | 970       | 0                           | NR               |
| 455       | 234                         | NR               | 585       | 266                         | NR               | 715       | 19                          | NR               | 845       | 0                           | NR               | 975       | 0                           | NR               |
| 460       | 157                         | NR               | 590       | 267                         | NR               | 720       | 16                          | NR               | 850       | 0                           | NR               | 980       | 0                           | NR               |
| 465       | 134                         | NR               | 595       | 266                         | NR               | 725       | 14                          | NR               | 855       | 0                           | NR               | 985       | 0                           | NR               |
| 470       | 107                         | NR               | 600       | 268                         | NR               | 730       | 12                          | NR               | 860       | 0                           | NR               | 990       | 0                           | NR               |
| 475       | 85                          | NR               | 605       | 269                         | NR               | 735       | 10                          | NR               | 865       | 0                           | NR               | 995       | 0                           | NR               |
| 480       | 85                          | NR               | 610       | 309                         | NR               | 740       | 8                           | NR               | 870       | 0                           | NR               | 1000      | 0                           | NR               |
| 485       | 96                          | NR               | 615       | 345                         | NR               | 745       | 7                           | NR               | 875       | 0                           | NR               |           |                             |                  |

REPORT NUMBER: SP3-2508-516-6

### Melanopic Flux vs. Wavelength


**Melanopic Lumens: NR**
**M/P: 3.24**

| $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) |
|-------------------|----------------------------------------|--------------------------------|-------------------|----------------------------------------|--------------------------------|-------------------|----------------------------------------|--------------------------------|-------------------|----------------------------------------|--------------------------------|-------------------|----------------------------------------|--------------------------------|
| 360               | 0                                      | NR                             | 490               | 112                                    | NR                             | 620               | 281                                    | NR                             | 750               | 6                                      | NR                             | 880               | 0                                      | NR                             |
| 365               | 0                                      | NR                             | 495               | 134                                    | NR                             | 625               | 286                                    | NR                             | 755               | 5                                      | NR                             | 885               | 0                                      | NR                             |
| 370               | 0                                      | NR                             | 500               | 157                                    | NR                             | 630               | 1000                                   | NR                             | 760               | 4                                      | NR                             | 890               | 0                                      | NR                             |
| 375               | 0                                      | NR                             | 505               | 178                                    | NR                             | 635               | 695                                    | NR                             | 765               | 4                                      | NR                             | 895               | 0                                      | NR                             |
| 380               | 0                                      | NR                             | 510               | 193                                    | NR                             | 640               | 181                                    | NR                             | 770               | 3                                      | NR                             | 900               | 0                                      | NR                             |
| 385               | 0                                      | NR                             | 515               | 206                                    | NR                             | 645               | 175                                    | NR                             | 775               | 3                                      | NR                             | 905               | 0                                      | NR                             |
| 390               | 0                                      | NR                             | 520               | 213                                    | NR                             | 650               | 156                                    | NR                             | 780               | 2                                      | NR                             | 910               | 0                                      | NR                             |
| 395               | 1                                      | NR                             | 525               | 219                                    | NR                             | 655               | 127                                    | NR                             | 785               | 2                                      | NR                             | 915               | 0                                      | NR                             |
| 400               | 2                                      | NR                             | 530               | 223                                    | NR                             | 660               | 108                                    | NR                             | 790               | 2                                      | NR                             | 920               | 0                                      | NR                             |
| 405               | 2                                      | NR                             | 535               | 226                                    | NR                             | 665               | 89                                     | NR                             | 795               | 2                                      | NR                             | 925               | 0                                      | NR                             |
| 410               | 4                                      | NR                             | 540               | 230                                    | NR                             | 670               | 84                                     | NR                             | 800               | 1                                      | NR                             | 930               | 0                                      | NR                             |
| 415               | 6                                      | NR                             | 545               | 235                                    | NR                             | 675               | 67                                     | NR                             | 805               | 1                                      | NR                             | 935               | 0                                      | NR                             |
| 420               | 11                                     | NR                             | 550               | 239                                    | NR                             | 680               | 57                                     | NR                             | 810               | 1                                      | NR                             | 940               | 0                                      | NR                             |
| 425               | 19                                     | NR                             | 555               | 243                                    | NR                             | 685               | 50                                     | NR                             | 815               | 1                                      | NR                             | 945               | 0                                      | NR                             |
| 430               | 34                                     | NR                             | 560               | 248                                    | NR                             | 690               | 42                                     | NR                             | 820               | 1                                      | NR                             | 950               | 0                                      | NR                             |
| 435               | 60                                     | NR                             | 565               | 253                                    | NR                             | 695               | 36                                     | NR                             | 825               | 1                                      | NR                             | 955               | 0                                      | NR                             |
| 440               | 106                                    | NR                             | 570               | 256                                    | NR                             | 700               | 31                                     | NR                             | 830               | 0                                      | NR                             | 960               | 0                                      | NR                             |
| 445               | 193                                    | NR                             | 575               | 260                                    | NR                             | 705               | 26                                     | NR                             | 835               | 0                                      | NR                             | 965               | 0                                      | NR                             |
| 450               | 283                                    | NR                             | 580               | 263                                    | NR                             | 710               | 22                                     | NR                             | 840               | 0                                      | NR                             | 970               | 0                                      | NR                             |
| 455               | 234                                    | NR                             | 585               | 266                                    | NR                             | 715               | 19                                     | NR                             | 845               | 0                                      | NR                             | 975               | 0                                      | NR                             |
| 460               | 157                                    | NR                             | 590               | 267                                    | NR                             | 720               | 16                                     | NR                             | 850               | 0                                      | NR                             | 980               | 0                                      | NR                             |
| 465               | 134                                    | NR                             | 595               | 266                                    | NR                             | 725               | 14                                     | NR                             | 855               | 0                                      | NR                             | 985               | 0                                      | NR                             |
| 470               | 107                                    | NR                             | 600               | 268                                    | NR                             | 730               | 12                                     | NR                             | 860               | 0                                      | NR                             | 990               | 0                                      | NR                             |
| 475               | 85                                     | NR                             | 605               | 269                                    | NR                             | 735               | 10                                     | NR                             | 865               | 0                                      | NR                             | 995               | 0                                      | NR                             |
| 480               | 85                                     | NR                             | 610               | 309                                    | NR                             | 740               | 8                                      | NR                             | 870               | 0                                      | NR                             | 1000              | 0                                      | NR                             |
| 485               | 96                                     | NR                             | 615               | 345                                    | NR                             | 745               | 7                                      | NR                             | 875               | 0                                      | NR                             |                   |                                        |                                |

REPORT NUMBER: SP3-2508-516-6

TM-30-18

### Summary

$R_f = 92.6$   
 $R_g = 102$   
 $\text{CIE } R_a = 96.3$   
 $R_9 = 78.4$



### Color Vector Graphics



**Individual Sample Fidelity Index ( $R_{f,i}$ )**

|            |            |             |            |
|------------|------------|-------------|------------|
| CES01 = 86 | CES26 = 94 | CES51 = 97  | CES76 = 88 |
| CES02 = 63 | CES27 = 93 | CES52 = 96  | CES77 = 88 |
| CES03 = 32 | CES28 = 96 | CES53 = 95  | CES78 = 84 |
| CES04 = 70 | CES29 = 95 | CES54 = 95  | CES79 = 92 |
| CES05 = 50 | CES30 = 96 | CES55 = 95  | CES80 = 92 |
| CES06 = 51 | CES31 = 95 | CES56 = 98  | CES81 = 77 |
| CES07 = 43 | CES32 = 87 | CES57 = 98  | CES82 = 96 |
| CES08 = 42 | CES33 = 97 | CES58 = 98  | CES83 = 95 |
| CES09 = 29 | CES34 = 93 | CES59 = 100 | CES84 = 95 |
| CES10 = 75 | CES35 = 96 | CES60 = 94  | CES85 = 82 |
| CES11 = 58 | CES36 = 84 | CES61 = 95  | CES86 = 84 |
| CES12 = 64 | CES37 = 93 | CES62 = 90  | CES87 = 92 |
| CES13 = 44 | CES38 = 91 | CES63 = 95  | CES88 = 99 |
| CES14 = 74 | CES39 = 98 | CES64 = 95  | CES89 = 86 |
| CES15 = 72 | CES40 = 96 | CES65 = 92  | CES90 = 98 |
| CES16 = 48 | CES41 = 97 | CES66 = 93  | CES91 = 77 |
| CES17 = 49 | CES42 = 90 | CES67 = 92  | CES92 = 81 |
| CES18 = 56 | CES43 = 91 | CES68 = 91  | CES93 = 88 |
| CES19 = 71 | CES44 = 99 | CES69 = 92  | CES94 = 78 |
| CES20 = 67 | CES45 = 94 | CES70 = 89  | CES95 = 86 |
| CES21 = 86 | CES46 = 95 | CES71 = 85  | CES96 = 93 |
| CES22 = 78 | CES47 = 90 | CES72 = 95  | CES97 = 93 |
| CES23 = 91 | CES48 = 96 | CES73 = 84  | CES98 = 96 |
| CES24 = 90 | CES49 = 93 | CES74 = 91  | CES99 = 97 |
| CES25 = 71 | CES50 = 97 | CES75 = 86  |            |



Color Rendition by Hue-Angle Bin



**Measure Comparisons**



(END OF REPORT)