

Cooper Lighting Solutions Photometric Lab
1121 Highway 74 South
Peachtree City, GA 30269



Scaled data based on original data using
LM-79-2019 Approved Method: Electrical and Photometric Measurements of Solid-
State Lighting Products

Test Report Prepared for
Cooper Lighting Solutions

Brand: METALUX

Report Number: P983138

Luminaire Tested: 24CZ-LD5-35-UNV-L830-SQP-CD1-U

Issue Date: 04/23/2025

Test Information

Test Method: LM-79-2019
Report Number: P983138
Test Lab: INNOVATION CENTER(P3)
Issue Date: 04/23/2025
Manufacturer: COOPER LIGHTING SOLUTIONS
Product Line: METALUX
Catalog Number: 24CZ-LD5-35-UNV-L830-SQP-CD1-U
Description: METALUX CRUZE 2x4 3500LM PACKAGE 80CRI 3000K TROFFER LENS WITH SQUARE PATTERN
Light Source: 3000K CCT, 80 CRI LEDS
Ballast/Driver: -

Summary


Lumens per Lamp: N/A
Luminaire Lumens: 2639.0 lumens
Efficiency: N/A
Efficacy: 97.7 lumens/watt
Spacing Criteria (0/90/45): 1.25 / 1.31 / 1.41
Luminous Opening: Rectangular (W 2' x L: 4' x H: 0')
CIE Type: Direct

Input Watts (W): 27
Input Voltage (V): 120
Input Current (Ain): NR
Voltage Rise (V): NR
Power Factor: NR
Total Harmonic Distortion (THDi): NR
Frequency (hertz): 60
Stabilization Time: NR
Operation Time: NR
Ambient Temperature (°C): NR
Test Distance: 28.75 FT

TEST NUMBER: P983138

CATALOG NUMBER: 24CZ-LD5-35-UNV-L830-SQP-CD1-U

Luminous Intensity Polar Plot

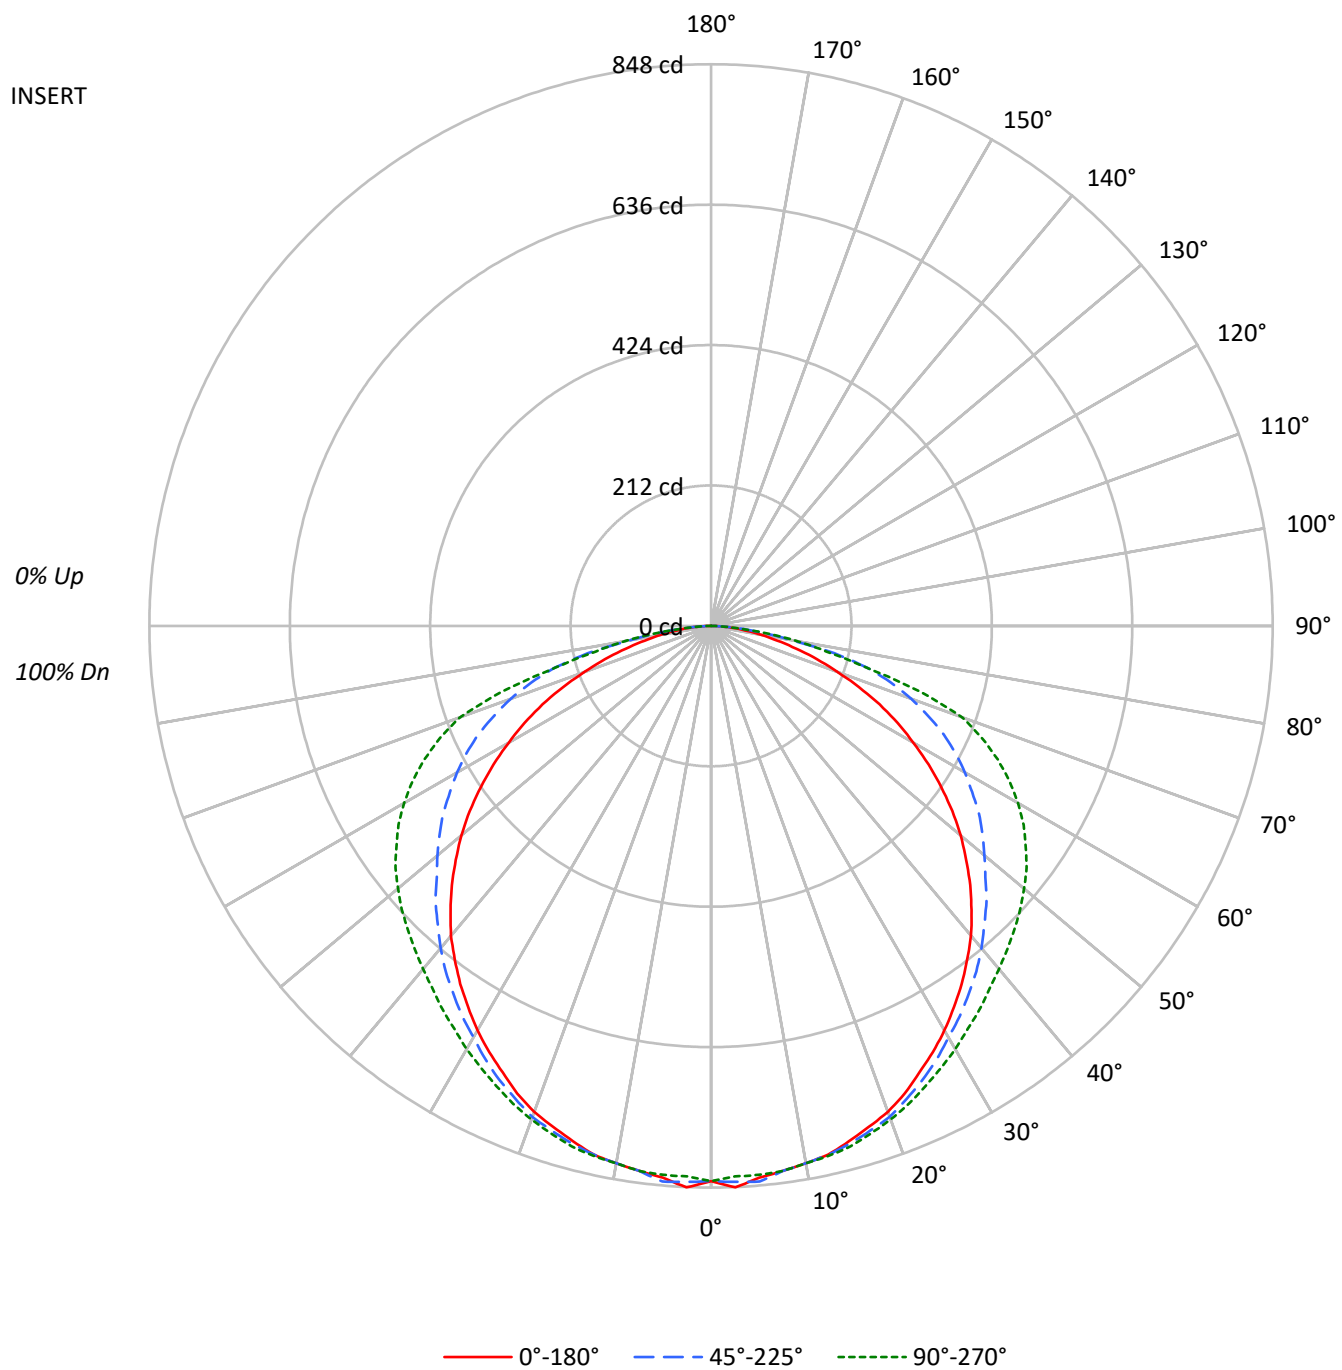

TEST NUMBER: P983138

CATALOG NUMBER: 24CZ-LD5-35-UNV-L830-SQP-CD1-U

COEFFICIENT OF UTILIZATION - ZONAL CAVITY METHOD:

RF	20				20				20				20				20
RC	80				70				50				30				10
RW	70	50	30	10	70	50	30	10	50	30	10	50	30	10	50	30	10
RCR																	
0	119	119	119	119	116	116	116	116	111	111	111	106	106	106	102	102	102
1	108	103	99	95	105	101	97	93	97	93	90	93	90	87	89	87	85
2	98	89	82	76	95	87	81	75	84	78	73	80	76	71	77	73	70
3	89	78	69	62	86	76	68	62	73	66	61	70	64	59	68	63	58
4	81	68	59	52	79	67	58	52	64	57	51	62	56	50	60	54	50
5	74	61	52	45	72	60	51	44	58	50	44	56	49	43	54	48	43
6	68	55	45	39	66	54	45	39	52	44	38	50	43	38	48	42	37
7	63	49	40	34	62	49	40	34	47	39	34	45	39	33	44	38	33
8	59	45	36	30	57	44	36	30	43	35	30	42	35	30	40	34	29
9	55	41	33	27	54	41	33	27	39	32	27	38	32	27	37	31	27
10	51	38	30	24	50	37	30	24	36	29	24	35	29	24	35	28	24

AVERAGE LUMINANCE (cd/sqm):

	0°	45°	90°
0°	1128	1128	1128
5°	1129	1138	1124
10°	1126	1126	1126
15°	1122	1128	1133
20°	1118	1130	1136
25°	1104	1123	1138
30°	1095	1114	1146
35°	1084	1114	1161
40°	1073	1116	1188
45°	1053	1119	1232
50°	1029	1128	1291
55°	995	1159	1361
60°	949	1191	1439
65°	894	1233	1520
70°	798	1266	1588
75°	692	1268	1257
80°	587	937	1017
85°	506	633	570

MAXIMUM LUMINANCE 45°-90°:

Horizontal Angle: 90°

Vertical Angle: 70°

Luminance: 1588 cd/sqm

TEST NUMBER: P983138

CATALOG NUMBER: 24CZ-LD5-35-UNV-L830-SQP-CD1-U

ZONAL LUMENS:

Zone	Lumens	% Fixture
0°-10°	79.6	3.0
10°-20°	228.5	8.7
20°-30°	348.3	13.2
30°-40°	426.2	16.1
40°-50°	458.5	17.4
50°-60°	444.2	16.8
60°-70°	376.3	14.3
70°-80°	227.4	8.6
80°-90°	50.0	1.9
90°-100°	0.0	0.0
100°-110°	0.0	0.0
110°-120°	0.0	0.0
120°-130°	0.0	0.0
130°-140°	0.0	0.0
140°-150°	0.0	0.0
150°-160°	0.0	0.0
160°-170°	0.0	0.0
170°-180°	0.0	0.0
0°-30°	656.4	24.9
0°-40°	1082.6	41.0
0°-60°	1985.3	75.2
0°-90°	2639.0	100.0
90°-120°	0.0	0.0
90°-150°	0.0	0.0
90°-180°	0.0	0.0
0°-180°	2639.0	100.0

CANDELA DISTRIBUTION:

	0°	22.5°	45°	67.5°	90°	Flux
0°	838	838	838	838	838	
5°	836	836	842	838	832	79
15°	805	808	810	812	814	227
25°	744	748	756	762	766	343
35°	660	664	678	697	707	413
45°	553	564	588	625	648	426
55°	424	443	494	551	580	379
65°	281	312	387	449	478	276
75°	133	180	244	248	242	143
85°	33	39	41	39	37	37
90°	0	0	0	0	0	

TEST NUMBER: P983138

CATALOG NUMBER: 24CZ-LD5-35-UNV-L830-SQP-CD1-U

CANDELA DISTRIBUTION (FULL):

	0°	22.5°	45°	67.5°	90°
0°	838.2	838.2	838.2	838.2	838.2
2.5°	848.5	846.4	840.2	836.2	832.0
5°	836.2	836.2	842.3	838.2	832.0
7.5°	830.0	830.0	830.0	840.2	830.0
10°	823.9	825.9	823.9	832.0	823.9
12.5°	817.7	817.7	817.7	819.7	819.7
15°	805.4	807.5	809.5	811.5	813.6
17.5°	793.1	795.2	799.2	801.3	803.4
20°	780.8	782.9	789.0	789.0	793.1
22.5°	764.4	764.4	772.6	774.7	780.8
25°	743.9	748.0	756.2	762.4	766.5
27.5°	725.5	729.6	737.8	746.0	752.1
30°	705.0	709.1	717.3	729.6	737.8
32.5°	682.5	686.5	698.8	713.2	721.4
35°	659.9	664.0	678.3	696.8	707.0
37.5°	635.3	641.5	657.8	678.3	690.6
40°	610.7	616.9	635.3	657.8	676.3
42.5°	582.0	590.2	610.7	641.5	662.0
45°	553.3	563.6	588.2	625.0	647.6
47.5°	522.6	532.8	561.6	608.7	633.3
50°	491.8	504.1	539.0	590.2	616.9
52.5°	459.1	471.3	516.4	571.8	600.5
55°	424.2	442.7	493.9	551.3	580.0
57.5°	389.4	409.9	467.3	528.8	559.5
60°	352.5	377.1	442.7	504.1	534.9
62.5°	317.6	344.3	416.0	477.5	508.3
65°	280.8	311.5	387.4	448.8	477.5
67.5°	241.8	280.8	354.6	414.0	442.7
70°	202.9	248.0	321.8	377.1	403.7
72.5°	168.0	215.2	284.9	332.0	332.0
75°	133.2	180.4	243.9	248.0	241.8
77.5°	102.4	147.6	190.6	174.2	178.3
80°	75.8	112.7	120.9	127.1	131.2
82.5°	51.3	75.8	77.9	82.0	82.0
85°	32.8	39.0	41.0	39.0	36.9
87.5°	14.3	16.4	12.3	8.2	6.2
90°	0.0	0.0	0.0	0.0	0.0

LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-State Lighting Products

Report Prepared for

Cooper Lighting Solutions

Metalux

Report Number: SP3-2508-516-5

Test Date: 09/03/2025

Luminaire Tested: 24CZ-LD5-65-S-UNV-L930-CD1-U

Data in this report applies to families of products including 24CZ-LD5-65-S-UNV-L930-CD1-U

Test Information

Test Method: LM-79-2019
 Report Number: SP3-2508-516-5
 Test Lab: COOPER LIGHTING SOLUTIONS
 Photometer: SP3 - 3M SPHERE
 Measurement Geometry: 4π
 Issue Date: 09/05/2025
 Manufacturer: COOPER LIGHTING SOLUTIONS
 Product Line: Metalux
 Catalog Number: **24CZ-LD5-65-S-UNV-L930-CD1-U**
 Description: 2X4 CRUZE SB 6500LM 930 SMOOTH LENS

Spectral Parameters

CCT (K): 2988
 CIE u' : 0.2517
 CIE v' : 0.5189
 Duv: -0.0019
 CIE x: 0.4350
 CIE y: 0.3986
 CIE z: 0.1665
 Peak Wavelength (nm): 630
 Dominant Wavelength (nm): 583
 Purity: 50.17903
 R_f: 91.6
 R_g: 101.1

CRI (Ra): 94.3
 R1: 96.3
 R2: 97.6
 R3: 97.5
 R4: 95.8
 R5: 96.1
 R6: 96.2
 R7: 91.6
 R8: 83.5
 R9: 61.9
 R10: 93.0
 R11: 96.3
 R12: 85.8
 R13: 96.7
 R14: 97.5
 R15: 91.8



Test Conditions

Stabilization Time: 21M
 Operation Time: 1H 21M
 Sphere Temperature (°C): 25.0

REPORT NUMBER: SP3-2508-516-5

Measurement and Test Equipment			
Instrument	Identification Number	Calibration Date	Calibration Due Date
Photometer	3M SPHERE IN02505	7/1/2025	1/1/2026
Power Meter	XITRON INXT2011006	1/20/2025	1/20/2026
AC Power Source	CHROMA 61604 IN6064A	10/22/2024	10/22/2025
DC Power Source	EYSIGHT N5770A IN0534	10/22/2024	10/22/2025
Sphere Thermometer	TANDD IN4036E	10/22/2024	10/22/2025

REPORT NUMBER: SP3-2508-516-5

CIE 1931 Chromaticity Diagram



CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles



Point lies inside the ANSI 3000K 4-step quadrangle

REPORT NUMBER: SP3-2508-516-5

Photopic Flux vs. Wavelength



Photopic Lumens: NR

λ (nm)	Power W ^λ /nm	Lumens (φ/nm)	λ (nm)	Power W ^λ /nm	Lumens (φ/nm)	λ (nm)	Power W ^λ /nm	Lumens (φ/nm)	λ (nm)	Power W ^λ /nm	Lumens (φ/nm)	λ (nm)	Power W ^λ /nm	Lumens (φ/nm)
360	0	NR	490	101	NR	620	329	NR	750	8	NR	880	0	NR
365	0	NR	495	121	NR	625	331	NR	755	7	NR	885	0	NR
370	0	NR	500	143	NR	630	1000	NR	760	6	NR	890	0	NR
375	0	NR	505	161	NR	635	709	NR	765	5	NR	895	0	NR
380	0	NR	510	176	NR	640	220	NR	770	4	NR	900	0	NR
385	0	NR	515	189	NR	645	210	NR	775	3	NR	905	0	NR
390	0	NR	520	196	NR	650	188	NR	780	3	NR	910	0	NR
395	1	NR	525	203	NR	655	156	NR	785	2	NR	915	0	NR
400	1	NR	530	208	NR	660	134	NR	790	2	NR	920	0	NR
405	2	NR	535	213	NR	665	112	NR	795	2	NR	925	0	NR
410	3	NR	540	219	NR	670	104	NR	800	1	NR	930	0	NR
415	6	NR	545	226	NR	675	85	NR	805	1	NR	935	0	NR
420	10	NR	550	233	NR	680	72	NR	810	1	NR	940	0	NR
425	17	NR	555	241	NR	685	63	NR	815	1	NR	945	0	NR
430	30	NR	560	250	NR	690	53	NR	820	1	NR	950	0	NR
435	53	NR	565	260	NR	695	46	NR	825	1	NR	955	0	NR
440	92	NR	570	270	NR	700	39	NR	830	1	NR	960	0	NR
445	160	NR	575	280	NR	705	33	NR	835	1	NR	965	0	NR
450	214	NR	580	289	NR	710	28	NR	840	0	NR	970	0	NR
455	183	NR	585	298	NR	715	24	NR	845	0	NR	975	0	NR
460	133	NR	590	305	NR	720	20	NR	850	0	NR	980	0	NR
465	111	NR	595	309	NR	725	17	NR	855	0	NR	985	0	NR
470	91	NR	600	314	NR	730	15	NR	860	0	NR	990	0	NR
475	77	NR	605	318	NR	735	13	NR	865	0	NR	995	0	NR
480	76	NR	610	356	NR	740	11	NR	870	0	NR	1000	0	NR
485	86	NR	615	390	NR	745	9	NR	875	0	NR			

REPORT NUMBER: SP3-2508-516-5

Scotopic Flux vs. Wavelength



Scotopic Lumens: NR

S/P: 1.43

λ (nm)	Power W [^] /nm	Lumens (Φ/nm)	λ (nm)	Power W [^] /nm	Lumens (Φ/nm)	λ (nm)	Power W [^] /nm	Lumens (Φ/nm)	λ (nm)	Power W [^] /nm	Lumens (Φ/nm)	λ (nm)	Power W [^] /nm	Lumens (Φ/nm)
360	0	NR	490	101	NR	620	329	NR	750	8	NR	880	0	NR
365	0	NR	495	121	NR	625	331	NR	755	7	NR	885	0	NR
370	0	NR	500	143	NR	630	1000	NR	760	6	NR	890	0	NR
375	0	NR	505	161	NR	635	709	NR	765	5	NR	895	0	NR
380	0	NR	510	176	NR	640	220	NR	770	4	NR	900	0	NR
385	0	NR	515	189	NR	645	210	NR	775	3	NR	905	0	NR
390	0	NR	520	196	NR	650	188	NR	780	3	NR	910	0	NR
395	1	NR	525	203	NR	655	156	NR	785	2	NR	915	0	NR
400	1	NR	530	208	NR	660	134	NR	790	2	NR	920	0	NR
405	2	NR	535	213	NR	665	112	NR	795	2	NR	925	0	NR
410	3	NR	540	219	NR	670	104	NR	800	1	NR	930	0	NR
415	6	NR	545	226	NR	675	85	NR	805	1	NR	935	0	NR
420	10	NR	550	233	NR	680	72	NR	810	1	NR	940	0	NR
425	17	NR	555	241	NR	685	63	NR	815	1	NR	945	0	NR
430	30	NR	560	250	NR	690	53	NR	820	1	NR	950	0	NR
435	53	NR	565	260	NR	695	46	NR	825	1	NR	955	0	NR
440	92	NR	570	270	NR	700	39	NR	830	1	NR	960	0	NR
445	160	NR	575	280	NR	705	33	NR	835	1	NR	965	0	NR
450	214	NR	580	289	NR	710	28	NR	840	0	NR	970	0	NR
455	183	NR	585	298	NR	715	24	NR	845	0	NR	975	0	NR
460	133	NR	590	305	NR	720	20	NR	850	0	NR	980	0	NR
465	111	NR	595	309	NR	725	17	NR	855	0	NR	985	0	NR
470	91	NR	600	314	NR	730	15	NR	860	0	NR	990	0	NR
475	77	NR	605	318	NR	735	13	NR	865	0	NR	995	0	NR
480	76	NR	610	356	NR	740	11	NR	870	0	NR	1000	0	NR
485	86	NR	615	390	NR	745	9	NR	875	0	NR			

REPORT NUMBER: SP3-2508-516-5

Melanopic Flux vs. Wavelength



Melanopic Lumens: NR

M/P: 2.8

λ (nm)	Power W ^λ /nm	Lumens (φ/nm)	λ (nm)	Power W ^λ /nm	Lumens (φ/nm)	λ (nm)	Power W ^λ /nm	Lumens (φ/nm)	λ (nm)	Power W ^λ /nm	Lumens (φ/nm)	λ (nm)	Power W ^λ /nm	Lumens (φ/nm)
360	0	NR	490	101	NR	620	329	NR	750	8	NR	880	0	NR
365	0	NR	495	121	NR	625	331	NR	755	7	NR	885	0	NR
370	0	NR	500	143	NR	630	1000	NR	760	6	NR	890	0	NR
375	0	NR	505	161	NR	635	709	NR	765	5	NR	895	0	NR
380	0	NR	510	176	NR	640	220	NR	770	4	NR	900	0	NR
385	0	NR	515	189	NR	645	210	NR	775	3	NR	905	0	NR
390	0	NR	520	196	NR	650	188	NR	780	3	NR	910	0	NR
395	1	NR	525	203	NR	655	156	NR	785	2	NR	915	0	NR
400	1	NR	530	208	NR	660	134	NR	790	2	NR	920	0	NR
405	2	NR	535	213	NR	665	112	NR	795	2	NR	925	0	NR
410	3	NR	540	219	NR	670	104	NR	800	1	NR	930	0	NR
415	6	NR	545	226	NR	675	85	NR	805	1	NR	935	0	NR
420	10	NR	550	233	NR	680	72	NR	810	1	NR	940	0	NR
425	17	NR	555	241	NR	685	63	NR	815	1	NR	945	0	NR
430	30	NR	560	250	NR	690	53	NR	820	1	NR	950	0	NR
435	53	NR	565	260	NR	695	46	NR	825	1	NR	955	0	NR
440	92	NR	570	270	NR	700	39	NR	830	1	NR	960	0	NR
445	160	NR	575	280	NR	705	33	NR	835	1	NR	965	0	NR
450	214	NR	580	289	NR	710	28	NR	840	0	NR	970	0	NR
455	183	NR	585	298	NR	715	24	NR	845	0	NR	975	0	NR
460	133	NR	590	305	NR	720	20	NR	850	0	NR	980	0	NR
465	111	NR	595	309	NR	725	17	NR	855	0	NR	985	0	NR
470	91	NR	600	314	NR	730	15	NR	860	0	NR	990	0	NR
475	77	NR	605	318	NR	735	13	NR	865	0	NR	995	0	NR
480	76	NR	610	356	NR	740	11	NR	870	0	NR	1000	0	NR
485	86	NR	615	390	NR	745	9	NR	875	0	NR			

REPORT NUMBER: SP3-2508-516-5

TM-30-18

Summary

$R_f = 91.6$
 $R_g = 101.1$
 CIE $R_a = 94.3$
 $R_9 = 61.9$



Color Vector Graphics



Individual Sample Fidelity Index ($R_{f,i}$)

CES01 = 86	CES26 = 92	CES51 = 97	CES76 = 89
CES02 = 63	CES27 = 95	CES52 = 96	CES77 = 85
CES03 = 32	CES28 = 96	CES53 = 94	CES78 = 86
CES04 = 70	CES29 = 92	CES54 = 97	CES79 = 89
CES05 = 51	CES30 = 99	CES55 = 96	CES80 = 91
CES06 = 51	CES31 = 93	CES56 = 96	CES81 = 72
CES07 = 44	CES32 = 85	CES57 = 96	CES82 = 96
CES08 = 42	CES33 = 94	CES58 = 96	CES83 = 93
CES09 = 29	CES34 = 93	CES59 = 99	CES84 = 96
CES10 = 76	CES35 = 96	CES60 = 95	CES85 = 80
CES11 = 59	CES36 = 87	CES61 = 95	CES86 = 78
CES12 = 65	CES37 = 94	CES62 = 93	CES87 = 91
CES13 = 44	CES38 = 96	CES63 = 94	CES88 = 97
CES14 = 74	CES39 = 98	CES64 = 95	CES89 = 82
CES15 = 72	CES40 = 95	CES65 = 91	CES90 = 98
CES16 = 48	CES41 = 96	CES66 = 93	CES91 = 81
CES17 = 50	CES42 = 92	CES67 = 92	CES92 = 78
CES18 = 57	CES43 = 90	CES68 = 92	CES93 = 87
CES19 = 72	CES44 = 99	CES69 = 93	CES94 = 73
CES20 = 67	CES45 = 94	CES70 = 89	CES95 = 85
CES21 = 86	CES46 = 94	CES71 = 88	CES96 = 92
CES22 = 79	CES47 = 88	CES72 = 95	CES97 = 94
CES23 = 92	CES48 = 95	CES73 = 85	CES98 = 94
CES24 = 91	CES49 = 92	CES74 = 90	CES99 = 93
CES25 = 72	CES50 = 97	CES75 = 88	



Color Rendition by Hue-Angle Bin



Measure Comparisons



(END OF REPORT)