

Cooper Lighting Solutions Photometric Lab
1121 Highway 74 South
Peachtree City, GA 30269



Scaled data based on original data using
LM-79-2019 Approved Method: Electrical and Photometric Measurements of Solid-
State Lighting Products

Test Report Prepared for
Cooper Lighting Solutions

Brand: METALUX

Report Number: P983154

Luminaire Tested: 24CZ-LD5-30-UNV-L835-SQP-CD1-U

Issue Date: 04/23/2025

Test Information

Test Method: LM-79-2019
Report Number: P983154
Test Lab: INNOVATION CENTER(P3)
Issue Date: 04/23/2025
Manufacturer: COOPER LIGHTING SOLUTIONS
Product Line: METALUX
Catalog Number: 24CZ-LD5-30-UNV-L835-SQP-CD1-U
Description: METALUX CRUZE 2x4 3000LM PACKAGE 80CRI 3500K TROFFER LENS WITH SQUARE PATTERN
Light Source: 3500K CCT, 80 CRI LEDS
Ballast/Driver: -

Summary


Lumens per Lamp: N/A
Luminaire Lumens: 2243.0 lumens
Efficiency: N/A
Efficacy: 100.6 lumens/watt
Spacing Criteria (0/90/45): 1.25 / 1.31 / 1.41
Luminous Opening: Rectangular (W 2' x L: 4' x H: 0')
CIE Type: Direct

Input Watts (W): 22.3
Input Voltage (V): 120
Input Current (Ain): NR
Voltage Rise (V): NR
Power Factor: NR
Total Harmonic Distortion (THDi): NR
Frequency (hertz): 60
Stabilization Time: NR
Operation Time: NR
Ambient Temperature (°C): NR
Test Distance: 28.75 FT

TEST NUMBER: P983154

CATALOG NUMBER: 24CZ-LD5-30-UNV-L835-SQP-CD1-U

Luminous Intensity Polar Plot

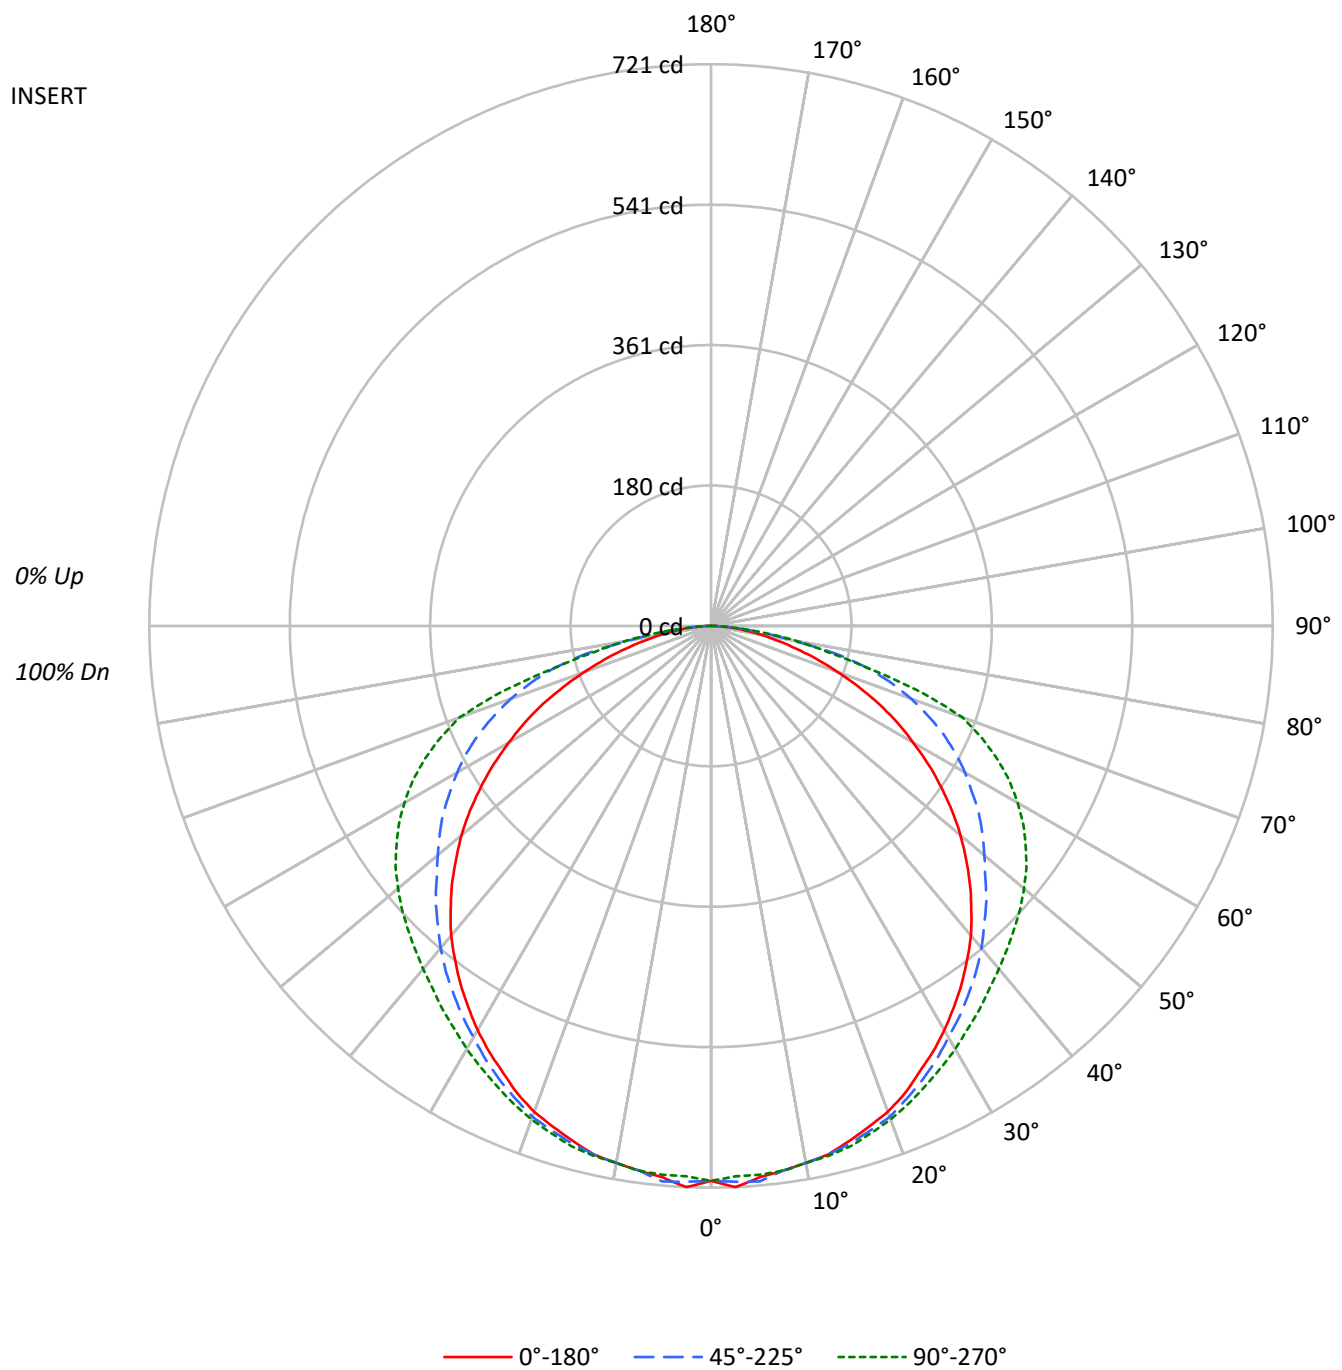

TEST NUMBER: P983154

CATALOG NUMBER: 24CZ-LD5-30-UNV-L835-SQP-CD1-U

COEFFICIENT OF UTILIZATION - ZONAL CAVITY METHOD:

RF	20				20				20				20				20
RC	80				70				50				30				10
RW	70	50	30	10	70	50	30	10	50	30	10		50	30	10		50
RCR																	
0	119	119	119	119	116	116	116	116	111	111	111		106	106	106		102
1	108	103	99	95	105	101	97	93	97	93	90		93	90	87		89
2	98	89	82	76	95	87	81	75	84	78	73		80	76	71		77
3	89	78	69	62	86	76	68	62	73	66	61		70	64	59		68
4	81	68	59	52	79	67	58	52	64	57	51		62	56	50		60
5	74	61	52	45	72	60	51	44	58	50	44		56	49	43		54
6	68	55	45	39	66	54	45	39	52	44	38		50	43	38		48
7	63	49	40	34	62	49	40	34	47	39	34		45	39	33		44
8	59	45	36	30	57	44	36	30	43	35	30		42	35	30		40
9	55	41	33	27	54	41	33	27	39	32	27		38	32	27		37
10	51	38	30	24	50	37	30	24	36	29	24		35	29	24		35

AVERAGE LUMINANCE (cd/sqm):

	0°	45°	90°
0°	959	959	959
5°	960	967	955
10°	957	957	957
15°	954	958	963
20°	950	960	965
25°	939	954	967
30°	931	947	974
35°	921	947	987
40°	912	948	1010
45°	895	951	1047
50°	875	959	1097
55°	846	985	1156
60°	806	1013	1223
65°	760	1048	1292
70°	679	1076	1350
75°	588	1078	1068
80°	500	797	864
85°	431	537	483

MAXIMUM LUMINANCE 45°-90°:

Horizontal Angle: 90°

Vertical Angle: 70°

Luminance: 1350 cd/sqm

TEST NUMBER: P983154

CATALOG NUMBER: 24CZ-LD5-30-UNV-L835-SQP-CD1-U

ZONAL LUMENS:

Zone	Lumens	% Fixture
0°-10°	67.6	3.0
10°-20°	194.3	8.7
20°-30°	296.0	13.2
30°-40°	362.2	16.1
40°-50°	389.7	17.4
50°-60°	377.5	16.8
60°-70°	319.8	14.3
70°-80°	193.3	8.6
80°-90°	42.5	1.9
90°-100°	0.0	0.0
100°-110°	0.0	0.0
110°-120°	0.0	0.0
120°-130°	0.0	0.0
130°-140°	0.0	0.0
140°-150°	0.0	0.0
150°-160°	0.0	0.0
160°-170°	0.0	0.0
170°-180°	0.0	0.0
0°-30°	557.9	24.9
0°-40°	920.1	41.0
0°-60°	1687.4	75.2
0°-90°	2243.0	100.0
90°-120°	0.0	0.0
90°-150°	0.0	0.0
90°-180°	0.0	0.0
0°-180°	2243.0	100.0

CANDELA DISTRIBUTION:

	0°	22.5°	45°	67.5°	90°	Flux
0°	712	712	712	712	712	
5°	711	711	716	712	707	68
15°	685	686	688	690	692	193
25°	632	636	643	648	651	292
35°	561	564	576	592	601	351
45°	470	479	500	531	550	362
55°	361	376	420	469	493	322
65°	239	265	329	382	406	235
75°	113	153	207	211	206	122
85°	28	33	35	33	31	32
90°	0	0	0	0	0	

TEST NUMBER: P983154

CATALOG NUMBER: 24CZ-LD5-30-UNV-L835-SQP-CD1-U

CANDELA DISTRIBUTION (FULL):

	0°	22.5°	45°	67.5°	90°
0°	712.4	712.4	712.4	712.4	712.4
2.5°	721.1	719.4	714.2	710.7	707.2
5°	710.7	710.7	715.9	712.4	707.2
7.5°	705.5	705.5	705.5	714.2	705.5
10°	700.2	702.0	700.2	707.2	700.2
12.5°	695.0	695.0	695.0	696.7	696.7
15°	684.6	686.3	688.0	689.8	691.5
17.5°	674.1	675.8	679.3	681.1	682.8
20°	663.7	665.4	670.6	670.6	674.1
22.5°	649.7	649.7	656.7	658.4	663.7
25°	632.3	635.8	642.7	648.0	651.4
27.5°	616.6	620.1	627.1	634.0	639.3
30°	599.2	602.7	609.7	620.1	627.1
32.5°	580.1	583.5	594.0	606.2	613.1
35°	560.9	564.4	576.5	592.2	601.0
37.5°	540.0	545.2	559.1	576.5	587.0
40°	519.1	524.3	540.0	559.1	574.8
42.5°	494.7	501.7	519.1	545.2	562.6
45°	470.3	479.0	499.9	531.3	550.4
47.5°	444.2	452.9	477.3	517.3	538.2
50°	418.0	428.5	458.1	501.7	524.3
52.5°	390.2	400.6	438.9	486.0	510.4
55°	360.6	376.3	419.8	468.6	492.9
57.5°	331.0	348.4	397.2	449.4	475.5
60°	299.6	320.5	376.3	428.5	454.6
62.5°	270.0	292.7	353.6	405.9	432.0
65°	238.6	264.8	329.2	381.5	405.9
67.5°	205.5	238.6	301.4	351.9	376.3
70°	172.5	210.8	273.5	320.5	343.1
72.5°	142.8	182.9	242.1	282.2	282.2
75°	113.2	153.3	207.3	210.8	205.5
77.5°	87.1	125.4	162.0	148.1	151.5
80°	64.5	95.8	102.8	108.0	111.5
82.5°	43.6	64.5	66.2	69.7	69.7
85°	27.9	33.1	34.8	33.1	31.3
87.5°	12.2	14.0	10.4	7.0	5.2
90°	0.0	0.0	0.0	0.0	0.0

LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-
State Lighting Products

Report Prepared for

Cooper Lighting Solutions

Metalux

Report Number: SP3-2508-516-6

Test Date: 09/03/2025

Luminaire Tested: 24CZ-LD5-65-S-UNV-L935-CD1-U

Data in this report applies to families of products including 24CZ-LD5-65-S-UNV-L935-CD1-U

Test Information

Test Method: LM-79-2019
 Report Number: SP3-2508-516-6
 Test Lab: COOPER LIGHTING SOLUTIONS
 Photometer: SP3 - 3M SPHERE
 Measurement Geometry: 4π
 Issue Date: 09/05/2025
 Manufacturer: COOPER LIGHTING SOLUTIONS
 Product Line: Metalux
 Catalog Number: **24CZ-LD5-65-S-UNV-L935-CD1-U**
 Description: 2X4 CRUZE SB 6500LM 935 SMOOTH LENS

Spectral Parameters

CCT (K): 3412
 CIE u' : 0.2386
 CIE v' : 0.5111
 Duv: -0.0015
 CIE x: 0.4087
 CIE y: 0.3890
 CIE z: 0.2023
 Peak Wavelength (nm): 630
 Dominant Wavelength (nm): 581
 Purity: 39.41044
 R_f: 92.6
 R_g: 102

CRI (Ra): 96.3
 R1: 99.2
 R2: 97.9
 R3: 94.7
 R4: 96.6
 R5: 98.4
 R6: 96.1
 R7: 95.6
 R8: 92.0
 R9: 78.4
 R10: 93.0
 R11: 94.5
 R12: 81.5
 R13: 99.0
 R14: 95.8
 R15: 96.7



Test Conditions

Stabilization Time: 20M
 Operation Time: 1H 20M
 Sphere Temperature (°C): 25.0

REPORT NUMBER: SP3-2508-516-6

Measurement and Test Equipment			
Instrument	Identification Number	Calibration Date	Calibration Due Date
Photometer	3M SPHERE IN02505	7/1/2025	1/1/2026
Power Meter	XITRON INXT2011006	1/20/2025	1/20/2026
AC Power Source	CHROMA 61604 IN6064A	10/22/2024	10/22/2025
DC Power Source	EYSIGHT N5770A IN0534	10/22/2024	10/22/2025
Sphere Thermometer	TANDD IN4036E	10/22/2024	10/22/2025

REPORT NUMBER: SP3-2508-516-6

CIE 1931 Chromaticity Diagram



CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles



Point lies inside the ANSI 3500K 4-step quadrangle

REPORT NUMBER: SP3-2508-516-6

Photopic Flux vs. Wavelength



Photopic Lumens: NR

λ (nm)	Power $\text{W}^\wedge/\text{nm}$	Lumens (ϕ/nm)	λ (nm)	Power $\text{W}^\wedge/\text{nm}$	Lumens (ϕ/nm)	λ (nm)	Power $\text{W}^\wedge/\text{nm}$	Lumens (ϕ/nm)	λ (nm)	Power $\text{W}^\wedge/\text{nm}$	Lumens (ϕ/nm)	λ (nm)	Power $\text{W}^\wedge/\text{nm}$	Lumens (ϕ/nm)
360	0	NR	490	112	NR	620	281	NR	750	6	NR	880	0	NR
365	0	NR	495	134	NR	625	286	NR	755	5	NR	885	0	NR
370	0	NR	500	157	NR	630	1000	NR	760	4	NR	890	0	NR
375	0	NR	505	178	NR	635	695	NR	765	4	NR	895	0	NR
380	0	NR	510	193	NR	640	181	NR	770	3	NR	900	0	NR
385	0	NR	515	206	NR	645	175	NR	775	3	NR	905	0	NR
390	0	NR	520	213	NR	650	156	NR	780	2	NR	910	0	NR
395	1	NR	525	219	NR	655	127	NR	785	2	NR	915	0	NR
400	2	NR	530	223	NR	660	108	NR	790	2	NR	920	0	NR
405	2	NR	535	226	NR	665	89	NR	795	2	NR	925	0	NR
410	4	NR	540	230	NR	670	84	NR	800	1	NR	930	0	NR
415	6	NR	545	235	NR	675	67	NR	805	1	NR	935	0	NR
420	11	NR	550	239	NR	680	57	NR	810	1	NR	940	0	NR
425	19	NR	555	243	NR	685	50	NR	815	1	NR	945	0	NR
430	34	NR	560	248	NR	690	42	NR	820	1	NR	950	0	NR
435	60	NR	565	253	NR	695	36	NR	825	1	NR	955	0	NR
440	106	NR	570	256	NR	700	31	NR	830	0	NR	960	0	NR
445	193	NR	575	260	NR	705	26	NR	835	0	NR	965	0	NR
450	283	NR	580	263	NR	710	22	NR	840	0	NR	970	0	NR
455	234	NR	585	266	NR	715	19	NR	845	0	NR	975	0	NR
460	157	NR	590	267	NR	720	16	NR	850	0	NR	980	0	NR
465	134	NR	595	266	NR	725	14	NR	855	0	NR	985	0	NR
470	107	NR	600	268	NR	730	12	NR	860	0	NR	990	0	NR
475	85	NR	605	269	NR	735	10	NR	865	0	NR	995	0	NR
480	85	NR	610	309	NR	740	8	NR	870	0	NR	1000	0	NR
485	96	NR	615	345	NR	745	7	NR	875	0	NR			

REPORT NUMBER: SP3-2508-516-6

Scotopic Flux vs. Wavelength



Scotopic Lumens: NR

S/P: 1.61

λ (nm)	Power W [^] /nm	Lumens (Φ/nm)	λ (nm)	Power W [^] /nm	Lumens (Φ/nm)	λ (nm)	Power W [^] /nm	Lumens (Φ/nm)	λ (nm)	Power W [^] /nm	Lumens (Φ/nm)	λ (nm)	Power W [^] /nm	Lumens (Φ/nm)
360	0	NR	490	112	NR	620	281	NR	750	6	NR	880	0	NR
365	0	NR	495	134	NR	625	286	NR	755	5	NR	885	0	NR
370	0	NR	500	157	NR	630	1000	NR	760	4	NR	890	0	NR
375	0	NR	505	178	NR	635	695	NR	765	4	NR	895	0	NR
380	0	NR	510	193	NR	640	181	NR	770	3	NR	900	0	NR
385	0	NR	515	206	NR	645	175	NR	775	3	NR	905	0	NR
390	0	NR	520	213	NR	650	156	NR	780	2	NR	910	0	NR
395	1	NR	525	219	NR	655	127	NR	785	2	NR	915	0	NR
400	2	NR	530	223	NR	660	108	NR	790	2	NR	920	0	NR
405	2	NR	535	226	NR	665	89	NR	795	2	NR	925	0	NR
410	4	NR	540	230	NR	670	84	NR	800	1	NR	930	0	NR
415	6	NR	545	235	NR	675	67	NR	805	1	NR	935	0	NR
420	11	NR	550	239	NR	680	57	NR	810	1	NR	940	0	NR
425	19	NR	555	243	NR	685	50	NR	815	1	NR	945	0	NR
430	34	NR	560	248	NR	690	42	NR	820	1	NR	950	0	NR
435	60	NR	565	253	NR	695	36	NR	825	1	NR	955	0	NR
440	106	NR	570	256	NR	700	31	NR	830	0	NR	960	0	NR
445	193	NR	575	260	NR	705	26	NR	835	0	NR	965	0	NR
450	283	NR	580	263	NR	710	22	NR	840	0	NR	970	0	NR
455	234	NR	585	266	NR	715	19	NR	845	0	NR	975	0	NR
460	157	NR	590	267	NR	720	16	NR	850	0	NR	980	0	NR
465	134	NR	595	266	NR	725	14	NR	855	0	NR	985	0	NR
470	107	NR	600	268	NR	730	12	NR	860	0	NR	990	0	NR
475	85	NR	605	269	NR	735	10	NR	865	0	NR	995	0	NR
480	85	NR	610	309	NR	740	8	NR	870	0	NR	1000	0	NR
485	96	NR	615	345	NR	745	7	NR	875	0	NR			

REPORT NUMBER: SP3-2508-516-6

Melanopic Flux vs. Wavelength



Melanopic Lumens: NR

M/P: 3.24

λ (nm)	Power W ^λ /nm	Lumens (φ/nm)	λ (nm)	Power W ^λ /nm	Lumens (φ/nm)	λ (nm)	Power W ^λ /nm	Lumens (φ/nm)	λ (nm)	Power W ^λ /nm	Lumens (φ/nm)	λ (nm)	Power W ^λ /nm	Lumens (φ/nm)
360	0	NR	490	112	NR	620	281	NR	750	6	NR	880	0	NR
365	0	NR	495	134	NR	625	286	NR	755	5	NR	885	0	NR
370	0	NR	500	157	NR	630	1000	NR	760	4	NR	890	0	NR
375	0	NR	505	178	NR	635	695	NR	765	4	NR	895	0	NR
380	0	NR	510	193	NR	640	181	NR	770	3	NR	900	0	NR
385	0	NR	515	206	NR	645	175	NR	775	3	NR	905	0	NR
390	0	NR	520	213	NR	650	156	NR	780	2	NR	910	0	NR
395	1	NR	525	219	NR	655	127	NR	785	2	NR	915	0	NR
400	2	NR	530	223	NR	660	108	NR	790	2	NR	920	0	NR
405	2	NR	535	226	NR	665	89	NR	795	2	NR	925	0	NR
410	4	NR	540	230	NR	670	84	NR	800	1	NR	930	0	NR
415	6	NR	545	235	NR	675	67	NR	805	1	NR	935	0	NR
420	11	NR	550	239	NR	680	57	NR	810	1	NR	940	0	NR
425	19	NR	555	243	NR	685	50	NR	815	1	NR	945	0	NR
430	34	NR	560	248	NR	690	42	NR	820	1	NR	950	0	NR
435	60	NR	565	253	NR	695	36	NR	825	1	NR	955	0	NR
440	106	NR	570	256	NR	700	31	NR	830	0	NR	960	0	NR
445	193	NR	575	260	NR	705	26	NR	835	0	NR	965	0	NR
450	283	NR	580	263	NR	710	22	NR	840	0	NR	970	0	NR
455	234	NR	585	266	NR	715	19	NR	845	0	NR	975	0	NR
460	157	NR	590	267	NR	720	16	NR	850	0	NR	980	0	NR
465	134	NR	595	266	NR	725	14	NR	855	0	NR	985	0	NR
470	107	NR	600	268	NR	730	12	NR	860	0	NR	990	0	NR
475	85	NR	605	269	NR	735	10	NR	865	0	NR	995	0	NR
480	85	NR	610	309	NR	740	8	NR	870	0	NR	1000	0	NR
485	96	NR	615	345	NR	745	7	NR	875	0	NR			

REPORT NUMBER: SP3-2508-516-6

TM-30-18

Summary

$R_f = 92.6$
 $R_g = 102$
 $\text{CIE } R_a = 96.3$
 $R_9 = 78.4$




Color Vector Graphics



Individual Sample Fidelity Index ($R_{f,i}$)

CES01 = 86	CES26 = 94	CES51 = 97	CES76 = 88
CES02 = 63	CES27 = 93	CES52 = 96	CES77 = 88
CES03 = 32	CES28 = 96	CES53 = 95	CES78 = 84
CES04 = 70	CES29 = 95	CES54 = 95	CES79 = 92
CES05 = 50	CES30 = 96	CES55 = 95	CES80 = 92
CES06 = 51	CES31 = 95	CES56 = 98	CES81 = 77
CES07 = 43	CES32 = 87	CES57 = 98	CES82 = 96
CES08 = 42	CES33 = 97	CES58 = 98	CES83 = 95
CES09 = 29	CES34 = 93	CES59 = 100	CES84 = 95
CES10 = 75	CES35 = 96	CES60 = 94	CES85 = 82
CES11 = 58	CES36 = 84	CES61 = 95	CES86 = 84
CES12 = 64	CES37 = 93	CES62 = 90	CES87 = 92
CES13 = 44	CES38 = 91	CES63 = 95	CES88 = 99
CES14 = 74	CES39 = 98	CES64 = 95	CES89 = 86
CES15 = 72	CES40 = 96	CES65 = 92	CES90 = 98
CES16 = 48	CES41 = 97	CES66 = 93	CES91 = 77
CES17 = 49	CES42 = 90	CES67 = 92	CES92 = 81
CES18 = 56	CES43 = 91	CES68 = 91	CES93 = 88
CES19 = 71	CES44 = 99	CES69 = 92	CES94 = 78
CES20 = 67	CES45 = 94	CES70 = 89	CES95 = 86
CES21 = 86	CES46 = 95	CES71 = 85	CES96 = 93
CES22 = 78	CES47 = 90	CES72 = 95	CES97 = 93
CES23 = 91	CES48 = 96	CES73 = 84	CES98 = 96
CES24 = 90	CES49 = 93	CES74 = 91	CES99 = 97
CES25 = 71	CES50 = 97	CES75 = 86	

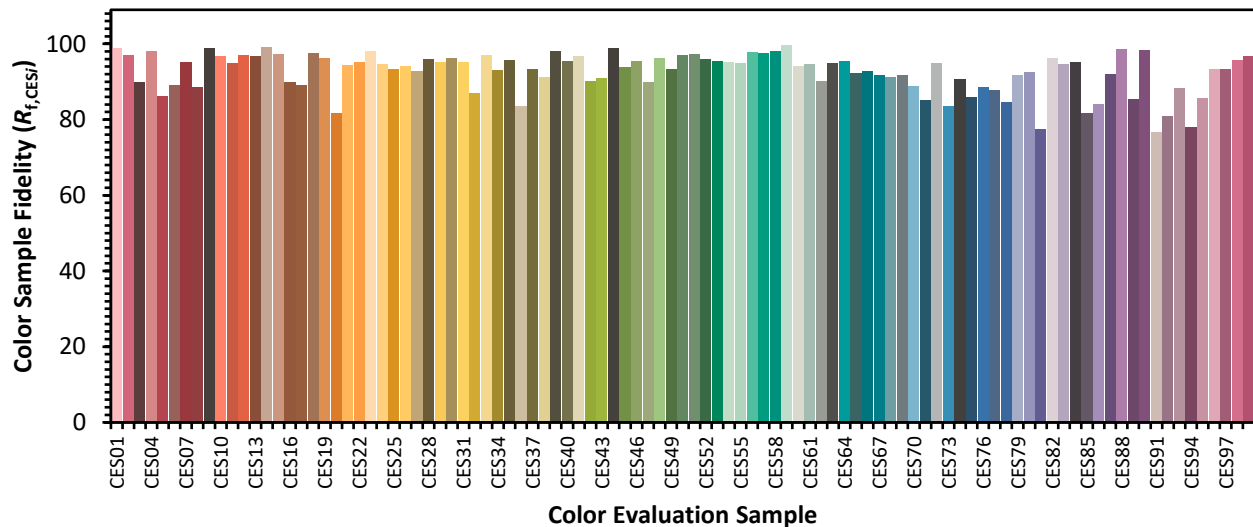

Color Rendition by Hue-Angle Bin


Measure Comparisons



(END OF REPORT)