

Cooper Lighting Solutions Photometric Lab
1121 Highway 74 South
Peachtree City, GA 30269



Scaled data based on original data using
LM-79-2019 Approved Method: Electrical and Photometric Measurements of Solid-
State Lighting Products

Test Report Prepared for
Cooper Lighting Solutions

Brand: METALUX

Report Number: P983118

Luminaire Tested: 24CZ-LD5-30-UNV-L850-RDP-CD1-U

Issue Date: 04/23/2025

Test Information

Test Method: LM-79-2019
Report Number: P983118
Test Lab: INNOVATION CENTER(P3)
Issue Date: 04/23/2025
Manufacturer: COOPER LIGHTING SOLUTIONS
Product Line: METALUX
Catalog Number: 24CZ-LD5-30-UNV-L850-RDP-CD1-U
Description: METALUX CRUZE 2x4 3000LM PACKAGE 80CRI 5000K TROFFER LENS WITH RDP FILM INSERT
Light Source: 5000K CCT, 80 CRI LEDS
Ballast/Driver: -

Summary


Lumens per Lamp: N/A
Luminaire Lumens: 1926.0 lumens
Efficiency: N/A
Efficacy: 86.4 lumens/watt
Spacing Criteria (0/90/45): 1.25 / 1.31 / 1.41
Luminous Opening: Rectangular (W 2' x L: 4' x H: 0')
CIE Type: Direct

Input Watts (W): 22.3
Input Voltage (V): 120
Input Current (Ain): NR
Voltage Rise (V): NR
Power Factor: NR
Total Harmonic Distortion (THDi): NR
Frequency (hertz): 60
Stabilization Time: NR
Operation Time: NR
Ambient Temperature (°C): NR
Test Distance: 28.75 FT

TEST NUMBER: P983118

CATALOG NUMBER: 24CZ-LD5-30-UNV-L850-RDP-CD1-U

Luminous Intensity Polar Plot

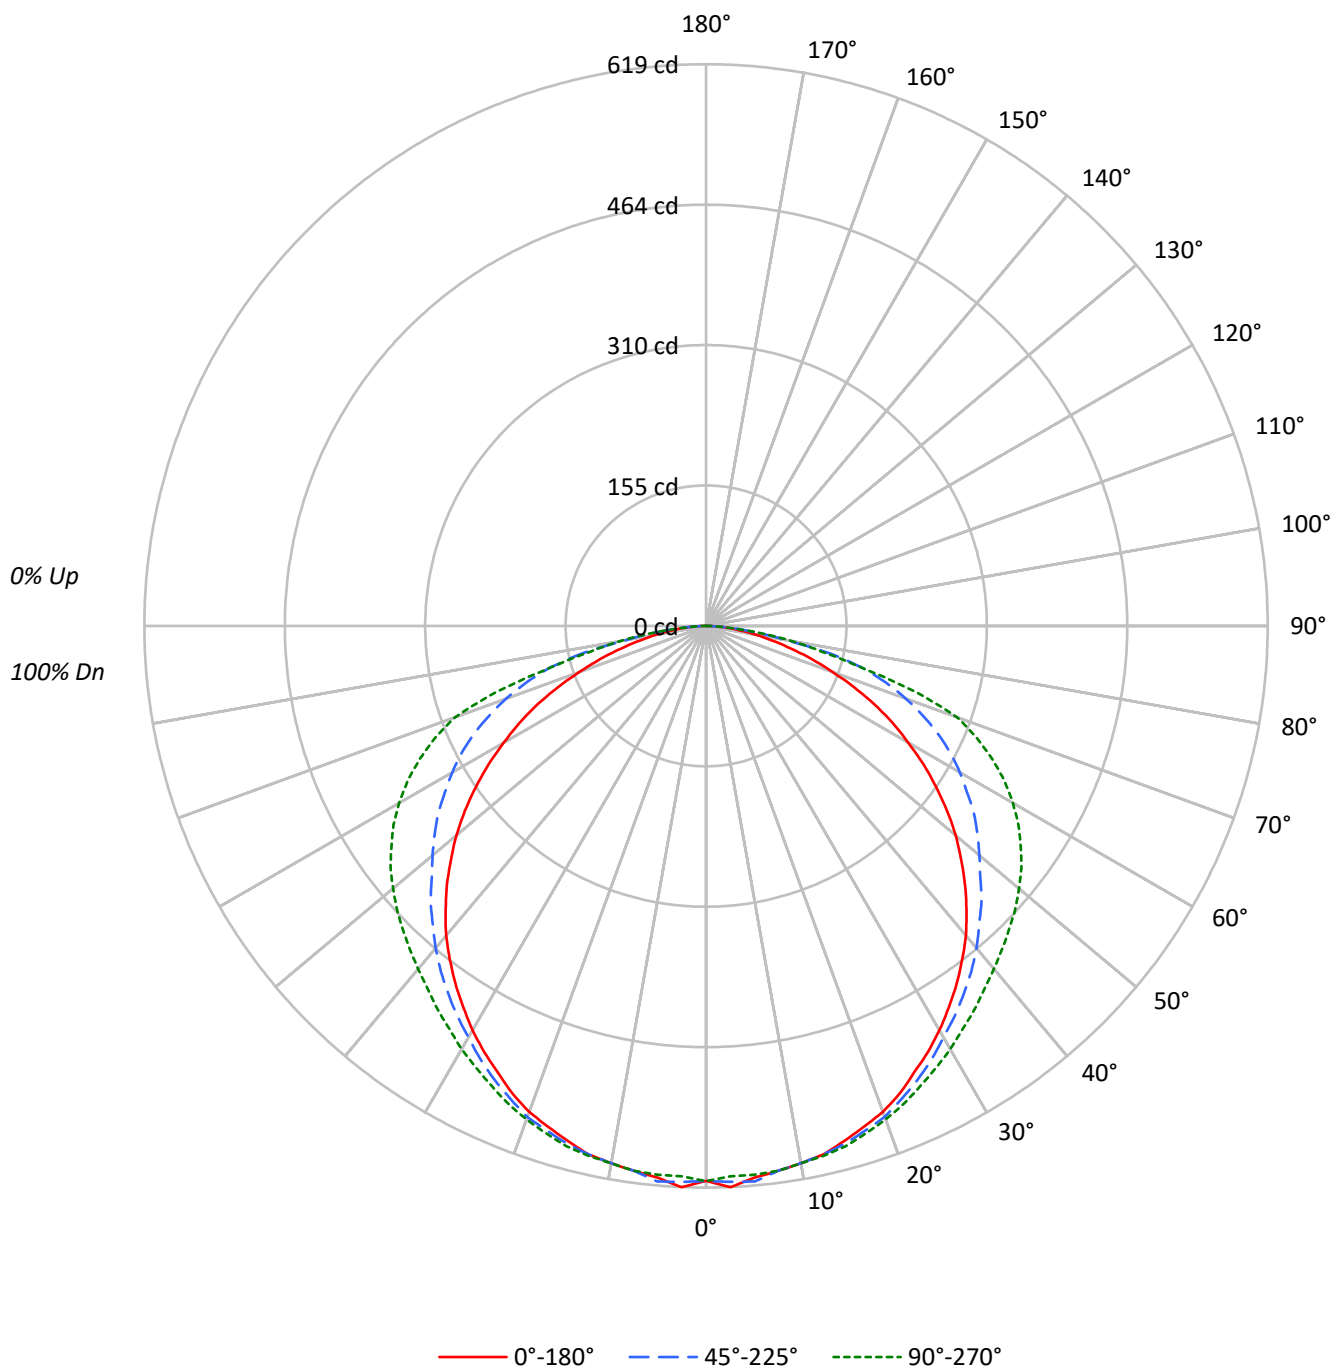

TEST NUMBER: P983118

CATALOG NUMBER: 24CZ-LD5-30-UNV-L850-RDP-CD1-U

COEFFICIENT OF UTILIZATION - ZONAL CAVITY METHOD:

RF	20				20				20				20				20
RC	80				70				50				30				10
RW	70	50	30	10	70	50	30	10	50	30	10		50	30	10		50
RCR																	
0	119	119	119	119	116	116	116	116	111	111	111		106	106	106		102
1	108	103	99	95	105	101	97	93	97	93	90		93	90	87		89
2	98	89	82	76	95	87	81	75	84	78	73		80	76	71		77
3	89	78	69	62	86	76	68	62	73	66	61		70	64	59		68
4	81	68	59	52	79	67	58	52	64	57	51		62	56	50		60
5	74	61	52	45	72	60	51	44	58	50	44		56	49	43		54
6	68	55	45	39	66	54	45	39	52	44	38		50	43	38		48
7	63	49	40	34	62	49	40	34	47	39	34		45	39	33		44
8	59	45	36	30	57	44	36	30	43	35	30		42	35	30		40
9	55	41	33	27	54	41	33	27	39	32	27		38	32	27		37
10	51	38	30	24	50	37	30	24	36	29	24		35	29	24		35

AVERAGE LUMINANCE (cd/sqm):

	0°	45°	90°
0°	823	823	823
5°	824	830	820
10°	822	822	822
15°	819	823	827
20°	816	824	829
25°	806	819	830
30°	799	813	837
35°	791	813	848
40°	783	814	867
45°	768	817	899
50°	751	823	942
55°	726	846	993
60°	692	869	1051
65°	652	900	1110
70°	583	924	1159
75°	505	925	918
80°	428	683	742
85°	369	462	415

MAXIMUM LUMINANCE 45°-90°:

Horizontal Angle: 90°

Vertical Angle: 70°

Luminance: 1159 cd/sqm

TEST NUMBER: P983118

CATALOG NUMBER: 24CZ-LD5-30-UNV-L850-RDP-CD1-U

ZONAL LUMENS:

Zone	Lumens	% Fixture
0°-10°	58.1	3.0
10°-20°	166.8	8.7
20°-30°	254.2	13.2
30°-40°	311.0	16.1
40°-50°	334.7	17.4
50°-60°	324.2	16.8
60°-70°	274.6	14.3
70°-80°	166.0	8.6
80°-90°	36.5	1.9
90°-100°	0.0	0.0
100°-110°	0.0	0.0
110°-120°	0.0	0.0
120°-130°	0.0	0.0
130°-140°	0.0	0.0
140°-150°	0.0	0.0
150°-160°	0.0	0.0
160°-170°	0.0	0.0
170°-180°	0.0	0.0
0°-30°	479.1	24.9
0°-40°	790.1	41.0
0°-60°	1448.9	75.2
0°-90°	1926.0	100.0
90°-120°	0.0	0.0
90°-150°	0.0	0.0
90°-180°	0.0	0.0
0°-180°	1926.0	100.0

CANDELA DISTRIBUTION:

	0°	22.5°	45°	67.5°	90°	Flux
0°	612	612	612	612	612	
5°	610	610	615	612	607	58
15°	588	589	591	592	594	166
25°	543	546	552	556	559	251
35°	482	485	495	508	516	301
45°	404	411	429	456	473	311
55°	310	323	360	402	423	277
65°	205	227	283	328	348	202
75°	97	132	178	181	176	104
85°	24	28	30	28	27	27
90°	0	0	0	0	0	

TEST NUMBER: P983118

CATALOG NUMBER: 24CZ-LD5-30-UNV-L850-RDP-CD1-U

CANDELA DISTRIBUTION (FULL):

	0°	22.5°	45°	67.5°	90°
0°	611.7	611.7	611.7	611.7	611.7
2.5°	619.2	617.7	613.2	610.3	607.2
5°	610.3	610.3	614.7	611.7	607.2
7.5°	605.8	605.8	605.8	613.2	605.8
10°	601.3	602.8	601.3	607.2	601.3
12.5°	596.8	596.8	596.8	598.3	598.3
15°	587.8	589.3	590.8	592.3	593.8
17.5°	578.8	580.3	583.3	584.8	586.3
20°	569.9	571.4	575.8	575.8	578.8
22.5°	557.9	557.9	563.9	565.4	569.9
25°	542.9	545.9	551.9	556.4	559.4
27.5°	529.5	532.5	538.5	544.4	548.9
30°	514.5	517.5	523.5	532.5	538.5
32.5°	498.1	501.1	510.0	520.5	526.5
35°	481.6	484.6	495.1	508.5	516.0
37.5°	463.7	468.2	480.1	495.1	504.0
40°	445.7	450.2	463.7	480.1	493.6
42.5°	424.8	430.8	445.7	468.2	483.1
45°	403.8	411.3	429.3	456.2	472.6
47.5°	381.4	388.9	409.8	444.2	462.2
50°	359.0	367.9	393.4	430.8	450.2
52.5°	335.0	344.0	376.9	417.3	438.2
55°	309.6	323.1	360.5	402.4	423.3
57.5°	284.2	299.2	341.0	385.9	408.3
60°	257.2	275.2	323.1	367.9	390.4
62.5°	231.8	251.3	303.6	348.5	370.9
65°	204.9	227.4	282.7	327.6	348.5
67.5°	176.5	204.9	258.8	302.1	323.1
70°	148.1	181.0	234.8	275.2	294.7
72.5°	122.6	157.1	207.9	242.3	242.3
75°	97.2	131.6	178.0	181.0	176.5
77.5°	74.8	107.7	139.1	127.1	130.1
80°	55.3	82.3	88.2	92.7	95.7
82.5°	37.4	55.3	56.8	59.8	59.8
85°	23.9	28.4	29.9	28.4	26.9
87.5°	10.5	12.0	9.0	6.0	4.5
90°	0.0	0.0	0.0	0.0	0.0

LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-State Lighting Products

Report Prepared for

Cooper Lighting Solutions

Metalux

Report Number: SP3-2508-516-8

Test Date: 09/03/2025

Luminaire Tested: 24CZ-LD5-65-S-UNV-L950-CD1-U

Data in this report applies to families of products including 24CZ-LD5-65-S-UNV-L950-CD1-U

Test Information

Test Method: LM-79-2019
 Report Number: SP3-2508-516-8
 Test Lab: COOPER LIGHTING SOLUTIONS
 Photometer: SP3 - 3M SPHERE
 Measurement Geometry: 4π
 Issue Date: 09/05/2025
 Manufacturer: COOPER LIGHTING SOLUTIONS
 Product Line: Metalux
 Catalog Number: **24CZ-LD5-65-S-UNV-L950-CD1-U**
 Description: 2X4 CRUZE SB 6500LM 950 SMOOTH LENS

Spectral Parameters

CCT (K): 5019
 CIE u' : 0.2113
 CIE v' : 0.4842
 Duv: -0.0002
 CIE x: 0.3445
 CIE y: 0.3508
 CIE z: 0.3046
 Peak Wavelength (nm): 630
 Dominant Wavelength (nm): 572
 Purity: 8.636369
 R_f: 89.8
 R_g: 98.5

CRI (Ra): 94.6
 R1: 96.4
 R2: 98.4
 R3: 96.9
 R4: 94.5
 R5: 94.5
 R6: 93.5
 R7: 93.6
 R8: 89.4
 R9: 74.6
 R10: 94.2
 R11: 95.5
 R12: 70.8
 R13: 98.0
 R14: 98.0
 R15: 95.0



Test Conditions

Stabilization Time: M
 Operation Time: 1H 0M
 Sphere Temperature (°C): 25.0

REPORT NUMBER: SP3-2508-516-8

Measurement and Test Equipment			
Instrument	Identification Number	Calibration Date	Calibration Due Date
Photometer	3M SPHERE IN02505	7/1/2025	1/1/2026
Power Meter	XITRON INXT2011006	1/20/2025	1/20/2026
AC Power Source	CHROMA 61604 IN6064A	10/22/2024	10/22/2025
DC Power Source	EYSIGHT N5770A IN0534	10/22/2024	10/22/2025
Sphere Thermometer	TANDD IN4036E	10/22/2024	10/22/2025

REPORT NUMBER: SP3-2508-516-8

CIE 1931 Chromaticity Diagram



CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles



Point lies inside the ANSI 5000K 4-step quadrangle

REPORT NUMBER: SP3-2508-516-8

Photopic Flux vs. Wavelength



Photopic Lumens: NR

λ (nm)	Power W ^λ /nm	Lumens (φ/nm)	λ (nm)	Power W ^λ /nm	Lumens (φ/nm)	λ (nm)	Power W ^λ /nm	Lumens (φ/nm)	λ (nm)	Power W ^λ /nm	Lumens (φ/nm)	λ (nm)	Power W ^λ /nm	Lumens (φ/nm)
360	0	NR	490	249	NR	620	343	NR	750	8	NR	880	0	NR
365	0	NR	495	269	NR	625	339	NR	755	7	NR	885	0	NR
370	0	NR	500	296	NR	630	1000	NR	760	6	NR	890	0	NR
375	0	NR	505	325	NR	635	705	NR	765	5	NR	895	0	NR
380	0	NR	510	347	NR	640	221	NR	770	4	NR	900	0	NR
385	0	NR	515	363	NR	645	210	NR	775	4	NR	905	0	NR
390	1	NR	520	371	NR	650	186	NR	780	3	NR	910	0	NR
395	3	NR	525	378	NR	655	155	NR	785	3	NR	915	0	NR
400	4	NR	530	381	NR	660	132	NR	790	2	NR	920	0	NR
405	5	NR	535	383	NR	665	111	NR	795	2	NR	925	0	NR
410	7	NR	540	385	NR	670	102	NR	800	2	NR	930	0	NR
415	10	NR	545	389	NR	675	84	NR	805	1	NR	935	0	NR
420	17	NR	550	391	NR	680	72	NR	810	1	NR	940	0	NR
425	29	NR	555	392	NR	685	62	NR	815	1	NR	945	0	NR
430	53	NR	560	393	NR	690	53	NR	820	1	NR	950	0	NR
435	97	NR	565	394	NR	695	45	NR	825	1	NR	955	0	NR
440	173	NR	570	391	NR	700	39	NR	830	1	NR	960	0	NR
445	321	NR	575	389	NR	705	33	NR	835	1	NR	965	0	NR
450	597	NR	580	385	NR	710	28	NR	840	1	NR	970	0	NR
455	795	NR	585	382	NR	715	24	NR	845	1	NR	975	0	NR
460	615	NR	590	375	NR	720	21	NR	850	0	NR	980	0	NR
465	438	NR	595	367	NR	725	17	NR	855	0	NR	985	0	NR
470	372	NR	600	361	NR	730	15	NR	860	0	NR	990	0	NR
475	290	NR	605	355	NR	735	13	NR	865	0	NR	995	0	NR
480	236	NR	610	383	NR	740	11	NR	870	0	NR	1000	0	NR
485	232	NR	615	408	NR	745	9	NR	875	0	NR			

REPORT NUMBER: SP3-2508-516-8

Scotopic Flux vs. Wavelength



Scotopic Lumens: NR

S/P: 2.11

λ (nm)	Power $\text{W}^\wedge/\text{nm}$	Lumens (ϕ/nm)	λ (nm)	Power $\text{W}^\wedge/\text{nm}$	Lumens (ϕ/nm)	λ (nm)	Power $\text{W}^\wedge/\text{nm}$	Lumens (ϕ/nm)	λ (nm)	Power $\text{W}^\wedge/\text{nm}$	Lumens (ϕ/nm)	λ (nm)	Power $\text{W}^\wedge/\text{nm}$	Lumens (ϕ/nm)
360	0	NR	490	249	NR	620	343	NR	750	8	NR	880	0	NR
365	0	NR	495	269	NR	625	339	NR	755	7	NR	885	0	NR
370	0	NR	500	296	NR	630	1000	NR	760	6	NR	890	0	NR
375	0	NR	505	325	NR	635	705	NR	765	5	NR	895	0	NR
380	0	NR	510	347	NR	640	221	NR	770	4	NR	900	0	NR
385	0	NR	515	363	NR	645	210	NR	775	4	NR	905	0	NR
390	1	NR	520	371	NR	650	186	NR	780	3	NR	910	0	NR
395	3	NR	525	378	NR	655	155	NR	785	3	NR	915	0	NR
400	4	NR	530	381	NR	660	132	NR	790	2	NR	920	0	NR
405	5	NR	535	383	NR	665	111	NR	795	2	NR	925	0	NR
410	7	NR	540	385	NR	670	102	NR	800	2	NR	930	0	NR
415	10	NR	545	389	NR	675	84	NR	805	1	NR	935	0	NR
420	17	NR	550	391	NR	680	72	NR	810	1	NR	940	0	NR
425	29	NR	555	392	NR	685	62	NR	815	1	NR	945	0	NR
430	53	NR	560	393	NR	690	53	NR	820	1	NR	950	0	NR
435	97	NR	565	394	NR	695	45	NR	825	1	NR	955	0	NR
440	173	NR	570	391	NR	700	39	NR	830	1	NR	960	0	NR
445	321	NR	575	389	NR	705	33	NR	835	1	NR	965	0	NR
450	597	NR	580	385	NR	710	28	NR	840	1	NR	970	0	NR
455	795	NR	585	382	NR	715	24	NR	845	1	NR	975	0	NR
460	615	NR	590	375	NR	720	21	NR	850	0	NR	980	0	NR
465	438	NR	595	367	NR	725	17	NR	855	0	NR	985	0	NR
470	372	NR	600	361	NR	730	15	NR	860	0	NR	990	0	NR
475	290	NR	605	355	NR	735	13	NR	865	0	NR	995	0	NR
480	236	NR	610	383	NR	740	11	NR	870	0	NR	1000	0	NR
485	232	NR	615	408	NR	745	9	NR	875	0	NR			

REPORT NUMBER: SP3-2508-516-8

Melanopic Flux vs. Wavelength



Melanopic Lumens: NR

M/P: 4.62

λ (nm)	Power W ^λ /nm	Lumens (φ/nm)	λ (nm)	Power W ^λ /nm	Lumens (φ/nm)	λ (nm)	Power W ^λ /nm	Lumens (φ/nm)	λ (nm)	Power W ^λ /nm	Lumens (φ/nm)	λ (nm)	Power W ^λ /nm	Lumens (φ/nm)
360	0	NR	490	249	NR	620	343	NR	750	8	NR	880	0	NR
365	0	NR	495	269	NR	625	339	NR	755	7	NR	885	0	NR
370	0	NR	500	296	NR	630	1000	NR	760	6	NR	890	0	NR
375	0	NR	505	325	NR	635	705	NR	765	5	NR	895	0	NR
380	0	NR	510	347	NR	640	221	NR	770	4	NR	900	0	NR
385	0	NR	515	363	NR	645	210	NR	775	4	NR	905	0	NR
390	1	NR	520	371	NR	650	186	NR	780	3	NR	910	0	NR
395	3	NR	525	378	NR	655	155	NR	785	3	NR	915	0	NR
400	4	NR	530	381	NR	660	132	NR	790	2	NR	920	0	NR
405	5	NR	535	383	NR	665	111	NR	795	2	NR	925	0	NR
410	7	NR	540	385	NR	670	102	NR	800	2	NR	930	0	NR
415	10	NR	545	389	NR	675	84	NR	805	1	NR	935	0	NR
420	17	NR	550	391	NR	680	72	NR	810	1	NR	940	0	NR
425	29	NR	555	392	NR	685	62	NR	815	1	NR	945	0	NR
430	53	NR	560	393	NR	690	53	NR	820	1	NR	950	0	NR
435	97	NR	565	394	NR	695	45	NR	825	1	NR	955	0	NR
440	173	NR	570	391	NR	700	39	NR	830	1	NR	960	0	NR
445	321	NR	575	389	NR	705	33	NR	835	1	NR	965	0	NR
450	597	NR	580	385	NR	710	28	NR	840	1	NR	970	0	NR
455	795	NR	585	382	NR	715	24	NR	845	1	NR	975	0	NR
460	615	NR	590	375	NR	720	21	NR	850	0	NR	980	0	NR
465	438	NR	595	367	NR	725	17	NR	855	0	NR	985	0	NR
470	372	NR	600	361	NR	730	15	NR	860	0	NR	990	0	NR
475	290	NR	605	355	NR	735	13	NR	865	0	NR	995	0	NR
480	236	NR	610	383	NR	740	11	NR	870	0	NR	1000	0	NR
485	232	NR	615	408	NR	745	9	NR	875	0	NR			

REPORT NUMBER: SP3-2508-516-8


TM-30-18

Summary

$R_f = 89.8$
 $R_g = 98.5$
 $\text{CIE } R_a = 94.6$
 $R_9 = 74.6$



Color Vector Graphics

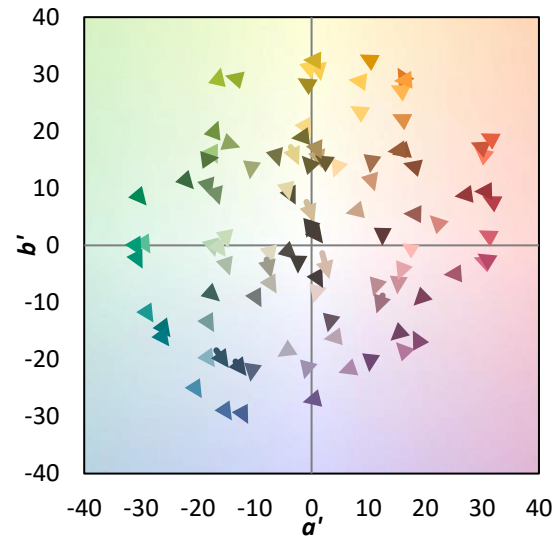

Individual Sample Fidelity Index ($R_{f,i}$)

CES01 = 85	CES26 = 96	CES51 = 93	CES76 = 88
CES02 = 61	CES27 = 88	CES52 = 97	CES77 = 87
CES03 = 31	CES28 = 96	CES53 = 95	CES78 = 85
CES04 = 69	CES29 = 93	CES54 = 89	CES79 = 93
CES05 = 48	CES30 = 81	CES55 = 86	CES80 = 93
CES06 = 50	CES31 = 95	CES56 = 90	CES81 = 80
CES07 = 41	CES32 = 93	CES57 = 87	CES82 = 96
CES08 = 40	CES33 = 91	CES58 = 87	CES83 = 95
CES09 = 29	CES34 = 95	CES59 = 96	CES84 = 93
CES10 = 73	CES35 = 96	CES60 = 89	CES85 = 81
CES11 = 56	CES36 = 74	CES61 = 89	CES86 = 85
CES12 = 62	CES37 = 95	CES62 = 78	CES87 = 93
CES13 = 42	CES38 = 76	CES63 = 89	CES88 = 96
CES14 = 74	CES39 = 98	CES64 = 84	CES89 = 87
CES15 = 71	CES40 = 98	CES65 = 86	CES90 = 93
CES16 = 47	CES41 = 92	CES66 = 81	CES91 = 68
CES17 = 48	CES42 = 95	CES67 = 80	CES92 = 78
CES18 = 56	CES43 = 96	CES68 = 85	CES93 = 86
CES19 = 70	CES44 = 99	CES69 = 85	CES94 = 79
CES20 = 65	CES45 = 100	CES70 = 84	CES95 = 82
CES21 = 85	CES46 = 96	CES71 = 75	CES96 = 93
CES22 = 77	CES47 = 91	CES72 = 92	CES97 = 96
CES23 = 91	CES48 = 84	CES73 = 80	CES98 = 94
CES24 = 90	CES49 = 97	CES74 = 89	CES99 = 92
CES25 = 70	CES50 = 95	CES75 = 78	



Color Rendition by Hue-Angle Bin



Measure Comparisons



(END OF REPORT)