

Cooper Lighting Solutions Photometric Lab  
1121 Highway 74 South  
Peachtree City, GA 30269



Scaled data based on original data using  
LM-79-08 Approved Method: Electrical and Photometric Measurements of Solid-State  
Lighting Products

Test Report Prepared for

Cooper Lighting Solutions

(formerly Eaton)

Brand: METALUX

Report Number: P731876

Luminaire Tested: **14CZ2-35-S-B2750-W2D-2700K**

Issue Date: 1/5/2024



**Test Information**

Test Method: LM-79-08  
Report Number: P731876  
TEST IS SCALED FROM IESNA LM-79-08 TEST DATA (P275670)  
Test Lab: INNOVATION CENTER(G3)  
Issue Date: 1/5/2024  
Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)  
Product Line: METALUX  
Catalog Number: 14CZ2-35-S-B2750-W2D-2700K  
Description: 1X4 3500 LUMEN CRUZE TROFFER WITH BIO UP LEDS AT 2700K CCT AND SMOOTH LENS  
  
Light Source: -  
Ballast/Driver: -

**Summary**


Lumens per Lamp: N/A  
Luminaire Lumens: 3436.0 lumens  
Efficiency: N/A  
Efficacy: 122.7 lumens/watt  
Spacing Criteria (0/90/45): 1.19 / 1.26 / 1.36  
Luminous Opening: Rectangular (W 0.96' x L: 3.98' x H: 0')  
CIE Type: Direct

Input Watts (W): 28  
Input Voltage (V): NR  
Input Current (Ain): NR  
Voltage Rise (V): NR  
Power Factor: NR  
Total Harmonic Distortion (THDi): NR  
Frequency (hertz): 60  
Stabilization Time: NR  
Operation Time: NR  
Ambient Temperature (°C): NR  
Test Distance: 25 FT

TEST NUMBER: P731876

CATALOG NUMBER: 14CZ2-35-S-B2750-W2D-2700K

### Luminous Intensity Polar Plot

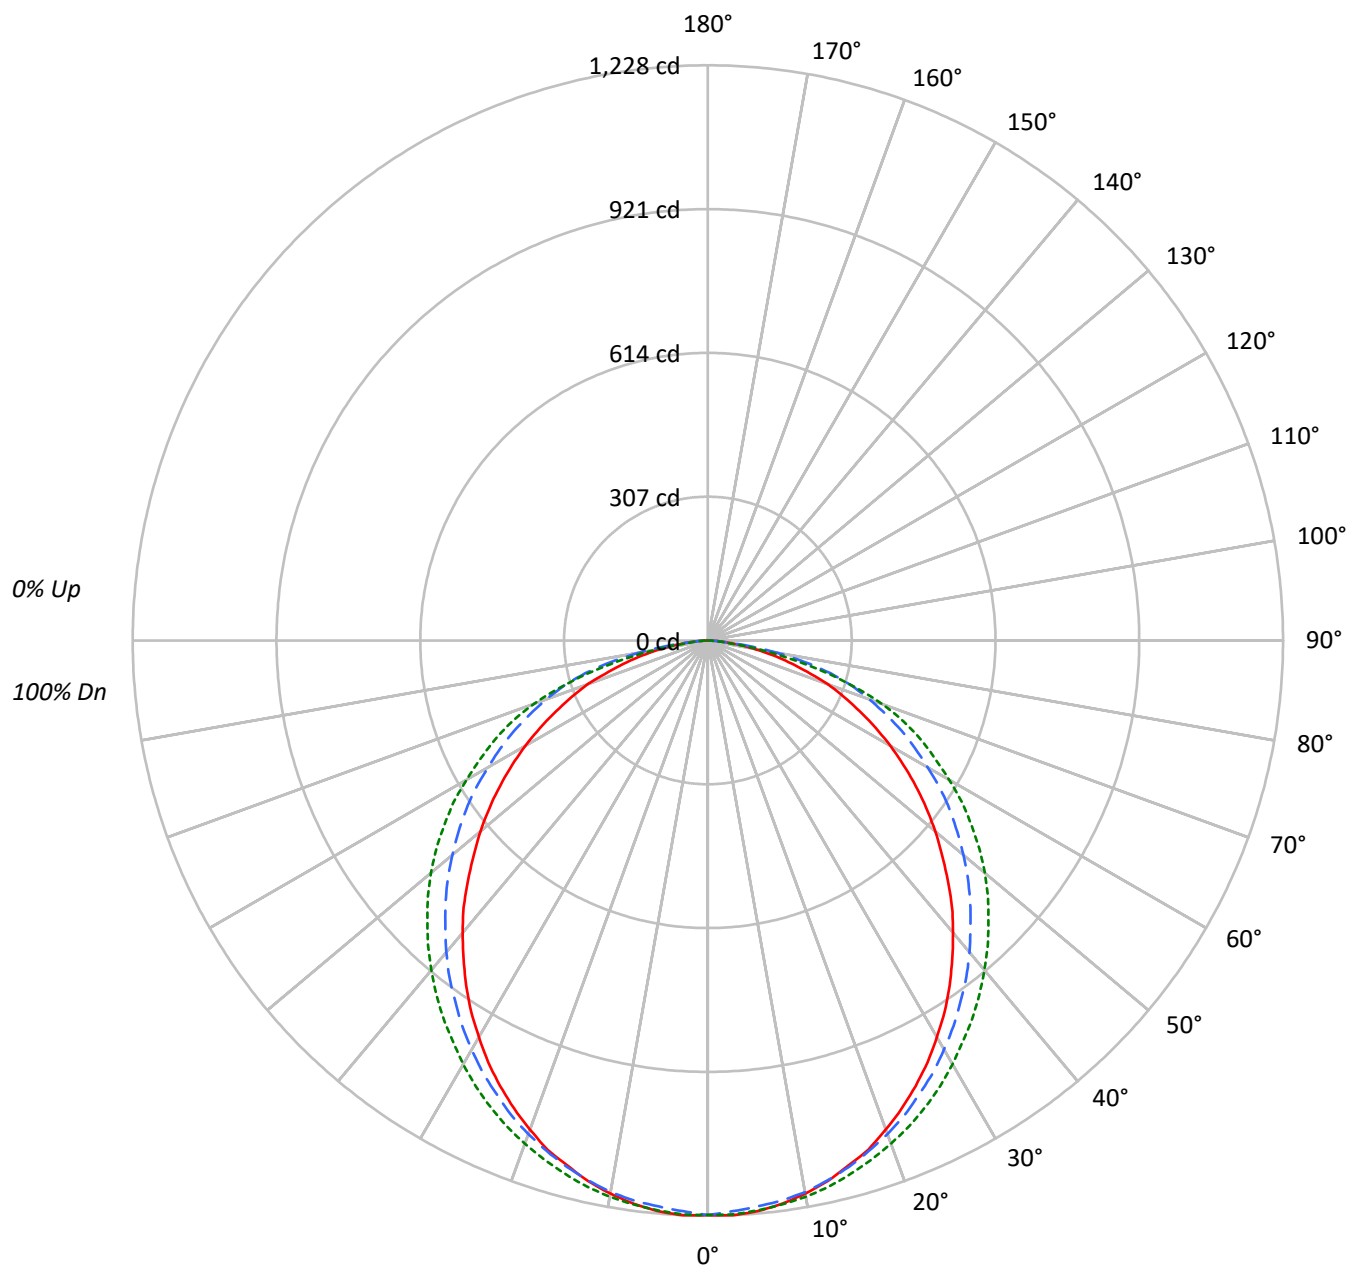



TEST NUMBER: P731876

CATALOG NUMBER: 14CZ2-35-S-B2750-W2D-2700K

**COEFFICIENT OF UTILIZATION - ZONAL CAVITY METHOD:**

|     |     |     |     |     |     |     |     |     |  |     |     |     |  |     |     |     |  |     |     |     |
|-----|-----|-----|-----|-----|-----|-----|-----|-----|--|-----|-----|-----|--|-----|-----|-----|--|-----|-----|-----|
| RF  | 20  |     |     |     | 20  |     |     |     |  | 20  |     |     |  |     | 20  |     |  |     |     | 20  |
| RC  | 80  |     |     |     | 70  |     |     |     |  | 50  |     |     |  |     | 30  |     |  |     |     | 10  |
| RW  | 70  | 50  | 30  | 10  | 70  | 50  | 30  | 10  |  | 50  | 30  | 10  |  | 50  | 30  | 10  |  | 50  | 30  | 10  |
| RCR |     |     |     |     |     |     |     |     |  |     |     |     |  |     |     |     |  |     |     |     |
| 0   | 119 | 119 | 119 | 119 | 116 | 116 | 116 | 116 |  | 111 | 111 | 111 |  | 106 | 106 | 106 |  | 102 | 102 | 102 |
| 1   | 109 | 104 | 100 | 96  | 106 | 102 | 98  | 94  |  | 97  | 94  | 91  |  | 94  | 91  | 89  |  | 90  | 88  | 86  |
| 2   | 99  | 90  | 84  | 78  | 96  | 89  | 82  | 77  |  | 85  | 80  | 75  |  | 82  | 77  | 73  |  | 79  | 75  | 72  |
| 3   | 90  | 79  | 71  | 65  | 87  | 78  | 70  | 64  |  | 75  | 68  | 63  |  | 72  | 66  | 62  |  | 69  | 65  | 61  |
| 4   | 82  | 70  | 61  | 55  | 80  | 69  | 61  | 54  |  | 66  | 59  | 53  |  | 64  | 58  | 53  |  | 62  | 56  | 52  |
| 5   | 76  | 63  | 54  | 47  | 74  | 62  | 53  | 47  |  | 59  | 52  | 46  |  | 57  | 51  | 46  |  | 56  | 50  | 45  |
| 6   | 70  | 56  | 47  | 41  | 68  | 55  | 47  | 41  |  | 54  | 46  | 40  |  | 52  | 45  | 40  |  | 50  | 44  | 40  |
| 7   | 65  | 51  | 42  | 36  | 63  | 50  | 42  | 36  |  | 49  | 41  | 36  |  | 47  | 41  | 35  |  | 46  | 40  | 35  |
| 8   | 60  | 47  | 38  | 32  | 59  | 46  | 38  | 32  |  | 45  | 37  | 32  |  | 43  | 37  | 32  |  | 42  | 36  | 32  |
| 9   | 56  | 43  | 35  | 29  | 55  | 42  | 34  | 29  |  | 41  | 34  | 29  |  | 40  | 33  | 29  |  | 39  | 33  | 28  |
| 10  | 53  | 40  | 32  | 26  | 52  | 39  | 31  | 26  |  | 38  | 31  | 26  |  | 37  | 31  | 26  |  | 36  | 30  | 26  |

**AVERAGE LUMINANCE (cd/sqm):**

|     | 0°   | 45°  | 90°  |
|-----|------|------|------|
| 0°  | 3462 | 3462 | 3462 |
| 5°  | 3466 | 3437 | 3461 |
| 10° | 3437 | 3428 | 3457 |
| 15° | 3390 | 3400 | 3445 |
| 20° | 3337 | 3367 | 3434 |
| 25° | 3268 | 3327 | 3423 |
| 30° | 3187 | 3287 | 3404 |
| 35° | 3100 | 3240 | 3393 |
| 40° | 3000 | 3201 | 3384 |
| 45° | 2890 | 3162 | 3380 |
| 50° | 2783 | 3127 | 3389 |
| 55° | 2666 | 3102 | 3379 |
| 60° | 2540 | 3058 | 3356 |
| 65° | 2390 | 3049 | 3358 |
| 70° | 2250 | 3024 | 3262 |
| 75° | 1951 | 2956 | 2786 |
| 80° | 1578 | 2381 | 1856 |
| 85° | 1049 | 826  | 554  |



TEST NUMBER: P731876

CATALOG NUMBER: 14CZ2-35-S-B2750-W2D-2700K

**ZONAL LUMENS:**

| Zone      | Lumens | % Fixture |
|-----------|--------|-----------|
| 0°-10°    | 115.8  | 3.4       |
| 10°-20°   | 329.6  | 9.6       |
| 20°-30°   | 494.4  | 14.4      |
| 30°-40°   | 589.8  | 17.2      |
| 40°-50°   | 609.7  | 17.7      |
| 50°-60°   | 556.7  | 16.2      |
| 60°-70°   | 438.1  | 12.7      |
| 70°-80°   | 255.0  | 7.4       |
| 80°-90°   | 47.0   | 1.4       |
| 90°-100°  | 0.0    | 0.0       |
| 100°-110° | 0.0    | 0.0       |
| 110°-120° | 0.0    | 0.0       |
| 120°-130° | 0.0    | 0.0       |
| 130°-140° | 0.0    | 0.0       |
| 140°-150° | 0.0    | 0.0       |
| 150°-160° | 0.0    | 0.0       |
| 160°-170° | 0.0    | 0.0       |
| 170°-180° | 0.0    | 0.0       |
| 0°-30°    | 939.8  | 27.4      |
| 0°-40°    | 1529.6 | 44.5      |
| 0°-60°    | 2696.0 | 78.5      |
| 0°-90°    | 3436.0 | 100.0     |
| 90°-120°  | 0.0    | 0.0       |
| 90°-150°  | 0.0    | 0.0       |
| 90°-180°  | 0.0    | 0.0       |
| 0°-180°   | 3436.0 | 100.0     |

**CANDELA DISTRIBUTION:**

|     | 0°   | 22.5° | 45°  | 67.5° | 90°  | Flux |
|-----|------|-------|------|-------|------|------|
| 0°  | 1227 | 1227  | 1227 | 1227  | 1227 |      |
| 5°  | 1223 | 1220  | 1213 | 1223  | 1221 | 116  |
| 15° | 1160 | 1162  | 1164 | 1179  | 1179 | 327  |
| 25° | 1049 | 1055  | 1068 | 1094  | 1099 | 483  |
| 35° | 900  | 911   | 940  | 976   | 985  | 562  |
| 45° | 724  | 748   | 792  | 836   | 847  | 559  |
| 55° | 542  | 571   | 630  | 676   | 687  | 484  |
| 65° | 358  | 395   | 456  | 492   | 503  | 355  |
| 75° | 179  | 222   | 271  | 266   | 256  | 190  |
| 85° | 32   | 46    | 26   | 20    | 17   | 42   |
| 90° | 0    | 0     | 0    | 0     | 0    |      |



TEST NUMBER: P731876

CATALOG NUMBER: 14CZ2-35-S-B2750-W2D-2700K

**CANDELA DISTRIBUTION (FULL):**

|       | 0°     | 22.5°  | 45°    | 67.5°  | 90°    |
|-------|--------|--------|--------|--------|--------|
| 0°    | 1226.6 | 1226.6 | 1226.6 | 1226.6 | 1226.6 |
| 2.5°  | 1228.3 | 1224.9 | 1219.7 | 1228.3 | 1226.6 |
| 5°    | 1223.3 | 1219.7 | 1213.0 | 1223.3 | 1221.4 |
| 7.5°  | 1213.0 | 1209.5 | 1206.1 | 1216.4 | 1214.7 |
| 10°   | 1199.3 | 1197.6 | 1195.9 | 1207.8 | 1206.1 |
| 12.5° | 1182.4 | 1182.4 | 1180.7 | 1194.2 | 1194.2 |
| 15°   | 1160.2 | 1161.9 | 1163.6 | 1178.8 | 1178.8 |
| 17.5° | 1139.8 | 1138.1 | 1143.1 | 1160.2 | 1161.9 |
| 20°   | 1110.8 | 1114.1 | 1121.0 | 1141.4 | 1143.1 |
| 22.5° | 1081.7 | 1085.3 | 1097.2 | 1117.6 | 1122.6 |
| 25°   | 1049.4 | 1054.6 | 1068.2 | 1093.6 | 1098.9 |
| 27.5° | 1015.4 | 1022.2 | 1040.8 | 1068.2 | 1073.2 |
| 30°   | 977.8  | 988.0  | 1008.5 | 1039.1 | 1044.4 |
| 32.5° | 940.4  | 950.6  | 976.1  | 1006.8 | 1013.7 |
| 35°   | 899.5  | 911.4  | 940.4  | 976.1  | 984.7  |
| 37.5° | 856.9  | 872.2  | 906.4  | 942.1  | 952.3  |
| 40°   | 814.3  | 831.4  | 868.8  | 906.4  | 918.3  |
| 42.5° | 771.7  | 788.9  | 829.6  | 872.2  | 884.3  |
| 45°   | 723.9  | 747.9  | 792.2  | 836.5  | 846.7  |
| 47.5° | 678.0  | 703.7  | 753.0  | 797.2  | 811.0  |
| 50°   | 633.8  | 659.2  | 712.0  | 758.2  | 771.7  |
| 52.5° | 587.8  | 615.0  | 671.1  | 718.9  | 730.8  |
| 55°   | 541.7  | 570.7  | 630.4  | 676.3  | 686.6  |
| 57.5° | 495.8  | 526.5  | 587.8  | 632.1  | 644.0  |
| 60°   | 449.9  | 482.2  | 541.7  | 586.0  | 594.5  |
| 62.5° | 403.7  | 437.7  | 499.1  | 538.4  | 546.9  |
| 65°   | 357.8  | 395.2  | 456.5  | 492.4  | 502.7  |
| 67.5° | 313.5  | 350.9  | 410.6  | 444.6  | 453.2  |
| 70°   | 272.6  | 306.7  | 366.4  | 391.8  | 395.2  |
| 72.5° | 221.5  | 264.1  | 321.9  | 335.7  | 327.1  |
| 75°   | 178.9  | 221.5  | 271.0  | 265.7  | 255.5  |
| 77.5° | 136.3  | 178.9  | 211.3  | 194.1  | 180.6  |
| 80°   | 97.1   | 139.7  | 146.5  | 120.9  | 114.2  |
| 82.5° | 63.0   | 97.1   | 81.8   | 63.0   | 51.1   |
| 85°   | 32.4   | 45.9   | 25.5   | 20.5   | 17.1   |
| 87.5° | 10.2   | 6.9    | 3.3    | 3.3    | 1.7    |
| 90°   | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    |



Report Generated By 670246072 / DESKTOP-50001EG





— 0°-180°    - - 45°-225°    - - - 90°-270°







LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-State Lighting Products

Report Prepared for

Cooper Lighting Solutions

(formerly Eaton)

METALUX

Report Number: SP1-2210-795-1

Test Date: 10/06/2022

Luminaire Tested: 9WP217084MDER4AM-2700K-315MA

Data in this report applies to families of products including 9WP217084MDER4AM-2700K.


### Test Information

Test Method: LM-79-2019  
 Report Number: SP1-2210-795-1  
 Test Lab: COOPER LIGHTING SOLUTIONS  
 Photometer: SP1 - 76IN SPHERE  
 Measurement Geometry:  $4\pi$   
 Issue Date: 10/06/2022  
 Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)  
 Product Line: METALUX  
 Catalog Number: **9WP217084MDER4AM-2700K-315MA**  
 Description: METALUX

TUNABLE BOARD, 2700K-315MA, PROGRAMMED @0Vdc

### Spectral Parameters

|                           |         |           |      |      |      |
|---------------------------|---------|-----------|------|------|------|
| CCT (K):                  | 2666    | CRI (Ra): | 94.1 |      |      |
| CIE u':                   | 0.2643  | R1:       | 96.2 | R9:  | 58.8 |
| CIE v':                   | 0.5262  | R2:       | 97.9 | R10: | 93.6 |
| Duv:                      | -0.0012 | R3:       | 98.1 | R11: | 96.6 |
| CIE x:                    | 0.4604  | R4:       | 96.1 | R12: | 90.2 |
| CIE y:                    | 0.4075  | R5:       | 96.2 | R13: | 96.8 |
| CIE z:                    | 0.1321  | R6:       | 96.5 | R14: | 97.5 |
| Peak Wavelength (nm):     | 632     | R7:       | 90.7 |      |      |
| Dominant Wavelength (nm): | 584     | R8:       | 81.4 |      |      |
| Purity:                   | 61      |           |      |      |      |
| Rf:                       | 91.5    |           |      |      |      |
| Rg:                       | 101.3   |           |      |      |      |

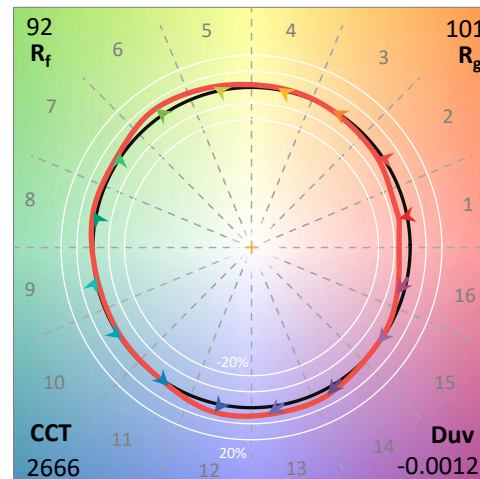

### Test Conditions


Stabilization Time: 146M  
 Operation Time: 12H  
 Room Temperature (°C) / RH%: 24.0/38%  
 Sphere Temperature (°C): 24.4

REPORT NUMBER: SP1-2210-795-1


| Measurement and Test Equipment |                       |                  |                      |
|--------------------------------|-----------------------|------------------|----------------------|
| Instrument                     | Identification Number | Calibration Date | Calibration Due Date |
| Photometer                     | 76INCH SPHERE IN0058  | 8/8/2022         | 2/8/2023             |
| Power Meter                    | XITRON 2801 IN0071    | 11/29/2021       | 11/29/2022           |
| AC Power Source                | CHROMA 61603 IN0063   | 11/29/2021       | 11/29/2022           |
| DC Power Source                | AGILENT E3634A IN0208 | 11/29/2021       | 11/29/2022           |
| Sphere Thermometer             | ONSET IN0085          | 11/29/2021       | 11/29/2022           |
| Room Thermometer               | ONSET IN0046          | 11/29/2021       | 11/29/2022           |

REPORT NUMBER: SP1-2210-795-1

**CIE 1931 Chromaticity Diagram**

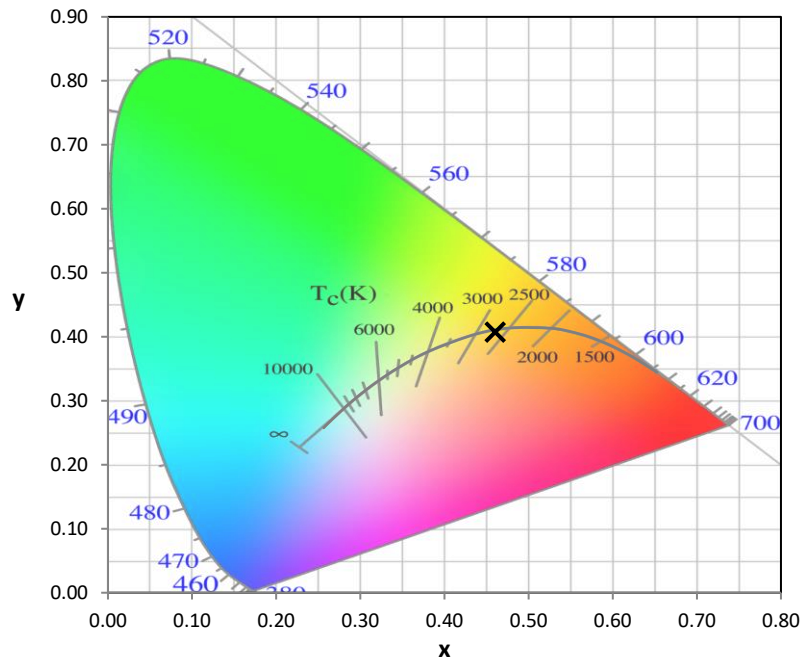

**CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles**

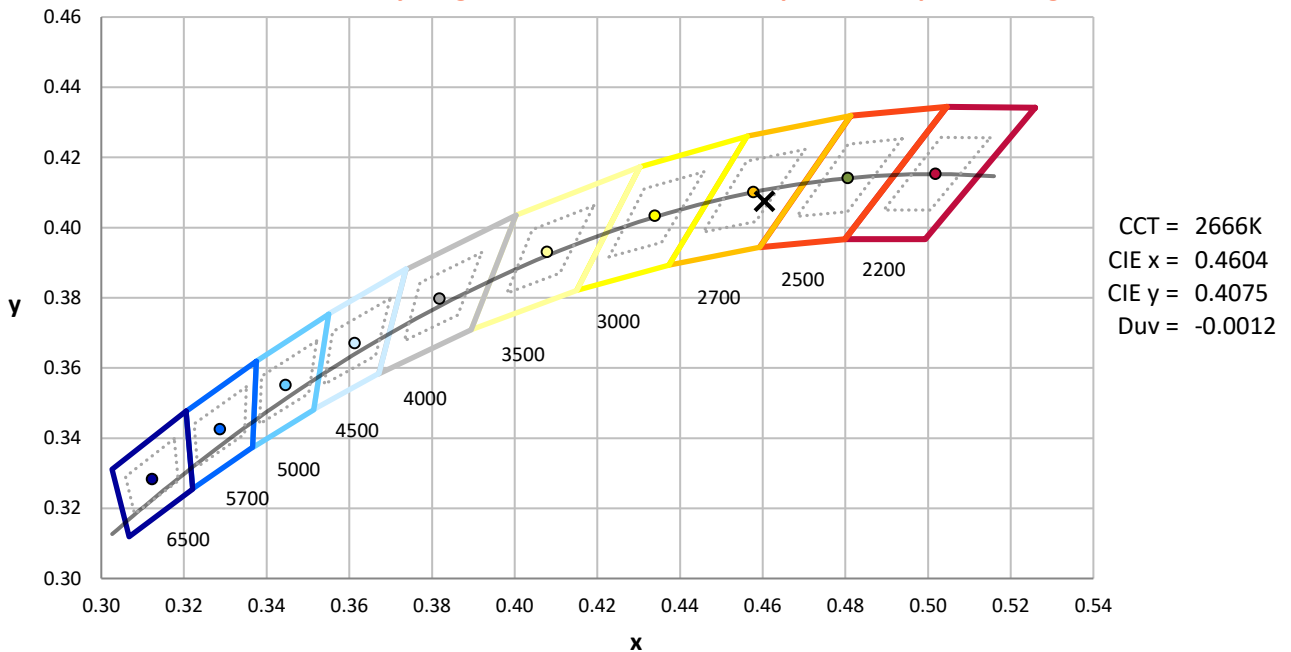

Point lies inside the ANSI 2700K 4-step quadrangle

REPORT NUMBER: SP1-2210-795-1

**Photopic Flux vs. Wavelength**




#####

| λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) |
|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|
| 360       | 960              | NR               | 490       | 11655            | NR               | 620       | 48137            | NR               | 750       | 2159             | NR               | 880       | 1428             | NR               |
| 365       | 835              | NR               | 495       | 14187            | NR               | 625       | 48484            | NR               | 755       | 2025             | NR               | 885       | 1524             | NR               |
| 370       | 889              | NR               | 500       | 17034            | NR               | 630       | 97268            | NR               | 760       | 1802             | NR               | 890       | 1952             | NR               |
| 375       | 919              | NR               | 505       | 19485            | NR               | 635       | 78475            | NR               | 765       | 1584             | NR               | 895       | 1011             | NR               |
| 380       | 1009             | NR               | 510       | 21619            | NR               | 640       | 35314            | NR               | 770       | 1353             | NR               | 900       | 1014             | NR               |
| 385       | 1040             | NR               | 515       | 23444            | NR               | 645       | 34925            | NR               | 775       | 1274             | NR               | 905       | 955              | NR               |
| 390       | 939              | NR               | 520       | 24555            | NR               | 650       | 32851            | NR               | 780       | 1257             | NR               | 910       | 1509             | NR               |
| 395       | 813              | NR               | 525       | 25491            | NR               | 655       | 23599            | NR               | 785       | 1107             | NR               | 915       | 1506             | NR               |
| 400       | 710              | NR               | 530       | 26360            | NR               | 660       | 19532            | NR               | 790       | 1143             | NR               | 920       | 1068             | NR               |
| 405       | 620              | NR               | 535       | 27190            | NR               | 665       | 16486            | NR               | 795       | 1531             | NR               | 925       | 638              | NR               |
| 410       | 774              | NR               | 540       | 28277            | NR               | 670       | 14655            | NR               | 800       | 1331             | NR               | 930       | 1536             | NR               |
| 415       | 979              | NR               | 545       | 29229            | NR               | 675       | 12412            | NR               | 805       | 1467             | NR               | 935       | 842              | NR               |
| 420       | 1333             | NR               | 550       | 30350            | NR               | 680       | 10584            | NR               | 810       | 1194             | NR               | 940       | 1826             | NR               |
| 425       | 2180             | NR               | 555       | 31650            | NR               | 685       | 9145             | NR               | 815       | 1068             | NR               | 945       | 1708             | NR               |
| 430       | 3664             | NR               | 560       | 33070            | NR               | 690       | 7913             | NR               | 820       | 903              | NR               | 950       | 1541             | NR               |
| 435       | 5835             | NR               | 565       | 34723            | NR               | 695       | 6836             | NR               | 825       | 1155             | NR               | 955       | 1365             | NR               |
| 440       | 9472             | NR               | 570       | 36375            | NR               | 700       | 6062             | NR               | 830       | 1254             | NR               | 960       | 2795             | NR               |
| 445       | 15693            | NR               | 575       | 38067            | NR               | 705       | 5352             | NR               | 835       | 969              | NR               | 965       | 2273             | NR               |
| 450       | 21182            | NR               | 580       | 39619            | NR               | 710       | 4621             | NR               | 840       | 885              | NR               | 970       | 2269             | NR               |
| 455       | 18329            | NR               | 585       | 41308            | NR               | 715       | 4197             | NR               | 845       | 1169             | NR               | 975       | 2026             | NR               |
| 460       | 13472            | NR               | 590       | 42407            | NR               | 720       | 3736             | NR               | 850       | 1432             | NR               | 980       | 3840             | NR               |
| 465       | 11611            | NR               | 595       | 43552            | NR               | 725       | 3370             | NR               | 855       | 1474             | NR               | 985       | 2004             | NR               |
| 470       | 9668             | NR               | 600       | 44708            | NR               | 730       | 2929             | NR               | 860       | 1037             | NR               | 990       | 2889             | NR               |
| 475       | 8254             | NR               | 605       | 47912            | NR               | 735       | 2599             | NR               | 865       | 1441             | NR               | 995       | 2268             | NR               |
| 480       | 8432             | NR               | 610       | 64799            | NR               | 740       | 2366             | NR               | 870       | 1316             | NR               | 1000      | 2322             | NR               |
| 485       | 9747             | NR               | 615       | 67855            | NR               | 745       | 2257             | NR               | 875       | 1515             | NR               |           |                  |                  |

REPORT NUMBER: SP1-2210-795-1

**Scotopic Flux vs. Wavelength**

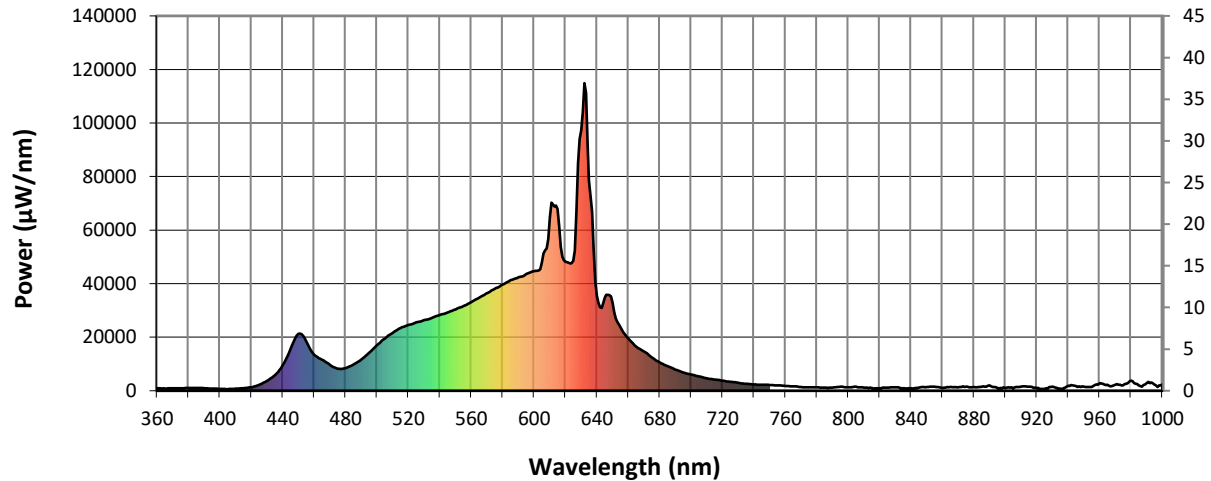

**Scotopic Lumens: 3229.5**

**S/P: 1.28**

| λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) |
|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|
| 360       | 960              | NR               | 490       | 11655            | NR               | 620       | 48137            | NR               | 750       | 2159             | NR               | 880       | 1428             | NR               |
| 365       | 835              | NR               | 495       | 14187            | NR               | 625       | 48484            | NR               | 755       | 2025             | NR               | 885       | 1524             | NR               |
| 370       | 889              | NR               | 500       | 17034            | NR               | 630       | 97268            | NR               | 760       | 1802             | NR               | 890       | 1952             | NR               |
| 375       | 919              | NR               | 505       | 19485            | NR               | 635       | 78475            | NR               | 765       | 1584             | NR               | 895       | 1011             | NR               |
| 380       | 1009             | NR               | 510       | 21619            | NR               | 640       | 35314            | NR               | 770       | 1353             | NR               | 900       | 1014             | NR               |
| 385       | 1040             | NR               | 515       | 23444            | NR               | 645       | 34925            | NR               | 775       | 1274             | NR               | 905       | 955              | NR               |
| 390       | 939              | NR               | 520       | 24555            | NR               | 650       | 32851            | NR               | 780       | 1257             | NR               | 910       | 1509             | NR               |
| 395       | 813              | NR               | 525       | 25491            | NR               | 655       | 23599            | NR               | 785       | 1107             | NR               | 915       | 1506             | NR               |
| 400       | 710              | NR               | 530       | 26360            | NR               | 660       | 19532            | NR               | 790       | 1143             | NR               | 920       | 1068             | NR               |
| 405       | 620              | NR               | 535       | 27190            | NR               | 665       | 16486            | NR               | 795       | 1531             | NR               | 925       | 638              | NR               |
| 410       | 774              | NR               | 540       | 28277            | NR               | 670       | 14655            | NR               | 800       | 1331             | NR               | 930       | 1536             | NR               |
| 415       | 979              | NR               | 545       | 29229            | NR               | 675       | 12412            | NR               | 805       | 1467             | NR               | 935       | 842              | NR               |
| 420       | 1333             | NR               | 550       | 30350            | NR               | 680       | 10584            | NR               | 810       | 1194             | NR               | 940       | 1826             | NR               |
| 425       | 2180             | NR               | 555       | 31650            | NR               | 685       | 9145             | NR               | 815       | 1068             | NR               | 945       | 1708             | NR               |
| 430       | 3664             | NR               | 560       | 33070            | NR               | 690       | 7913             | NR               | 820       | 903              | NR               | 950       | 1541             | NR               |
| 435       | 5835             | NR               | 565       | 34723            | NR               | 695       | 6836             | NR               | 825       | 1155             | NR               | 955       | 1365             | NR               |
| 440       | 9472             | NR               | 570       | 36375            | NR               | 700       | 6062             | NR               | 830       | 1254             | NR               | 960       | 2795             | NR               |
| 445       | 15693            | NR               | 575       | 38067            | NR               | 705       | 5352             | NR               | 835       | 969              | NR               | 965       | 2273             | NR               |
| 450       | 21182            | NR               | 580       | 39619            | NR               | 710       | 4621             | NR               | 840       | 885              | NR               | 970       | 2269             | NR               |
| 455       | 18329            | NR               | 585       | 41308            | NR               | 715       | 4197             | NR               | 845       | 1169             | NR               | 975       | 2026             | NR               |
| 460       | 13472            | NR               | 590       | 42407            | NR               | 720       | 3736             | NR               | 850       | 1432             | NR               | 980       | 3840             | NR               |
| 465       | 11611            | NR               | 595       | 43552            | NR               | 725       | 3370             | NR               | 855       | 1474             | NR               | 985       | 2004             | NR               |
| 470       | 9668             | NR               | 600       | 44708            | NR               | 730       | 2929             | NR               | 860       | 1037             | NR               | 990       | 2889             | NR               |
| 475       | 8254             | NR               | 605       | 47912            | NR               | 735       | 2599             | NR               | 865       | 1441             | NR               | 995       | 2268             | NR               |
| 480       | 8432             | NR               | 610       | 64799            | NR               | 740       | 2366             | NR               | 870       | 1316             | NR               | 1000      | 2322             | NR               |
| 485       | 9747             | NR               | 615       | 67855            | NR               | 745       | 2257             | NR               | 875       | 1515             | NR               |           |                  |                  |

REPORT NUMBER: SP1-2210-795-1

**Melanopic Flux vs. Wavelength**



**Melanopic Lumens: 1204.8**

**S/P: 0.48**

| λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) |
|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|
| 360       | 960              | NR               | 490       | 11655            | NR               | 620       | 48137            | NR               | 750       | 2159             | NR               | 880       | 1428             | NR               |
| 365       | 835              | NR               | 495       | 14187            | NR               | 625       | 48484            | NR               | 755       | 2025             | NR               | 885       | 1524             | NR               |
| 370       | 889              | NR               | 500       | 17034            | NR               | 630       | 97268            | NR               | 760       | 1802             | NR               | 890       | 1952             | NR               |
| 375       | 919              | NR               | 505       | 19485            | NR               | 635       | 78475            | NR               | 765       | 1584             | NR               | 895       | 1011             | NR               |
| 380       | 1009             | NR               | 510       | 21619            | NR               | 640       | 35314            | NR               | 770       | 1353             | NR               | 900       | 1014             | NR               |
| 385       | 1040             | NR               | 515       | 23444            | NR               | 645       | 34925            | NR               | 775       | 1274             | NR               | 905       | 955              | NR               |
| 390       | 939              | NR               | 520       | 24555            | NR               | 650       | 32851            | NR               | 780       | 1257             | NR               | 910       | 1509             | NR               |
| 395       | 813              | NR               | 525       | 25491            | NR               | 655       | 23599            | NR               | 785       | 1107             | NR               | 915       | 1506             | NR               |
| 400       | 710              | NR               | 530       | 26360            | NR               | 660       | 19532            | NR               | 790       | 1143             | NR               | 920       | 1068             | NR               |
| 405       | 620              | NR               | 535       | 27190            | NR               | 665       | 16486            | NR               | 795       | 1531             | NR               | 925       | 638              | NR               |
| 410       | 774              | NR               | 540       | 28277            | NR               | 670       | 14655            | NR               | 800       | 1331             | NR               | 930       | 1536             | NR               |
| 415       | 979              | NR               | 545       | 29229            | NR               | 675       | 12412            | NR               | 805       | 1467             | NR               | 935       | 842              | NR               |
| 420       | 1333             | NR               | 550       | 30350            | NR               | 680       | 10584            | NR               | 810       | 1194             | NR               | 940       | 1826             | NR               |
| 425       | 2180             | NR               | 555       | 31650            | NR               | 685       | 9145             | NR               | 815       | 1068             | NR               | 945       | 1708             | NR               |
| 430       | 3664             | NR               | 560       | 33070            | NR               | 690       | 7913             | NR               | 820       | 903              | NR               | 950       | 1541             | NR               |
| 435       | 5835             | NR               | 565       | 34723            | NR               | 695       | 6836             | NR               | 825       | 1155             | NR               | 955       | 1365             | NR               |
| 440       | 9472             | NR               | 570       | 36375            | NR               | 700       | 6062             | NR               | 830       | 1254             | NR               | 960       | 2795             | NR               |
| 445       | 15693            | NR               | 575       | 38067            | NR               | 705       | 5352             | NR               | 835       | 969              | NR               | 965       | 2273             | NR               |
| 450       | 21182            | NR               | 580       | 39619            | NR               | 710       | 4621             | NR               | 840       | 885              | NR               | 970       | 2269             | NR               |
| 455       | 18329            | NR               | 585       | 41308            | NR               | 715       | 4197             | NR               | 845       | 1169             | NR               | 975       | 2026             | NR               |
| 460       | 13472            | NR               | 590       | 42407            | NR               | 720       | 3736             | NR               | 850       | 1432             | NR               | 980       | 3840             | NR               |
| 465       | 11611            | NR               | 595       | 43552            | NR               | 725       | 3370             | NR               | 855       | 1474             | NR               | 985       | 2004             | NR               |
| 470       | 9668             | NR               | 600       | 44708            | NR               | 730       | 2929             | NR               | 860       | 1037             | NR               | 990       | 2889             | NR               |
| 475       | 8254             | NR               | 605       | 47912            | NR               | 735       | 2599             | NR               | 865       | 1441             | NR               | 995       | 2268             | NR               |
| 480       | 8432             | NR               | 610       | 64799            | NR               | 740       | 2366             | NR               | 870       | 1316             | NR               | 1000      | 2322             | NR               |
| 485       | 9747             | NR               | 615       | 67855            | NR               | 745       | 2257             | NR               | 875       | 1515             | NR               |           |                  |                  |

REPORT NUMBER: SP1-2210-795-1


**TM-30-18**

**Summary**

$R_f = 91.5$   
 $R_g = 101.3$   
 CIE  $R_a = 94.1$   
 $R_g = 58.8$



**Color Vector Graphics**

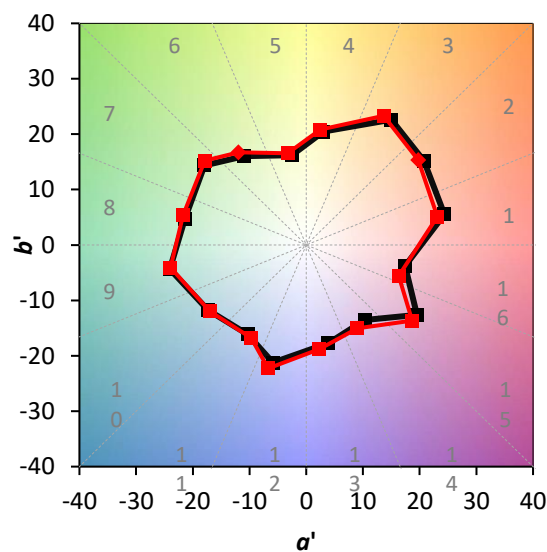


REPORT NUMBER: SP1-2210-795-1

TM-30-18

Individual Sample Fidelity Index ( $R_{f,i}$ )




|            |            |            |            |
|------------|------------|------------|------------|
| CES01 = 86 | CES26 = 92 | CES51 = 96 | CES76 = 91 |
| CES02 = 64 | CES27 = 97 | CES52 = 95 | CES77 = 83 |
| CES03 = 32 | CES28 = 97 | CES53 = 93 | CES78 = 88 |
| CES04 = 71 | CES29 = 91 | CES54 = 98 | CES79 = 87 |
| CES05 = 51 | CES30 = 96 | CES55 = 99 | CES80 = 90 |
| CES06 = 51 | CES31 = 91 | CES56 = 95 | CES81 = 67 |
| CES07 = 44 | CES32 = 84 | CES57 = 95 | CES82 = 95 |
| CES08 = 43 | CES33 = 92 | CES58 = 95 | CES83 = 92 |
| CES09 = 29 | CES34 = 94 | CES59 = 99 | CES84 = 96 |
| CES10 = 77 | CES35 = 97 | CES60 = 97 | CES85 = 79 |
| CES11 = 59 | CES36 = 91 | CES61 = 97 | CES86 = 75 |
| CES12 = 66 | CES37 = 94 | CES62 = 94 | CES87 = 92 |
| CES13 = 45 | CES38 = 99 | CES63 = 94 | CES88 = 96 |
| CES14 = 74 | CES39 = 97 | CES64 = 97 | CES89 = 81 |
| CES15 = 72 | CES40 = 94 | CES65 = 92 | CES90 = 97 |
| CES16 = 48 | CES41 = 94 | CES66 = 95 | CES91 = 86 |
| CES17 = 50 | CES42 = 92 | CES67 = 95 | CES92 = 78 |
| CES18 = 57 | CES43 = 90 | CES68 = 94 | CES93 = 87 |
| CES19 = 72 | CES44 = 99 | CES69 = 95 | CES94 = 72 |
| CES20 = 68 | CES45 = 94 | CES70 = 92 | CES95 = 86 |
| CES21 = 87 | CES46 = 93 | CES71 = 92 | CES96 = 92 |
| CES22 = 79 | CES47 = 84 | CES72 = 97 | CES97 = 93 |
| CES23 = 92 | CES48 = 94 | CES73 = 88 | CES98 = 93 |
| CES24 = 91 | CES49 = 91 | CES74 = 88 | CES99 = 92 |
| CES25 = 72 | CES50 = 96 | CES75 = 92 |            |

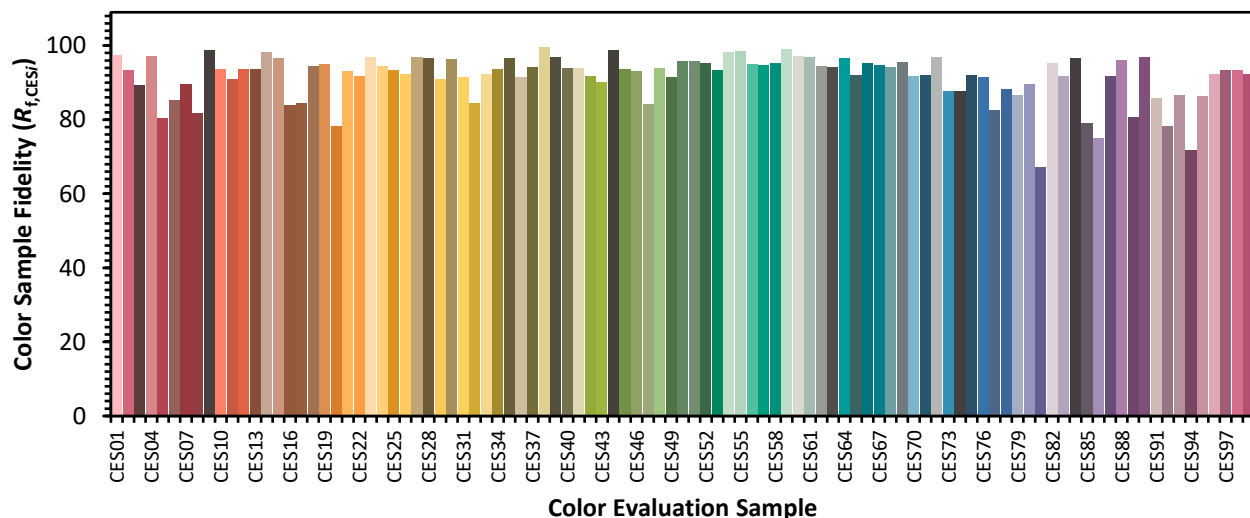

REPORT NUMBER: SP1-2210-795-1

**TM-30-18**

**Color Rendition by Hue-Angle Bin**

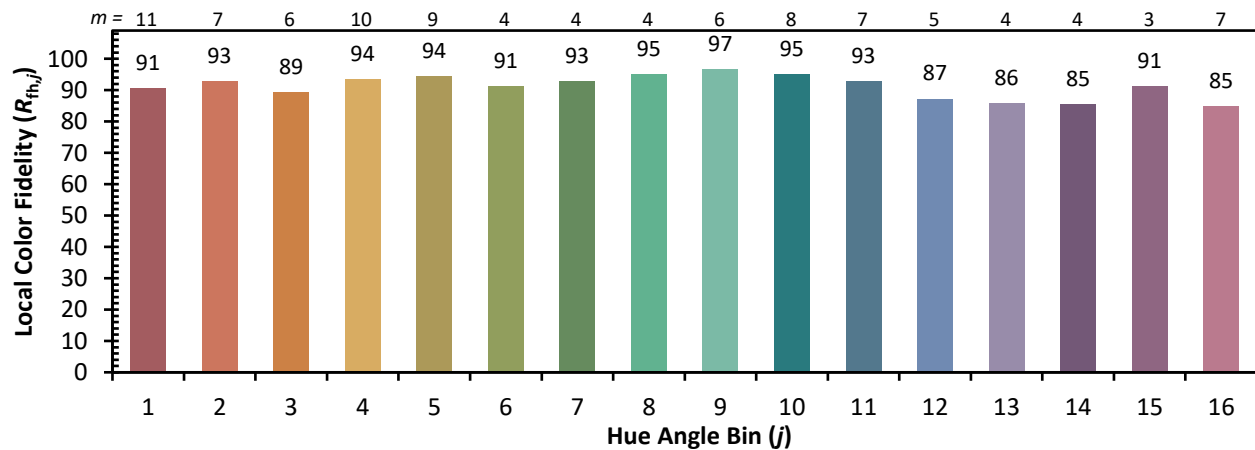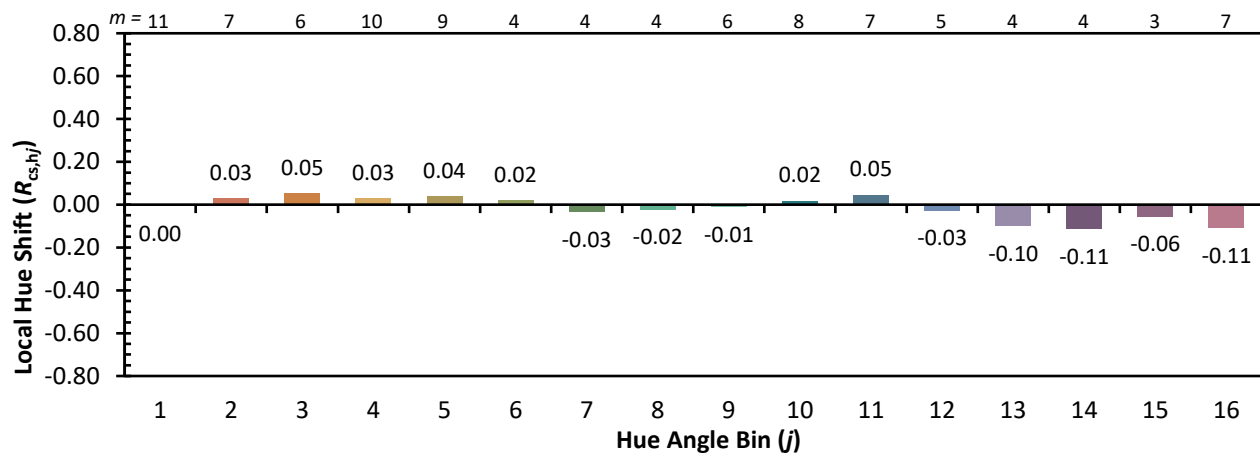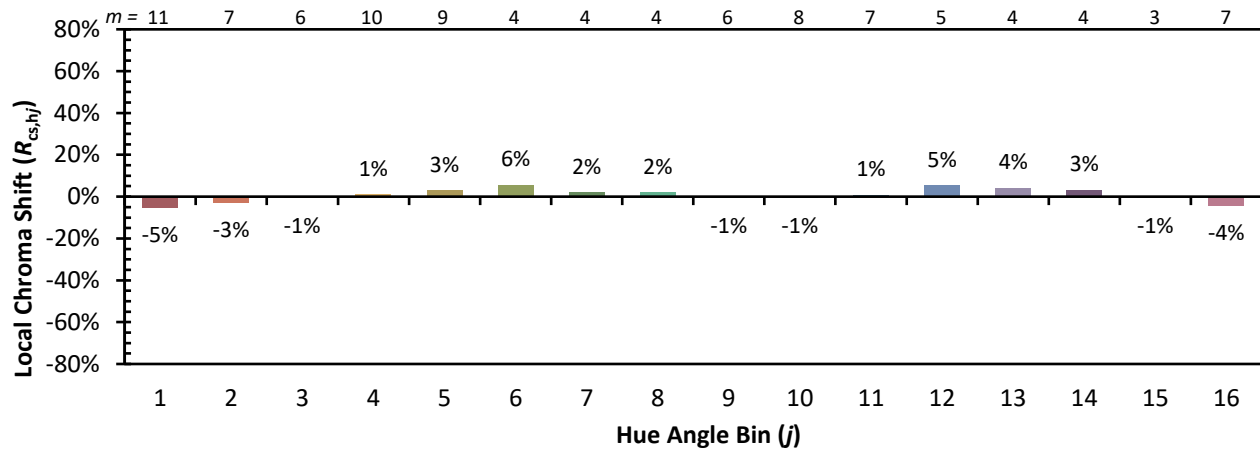

REPORT NUMBER: SP1-2210-795-1

**TM-30-18**

**Measure Comparisons**



(END OF REPORT)