

Cooper Lighting Solutions Photometric Lab  
1121 Highway 74 South  
Peachtree City, GA 30269



Scaled data based on original data using  
LM-79-08 Approved Method: Electrical and Photometric Measurements of Solid-State  
Lighting Products

Test Report Prepared for

Cooper Lighting Solutions

(formerly Eaton)

Brand: METALUX

Report Number: P731971

Luminaire Tested: **22CZ2-24HE-RDP-B2750-W2D-2700K**

Issue Date: 1/5/2024



**Test Information**

Test Method: LM-79-08  
Report Number: P731971  
TEST IS SCALED FROM IESNA LM-79-08 TEST DATA (P274731)  
Test Lab: INNOVATION CENTER(G3)  
Issue Date: 1/5/2024  
Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)  
Product Line: METALUX  
Catalog Number: 22CZ2-24HE-RDP-B2750-W2D-2700K  
Description: 2X2 2400 LUMEN CRUZE TROFFER WITH BIO UP LEDS AT 2700K CCT AND RDP LENS  
  
Light Source: -  
Ballast/Driver: -

**Summary**


Lumens per Lamp: N/A  
Luminaire Lumens: 1619.1 lumens  
Efficiency: N/A  
Efficacy: 81.0 lumens/watt  
Spacing Criteria (0/90/45): 1.25 / 1.3 / 1.41  
Luminous Opening: Rectangular (W 1.92' x L: 1.98' x H: 0')  
CIE Type: Direct

Input Watts (W): 20  
Input Voltage (V): NR  
Input Current (Ain): NR  
Voltage Rise (V): NR  
Power Factor: NR  
Total Harmonic Distortion (THDi): NR  
Frequency (hertz): 60  
Stabilization Time: NR  
Operation Time: NR  
Ambient Temperature (°C): NR  
Test Distance: 25 FT

TEST NUMBER: P731971

CATALOG NUMBER: 22CZ2-24HE-RDP-B2750-W2D-2700K

### Luminous Intensity Polar Plot

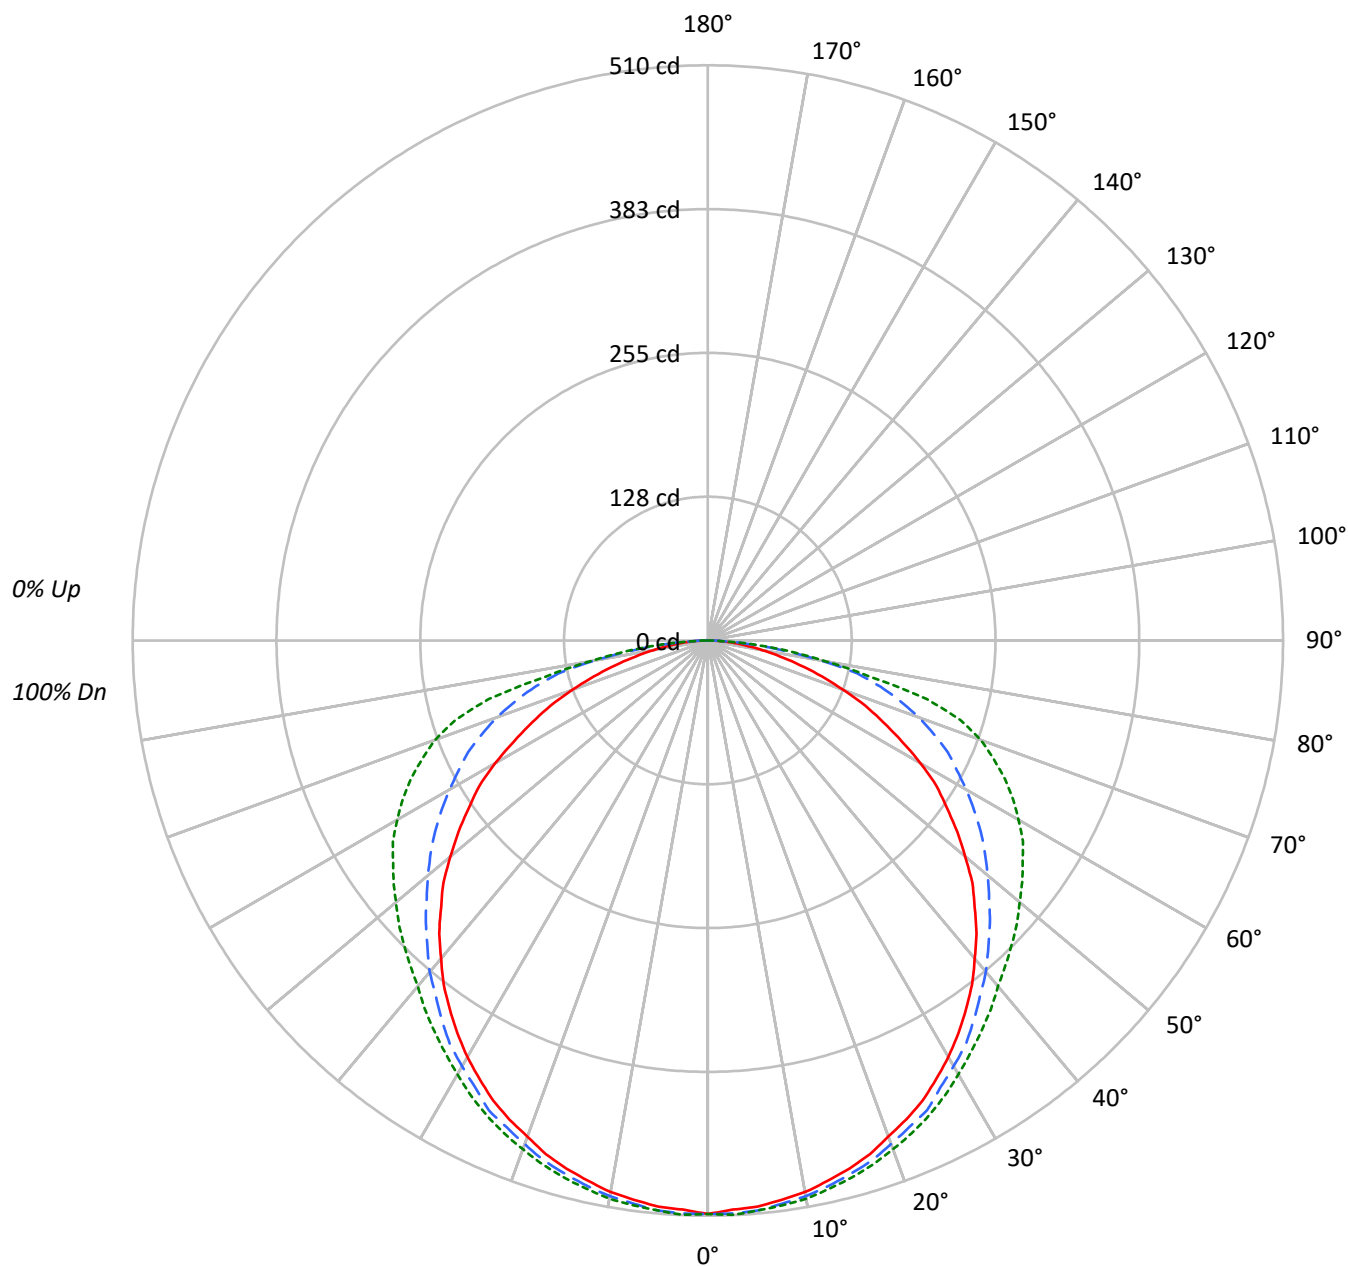



TEST NUMBER: P731971

CATALOG NUMBER: 22CZ2-24HE-RDP-B2750-W2D-2700K

**COEFFICIENT OF UTILIZATION - ZONAL CAVITY METHOD:**

|     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |    |    |
|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|----|----|
| RF  | 20  |     |     |     | 20  |     |     |     |     | 20  |     |     |     |     | 20  |     |     |     |    | 20 |
| RC  | 80  |     |     |     | 70  |     |     |     |     | 50  |     |     |     |     | 30  |     |     |     |    | 10 |
| RW  | 70  | 50  | 30  | 10  | 70  | 50  | 30  | 10  | 50  | 30  | 10  | 50  | 30  | 10  | 50  | 30  | 10  | 50  | 30 | 10 |
| RCR |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |    |    |
| 0   | 119 | 119 | 119 | 119 | 116 | 116 | 116 | 116 | 111 | 111 | 111 | 106 | 106 | 106 | 102 | 102 | 102 | 100 |    |    |
| 1   | 108 | 103 | 98  | 94  | 105 | 100 | 96  | 92  | 96  | 92  | 89  | 92  | 89  | 86  | 88  | 86  | 84  | 82  |    |    |
| 2   | 97  | 88  | 81  | 75  | 95  | 86  | 80  | 74  | 83  | 77  | 72  | 80  | 75  | 71  | 76  | 72  | 69  | 67  |    |    |
| 3   | 88  | 77  | 68  | 61  | 86  | 75  | 67  | 61  | 72  | 65  | 60  | 70  | 64  | 59  | 67  | 62  | 58  | 55  |    |    |
| 4   | 80  | 68  | 59  | 51  | 78  | 66  | 58  | 51  | 64  | 56  | 50  | 61  | 55  | 50  | 59  | 54  | 49  | 47  |    |    |
| 5   | 74  | 60  | 51  | 44  | 72  | 59  | 50  | 44  | 57  | 49  | 43  | 55  | 48  | 43  | 53  | 47  | 42  | 40  |    |    |
| 6   | 68  | 54  | 45  | 38  | 66  | 53  | 44  | 38  | 51  | 43  | 38  | 50  | 43  | 37  | 48  | 42  | 37  | 35  |    |    |
| 7   | 63  | 49  | 40  | 33  | 61  | 48  | 39  | 33  | 47  | 39  | 33  | 45  | 38  | 33  | 44  | 37  | 33  | 31  |    |    |
| 8   | 59  | 45  | 36  | 30  | 57  | 44  | 35  | 30  | 43  | 35  | 29  | 41  | 34  | 29  | 40  | 34  | 29  | 27  |    |    |
| 9   | 55  | 41  | 32  | 27  | 53  | 40  | 32  | 27  | 39  | 32  | 26  | 38  | 31  | 26  | 37  | 31  | 26  | 24  |    |    |
| 10  | 51  | 38  | 30  | 24  | 50  | 37  | 29  | 24  | 36  | 29  | 24  | 35  | 29  | 24  | 34  | 28  | 24  | 22  |    |    |

**AVERAGE LUMINANCE (cd/sqm):**

|     | 0°   | 45°  | 90°  |
|-----|------|------|------|
| 0°  | 1443 | 1443 | 1443 |
| 5°  | 1435 | 1445 | 1445 |
| 10° | 1431 | 1441 | 1448 |
| 15° | 1424 | 1438 | 1449 |
| 20° | 1413 | 1435 | 1449 |
| 25° | 1410 | 1439 | 1454 |
| 30° | 1397 | 1428 | 1455 |
| 35° | 1382 | 1424 | 1465 |
| 40° | 1363 | 1421 | 1482 |
| 45° | 1343 | 1419 | 1529 |
| 50° | 1315 | 1430 | 1593 |
| 55° | 1279 | 1461 | 1685 |
| 60° | 1237 | 1500 | 1805 |
| 65° | 1152 | 1576 | 1951 |
| 70° | 1057 | 1651 | 2134 |
| 75° | 928  | 1737 | 2206 |
| 80° | 797  | 1655 | 1732 |
| 85° | 697  | 1201 | 1319 |



TEST NUMBER: P731971

CATALOG NUMBER: 22CZ2-24HE-RDP-B2750-W2D-2700K

**ZONAL LUMENS:**

| Zone      | Lumens | % Fixture |
|-----------|--------|-----------|
| 0°-10°    | 48.1   | 3.0       |
| 10°-20°   | 138.1  | 8.5       |
| 20°-30°   | 210.7  | 13.0      |
| 30°-40°   | 257.3  | 15.9      |
| 40°-50°   | 275.1  | 17.0      |
| 50°-60°   | 265.6  | 16.4      |
| 60°-70°   | 228.6  | 14.1      |
| 70°-80°   | 154.7  | 9.6       |
| 80°-90°   | 40.8   | 2.5       |
| 90°-100°  | 0.0    | 0.0       |
| 100°-110° | 0.0    | 0.0       |
| 110°-120° | 0.0    | 0.0       |
| 120°-130° | 0.0    | 0.0       |
| 130°-140° | 0.0    | 0.0       |
| 140°-150° | 0.0    | 0.0       |
| 150°-160° | 0.0    | 0.0       |
| 160°-170° | 0.0    | 0.0       |
| 170°-180° | 0.0    | 0.0       |
| 0°-30°    | 397.0  | 24.5      |
| 0°-40°    | 654.3  | 40.4      |
| 0°-60°    | 1195.0 | 73.8      |
| 0°-90°    | 1619.1 | 100.0     |
| 90°-120°  | 0.0    | 0.0       |
| 90°-150°  | 0.0    | 0.0       |
| 90°-180°  | 0.0    | 0.0       |
| 0°-180°   | 1619.1 | 100.0     |

**CANDELA DISTRIBUTION:**

|     | 0°  | 22.5° | 45° | 67.5° | 90° | Flux |
|-----|-----|-------|-----|-------|-----|------|
| 0°  | 508 | 508   | 508 | 508   | 508 |      |
| 5°  | 504 | 505   | 507 | 507   | 507 | 48   |
| 15° | 485 | 486   | 490 | 492   | 493 | 137  |
| 25° | 450 | 453   | 460 | 462   | 464 | 207  |
| 35° | 399 | 402   | 411 | 419   | 423 | 250  |
| 45° | 335 | 341   | 354 | 372   | 381 | 258  |
| 55° | 258 | 267   | 295 | 325   | 341 | 232  |
| 65° | 172 | 188   | 235 | 272   | 291 | 171  |
| 75° | 85  | 112   | 158 | 191   | 201 | 91   |
| 85° | 21  | 30    | 37  | 38    | 40  | 24   |
| 90° | 0   | 0     | 0   | 0     | 0   |      |



TEST NUMBER: P731971

CATALOG NUMBER: 22CZ2-24HE-RDP-B2750-W2D-2700K

**CANDELA DISTRIBUTION (FULL):**

|       | 0°    | 22.5° | 45°   | 67.5° | 90°   |
|-------|-------|-------|-------|-------|-------|
| 0°    | 508.5 | 508.5 | 508.5 | 508.5 | 508.5 |
| 2.5°  | 505.1 | 506.2 | 508.5 | 508.5 | 509.8 |
| 5°    | 503.8 | 505.1 | 507.3 | 507.3 | 507.3 |
| 7.5°  | 500.2 | 501.5 | 503.8 | 505.1 | 505.1 |
| 10°   | 496.6 | 497.9 | 500.2 | 501.5 | 502.6 |
| 12.5° | 490.7 | 491.9 | 495.4 | 497.9 | 497.9 |
| 15°   | 484.7 | 486.0 | 489.6 | 491.9 | 493.1 |
| 17.5° | 477.7 | 480.0 | 483.5 | 486.0 | 487.1 |
| 20°   | 468.0 | 470.5 | 475.2 | 478.8 | 480.0 |
| 22.5° | 459.7 | 462.2 | 466.9 | 470.5 | 472.8 |
| 25°   | 450.3 | 452.6 | 459.7 | 462.2 | 464.5 |
| 27.5° | 438.4 | 440.6 | 446.7 | 451.4 | 455.0 |
| 30°   | 426.4 | 428.7 | 435.9 | 441.8 | 444.2 |
| 32.5° | 413.3 | 416.8 | 425.2 | 429.9 | 433.5 |
| 35°   | 399.1 | 402.5 | 411.0 | 419.3 | 422.9 |
| 37.5° | 384.7 | 388.3 | 396.6 | 407.4 | 412.1 |
| 40°   | 368.1 | 372.8 | 383.6 | 397.8 | 400.2 |
| 42.5° | 352.6 | 358.5 | 368.1 | 384.7 | 390.6 |
| 45°   | 334.6 | 340.7 | 353.7 | 371.7 | 381.1 |
| 47.5° | 318.0 | 323.9 | 338.2 | 359.7 | 371.7 |
| 50°   | 297.8 | 306.1 | 323.9 | 349.0 | 360.9 |
| 52.5° | 278.7 | 285.9 | 309.7 | 337.1 | 351.3 |
| 55°   | 258.5 | 266.8 | 295.3 | 325.2 | 340.7 |
| 57.5° | 240.5 | 247.7 | 279.9 | 313.3 | 331.1 |
| 60°   | 217.9 | 227.5 | 264.4 | 300.1 | 318.0 |
| 62.5° | 194.1 | 208.4 | 248.9 | 285.9 | 305.0 |
| 65°   | 171.6 | 188.2 | 234.7 | 271.5 | 290.6 |
| 67.5° | 151.2 | 169.1 | 216.7 | 256.0 | 274.0 |
| 70°   | 127.4 | 150.0 | 199.0 | 237.0 | 257.2 |
| 72.5° | 106.0 | 131.0 | 178.6 | 216.7 | 234.7 |
| 75°   | 84.6  | 111.9 | 158.4 | 190.6 | 201.2 |
| 77.5° | 65.6  | 91.7  | 135.8 | 145.3 | 146.5 |
| 80°   | 48.8  | 72.6  | 101.3 | 102.4 | 106.0 |
| 82.5° | 33.3  | 51.2  | 65.6  | 71.4  | 72.6  |
| 85°   | 21.4  | 29.8  | 36.9  | 38.2  | 40.5  |
| 87.5° | 9.5   | 10.8  | 13.1  | 11.9  | 11.9  |
| 90°   | 0.0   | 0.0   | 0.0   | 0.0   | 0.0   |



Report Generated By 670246072 / DESKTOP-50001EG





— 0°-180°    - - 45°-225°    - - - 90°-270°







LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-State Lighting Products

Report Prepared for

Cooper Lighting Solutions

(formerly Eaton)

METALUX

Report Number: SP1-2210-795-1

Test Date: 10/06/2022

Luminaire Tested: 9WP217084MDER4AM-2700K-315MA

Data in this report applies to families of products including 9WP217084MDER4AM-2700K.


### Test Information

Test Method: LM-79-2019  
 Report Number: SP1-2210-795-1  
 Test Lab: COOPER LIGHTING SOLUTIONS  
 Photometer: SP1 - 76IN SPHERE  
 Measurement Geometry:  $4\pi$   
 Issue Date: 10/06/2022  
 Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)  
 Product Line: METALUX  
 Catalog Number: **9WP217084MDER4AM-2700K-315MA**  
 Description: METALUX

TUNABLE BOARD, 2700K-315MA, PROGRAMMED @0Vdc

### Spectral Parameters

|                           |         |           |      |      |      |
|---------------------------|---------|-----------|------|------|------|
| CCT (K):                  | 2666    | CRI (Ra): | 94.1 |      |      |
| CIE u':                   | 0.2643  | R1:       | 96.2 | R9:  | 58.8 |
| CIE v':                   | 0.5262  | R2:       | 97.9 | R10: | 93.6 |
| Duv:                      | -0.0012 | R3:       | 98.1 | R11: | 96.6 |
| CIE x:                    | 0.4604  | R4:       | 96.1 | R12: | 90.2 |
| CIE y:                    | 0.4075  | R5:       | 96.2 | R13: | 96.8 |
| CIE z:                    | 0.1321  | R6:       | 96.5 | R14: | 97.5 |
| Peak Wavelength (nm):     | 632     | R7:       | 90.7 |      |      |
| Dominant Wavelength (nm): | 584     | R8:       | 81.4 |      |      |
| Purity:                   | 61      |           |      |      |      |
| Rf:                       | 91.5    |           |      |      |      |
| Rg:                       | 101.3   |           |      |      |      |

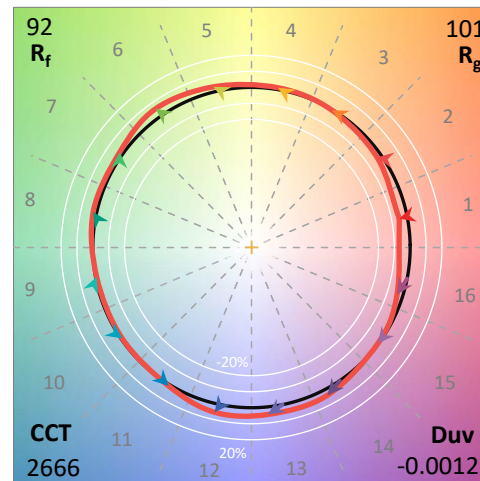

### Test Conditions

Stabilization Time: 146M  
 Operation Time: 12H  
 Room Temperature (°C) / RH%: 24.0/38%  
 Sphere Temperature (°C): 24.4

REPORT NUMBER: SP1-2210-795-1

| Measurement and Test Equipment |                       |                  |                      |
|--------------------------------|-----------------------|------------------|----------------------|
| Instrument                     | Identification Number | Calibration Date | Calibration Due Date |
| Photometer                     | 76INCH SPHERE IN0058  | 8/8/2022         | 2/8/2023             |
| Power Meter                    | XITRON 2801 IN0071    | 11/29/2021       | 11/29/2022           |
| AC Power Source                | CHROMA 61603 IN0063   | 11/29/2021       | 11/29/2022           |
| DC Power Source                | AGILENT E3634A IN0208 | 11/29/2021       | 11/29/2022           |
| Sphere Thermometer             | ONSET IN0085          | 11/29/2021       | 11/29/2022           |
| Room Thermometer               | ONSET IN0046          | 11/29/2021       | 11/29/2022           |

REPORT NUMBER: SP1-2210-795-1

**CIE 1931 Chromaticity Diagram**



**CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles**



Point lies inside the ANSI 2700K 4-step quadrangle

REPORT NUMBER: SP1-2210-795-1

**Photopic Flux vs. Wavelength**



#####

| λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) |
|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|
| 360       | 960              | NR               | 490       | 11655            | NR               | 620       | 48137            | NR               | 750       | 2159             | NR               | 880       | 1428             | NR               |
| 365       | 835              | NR               | 495       | 14187            | NR               | 625       | 48484            | NR               | 755       | 2025             | NR               | 885       | 1524             | NR               |
| 370       | 889              | NR               | 500       | 17034            | NR               | 630       | 97268            | NR               | 760       | 1802             | NR               | 890       | 1952             | NR               |
| 375       | 919              | NR               | 505       | 19485            | NR               | 635       | 78475            | NR               | 765       | 1584             | NR               | 895       | 1011             | NR               |
| 380       | 1009             | NR               | 510       | 21619            | NR               | 640       | 35314            | NR               | 770       | 1353             | NR               | 900       | 1014             | NR               |
| 385       | 1040             | NR               | 515       | 23444            | NR               | 645       | 34925            | NR               | 775       | 1274             | NR               | 905       | 955              | NR               |
| 390       | 939              | NR               | 520       | 24555            | NR               | 650       | 32851            | NR               | 780       | 1257             | NR               | 910       | 1509             | NR               |
| 395       | 813              | NR               | 525       | 25491            | NR               | 655       | 23599            | NR               | 785       | 1107             | NR               | 915       | 1506             | NR               |
| 400       | 710              | NR               | 530       | 26360            | NR               | 660       | 19532            | NR               | 790       | 1143             | NR               | 920       | 1068             | NR               |
| 405       | 620              | NR               | 535       | 27190            | NR               | 665       | 16486            | NR               | 795       | 1531             | NR               | 925       | 638              | NR               |
| 410       | 774              | NR               | 540       | 28277            | NR               | 670       | 14655            | NR               | 800       | 1331             | NR               | 930       | 1536             | NR               |
| 415       | 979              | NR               | 545       | 29229            | NR               | 675       | 12412            | NR               | 805       | 1467             | NR               | 935       | 842              | NR               |
| 420       | 1333             | NR               | 550       | 30350            | NR               | 680       | 10584            | NR               | 810       | 1194             | NR               | 940       | 1826             | NR               |
| 425       | 2180             | NR               | 555       | 31650            | NR               | 685       | 9145             | NR               | 815       | 1068             | NR               | 945       | 1708             | NR               |
| 430       | 3664             | NR               | 560       | 33070            | NR               | 690       | 7913             | NR               | 820       | 903              | NR               | 950       | 1541             | NR               |
| 435       | 5835             | NR               | 565       | 34723            | NR               | 695       | 6836             | NR               | 825       | 1155             | NR               | 955       | 1365             | NR               |
| 440       | 9472             | NR               | 570       | 36375            | NR               | 700       | 6062             | NR               | 830       | 1254             | NR               | 960       | 2795             | NR               |
| 445       | 15693            | NR               | 575       | 38067            | NR               | 705       | 5352             | NR               | 835       | 969              | NR               | 965       | 2273             | NR               |
| 450       | 21182            | NR               | 580       | 39619            | NR               | 710       | 4621             | NR               | 840       | 885              | NR               | 970       | 2269             | NR               |
| 455       | 18329            | NR               | 585       | 41308            | NR               | 715       | 4197             | NR               | 845       | 1169             | NR               | 975       | 2026             | NR               |
| 460       | 13472            | NR               | 590       | 42407            | NR               | 720       | 3736             | NR               | 850       | 1432             | NR               | 980       | 3840             | NR               |
| 465       | 11611            | NR               | 595       | 43552            | NR               | 725       | 3370             | NR               | 855       | 1474             | NR               | 985       | 2004             | NR               |
| 470       | 9668             | NR               | 600       | 44708            | NR               | 730       | 2929             | NR               | 860       | 1037             | NR               | 990       | 2889             | NR               |
| 475       | 8254             | NR               | 605       | 47912            | NR               | 735       | 2599             | NR               | 865       | 1441             | NR               | 995       | 2268             | NR               |
| 480       | 8432             | NR               | 610       | 64799            | NR               | 740       | 2366             | NR               | 870       | 1316             | NR               | 1000      | 2322             | NR               |
| 485       | 9747             | NR               | 615       | 67855            | NR               | 745       | 2257             | NR               | 875       | 1515             | NR               |           |                  |                  |

REPORT NUMBER: SP1-2210-795-1

**Scotopic Flux vs. Wavelength**



**Scotopic Lumens: 3229.5**

**S/P: 1.28**

| λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) |
|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|
| 360       | 960              | NR               | 490       | 11655            | NR               | 620       | 48137            | NR               | 750       | 2159             | NR               | 880       | 1428             | NR               |
| 365       | 835              | NR               | 495       | 14187            | NR               | 625       | 48484            | NR               | 755       | 2025             | NR               | 885       | 1524             | NR               |
| 370       | 889              | NR               | 500       | 17034            | NR               | 630       | 97268            | NR               | 760       | 1802             | NR               | 890       | 1952             | NR               |
| 375       | 919              | NR               | 505       | 19485            | NR               | 635       | 78475            | NR               | 765       | 1584             | NR               | 895       | 1011             | NR               |
| 380       | 1009             | NR               | 510       | 21619            | NR               | 640       | 35314            | NR               | 770       | 1353             | NR               | 900       | 1014             | NR               |
| 385       | 1040             | NR               | 515       | 23444            | NR               | 645       | 34925            | NR               | 775       | 1274             | NR               | 905       | 955              | NR               |
| 390       | 939              | NR               | 520       | 24555            | NR               | 650       | 32851            | NR               | 780       | 1257             | NR               | 910       | 1509             | NR               |
| 395       | 813              | NR               | 525       | 25491            | NR               | 655       | 23599            | NR               | 785       | 1107             | NR               | 915       | 1506             | NR               |
| 400       | 710              | NR               | 530       | 26360            | NR               | 660       | 19532            | NR               | 790       | 1143             | NR               | 920       | 1068             | NR               |
| 405       | 620              | NR               | 535       | 27190            | NR               | 665       | 16486            | NR               | 795       | 1531             | NR               | 925       | 638              | NR               |
| 410       | 774              | NR               | 540       | 28277            | NR               | 670       | 14655            | NR               | 800       | 1331             | NR               | 930       | 1536             | NR               |
| 415       | 979              | NR               | 545       | 29229            | NR               | 675       | 12412            | NR               | 805       | 1467             | NR               | 935       | 842              | NR               |
| 420       | 1333             | NR               | 550       | 30350            | NR               | 680       | 10584            | NR               | 810       | 1194             | NR               | 940       | 1826             | NR               |
| 425       | 2180             | NR               | 555       | 31650            | NR               | 685       | 9145             | NR               | 815       | 1068             | NR               | 945       | 1708             | NR               |
| 430       | 3664             | NR               | 560       | 33070            | NR               | 690       | 7913             | NR               | 820       | 903              | NR               | 950       | 1541             | NR               |
| 435       | 5835             | NR               | 565       | 34723            | NR               | 695       | 6836             | NR               | 825       | 1155             | NR               | 955       | 1365             | NR               |
| 440       | 9472             | NR               | 570       | 36375            | NR               | 700       | 6062             | NR               | 830       | 1254             | NR               | 960       | 2795             | NR               |
| 445       | 15693            | NR               | 575       | 38067            | NR               | 705       | 5352             | NR               | 835       | 969              | NR               | 965       | 2273             | NR               |
| 450       | 21182            | NR               | 580       | 39619            | NR               | 710       | 4621             | NR               | 840       | 885              | NR               | 970       | 2269             | NR               |
| 455       | 18329            | NR               | 585       | 41308            | NR               | 715       | 4197             | NR               | 845       | 1169             | NR               | 975       | 2026             | NR               |
| 460       | 13472            | NR               | 590       | 42407            | NR               | 720       | 3736             | NR               | 850       | 1432             | NR               | 980       | 3840             | NR               |
| 465       | 11611            | NR               | 595       | 43552            | NR               | 725       | 3370             | NR               | 855       | 1474             | NR               | 985       | 2004             | NR               |
| 470       | 9668             | NR               | 600       | 44708            | NR               | 730       | 2929             | NR               | 860       | 1037             | NR               | 990       | 2889             | NR               |
| 475       | 8254             | NR               | 605       | 47912            | NR               | 735       | 2599             | NR               | 865       | 1441             | NR               | 995       | 2268             | NR               |
| 480       | 8432             | NR               | 610       | 64799            | NR               | 740       | 2366             | NR               | 870       | 1316             | NR               | 1000      | 2322             | NR               |
| 485       | 9747             | NR               | 615       | 67855            | NR               | 745       | 2257             | NR               | 875       | 1515             | NR               |           |                  |                  |

REPORT NUMBER: SP1-2210-795-1

**Melanopic Flux vs. Wavelength**



**Melanopic Lumens: 1204.8**

**S/P: 0.48**

| λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) |
|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|
| 360       | 960              | NR               | 490       | 11655            | NR               | 620       | 48137            | NR               | 750       | 2159             | NR               | 880       | 1428             | NR               |
| 365       | 835              | NR               | 495       | 14187            | NR               | 625       | 48484            | NR               | 755       | 2025             | NR               | 885       | 1524             | NR               |
| 370       | 889              | NR               | 500       | 17034            | NR               | 630       | 97268            | NR               | 760       | 1802             | NR               | 890       | 1952             | NR               |
| 375       | 919              | NR               | 505       | 19485            | NR               | 635       | 78475            | NR               | 765       | 1584             | NR               | 895       | 1011             | NR               |
| 380       | 1009             | NR               | 510       | 21619            | NR               | 640       | 35314            | NR               | 770       | 1353             | NR               | 900       | 1014             | NR               |
| 385       | 1040             | NR               | 515       | 23444            | NR               | 645       | 34925            | NR               | 775       | 1274             | NR               | 905       | 955              | NR               |
| 390       | 939              | NR               | 520       | 24555            | NR               | 650       | 32851            | NR               | 780       | 1257             | NR               | 910       | 1509             | NR               |
| 395       | 813              | NR               | 525       | 25491            | NR               | 655       | 23599            | NR               | 785       | 1107             | NR               | 915       | 1506             | NR               |
| 400       | 710              | NR               | 530       | 26360            | NR               | 660       | 19532            | NR               | 790       | 1143             | NR               | 920       | 1068             | NR               |
| 405       | 620              | NR               | 535       | 27190            | NR               | 665       | 16486            | NR               | 795       | 1531             | NR               | 925       | 638              | NR               |
| 410       | 774              | NR               | 540       | 28277            | NR               | 670       | 14655            | NR               | 800       | 1331             | NR               | 930       | 1536             | NR               |
| 415       | 979              | NR               | 545       | 29229            | NR               | 675       | 12412            | NR               | 805       | 1467             | NR               | 935       | 842              | NR               |
| 420       | 1333             | NR               | 550       | 30350            | NR               | 680       | 10584            | NR               | 810       | 1194             | NR               | 940       | 1826             | NR               |
| 425       | 2180             | NR               | 555       | 31650            | NR               | 685       | 9145             | NR               | 815       | 1068             | NR               | 945       | 1708             | NR               |
| 430       | 3664             | NR               | 560       | 33070            | NR               | 690       | 7913             | NR               | 820       | 903              | NR               | 950       | 1541             | NR               |
| 435       | 5835             | NR               | 565       | 34723            | NR               | 695       | 6836             | NR               | 825       | 1155             | NR               | 955       | 1365             | NR               |
| 440       | 9472             | NR               | 570       | 36375            | NR               | 700       | 6062             | NR               | 830       | 1254             | NR               | 960       | 2795             | NR               |
| 445       | 15693            | NR               | 575       | 38067            | NR               | 705       | 5352             | NR               | 835       | 969              | NR               | 965       | 2273             | NR               |
| 450       | 21182            | NR               | 580       | 39619            | NR               | 710       | 4621             | NR               | 840       | 885              | NR               | 970       | 2269             | NR               |
| 455       | 18329            | NR               | 585       | 41308            | NR               | 715       | 4197             | NR               | 845       | 1169             | NR               | 975       | 2026             | NR               |
| 460       | 13472            | NR               | 590       | 42407            | NR               | 720       | 3736             | NR               | 850       | 1432             | NR               | 980       | 3840             | NR               |
| 465       | 11611            | NR               | 595       | 43552            | NR               | 725       | 3370             | NR               | 855       | 1474             | NR               | 985       | 2004             | NR               |
| 470       | 9668             | NR               | 600       | 44708            | NR               | 730       | 2929             | NR               | 860       | 1037             | NR               | 990       | 2889             | NR               |
| 475       | 8254             | NR               | 605       | 47912            | NR               | 735       | 2599             | NR               | 865       | 1441             | NR               | 995       | 2268             | NR               |
| 480       | 8432             | NR               | 610       | 64799            | NR               | 740       | 2366             | NR               | 870       | 1316             | NR               | 1000      | 2322             | NR               |
| 485       | 9747             | NR               | 615       | 67855            | NR               | 745       | 2257             | NR               | 875       | 1515             | NR               |           |                  |                  |

REPORT NUMBER: SP1-2210-795-1

**TM-30-18**

### Summary

$R_f = 91.5$   
 $R_g = 101.3$   
 CIE  $R_a = 94.1$   
 $R_g = 58.8$



### Color Vector Graphics




REPORT NUMBER: SP1-2210-795-1

TM-30-18

**Individual Sample Fidelity Index ( $R_{f,i}$ )**

|            |            |            |            |
|------------|------------|------------|------------|
| CES01 = 86 | CES26 = 92 | CES51 = 96 | CES76 = 91 |
| CES02 = 64 | CES27 = 97 | CES52 = 95 | CES77 = 83 |
| CES03 = 32 | CES28 = 97 | CES53 = 93 | CES78 = 88 |
| CES04 = 71 | CES29 = 91 | CES54 = 98 | CES79 = 87 |
| CES05 = 51 | CES30 = 96 | CES55 = 99 | CES80 = 90 |
| CES06 = 51 | CES31 = 91 | CES56 = 95 | CES81 = 67 |
| CES07 = 44 | CES32 = 84 | CES57 = 95 | CES82 = 95 |
| CES08 = 43 | CES33 = 92 | CES58 = 95 | CES83 = 92 |
| CES09 = 29 | CES34 = 94 | CES59 = 99 | CES84 = 96 |
| CES10 = 77 | CES35 = 97 | CES60 = 97 | CES85 = 79 |
| CES11 = 59 | CES36 = 91 | CES61 = 97 | CES86 = 75 |
| CES12 = 66 | CES37 = 94 | CES62 = 94 | CES87 = 92 |
| CES13 = 45 | CES38 = 99 | CES63 = 94 | CES88 = 96 |
| CES14 = 74 | CES39 = 97 | CES64 = 97 | CES89 = 81 |
| CES15 = 72 | CES40 = 94 | CES65 = 92 | CES90 = 97 |
| CES16 = 48 | CES41 = 94 | CES66 = 95 | CES91 = 86 |
| CES17 = 50 | CES42 = 92 | CES67 = 95 | CES92 = 78 |
| CES18 = 57 | CES43 = 90 | CES68 = 94 | CES93 = 87 |
| CES19 = 72 | CES44 = 99 | CES69 = 95 | CES94 = 72 |
| CES20 = 68 | CES45 = 94 | CES70 = 92 | CES95 = 86 |
| CES21 = 87 | CES46 = 93 | CES71 = 92 | CES96 = 92 |
| CES22 = 79 | CES47 = 84 | CES72 = 97 | CES97 = 93 |
| CES23 = 92 | CES48 = 94 | CES73 = 88 | CES98 = 93 |
| CES24 = 91 | CES49 = 91 | CES74 = 88 | CES99 = 92 |
| CES25 = 72 | CES50 = 96 | CES75 = 92 |            |

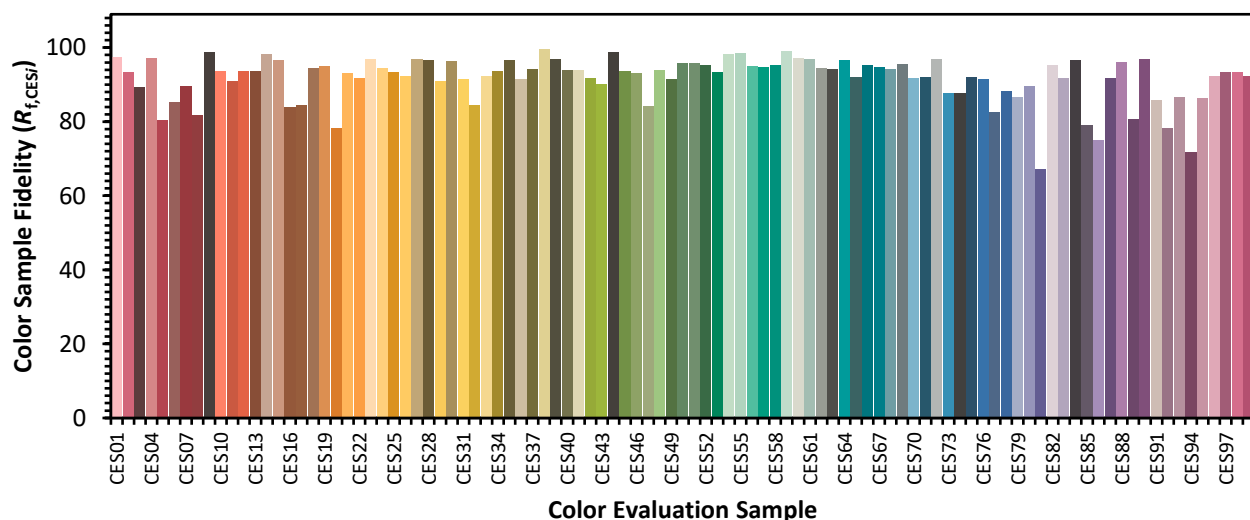

REPORT NUMBER: SP1-2210-795-1

**TM-30-18**

Color Rendition by Hue-Angle Bin



REPORT NUMBER: SP1-2210-795-1

**TM-30-18**

**Measure Comparisons**



(END OF REPORT)