

Cooper Lighting Solutions Photometric Lab  
1121 Highway 74 South  
Peachtree City, GA 30269



Scaled data based on original data using  
LM-79-08 Approved Method: Electrical and Photometric Measurements of Solid-State  
Lighting Products

Test Report Prepared for

Cooper Lighting Solutions

(formerly Eaton)

Brand: METALUX

Report Number: P732113

Luminaire Tested: **24CZ2-30HE-B2750-W2D-3500K**

Issue Date: 1/5/2024



**Test Information**

Test Method: LM-79-08  
Report Number: P732113  
TEST IS SCALED FROM IESNA LM-79-08 TEST DATA (P272125)  
Test Lab: INNOVATION CENTER(G3)  
Issue Date: 1/5/2024  
Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)  
Product Line: METALUX  
Catalog Number: 24CZ2-30HE-B2750-W2D-3500K  
Description: 2X4 3000 LUMEN CRUZE TROFFER WITH BIO UP LEDS AT 3500K CCT AND RIBBED LENS

Light Source: -  
Ballast/Driver: -

**Summary**


Lumens per Lamp: N/A  
Luminaire Lumens: 2853.0 lumens  
Efficiency: N/A  
Efficacy: 129.7 lumens/watt  
Spacing Criteria (0/90/45): 1.2 / 1.26 / 1.35  
Luminous Opening: Rectangular (W 1.92' x L: 3.98' x H: 0')  
CIE Type: Direct

Input Watts (W): 22  
Input Voltage (V): NR  
Input Current (Ain): NR  
Voltage Rise (V): NR  
Power Factor: NR  
Total Harmonic Distortion (THDi): NR  
Frequency (hertz): 60  
Stabilization Time: NR  
Operation Time: NR  
Ambient Temperature (°C): NR  
Test Distance: 25 FT

TEST NUMBER: P732113

CATALOG NUMBER: 24CZ2-30HE-B2750-W2D-3500K

### Luminous Intensity Polar Plot

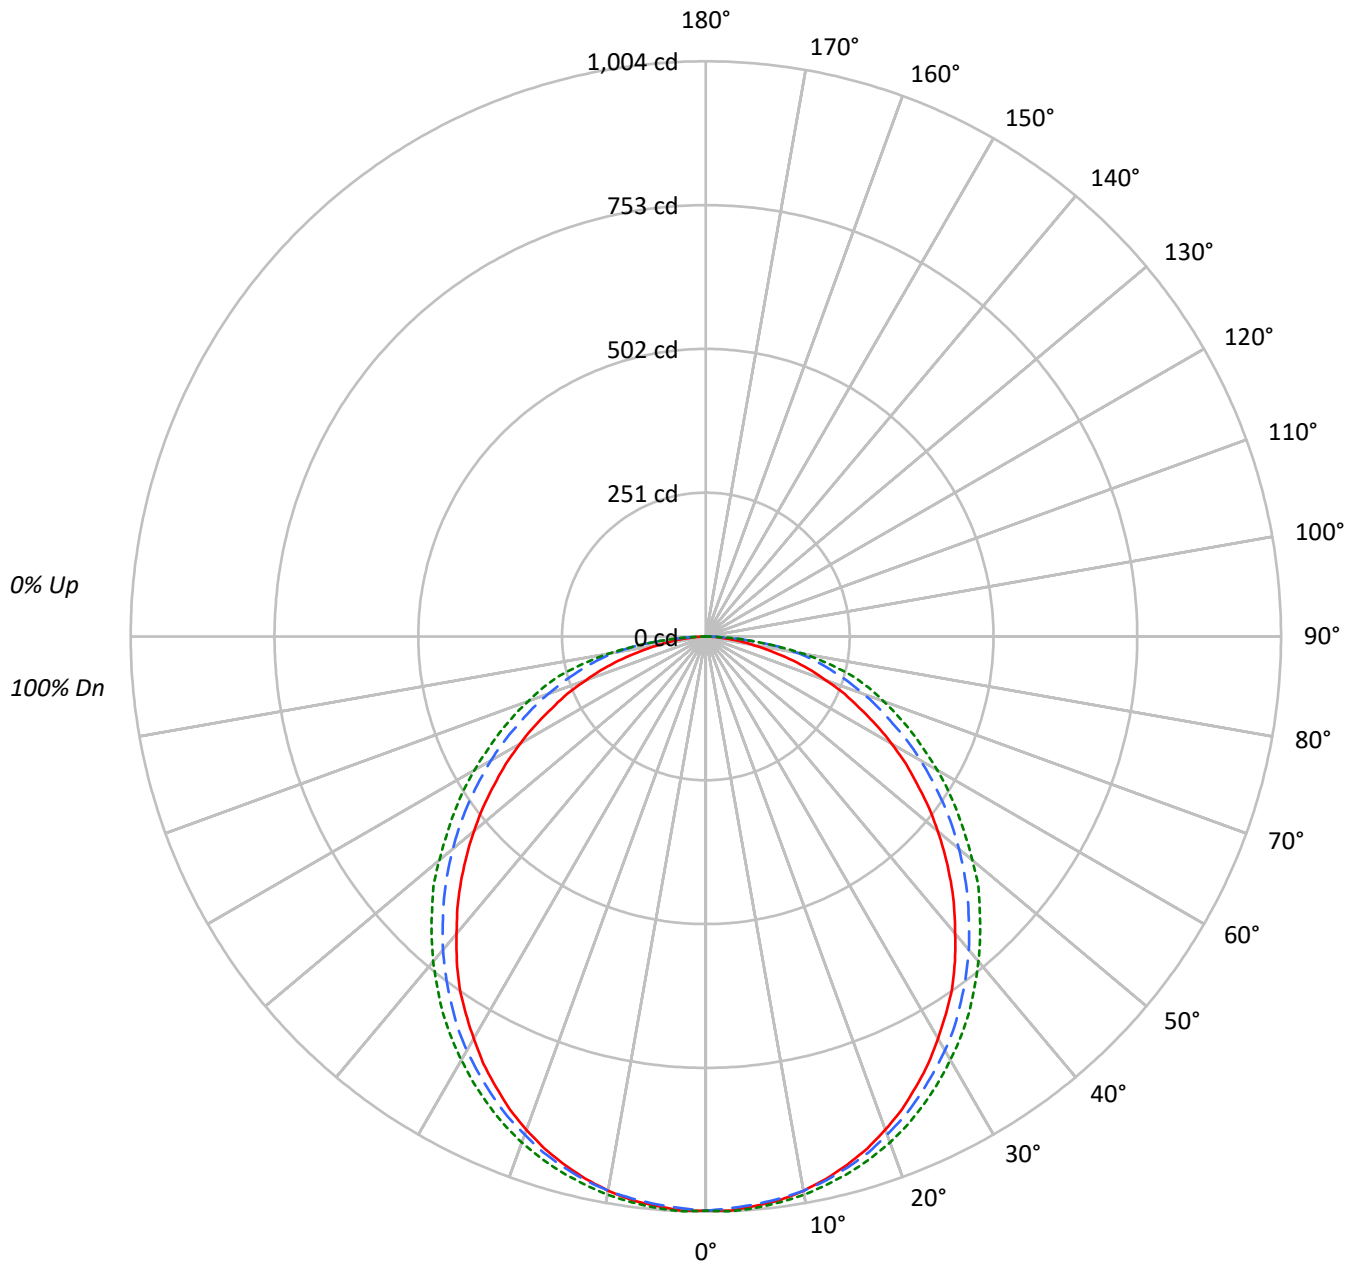



TEST NUMBER: P732113

CATALOG NUMBER: 24CZ2-30HE-B2750-W2D-3500K

**COEFFICIENT OF UTILIZATION - ZONAL CAVITY METHOD:**

|     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |    |    |
|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|----|----|
| RF  | 20  |     |     |     | 20  |     |     |     |     | 20  |     |     |     |     | 20  |     |     |     |    | 20 |
| RC  | 80  |     |     |     | 70  |     |     |     |     | 50  |     |     |     |     | 30  |     |     |     |    | 10 |
| RW  | 70  | 50  | 30  | 10  | 70  | 50  | 30  | 10  | 50  | 30  | 10  | 50  | 30  | 10  | 50  | 30  | 10  | 50  | 30 | 10 |
| RCR |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |    |    |
| 0   | 119 | 119 | 119 | 119 | 116 | 116 | 116 | 116 | 111 | 111 | 111 | 106 | 106 | 106 | 102 | 102 | 102 | 100 |    |    |
| 1   | 108 | 103 | 99  | 95  | 106 | 101 | 97  | 93  | 97  | 93  | 90  | 93  | 90  | 88  | 89  | 87  | 85  | 83  |    |    |
| 2   | 98  | 90  | 83  | 77  | 96  | 88  | 81  | 76  | 84  | 79  | 74  | 81  | 76  | 72  | 78  | 74  | 71  | 69  |    |    |
| 3   | 89  | 79  | 70  | 64  | 87  | 77  | 69  | 63  | 74  | 67  | 62  | 71  | 66  | 61  | 69  | 64  | 60  | 58  |    |    |
| 4   | 82  | 70  | 61  | 54  | 80  | 68  | 60  | 54  | 66  | 59  | 53  | 63  | 57  | 52  | 61  | 56  | 51  | 49  |    |    |
| 5   | 75  | 62  | 53  | 46  | 73  | 61  | 53  | 46  | 59  | 51  | 46  | 57  | 50  | 45  | 55  | 49  | 45  | 42  |    |    |
| 6   | 70  | 56  | 47  | 40  | 68  | 55  | 47  | 40  | 53  | 46  | 40  | 52  | 45  | 40  | 50  | 44  | 39  | 37  |    |    |
| 7   | 64  | 51  | 42  | 36  | 63  | 50  | 42  | 36  | 48  | 41  | 35  | 47  | 40  | 35  | 46  | 39  | 35  | 33  |    |    |
| 8   | 60  | 46  | 38  | 32  | 58  | 46  | 37  | 32  | 44  | 37  | 32  | 43  | 36  | 31  | 42  | 36  | 31  | 29  |    |    |
| 9   | 56  | 43  | 34  | 29  | 55  | 42  | 34  | 29  | 41  | 34  | 28  | 40  | 33  | 28  | 39  | 33  | 28  | 26  |    |    |
| 10  | 53  | 39  | 31  | 26  | 51  | 39  | 31  | 26  | 38  | 31  | 26  | 37  | 30  | 26  | 36  | 30  | 26  | 24  |    |    |

**AVERAGE LUMINANCE (cd/sqm):**

|     | 0°   | 45°  | 90°  |
|-----|------|------|------|
| 0°  | 1415 | 1415 | 1415 |
| 5°  | 1413 | 1410 | 1419 |
| 10° | 1408 | 1408 | 1418 |
| 15° | 1394 | 1401 | 1416 |
| 20° | 1376 | 1390 | 1412 |
| 25° | 1351 | 1376 | 1403 |
| 30° | 1320 | 1360 | 1391 |
| 35° | 1291 | 1338 | 1380 |
| 40° | 1247 | 1316 | 1364 |
| 45° | 1207 | 1290 | 1349 |
| 50° | 1160 | 1266 | 1333 |
| 55° | 1108 | 1242 | 1320 |
| 60° | 1057 | 1223 | 1317 |
| 65° | 989  | 1202 | 1325 |
| 70° | 916  | 1208 | 1361 |
| 75° | 821  | 1231 | 1438 |
| 80° | 663  | 1304 | 1407 |
| 85° | 499  | 1143 | 1116 |



TEST NUMBER: P732113

CATALOG NUMBER: 24CZ2-30HE-B2750-W2D-3500K

**ZONAL LUMENS:**

| Zone      | Lumens | % Fixture |
|-----------|--------|-----------|
| 0°-10°    | 94.9   | 3.3       |
| 10°-20°   | 271.1  | 9.5       |
| 20°-30°   | 407.6  | 14.3      |
| 30°-40°   | 485.5  | 17.0      |
| 40°-50°   | 496.9  | 17.4      |
| 50°-60°   | 447.3  | 15.7      |
| 60°-70°   | 351.3  | 12.3      |
| 70°-80°   | 228.0  | 8.0       |
| 80°-90°   | 70.5   | 2.5       |
| 90°-100°  | 0.0    | 0.0       |
| 100°-110° | 0.0    | 0.0       |
| 110°-120° | 0.0    | 0.0       |
| 120°-130° | 0.0    | 0.0       |
| 130°-140° | 0.0    | 0.0       |
| 140°-150° | 0.0    | 0.0       |
| 150°-160° | 0.0    | 0.0       |
| 160°-170° | 0.0    | 0.0       |
| 170°-180° | 0.0    | 0.0       |
| 0°-30°    | 773.6  | 27.1      |
| 0°-40°    | 1259.0 | 44.1      |
| 0°-60°    | 2203.2 | 77.2      |
| 0°-90°    | 2853.0 | 100.0     |
| 90°-120°  | 0.0    | 0.0       |
| 90°-150°  | 0.0    | 0.0       |
| 90°-180°  | 0.0    | 0.0       |
| 0°-180°   | 2853.0 | 100.0     |

**CANDELA DISTRIBUTION:**

|     | 0°   | 22.5° | 45°  | 67.5° | 90°  | Flux |
|-----|------|-------|------|-------|------|------|
| 0°  | 1002 | 1002  | 1002 | 1002  | 1002 |      |
| 5°  | 998  | 1000  | 995  | 1000  | 1001 | 95   |
| 15° | 954  | 957   | 959  | 967   | 969  | 269  |
| 25° | 867  | 874   | 884  | 898   | 901  | 400  |
| 35° | 750  | 758   | 777  | 796   | 801  | 468  |
| 45° | 604  | 619   | 646  | 671   | 676  | 466  |
| 55° | 450  | 470   | 505  | 531   | 536  | 404  |
| 65° | 296  | 319   | 360  | 390   | 397  | 295  |
| 75° | 150  | 179   | 226  | 256   | 264  | 159  |
| 85° | 31   | 57    | 71   | 69    | 69   | 37   |
| 90° | 0    | 0     | 0    | 0     | 0    |      |



TEST NUMBER: P732113

CATALOG NUMBER: 24CZ2-30HE-B2750-W2D-3500K

**CANDELA DISTRIBUTION (FULL):**

|       | 0°     | 22.5°  | 45°    | 67.5°  | 90°    |
|-------|--------|--------|--------|--------|--------|
| 0°    | 1002.3 | 1002.3 | 1002.3 | 1002.3 | 1002.3 |
| 2.5°  | 1003.2 | 1003.2 | 998.6  | 1003.2 | 1004.1 |
| 5°    | 997.7  | 999.6  | 995.0  | 1000.5 | 1001.3 |
| 7.5°  | 992.3  | 992.3  | 989.5  | 995.0  | 996.0  |
| 10°   | 982.3  | 983.2  | 982.3  | 988.7  | 989.5  |
| 12.5° | 969.7  | 971.4  | 972.4  | 978.7  | 979.6  |
| 15°   | 954.3  | 957.0  | 958.8  | 966.9  | 968.8  |
| 17.5° | 937.0  | 939.8  | 944.2  | 953.3  | 955.2  |
| 20°   | 916.2  | 919.8  | 925.2  | 937.0  | 939.8  |
| 22.5° | 893.6  | 897.2  | 906.2  | 917.1  | 921.6  |
| 25°   | 867.3  | 874.5  | 883.5  | 898.1  | 900.8  |
| 27.5° | 840.9  | 847.3  | 859.1  | 874.5  | 878.2  |
| 30°   | 810.2  | 820.1  | 834.6  | 850.0  | 853.6  |
| 32.5° | 780.2  | 790.2  | 807.4  | 823.8  | 828.3  |
| 35°   | 749.5  | 758.5  | 776.6  | 795.6  | 801.1  |
| 37.5° | 714.1  | 725.9  | 745.8  | 764.8  | 770.3  |
| 40°   | 677.0  | 691.5  | 714.1  | 734.1  | 740.4  |
| 42.5° | 641.6  | 657.0  | 679.7  | 701.4  | 708.6  |
| 45°   | 604.5  | 619.0  | 646.2  | 670.6  | 676.1  |
| 47.5° | 566.3  | 582.7  | 611.7  | 636.1  | 645.2  |
| 50°   | 528.3  | 545.6  | 576.4  | 601.7  | 607.2  |
| 52.5° | 490.2  | 508.4  | 541.0  | 568.2  | 570.9  |
| 55°   | 450.4  | 470.4  | 504.8  | 531.1  | 536.5  |
| 57.5° | 414.1  | 431.4  | 468.5  | 495.7  | 502.0  |
| 60°   | 374.3  | 393.3  | 433.1  | 458.6  | 466.7  |
| 62.5° | 336.2  | 356.2  | 397.9  | 423.2  | 430.4  |
| 65°   | 296.3  | 319.0  | 359.8  | 389.7  | 396.9  |
| 67.5° | 261.9  | 283.7  | 327.1  | 356.2  | 363.4  |
| 70°   | 222.0  | 246.5  | 292.7  | 322.6  | 329.8  |
| 72.5° | 187.6  | 212.9  | 259.2  | 288.1  | 299.1  |
| 75°   | 150.5  | 179.4  | 225.7  | 256.5  | 263.7  |
| 77.5° | 114.2  | 147.7  | 194.8  | 218.4  | 218.4  |
| 80°   | 81.6   | 116.9  | 160.4  | 171.3  | 173.1  |
| 82.5° | 53.5   | 87.9   | 118.7  | 117.8  | 117.8  |
| 85°   | 30.8   | 57.1   | 70.6   | 68.9   | 68.9   |
| 87.5° | 11.8   | 23.6   | 25.3   | 25.3   | 24.5   |
| 90°   | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    |



Report Generated By 670246072 / DESKTOP-50001EG





— 0°-180°    - - 45°-225°    - - - 90°-270°







LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-State Lighting Products

Report Prepared for

Cooper Lighting Solutions

(formerly Eaton)

METALUX

Report Number: SP1-2210-795-3

Test Date: 10/06/2022

Luminaire Tested: 9WP217084MDER4AM-3500K-315MA

Data in this report applies to families of products including 9WP217084MDER4AM-3500K.

### Test Information

Test Method: LM-79-2019  
 Report Number: SP1-2210-795-3  
 Test Lab: COOPER LIGHTING SOLUTIONS  
 Photometer: SP1 - 76IN SPHERE  
 Measurement Geometry:  $4\pi$   
 Issue Date: 10/06/2022  
 Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)  
 Product Line: METALUX  
 Catalog Number: **9WP217084MDER4AM-3500K-315MA**  
 Description: METALUX

TUNABLE BOARD, 3500K-315MA, PROGRAMMED @ 4.0Vdc.

### Spectral Parameters

|                           |         |           |      |      |      |
|---------------------------|---------|-----------|------|------|------|
| CCT (K):                  | 3506    | CRI (Ra): | 90.1 |      |      |
| CIE u':                   | 0.2401  | R1:       | 96.2 | R9:  | 75.4 |
| CIE v':                   | 0.4983  | R2:       | 91.5 | R10: | 83.5 |
| Duv:                      | -0.0097 | R3:       | 88.2 | R11: | 96.0 |
| CIE x:                    | 0.3952  | R4:       | 94.5 | R12: | 76.6 |
| CIE y:                    | 0.3646  | R5:       | 94.6 | R13: | 94.5 |
| CIE z:                    | 0.2402  | R6:       | 84.9 | R14: | 94.8 |
| Peak Wavelength (nm):     | 632     | R7:       | 86.1 |      |      |
| Dominant Wavelength (nm): | 586     | R8:       | 84.7 |      |      |
| Purity:                   | 28.3    |           |      |      |      |
| Rf:                       | 90.4    |           |      |      |      |
| Rg:                       | 97.8    |           |      |      |      |



### Test Conditions

Stabilization Time: 42M  
 Operation Time: 12H  
 Room Temperature (°C) / RH%: 24.0/38%  
 Sphere Temperature (°C): 24.4

REPORT NUMBER: SP1-2210-795-3

| Measurement and Test Equipment |                       |                  |                      |
|--------------------------------|-----------------------|------------------|----------------------|
| Instrument                     | Identification Number | Calibration Date | Calibration Due Date |
| Photometer                     | 76INCH SPHERE IN0058  | 8/8/2022         | 2/8/2023             |
| Power Meter                    | XITRON 2801 IN0071    | 11/29/2021       | 11/29/2022           |
| AC Power Source                | CHROMA 61603 IN0063   | 11/29/2021       | 11/29/2022           |
| DC Power Source                | AGILENT E3634A IN0208 | 11/29/2021       | 11/29/2022           |
| Sphere Thermometer             | ONSET IN0085          | 11/29/2021       | 11/29/2022           |
| Room Thermometer               | ONSET IN0046          | 11/29/2021       | 11/29/2022           |

REPORT NUMBER: SP1-2210-795-3

**CIE 1931 Chromaticity Diagram**



**CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles**



Point lies outside the range

REPORT NUMBER: SP1-2210-795-3

**Photopic Flux vs. Wavelength**




#####

| λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) |
|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|
| 360       | 1172             | NR               | 490       | 25948            | NR               | 620       | 41537            | NR               | 750       | 1967             | NR               | 880       | 2125             | NR               |
| 365       | 1124             | NR               | 495       | 24688            | NR               | 625       | 40984            | NR               | 755       | 1800             | NR               | 885       | 2057             | NR               |
| 370       | 1161             | NR               | 500       | 24010            | NR               | 630       | 70640            | NR               | 760       | 1684             | NR               | 890       | 2080             | NR               |
| 375       | 1195             | NR               | 505       | 24099            | NR               | 635       | 57718            | NR               | 765       | 1458             | NR               | 895       | 1496             | NR               |
| 380       | 1247             | NR               | 510       | 24608            | NR               | 640       | 30257            | NR               | 770       | 1312             | NR               | 900       | 1417             | NR               |
| 385       | 1197             | NR               | 515       | 25386            | NR               | 645       | 29336            | NR               | 775       | 1355             | NR               | 905       | 1054             | NR               |
| 390       | 930              | NR               | 520       | 25689            | NR               | 650       | 27279            | NR               | 780       | 1313             | NR               | 910       | 1583             | NR               |
| 395       | 934              | NR               | 525       | 25906            | NR               | 655       | 20755            | NR               | 785       | 1001             | NR               | 915       | 1866             | NR               |
| 400       | 841              | NR               | 530       | 26477            | NR               | 660       | 17587            | NR               | 790       | 1065             | NR               | 920       | 1529             | NR               |
| 405       | 808              | NR               | 535       | 27006            | NR               | 665       | 15073            | NR               | 795       | 1315             | NR               | 925       | 1671             | NR               |
| 410       | 914              | NR               | 540       | 27913            | NR               | 670       | 13454            | NR               | 800       | 1029             | NR               | 930       | 1617             | NR               |
| 415       | 1302             | NR               | 545       | 28798            | NR               | 675       | 11513            | NR               | 805       | 1267             | NR               | 935       | 1522             | NR               |
| 420       | 2088             | NR               | 550       | 29982            | NR               | 680       | 9839             | NR               | 810       | 1312             | NR               | 940       | 1792             | NR               |
| 425       | 3768             | NR               | 555       | 31264            | NR               | 685       | 8568             | NR               | 815       | 1239             | NR               | 945       | 1727             | NR               |
| 430       | 6771             | NR               | 560       | 32729            | NR               | 690       | 7487             | NR               | 820       | 1107             | NR               | 950       | 1375             | NR               |
| 435       | 12240            | NR               | 565       | 34271            | NR               | 695       | 6502             | NR               | 825       | 1209             | NR               | 955       | 2031             | NR               |
| 440       | 21697            | NR               | 570       | 35931            | NR               | 700       | 5703             | NR               | 830       | 1175             | NR               | 960       | 2155             | NR               |
| 445       | 30873            | NR               | 575       | 37457            | NR               | 705       | 4977             | NR               | 835       | 916              | NR               | 965       | 2519             | NR               |
| 450       | 30626            | NR               | 580       | 38827            | NR               | 710       | 4394             | NR               | 840       | 1171             | NR               | 970       | 2234             | NR               |
| 455       | 24859            | NR               | 585       | 40347            | NR               | 715       | 3979             | NR               | 845       | 1406             | NR               | 975       | 2064             | NR               |
| 460       | 23253            | NR               | 590       | 41126            | NR               | 720       | 3528             | NR               | 850       | 1407             | NR               | 980       | 2541             | NR               |
| 465       | 26717            | NR               | 595       | 41803            | NR               | 725       | 3206             | NR               | 855       | 1173             | NR               | 985       | 1959             | NR               |
| 470       | 33149            | NR               | 600       | 42231            | NR               | 730       | 2798             | NR               | 860       | 928              | NR               | 990       | 2532             | NR               |
| 475       | 36075            | NR               | 605       | 43629            | NR               | 735       | 2417             | NR               | 865       | 1256             | NR               | 995       | 2564             | NR               |
| 480       | 33381            | NR               | 610       | 53581            | NR               | 740       | 2135             | NR               | 870       | 1460             | NR               | 1000      | 2056             | NR               |
| 485       | 28773            | NR               | 615       | 54375            | NR               | 745       | 2151             | NR               | 875       | 1741             | NR               |           |                  |                  |

REPORT NUMBER: SP1-2210-795-3

**Scotopic Flux vs. Wavelength**

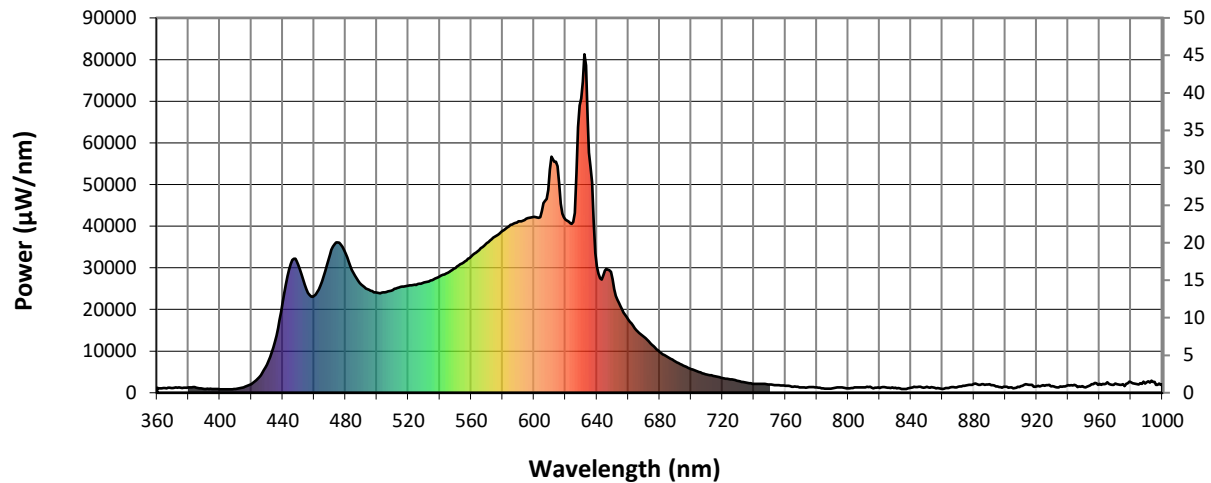

**Scotopic Lumens: 4472.9**

**S/P: 1.81**

| λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) |
|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|
| 360       | 1172             | NR               | 490       | 25948            | NR               | 620       | 41537            | NR               | 750       | 1967             | NR               | 880       | 2125             | NR               |
| 365       | 1124             | NR               | 495       | 24688            | NR               | 625       | 40984            | NR               | 755       | 1800             | NR               | 885       | 2057             | NR               |
| 370       | 1161             | NR               | 500       | 24010            | NR               | 630       | 70640            | NR               | 760       | 1684             | NR               | 890       | 2080             | NR               |
| 375       | 1195             | NR               | 505       | 24099            | NR               | 635       | 57718            | NR               | 765       | 1458             | NR               | 895       | 1496             | NR               |
| 380       | 1247             | NR               | 510       | 24608            | NR               | 640       | 30257            | NR               | 770       | 1312             | NR               | 900       | 1417             | NR               |
| 385       | 1197             | NR               | 515       | 25386            | NR               | 645       | 29336            | NR               | 775       | 1355             | NR               | 905       | 1054             | NR               |
| 390       | 930              | NR               | 520       | 25689            | NR               | 650       | 27279            | NR               | 780       | 1313             | NR               | 910       | 1583             | NR               |
| 395       | 934              | NR               | 525       | 25906            | NR               | 655       | 20755            | NR               | 785       | 1001             | NR               | 915       | 1866             | NR               |
| 400       | 841              | NR               | 530       | 26477            | NR               | 660       | 17587            | NR               | 790       | 1065             | NR               | 920       | 1529             | NR               |
| 405       | 808              | NR               | 535       | 27006            | NR               | 665       | 15073            | NR               | 795       | 1315             | NR               | 925       | 1671             | NR               |
| 410       | 914              | NR               | 540       | 27913            | NR               | 670       | 13454            | NR               | 800       | 1029             | NR               | 930       | 1617             | NR               |
| 415       | 1302             | NR               | 545       | 28798            | NR               | 675       | 11513            | NR               | 805       | 1267             | NR               | 935       | 1522             | NR               |
| 420       | 2088             | NR               | 550       | 29982            | NR               | 680       | 9839             | NR               | 810       | 1312             | NR               | 940       | 1792             | NR               |
| 425       | 3768             | NR               | 555       | 31264            | NR               | 685       | 8568             | NR               | 815       | 1239             | NR               | 945       | 1727             | NR               |
| 430       | 6771             | NR               | 560       | 32729            | NR               | 690       | 7487             | NR               | 820       | 1107             | NR               | 950       | 1375             | NR               |
| 435       | 12240            | NR               | 565       | 34271            | NR               | 695       | 6502             | NR               | 825       | 1209             | NR               | 955       | 2031             | NR               |
| 440       | 21697            | NR               | 570       | 35931            | NR               | 700       | 5703             | NR               | 830       | 1175             | NR               | 960       | 2155             | NR               |
| 445       | 30873            | NR               | 575       | 37457            | NR               | 705       | 4977             | NR               | 835       | 916              | NR               | 965       | 2519             | NR               |
| 450       | 30626            | NR               | 580       | 38827            | NR               | 710       | 4394             | NR               | 840       | 1171             | NR               | 970       | 2234             | NR               |
| 455       | 24859            | NR               | 585       | 40347            | NR               | 715       | 3979             | NR               | 845       | 1406             | NR               | 975       | 2064             | NR               |
| 460       | 23253            | NR               | 590       | 41126            | NR               | 720       | 3528             | NR               | 850       | 1407             | NR               | 980       | 2541             | NR               |
| 465       | 26717            | NR               | 595       | 41803            | NR               | 725       | 3206             | NR               | 855       | 1173             | NR               | 985       | 1959             | NR               |
| 470       | 33149            | NR               | 600       | 42231            | NR               | 730       | 2798             | NR               | 860       | 928              | NR               | 990       | 2532             | NR               |
| 475       | 36075            | NR               | 605       | 43629            | NR               | 735       | 2417             | NR               | 865       | 1256             | NR               | 995       | 2564             | NR               |
| 480       | 33381            | NR               | 610       | 53581            | NR               | 740       | 2135             | NR               | 870       | 1460             | NR               | 1000      | 2056             | NR               |
| 485       | 28773            | NR               | 615       | 54375            | NR               | 745       | 2151             | NR               | 875       | 1741             | NR               |           |                  |                  |

REPORT NUMBER: SP1-2210-795-3

**Melanopic Flux vs. Wavelength**



**Melanopic Lumens: 1922.8**

**S/P: 0.78**

| λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) |
|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|
| 360       | 1172             | NR               | 490       | 25948            | NR               | 620       | 41537            | NR               | 750       | 1967             | NR               | 880       | 2125             | NR               |
| 365       | 1124             | NR               | 495       | 24688            | NR               | 625       | 40984            | NR               | 755       | 1800             | NR               | 885       | 2057             | NR               |
| 370       | 1161             | NR               | 500       | 24010            | NR               | 630       | 70640            | NR               | 760       | 1684             | NR               | 890       | 2080             | NR               |
| 375       | 1195             | NR               | 505       | 24099            | NR               | 635       | 57718            | NR               | 765       | 1458             | NR               | 895       | 1496             | NR               |
| 380       | 1247             | NR               | 510       | 24608            | NR               | 640       | 30257            | NR               | 770       | 1312             | NR               | 900       | 1417             | NR               |
| 385       | 1197             | NR               | 515       | 25386            | NR               | 645       | 29336            | NR               | 775       | 1355             | NR               | 905       | 1054             | NR               |
| 390       | 930              | NR               | 520       | 25689            | NR               | 650       | 27279            | NR               | 780       | 1313             | NR               | 910       | 1583             | NR               |
| 395       | 934              | NR               | 525       | 25906            | NR               | 655       | 20755            | NR               | 785       | 1001             | NR               | 915       | 1866             | NR               |
| 400       | 841              | NR               | 530       | 26477            | NR               | 660       | 17587            | NR               | 790       | 1065             | NR               | 920       | 1529             | NR               |
| 405       | 808              | NR               | 535       | 27006            | NR               | 665       | 15073            | NR               | 795       | 1315             | NR               | 925       | 1671             | NR               |
| 410       | 914              | NR               | 540       | 27913            | NR               | 670       | 13454            | NR               | 800       | 1029             | NR               | 930       | 1617             | NR               |
| 415       | 1302             | NR               | 545       | 28798            | NR               | 675       | 11513            | NR               | 805       | 1267             | NR               | 935       | 1522             | NR               |
| 420       | 2088             | NR               | 550       | 29982            | NR               | 680       | 9839             | NR               | 810       | 1312             | NR               | 940       | 1792             | NR               |
| 425       | 3768             | NR               | 555       | 31264            | NR               | 685       | 8568             | NR               | 815       | 1239             | NR               | 945       | 1727             | NR               |
| 430       | 6771             | NR               | 560       | 32729            | NR               | 690       | 7487             | NR               | 820       | 1107             | NR               | 950       | 1375             | NR               |
| 435       | 12240            | NR               | 565       | 34271            | NR               | 695       | 6502             | NR               | 825       | 1209             | NR               | 955       | 2031             | NR               |
| 440       | 21697            | NR               | 570       | 35931            | NR               | 700       | 5703             | NR               | 830       | 1175             | NR               | 960       | 2155             | NR               |
| 445       | 30873            | NR               | 575       | 37457            | NR               | 705       | 4977             | NR               | 835       | 916              | NR               | 965       | 2519             | NR               |
| 450       | 30626            | NR               | 580       | 38827            | NR               | 710       | 4394             | NR               | 840       | 1171             | NR               | 970       | 2234             | NR               |
| 455       | 24859            | NR               | 585       | 40347            | NR               | 715       | 3979             | NR               | 845       | 1406             | NR               | 975       | 2064             | NR               |
| 460       | 23253            | NR               | 590       | 41126            | NR               | 720       | 3528             | NR               | 850       | 1407             | NR               | 980       | 2541             | NR               |
| 465       | 26717            | NR               | 595       | 41803            | NR               | 725       | 3206             | NR               | 855       | 1173             | NR               | 985       | 1959             | NR               |
| 470       | 33149            | NR               | 600       | 42231            | NR               | 730       | 2798             | NR               | 860       | 928              | NR               | 990       | 2532             | NR               |
| 475       | 36075            | NR               | 605       | 43629            | NR               | 735       | 2417             | NR               | 865       | 1256             | NR               | 995       | 2564             | NR               |
| 480       | 33381            | NR               | 610       | 53581            | NR               | 740       | 2135             | NR               | 870       | 1460             | NR               | 1000      | 2056             | NR               |
| 485       | 28773            | NR               | 615       | 54375            | NR               | 745       | 2151             | NR               | 875       | 1741             | NR               |           |                  |                  |

REPORT NUMBER: SP1-2210-795-3

**TM-30-18**

### Summary

$R_f = 90.4$   
 $R_g = 97.8$   
 CIE  $R_a = 90.1$   
 $R_g = 75.4$



### Color Vector Graphics



REPORT NUMBER: SP1-2210-795-3

TM-30-18

Individual Sample Fidelity Index ( $R_{f,i}$ )

|            |            |            |            |
|------------|------------|------------|------------|
| CES01 = 86 | CES26 = 96 | CES51 = 92 | CES76 = 90 |
| CES02 = 63 | CES27 = 88 | CES52 = 95 | CES77 = 80 |
| CES03 = 32 | CES28 = 96 | CES53 = 91 | CES78 = 90 |
| CES04 = 70 | CES29 = 91 | CES54 = 89 | CES79 = 83 |
| CES05 = 50 | CES30 = 87 | CES55 = 87 | CES80 = 84 |
| CES06 = 51 | CES31 = 92 | CES56 = 88 | CES81 = 66 |
| CES07 = 43 | CES32 = 97 | CES57 = 87 | CES82 = 94 |
| CES08 = 42 | CES33 = 92 | CES58 = 87 | CES83 = 89 |
| CES09 = 29 | CES34 = 94 | CES59 = 95 | CES84 = 96 |
| CES10 = 76 | CES35 = 96 | CES60 = 91 | CES85 = 77 |
| CES11 = 58 | CES36 = 82 | CES61 = 91 | CES86 = 75 |
| CES12 = 64 | CES37 = 96 | CES62 = 84 | CES87 = 91 |
| CES13 = 44 | CES38 = 83 | CES63 = 95 | CES88 = 92 |
| CES14 = 74 | CES39 = 97 | CES64 = 90 | CES89 = 84 |
| CES15 = 72 | CES40 = 95 | CES65 = 93 | CES90 = 91 |
| CES16 = 48 | CES41 = 93 | CES66 = 91 | CES91 = 77 |
| CES17 = 49 | CES42 = 93 | CES67 = 91 | CES92 = 78 |
| CES18 = 56 | CES43 = 91 | CES68 = 92 | CES93 = 86 |
| CES19 = 71 | CES44 = 99 | CES69 = 92 | CES94 = 77 |
| CES20 = 67 | CES45 = 94 | CES70 = 92 | CES95 = 86 |
| CES21 = 86 | CES46 = 94 | CES71 = 89 | CES96 = 94 |
| CES22 = 78 | CES47 = 86 | CES72 = 95 | CES97 = 92 |
| CES23 = 91 | CES48 = 86 | CES73 = 90 | CES98 = 91 |
| CES24 = 90 | CES49 = 95 | CES74 = 88 | CES99 = 90 |
| CES25 = 71 | CES50 = 92 | CES75 = 89 |            |



REPORT NUMBER: SP1-2210-795-3

**TM-30-18**

Color Rendition by Hue-Angle Bin



REPORT NUMBER: SP1-2210-795-3

**TM-30-18**

**Measure Comparisons**



(END OF REPORT)