

Cooper Lighting Solutions Photometric Lab
1121 Highway 74 South
Peachtree City, GA 30269



Scaled data based on original data using
LM-79-08 Approved Method: Electrical and Photometric Measurements of Solid-State
Lighting Products

Test Report Prepared for

Cooper Lighting Solutions

(formerly Eaton)

Brand: METALUX

Report Number: P732177

Luminaire Tested: **24CZ2-35HE-S-B2750-W2D-3000K**

Issue Date: 1/5/2024



Test Information

Test Method: LM-79-08
Report Number: P732177
TEST IS SCALED FROM IESNA LM-79-08 TEST DATA (P272125)
Test Lab: INNOVATION CENTER(G3)
Issue Date: 1/5/2024
Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)
Product Line: METALUX
Catalog Number: 24CZ2-35HE-S-B2750-W2D-3000K
Description: 2X4 3500 LUMEN CRUZE TROFFER WITH BIO UP LEDS AT 3000K CCT AND SMOOTH LENS

Light Source: -
Ballast/Driver: -

Summary


Lumens per Lamp: N/A
Luminaire Lumens: 3416.0 lumens
Efficiency: N/A
Efficacy: 131.4 lumens/watt
Spacing Criteria (0/90/45): 1.2 / 1.26 / 1.35
Luminous Opening: Rectangular (W 1.92' x L: 3.98' x H: 0')
CIE Type: Direct

Input Watts (W): 26
Input Voltage (V): NR
Input Current (Ain): NR
Voltage Rise (V): NR
Power Factor: NR
Total Harmonic Distortion (THDi): NR
Frequency (hertz): 60
Stabilization Time: NR
Operation Time: NR
Ambient Temperature (°C): NR
Test Distance: 25 FT

TEST NUMBER: P732177

CATALOG NUMBER: 24CZ2-35HE-S-B2750-W2D-3000K

Luminous Intensity Polar Plot

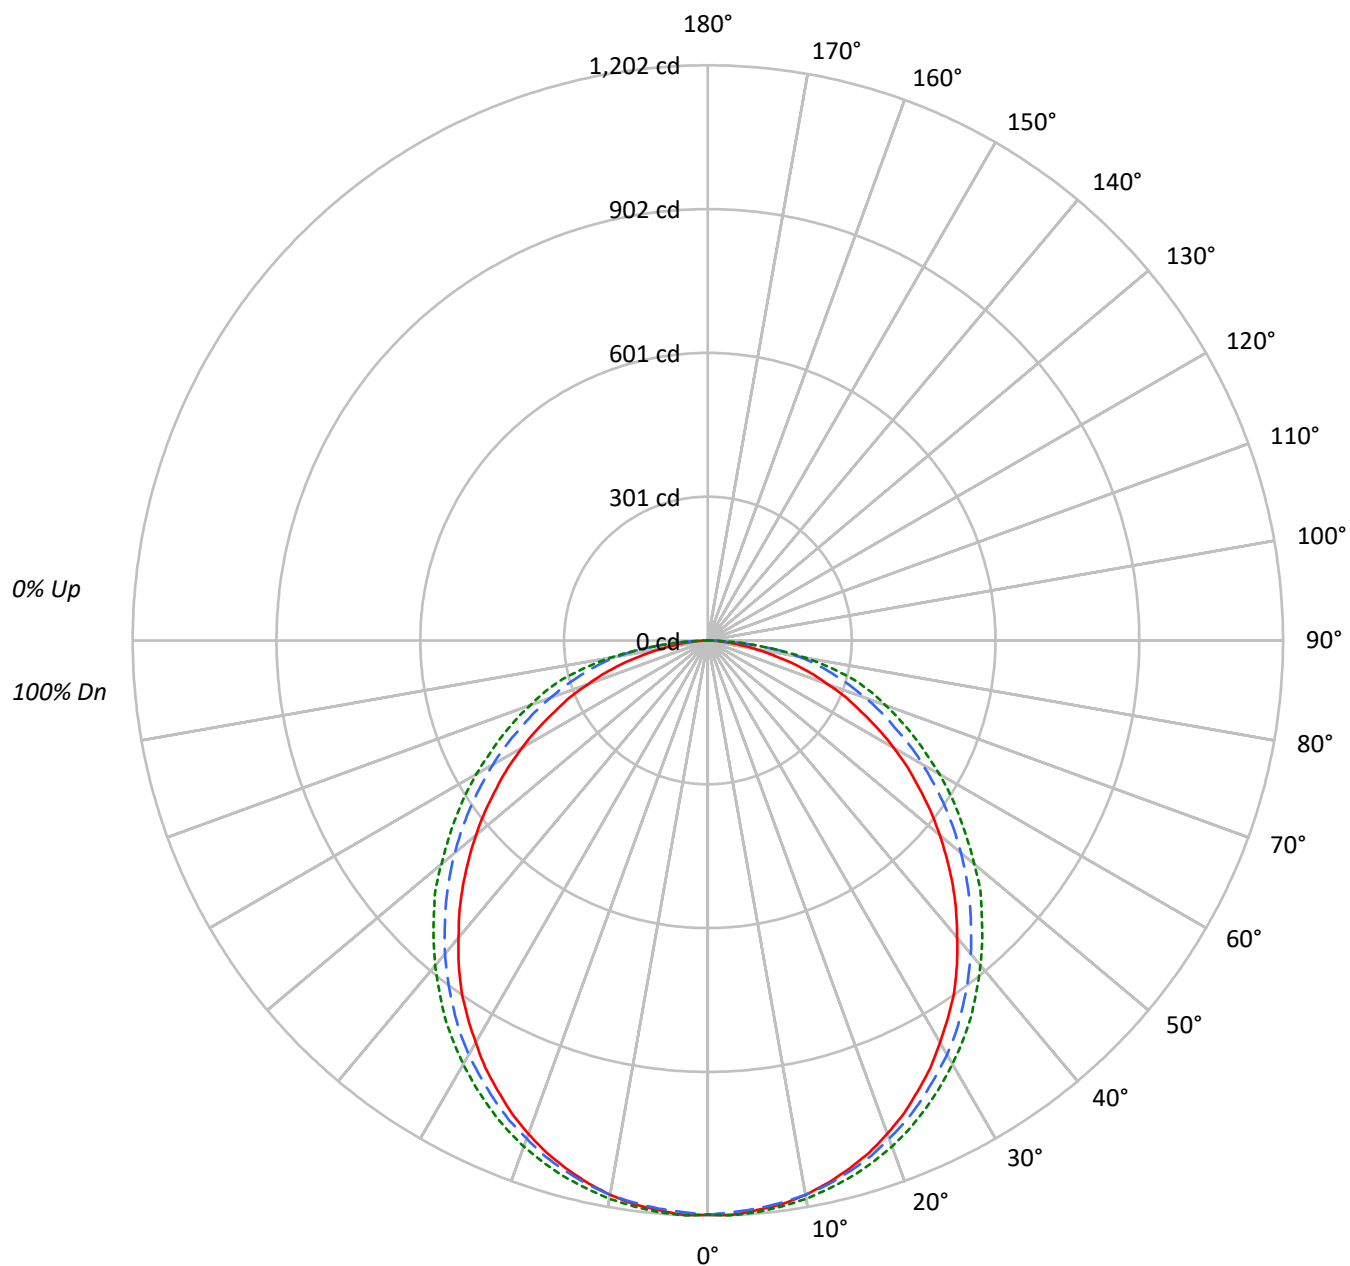



TEST NUMBER: P732177

CATALOG NUMBER: 24CZ2-35HE-S-B2750-W2D-3000K

COEFFICIENT OF UTILIZATION - ZONAL CAVITY METHOD:

RF	20				20					20					20					20
RC	80				70					50					30					10
RW	70	50	30	10	70	50	30	10	50	30	10	50	30	10	50	30	10	50	30	10
RCR																				
0	119	119	119	119	116	116	116	116	111	111	111	106	106	106	102	102	102	100		
1	108	103	99	95	106	101	97	93	97	93	90	93	90	88	89	87	85	83		
2	98	90	83	77	96	88	81	76	84	79	74	81	76	72	78	74	71	69		
3	89	79	70	64	87	77	69	63	74	67	62	71	66	61	69	64	60	58		
4	82	70	61	54	80	68	60	54	66	59	53	63	57	52	61	56	51	49		
5	75	62	53	46	73	61	53	46	59	51	46	57	50	45	55	49	45	42		
6	70	56	47	40	68	55	47	40	53	46	40	52	45	40	50	44	39	37		
7	64	51	42	36	63	50	42	36	48	41	35	47	40	35	46	39	35	33		
8	60	46	38	32	58	46	37	32	44	37	32	43	36	31	42	36	31	29		
9	56	43	34	29	55	42	34	29	41	34	28	40	33	28	39	33	28	26		
10	53	39	31	26	51	39	31	26	38	31	26	37	30	26	36	30	26	24		

AVERAGE LUMINANCE (cd/sqm):

	0°	45°	90°
0°	1694	1694	1694
5°	1692	1688	1699
10°	1686	1686	1698
15°	1669	1677	1695
20°	1648	1664	1690
25°	1617	1647	1679
30°	1581	1629	1666
35°	1546	1602	1653
40°	1493	1575	1633
45°	1444	1544	1616
50°	1389	1515	1596
55°	1327	1487	1581
60°	1265	1464	1577
65°	1185	1439	1587
70°	1097	1446	1630
75°	982	1473	1722
80°	794	1560	1684
85°	598	1370	1336



TEST NUMBER: P732177

CATALOG NUMBER: 24CZ2-35HE-S-B2750-W2D-3000K

ZONAL LUMENS:

Zone	Lumens	% Fixture
0°-10°	113.6	3.3
10°-20°	324.6	9.5
20°-30°	488.0	14.3
30°-40°	581.3	17.0
40°-50°	594.9	17.4
50°-60°	535.6	15.7
60°-70°	420.6	12.3
70°-80°	273.0	8.0
80°-90°	84.4	2.5
90°-100°	0.0	0.0
100°-110°	0.0	0.0
110°-120°	0.0	0.0
120°-130°	0.0	0.0
130°-140°	0.0	0.0
140°-150°	0.0	0.0
150°-160°	0.0	0.0
160°-170°	0.0	0.0
170°-180°	0.0	0.0
0°-30°	926.2	27.1
0°-40°	1507.5	44.1
0°-60°	2638.0	77.2
0°-90°	3416.0	100.0
90°-120°	0.0	0.0
90°-150°	0.0	0.0
90°-180°	0.0	0.0
0°-180°	3416.0	100.0

CANDELA DISTRIBUTION:

	0°	22.5°	45°	67.5°	90°	Flux
0°	1200	1200	1200	1200	1200	
5°	1195	1197	1191	1198	1199	114
15°	1143	1146	1148	1158	1160	322
25°	1038	1047	1058	1075	1078	478
35°	897	908	930	953	959	560
45°	724	741	774	803	810	558
55°	539	563	604	636	642	483
65°	355	382	431	467	475	353
75°	180	215	270	307	316	191
85°	37	68	85	82	82	45
90°	0	0	0	0	0	



TEST NUMBER: P732177

CATALOG NUMBER: 24CZ2-35HE-S-B2750-W2D-3000K

CANDELA DISTRIBUTION (FULL):

	0°	22.5°	45°	67.5°	90°
0°	1200.1	1200.1	1200.1	1200.1	1200.1
2.5°	1201.2	1201.2	1195.7	1201.2	1202.2
5°	1194.6	1196.9	1191.4	1197.9	1198.9
7.5°	1188.1	1188.1	1184.8	1191.4	1192.5
10°	1176.2	1177.2	1176.2	1183.8	1184.8
12.5°	1161.0	1163.1	1164.3	1171.9	1172.9
15°	1142.6	1145.9	1148.0	1157.8	1160.0
17.5°	1121.9	1125.2	1130.6	1141.4	1143.6
20°	1097.0	1101.3	1107.8	1121.9	1125.2
22.5°	1069.9	1074.2	1085.1	1098.0	1103.5
25°	1038.4	1047.0	1057.9	1075.3	1078.5
27.5°	1006.9	1014.5	1028.6	1047.0	1051.5
30°	970.0	981.9	999.3	1017.7	1022.1
32.5°	934.2	946.1	966.8	986.4	991.7
35°	897.3	908.2	929.9	952.6	959.2
37.5°	855.0	869.1	893.0	915.8	922.3
40°	810.5	827.9	855.0	878.9	886.5
42.5°	768.2	786.6	813.8	839.8	848.5
45°	723.7	741.1	773.7	803.0	809.5
47.5°	678.1	697.7	732.4	761.6	772.5
50°	632.6	653.3	690.1	720.5	727.0
52.5°	587.0	608.7	647.8	680.3	683.6
55°	539.3	563.2	604.4	635.9	642.4
57.5°	495.9	516.5	561.0	593.5	601.1
60°	448.1	470.9	518.6	549.1	558.7
62.5°	402.5	426.4	476.4	506.7	515.3
65°	354.8	382.0	430.8	466.6	475.2
67.5°	313.6	339.6	391.7	426.4	435.1
70°	265.8	295.2	350.5	386.3	394.9
72.5°	224.6	254.9	310.4	345.0	358.1
75°	180.1	214.8	270.2	307.1	315.7
77.5°	136.7	176.9	233.2	261.5	261.5
80°	97.7	140.0	192.0	205.1	207.2
82.5°	64.1	105.2	142.1	141.1	141.1
85°	36.9	68.4	84.6	82.5	82.5
87.5°	14.1	28.2	30.3	30.3	29.3
90°	0.0	0.0	0.0	0.0	0.0



Report Generated By 670246072 / DESKTOP-50001EG





— 0°-180° - - 45°-225° - - - 90°-270°







LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-State Lighting Products

Report Prepared for

Cooper Lighting Solutions

(formerly Eaton)

METALUX

Report Number: SP1-2210-795-2

Test Date: 10/06/2022

Luminaire Tested: 9WP217084MDER4AM-3000K-315MA

Data in this report applies to families of products including 9WP217084MDER4AM-3000K.

Test Information

Test Method: LM-79-2019
 Report Number: SP1-2210-795-2
 Test Lab: COOPER LIGHTING SOLUTIONS
 Photometer: SP1 - 76IN SPHERE
 Measurement Geometry: 4π
 Issue Date: 10/06/2022
 Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)
 Product Line: METALUX
 Catalog Number: **9WP217084MDER4AM-3000K-315MA**
 Description: METALUX

TUNABLE BOARD, 3000K-315MA, PROGRAMMED @ 2.6Vdc.


Spectral Parameters

CCT (K): 3004
 CIE u' : 0.2526
 CIE v' : 0.5127
 Duv: -0.0061
 CIE x: 0.4279
 CIE y: 0.3860
 CIE z: 0.1861
 Peak Wavelength (nm): 632
 Dominant Wavelength (nm): 585
 Purity: 44.5

CRI (Ra): 93.2

R1:	98.5	R9:	67.1
R2:	96.3	R10:	94.0
R3:	94.1	R11:	97.7
R4:	96.5	R12:	86.0
R5:	98.5	R13:	98.4
R6:	90.3	R14:	98.1
R7:	88.3		
R8:	83.1		

Rf: 92.5
 Rg: 99.9

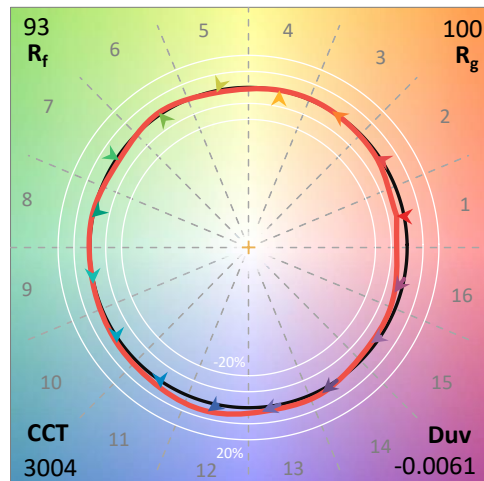

Test Conditions


Stabilization Time: 53M
 Operation Time: 12H
 Room Temperature (°C) / RH%: 24.0/38%
 Sphere Temperature (°C): 24.4

REPORT NUMBER: SP1-2210-795-2


Measurement and Test Equipment			
Instrument	Identification Number	Calibration Date	Calibration Due Date
Photometer	76INCH SPHERE IN0058	8/8/2022	2/8/2023
Power Meter	XITRON 2801 IN0071	11/29/2021	11/29/2022
AC Power Source	CHROMA 61603 IN0063	11/29/2021	11/29/2022
DC Power Source	AGILENT E3634A IN0208	11/29/2021	11/29/2022
Sphere Thermometer	ONSET IN0085	11/29/2021	11/29/2022
Room Thermometer	ONSET IN0046	11/29/2021	11/29/2022

REPORT NUMBER: SP1-2210-795-2

CIE 1931 Chromaticity Diagram

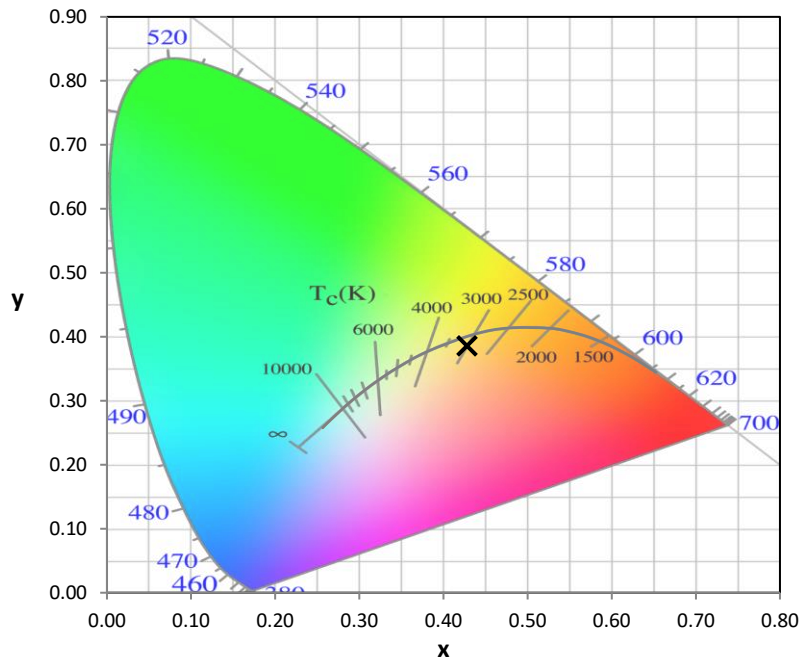


CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles

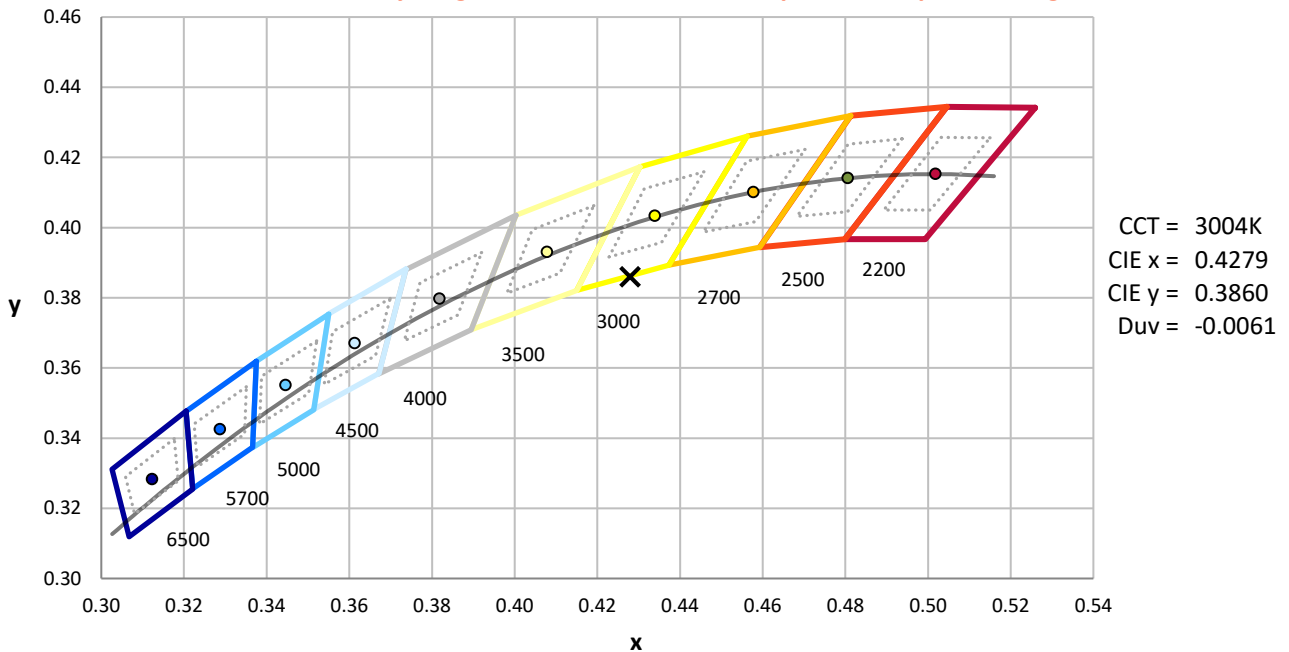

Point lies outside the range

REPORT NUMBER: SP1-2210-795-2

Photopic Flux vs. Wavelength

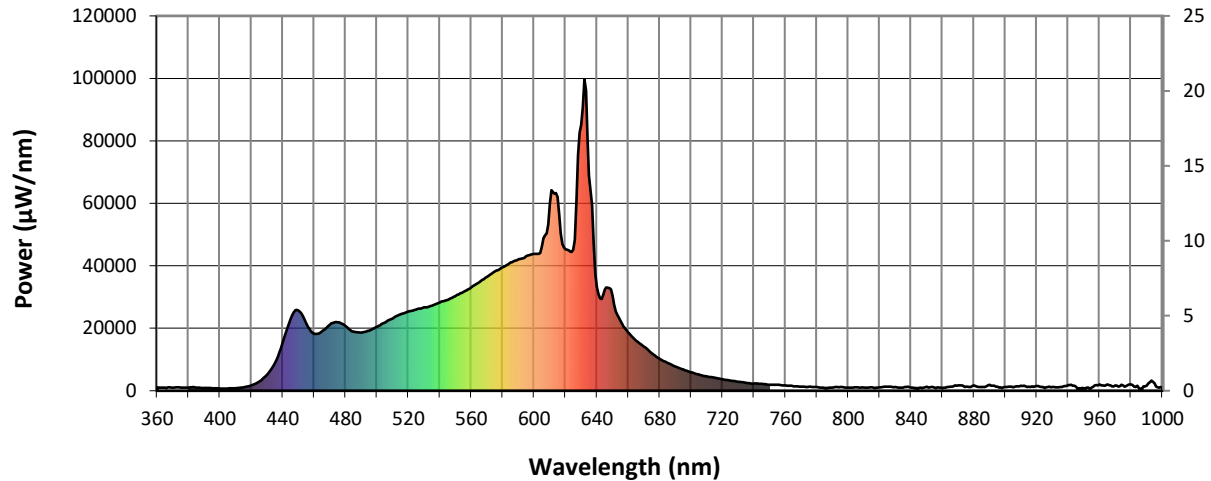


#####

λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)
360	1141	NR	490	18648	NR	620	45240	NR	750	1949	NR	880	1696	NR
365	981	NR	495	19266	NR	625	45103	NR	755	1928	NR	885	1176	NR
370	993	NR	500	20501	NR	630	85243	NR	760	1686	NR	890	1892	NR
375	1026	NR	505	21835	NR	635	68928	NR	765	1435	NR	895	1303	NR
380	1011	NR	510	23128	NR	640	33096	NR	770	1270	NR	900	1197	NR
385	1002	NR	515	24473	NR	645	32437	NR	775	1334	NR	905	1148	NR
390	868	NR	520	25336	NR	650	30398	NR	780	1218	NR	910	1595	NR
395	834	NR	525	26013	NR	655	22347	NR	785	928	NR	915	1266	NR
400	731	NR	530	26667	NR	660	18602	NR	790	989	NR	920	1495	NR
405	725	NR	535	27195	NR	665	15938	NR	795	1224	NR	925	855	NR
410	825	NR	540	28268	NR	670	14142	NR	800	1005	NR	930	1185	NR
415	1102	NR	545	29091	NR	675	11970	NR	805	1076	NR	935	1186	NR
420	1695	NR	550	30262	NR	680	10212	NR	810	1018	NR	940	1843	NR
425	2899	NR	555	31582	NR	685	8911	NR	815	1059	NR	945	1344	NR
430	5092	NR	560	33069	NR	690	7775	NR	820	1047	NR	950	827	NR
435	8866	NR	565	34747	NR	695	6796	NR	825	1259	NR	955	984	NR
440	15398	NR	570	36451	NR	700	5894	NR	830	1151	NR	960	1985	NR
445	23004	NR	575	38145	NR	705	5150	NR	835	1045	NR	965	2009	NR
450	25734	NR	580	39543	NR	710	4545	NR	840	1037	NR	970	1686	NR
455	21534	NR	585	41063	NR	715	4197	NR	845	888	NR	975	1733	NR
460	18246	NR	590	42070	NR	720	3650	NR	850	1271	NR	980	2039	NR
465	18978	NR	595	43067	NR	725	3265	NR	855	1028	NR	985	919	NR
470	21128	NR	600	43863	NR	730	2885	NR	860	867	NR	990	1621	NR
475	21866	NR	605	46127	NR	735	2521	NR	865	1316	NR	995	2360	NR
480	20628	NR	610	59905	NR	740	2317	NR	870	1674	NR	1000	905	NR
485	18888	NR	615	62018	NR	745	2212	NR	875	1299	NR			

REPORT NUMBER: SP1-2210-795-2

Scotopic Flux vs. Wavelength

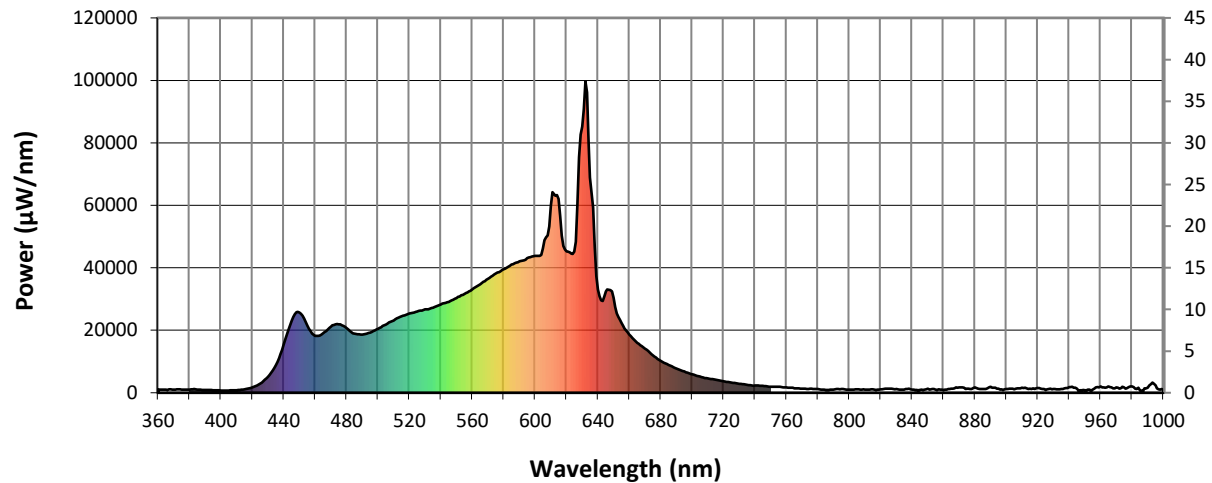


Scotopic Lumens: 3849.1

S/P: 1.53

λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)
360	1141	NR	490	18648	NR	620	45240	NR	750	1949	NR	880	1696	NR
365	981	NR	495	19266	NR	625	45103	NR	755	1928	NR	885	1176	NR
370	993	NR	500	20501	NR	630	85243	NR	760	1686	NR	890	1892	NR
375	1026	NR	505	21835	NR	635	68928	NR	765	1435	NR	895	1303	NR
380	1011	NR	510	23128	NR	640	33096	NR	770	1270	NR	900	1197	NR
385	1002	NR	515	24473	NR	645	32437	NR	775	1334	NR	905	1148	NR
390	868	NR	520	25336	NR	650	30398	NR	780	1218	NR	910	1595	NR
395	834	NR	525	26013	NR	655	22347	NR	785	928	NR	915	1266	NR
400	731	NR	530	26667	NR	660	18602	NR	790	989	NR	920	1495	NR
405	725	NR	535	27195	NR	665	15938	NR	795	1224	NR	925	855	NR
410	825	NR	540	28268	NR	670	14142	NR	800	1005	NR	930	1185	NR
415	1102	NR	545	29091	NR	675	11970	NR	805	1076	NR	935	1186	NR
420	1695	NR	550	30262	NR	680	10212	NR	810	1018	NR	940	1843	NR
425	2899	NR	555	31582	NR	685	8911	NR	815	1059	NR	945	1344	NR
430	5092	NR	560	33069	NR	690	7775	NR	820	1047	NR	950	827	NR
435	8866	NR	565	34747	NR	695	6796	NR	825	1259	NR	955	984	NR
440	15398	NR	570	36451	NR	700	5894	NR	830	1151	NR	960	1985	NR
445	23004	NR	575	38145	NR	705	5150	NR	835	1045	NR	965	2009	NR
450	25734	NR	580	39543	NR	710	4545	NR	840	1037	NR	970	1686	NR
455	21534	NR	585	41063	NR	715	4197	NR	845	888	NR	975	1733	NR
460	18246	NR	590	42070	NR	720	3650	NR	850	1271	NR	980	2039	NR
465	18978	NR	595	43067	NR	725	3265	NR	855	1028	NR	985	919	NR
470	21128	NR	600	43863	NR	730	2885	NR	860	867	NR	990	1621	NR
475	21866	NR	605	46127	NR	735	2521	NR	865	1316	NR	995	2360	NR
480	20628	NR	610	59905	NR	740	2317	NR	870	1674	NR	1000	905	NR
485	18888	NR	615	62018	NR	745	2212	NR	875	1299	NR			

REPORT NUMBER: SP1-2210-795-2

Melanopic Flux vs. Wavelength

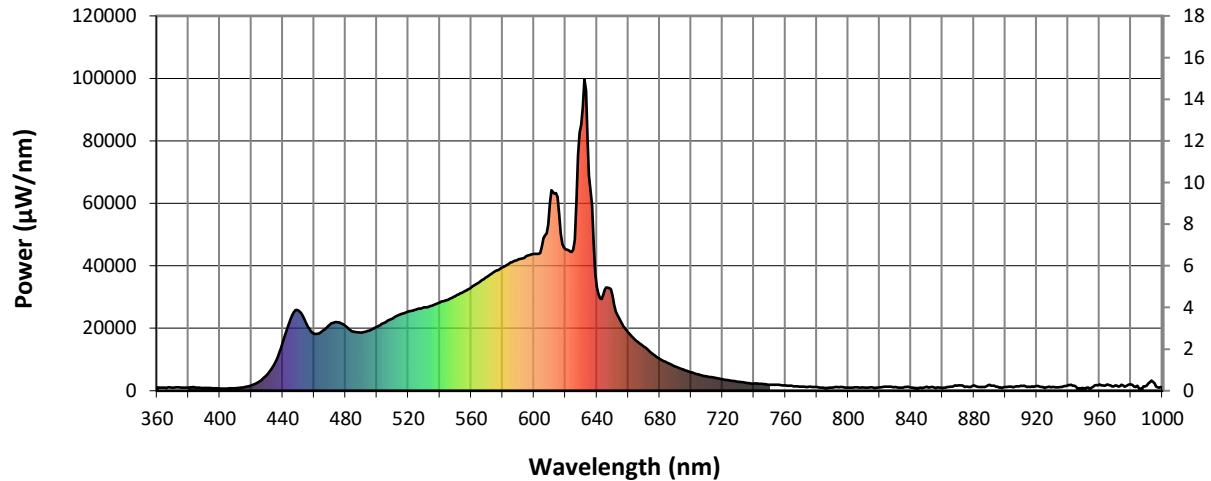

Melanopic Lumens: 1558.5

S/P: 0.62


λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)
360	1141	NR	490	18648	NR	620	45240	NR	750	1949	NR	880	1696	NR
365	981	NR	495	19266	NR	625	45103	NR	755	1928	NR	885	1176	NR
370	993	NR	500	20501	NR	630	85243	NR	760	1686	NR	890	1892	NR
375	1026	NR	505	21835	NR	635	68928	NR	765	1435	NR	895	1303	NR
380	1011	NR	510	23128	NR	640	33096	NR	770	1270	NR	900	1197	NR
385	1002	NR	515	24473	NR	645	32437	NR	775	1334	NR	905	1148	NR
390	868	NR	520	25336	NR	650	30398	NR	780	1218	NR	910	1595	NR
395	834	NR	525	26013	NR	655	22347	NR	785	928	NR	915	1266	NR
400	731	NR	530	26667	NR	660	18602	NR	790	989	NR	920	1495	NR
405	725	NR	535	27195	NR	665	15938	NR	795	1224	NR	925	855	NR
410	825	NR	540	28268	NR	670	14142	NR	800	1005	NR	930	1185	NR
415	1102	NR	545	29091	NR	675	11970	NR	805	1076	NR	935	1186	NR
420	1695	NR	550	30262	NR	680	10212	NR	810	1018	NR	940	1843	NR
425	2899	NR	555	31582	NR	685	8911	NR	815	1059	NR	945	1344	NR
430	5092	NR	560	33069	NR	690	7775	NR	820	1047	NR	950	827	NR
435	8866	NR	565	34747	NR	695	6796	NR	825	1259	NR	955	984	NR
440	15398	NR	570	36451	NR	700	5894	NR	830	1151	NR	960	1985	NR
445	23004	NR	575	38145	NR	705	5150	NR	835	1045	NR	965	2009	NR
450	25734	NR	580	39543	NR	710	4545	NR	840	1037	NR	970	1686	NR
455	21534	NR	585	41063	NR	715	4197	NR	845	888	NR	975	1733	NR
460	18246	NR	590	42070	NR	720	3650	NR	850	1271	NR	980	2039	NR
465	18978	NR	595	43067	NR	725	3265	NR	855	1028	NR	985	919	NR
470	21128	NR	600	43863	NR	730	2885	NR	860	867	NR	990	1621	NR
475	21866	NR	605	46127	NR	735	2521	NR	865	1316	NR	995	2360	NR
480	20628	NR	610	59905	NR	740	2317	NR	870	1674	NR	1000	905	NR
485	18888	NR	615	62018	NR	745	2212	NR	875	1299	NR			

REPORT NUMBER: SP1-2210-795-2





TM-30-18

Summary

$R_f = 92.5$
 $R_g = 99.9$
 CIE $R_a = 93.2$
 $R_g = 67.1$

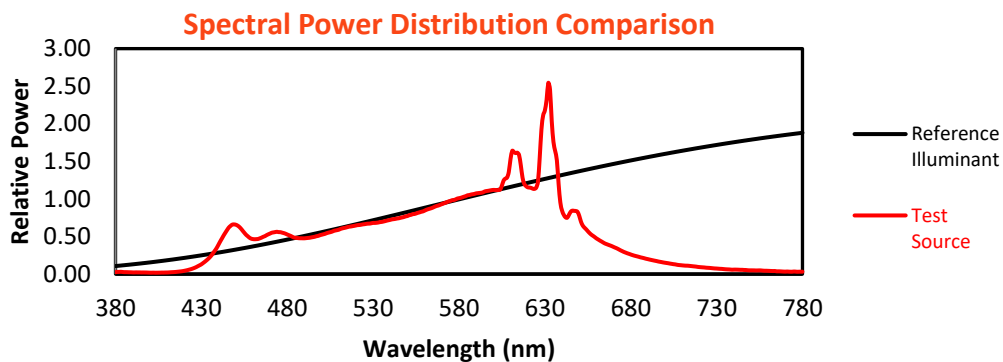

Color Vector Graphics

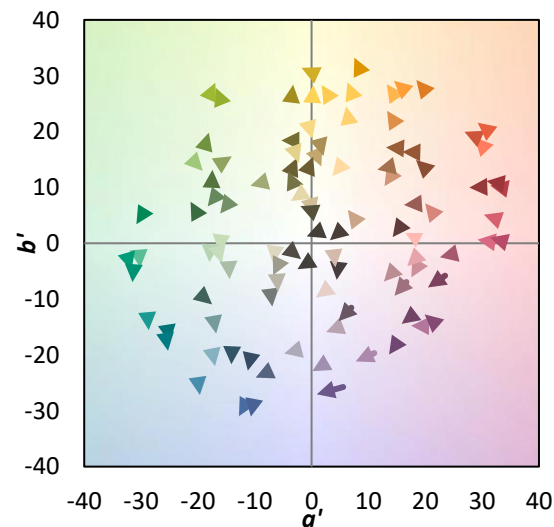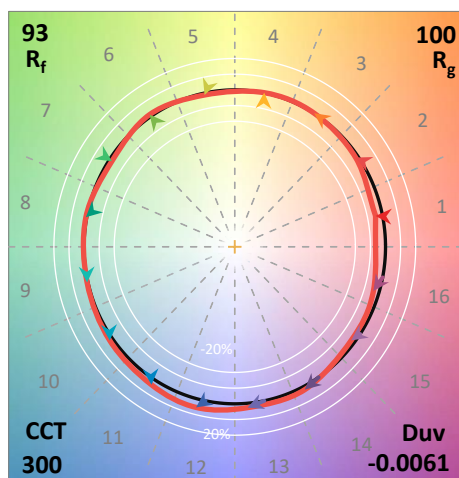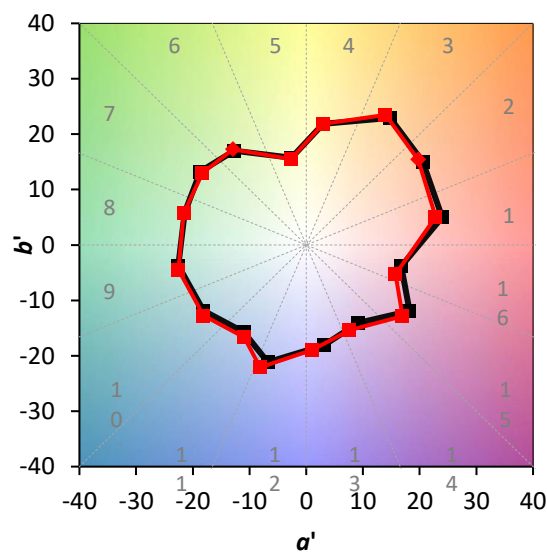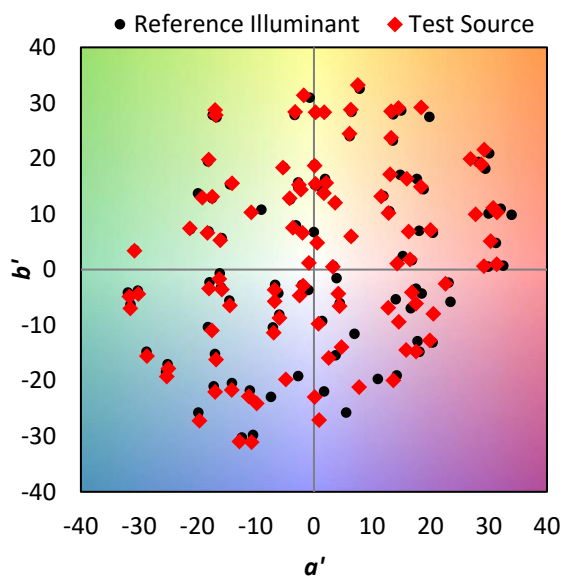


REPORT NUMBER: SP1-2210-795-2

TM-30-18

Individual Sample Fidelity Index ($R_{f,i}$)




CES01 = 86	CES26 = 97	CES51 = 97	CES76 = 94
CES02 = 63	CES27 = 93	CES52 = 98	CES77 = 81
CES03 = 32	CES28 = 99	CES53 = 97	CES78 = 91
CES04 = 70	CES29 = 99	CES54 = 93	CES79 = 85
CES05 = 51	CES30 = 95	CES55 = 93	CES80 = 87
CES06 = 51	CES31 = 99	CES56 = 96	CES81 = 67
CES07 = 44	CES32 = 92	CES57 = 95	CES82 = 94
CES08 = 42	CES33 = 99	CES58 = 95	CES83 = 91
CES09 = 29	CES34 = 96	CES59 = 97	CES84 = 97
CES10 = 76	CES35 = 98	CES60 = 94	CES85 = 78
CES11 = 59	CES36 = 87	CES61 = 94	CES86 = 76
CES12 = 65	CES37 = 98	CES62 = 89	CES87 = 93
CES13 = 44	CES38 = 91	CES63 = 99	CES88 = 96
CES14 = 74	CES39 = 100	CES64 = 94	CES89 = 83
CES15 = 72	CES40 = 98	CES65 = 94	CES90 = 96
CES16 = 48	CES41 = 95	CES66 = 95	CES91 = 81
CES17 = 50	CES42 = 96	CES67 = 94	CES92 = 78
CES18 = 57	CES43 = 93	CES68 = 93	CES93 = 86
CES19 = 72	CES44 = 99	CES69 = 94	CES94 = 75
CES20 = 67	CES45 = 97	CES70 = 93	CES95 = 86
CES21 = 86	CES46 = 97	CES71 = 92	CES96 = 93
CES22 = 79	CES47 = 87	CES72 = 96	CES97 = 96
CES23 = 92	CES48 = 93	CES73 = 90	CES98 = 95
CES24 = 90	CES49 = 97	CES74 = 88	CES99 = 92
CES25 = 72	CES50 = 97	CES75 = 93	

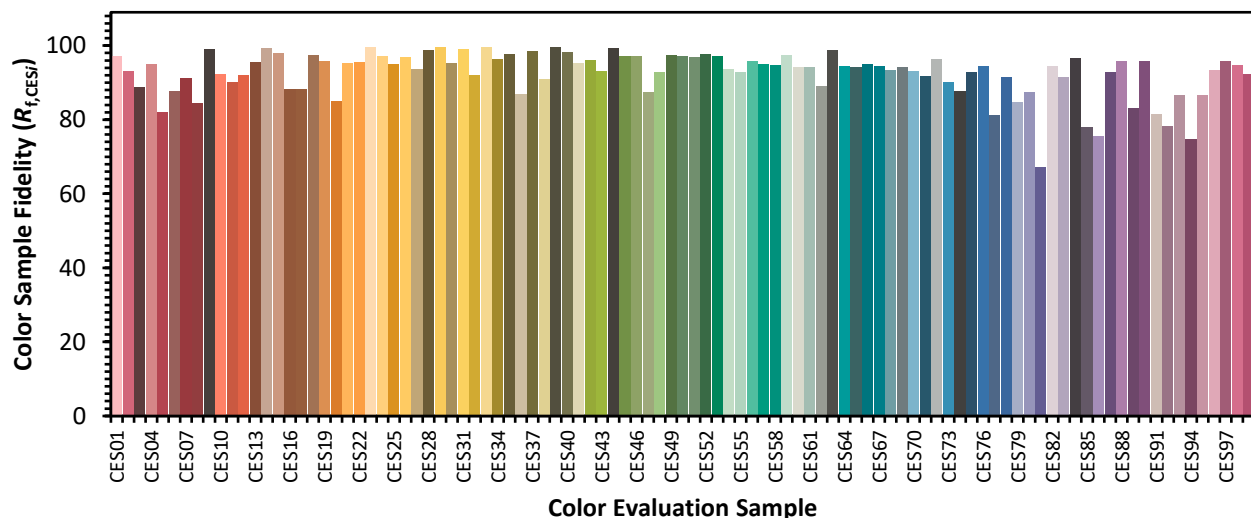

REPORT NUMBER: SP1-2210-795-2

TM-30-18



Color Rendition by Hue-Angle Bin

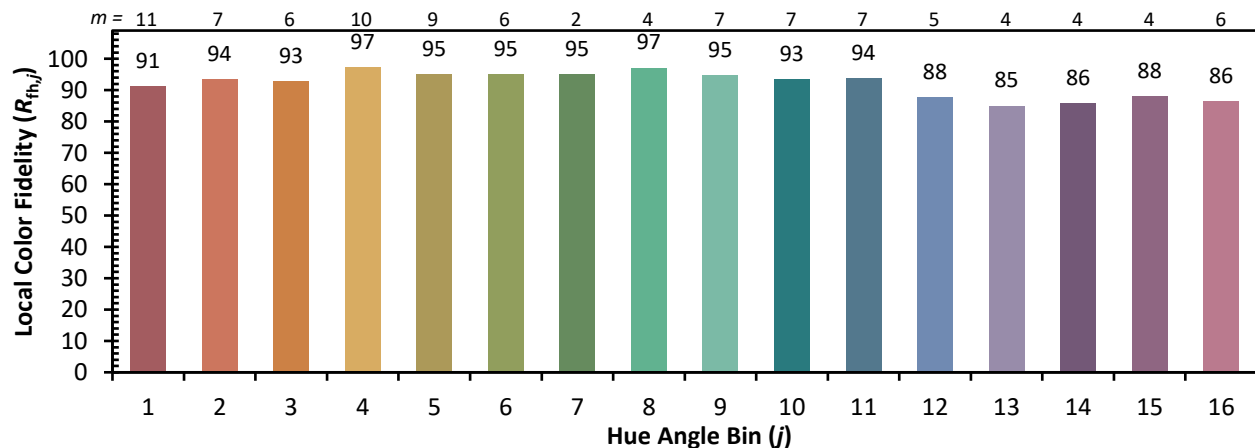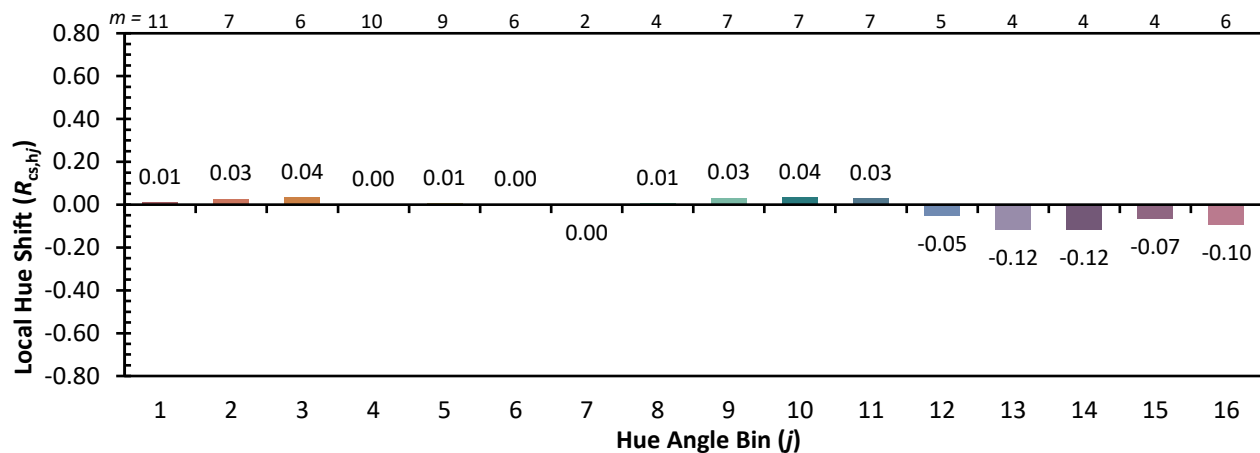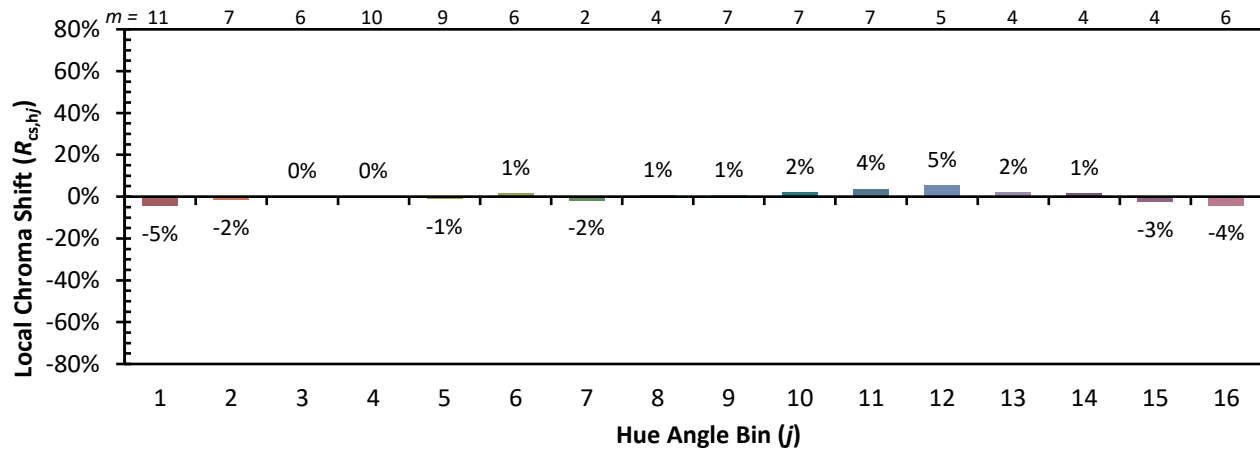

REPORT NUMBER: SP1-2210-795-2

TM-30-18

Measure Comparisons

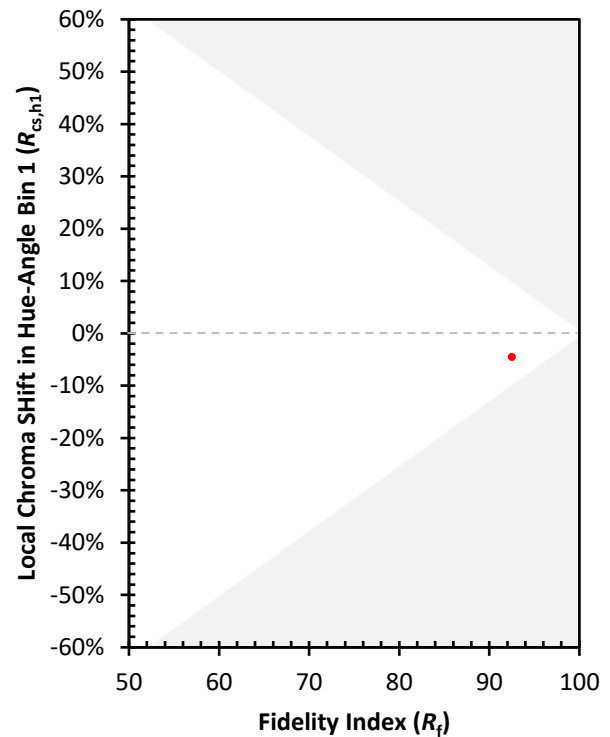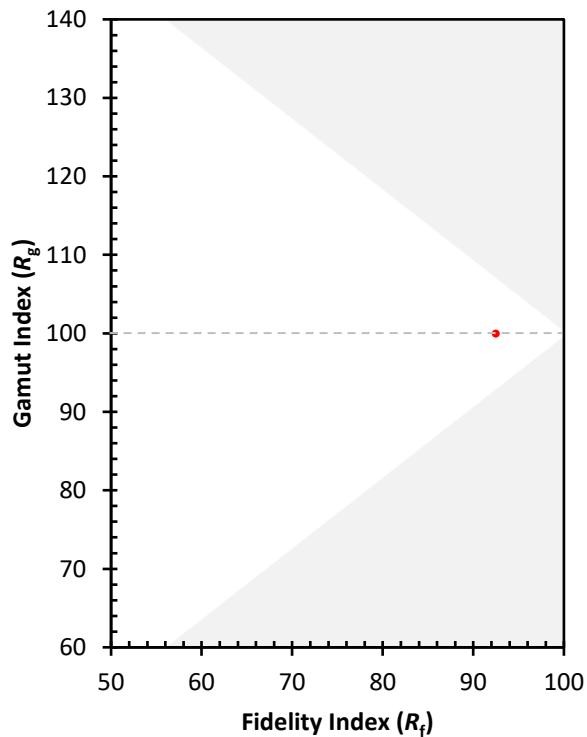

(END OF REPORT)