

Cooper Lighting Solutions Photometric Lab  
1121 Highway 74 South  
Peachtree City, GA 30269



Scaled data based on original data using  
LM-79-08 Approved Method: Electrical and Photometric Measurements of Solid-State  
Lighting Products

Test Report Prepared for

Cooper Lighting Solutions

(formerly Eaton)

Brand: METALUX

Report Number: P732222

Luminaire Tested: **24CZ2-40HE-RDP-B2750-W2D-3000K**

Issue Date: 1/5/2024



**Test Information**

Test Method: LM-79-08  
Report Number: P732222  
TEST IS SCALED FROM IESNA LM-79-08 TEST DATA (P274775)  
Test Lab: INNOVATION CENTER(G3)  
Issue Date: 1/5/2024  
Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)  
Product Line: METALUX  
Catalog Number: 24CZ2-40HE-RDP-B2750-W2D-3000K  
Description: 2X4 4000 LUMEN CRUZE TROFFER WITH BIO UP LEDS AT 3000K CCT AND RDP LENS

Light Source: -  
Ballast/Driver: -

**Summary**


Lumens per Lamp: N/A  
Luminaire Lumens: 2565.0 lumens  
Efficiency: N/A  
Efficacy: 88.4 lumens/watt  
Spacing Criteria (0/90/45): 1.26 / 1.3 / 1.41  
Luminous Opening: Rectangular (W 1.92' x L: 3.98' x H: 0')  
CIE Type: Direct

Input Watts (W): 29  
Input Voltage (V): NR  
Input Current (Ain): NR  
Voltage Rise (V): NR  
Power Factor: NR  
Total Harmonic Distortion (THDi): NR  
Frequency (hertz): 60  
Stabilization Time: NR  
Operation Time: NR  
Ambient Temperature (°C): NR  
Test Distance: 25 FT

TEST NUMBER: P732222

CATALOG NUMBER: 24CZ2-40HE-RDP-B2750-W2D-3000K

### Luminous Intensity Polar Plot

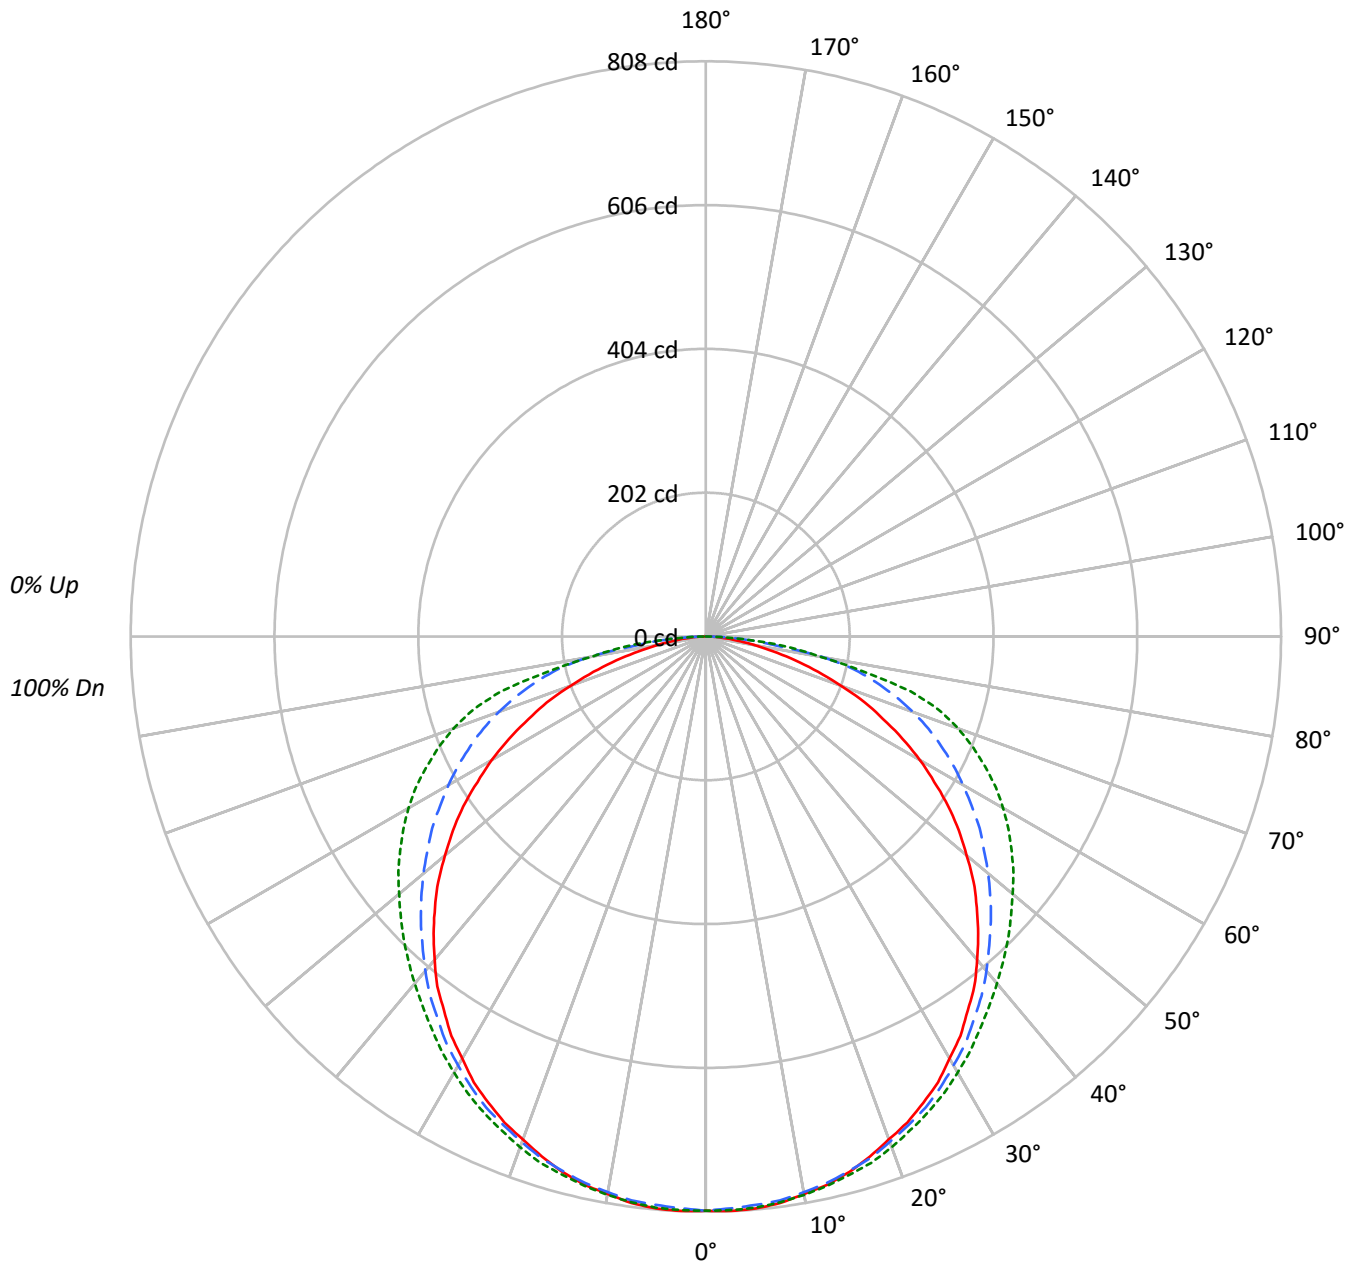



TEST NUMBER: P732222

CATALOG NUMBER: 24CZ2-40HE-RDP-B2750-W2D-3000K

**COEFFICIENT OF UTILIZATION - ZONAL CAVITY METHOD:**

|     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |    |    |
|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|----|----|
| RF  | 20  |     |     |     | 20  |     |     |     |     | 20  |     |     |     |     | 20  |     |     |     |    | 20 |
| RC  | 80  |     |     |     | 70  |     |     |     |     | 50  |     |     |     |     | 30  |     |     |     |    | 10 |
| RW  | 70  | 50  | 30  | 10  | 70  | 50  | 30  | 10  | 50  | 30  | 10  | 50  | 30  | 10  | 50  | 30  | 10  | 50  | 30 | 10 |
| RCR |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |    |    |
| 0   | 119 | 119 | 119 | 119 | 116 | 116 | 116 | 116 | 111 | 111 | 111 | 106 | 106 | 106 | 102 | 102 | 102 | 100 |    |    |
| 1   | 108 | 103 | 98  | 94  | 105 | 100 | 96  | 92  | 96  | 93  | 89  | 92  | 89  | 87  | 88  | 86  | 84  | 82  |    |    |
| 2   | 97  | 89  | 81  | 75  | 95  | 87  | 80  | 74  | 83  | 77  | 72  | 80  | 75  | 71  | 77  | 73  | 69  | 67  |    |    |
| 3   | 88  | 77  | 68  | 62  | 86  | 76  | 67  | 61  | 72  | 66  | 60  | 70  | 64  | 59  | 67  | 62  | 58  | 56  |    |    |
| 4   | 81  | 68  | 59  | 52  | 78  | 67  | 58  | 51  | 64  | 57  | 51  | 62  | 55  | 50  | 59  | 54  | 49  | 47  |    |    |
| 5   | 74  | 60  | 51  | 44  | 72  | 59  | 51  | 44  | 57  | 49  | 43  | 55  | 48  | 43  | 53  | 47  | 42  | 40  |    |    |
| 6   | 68  | 54  | 45  | 38  | 66  | 53  | 45  | 38  | 51  | 44  | 38  | 50  | 43  | 37  | 48  | 42  | 37  | 35  |    |    |
| 7   | 63  | 49  | 40  | 34  | 61  | 48  | 40  | 34  | 47  | 39  | 33  | 45  | 38  | 33  | 44  | 38  | 33  | 31  |    |    |
| 8   | 59  | 45  | 36  | 30  | 57  | 44  | 36  | 30  | 43  | 35  | 30  | 41  | 34  | 29  | 40  | 34  | 29  | 27  |    |    |
| 9   | 55  | 41  | 33  | 27  | 53  | 40  | 32  | 27  | 39  | 32  | 27  | 38  | 31  | 26  | 37  | 31  | 26  | 24  |    |    |
| 10  | 51  | 38  | 30  | 24  | 50  | 37  | 29  | 24  | 36  | 29  | 24  | 35  | 29  | 24  | 34  | 28  | 24  | 22  |    |    |

**AVERAGE LUMINANCE (cd/sqm):**

|     | 0°   | 45°  | 90°  |
|-----|------|------|------|
| 0°  | 1138 | 1138 | 1138 |
| 5°  | 1143 | 1136 | 1141 |
| 10° | 1139 | 1136 | 1141 |
| 15° | 1138 | 1136 | 1143 |
| 20° | 1129 | 1135 | 1147 |
| 25° | 1125 | 1137 | 1149 |
| 30° | 1116 | 1134 | 1153 |
| 35° | 1105 | 1131 | 1157 |
| 40° | 1092 | 1130 | 1172 |
| 45° | 1074 | 1130 | 1198 |
| 50° | 1050 | 1137 | 1235 |
| 55° | 1024 | 1155 | 1290 |
| 60° | 980  | 1178 | 1361 |
| 65° | 918  | 1219 | 1445 |
| 70° | 835  | 1275 | 1554 |
| 75° | 708  | 1346 | 1624 |
| 80° | 558  | 1354 | 1313 |
| 85° | 413  | 1032 | 1153 |



TEST NUMBER: P732222

CATALOG NUMBER: 24CZ2-40HE-RDP-B2750-W2D-3000K

**ZONAL LUMENS:**

| Zone      | Lumens | % Fixture |
|-----------|--------|-----------|
| 0°-10°    | 76.5   | 3.0       |
| 10°-20°   | 220.2  | 8.6       |
| 20°-30°   | 336.8  | 13.1      |
| 30°-40°   | 411.7  | 16.0      |
| 40°-50°   | 438.8  | 17.1      |
| 50°-60°   | 419.5  | 16.4      |
| 60°-70°   | 355.4  | 13.9      |
| 70°-80°   | 238.8  | 9.3       |
| 80°-90°   | 67.4   | 2.6       |
| 90°-100°  | 0.0    | 0.0       |
| 100°-110° | 0.0    | 0.0       |
| 110°-120° | 0.0    | 0.0       |
| 120°-130° | 0.0    | 0.0       |
| 130°-140° | 0.0    | 0.0       |
| 140°-150° | 0.0    | 0.0       |
| 150°-160° | 0.0    | 0.0       |
| 160°-170° | 0.0    | 0.0       |
| 170°-180° | 0.0    | 0.0       |
| 0°-30°    | 633.5  | 24.7      |
| 0°-40°    | 1045.1 | 40.7      |
| 0°-60°    | 1903.4 | 74.2      |
| 0°-90°    | 2565.0 | 100.0     |
| 90°-120°  | 0.0    | 0.0       |
| 90°-150°  | 0.0    | 0.0       |
| 90°-180°  | 0.0    | 0.0       |
| 0°-180°   | 2565.0 | 100.0     |

**CANDELA DISTRIBUTION:**

|     | 0°  | 22.5° | 45° | 67.5° | 90° | Flux |
|-----|-----|-------|-----|-------|-----|------|
| 0°  | 807 | 807   | 807 | 807   | 807 |      |
| 5°  | 807 | 805   | 802 | 805   | 805 | 77   |
| 15° | 779 | 779   | 777 | 784   | 782 | 220  |
| 25° | 723 | 725   | 730 | 737   | 738 | 333  |
| 35° | 641 | 646   | 656 | 669   | 672 | 402  |
| 45° | 538 | 547   | 566 | 590   | 600 | 415  |
| 55° | 416 | 431   | 469 | 506   | 524 | 371  |
| 65° | 275 | 303   | 365 | 413   | 433 | 273  |
| 75° | 130 | 177   | 247 | 289   | 298 | 139  |
| 85° | 26  | 52    | 64  | 69    | 71  | 32   |
| 90° | 0   | 0     | 0   | 0     | 0   |      |



TEST NUMBER: P732222

CATALOG NUMBER: 24CZ2-40HE-RDP-B2750-W2D-3000K

**CANDELA DISTRIBUTION (FULL):**

|       | 0°    | 22.5° | 45°   | 67.5° | 90°   |
|-------|-------|-------|-------|-------|-------|
| 0°    | 806.6 | 806.6 | 806.6 | 806.6 | 806.6 |
| 2.5°  | 807.9 | 807.9 | 804.0 | 806.6 | 806.6 |
| 5°    | 806.6 | 805.4 | 801.6 | 805.4 | 805.4 |
| 7.5°  | 802.8 | 801.6 | 799.0 | 802.8 | 801.6 |
| 10°   | 795.1 | 795.1 | 792.7 | 796.5 | 796.5 |
| 12.5° | 788.8 | 787.6 | 786.2 | 791.3 | 790.1 |
| 15°   | 778.7 | 778.7 | 777.3 | 783.8 | 782.4 |
| 17.5° | 766.0 | 767.2 | 768.4 | 773.5 | 774.9 |
| 20°   | 751.9 | 754.5 | 755.7 | 763.4 | 763.4 |
| 22.5° | 739.1 | 740.5 | 743.0 | 750.6 | 750.6 |
| 25°   | 722.7 | 725.2 | 730.2 | 736.7 | 737.9 |
| 27.5° | 706.1 | 707.4 | 713.8 | 722.7 | 723.9 |
| 30°   | 684.5 | 688.3 | 695.9 | 706.1 | 707.4 |
| 32.5° | 665.3 | 669.2 | 678.1 | 688.3 | 690.8 |
| 35°   | 641.3 | 646.3 | 656.4 | 669.2 | 671.8 |
| 37.5° | 619.6 | 623.5 | 636.2 | 650.1 | 654.0 |
| 40°   | 592.9 | 600.4 | 613.2 | 629.7 | 636.2 |
| 42.5° | 566.2 | 573.8 | 589.1 | 610.7 | 618.4 |
| 45°   | 538.2 | 547.1 | 566.2 | 590.3 | 600.4 |
| 47.5° | 510.2 | 520.4 | 542.0 | 569.9 | 581.4 |
| 50°   | 478.3 | 491.1 | 517.8 | 549.7 | 562.4 |
| 52.5° | 447.8 | 463.1 | 492.4 | 528.0 | 544.6 |
| 55°   | 416.0 | 431.2 | 469.4 | 506.4 | 524.2 |
| 57.5° | 380.5 | 400.7 | 442.7 | 484.8 | 503.8 |
| 60°   | 347.3 | 366.3 | 417.3 | 463.1 | 482.2 |
| 62.5° | 311.7 | 337.2 | 391.8 | 440.1 | 459.3 |
| 65°   | 274.8 | 302.8 | 365.1 | 413.4 | 432.6 |
| 67.5° | 241.8 | 272.3 | 338.4 | 386.7 | 405.9 |
| 70°   | 202.3 | 240.4 | 309.1 | 357.4 | 376.6 |
| 72.5° | 165.4 | 207.4 | 278.6 | 325.7 | 343.5 |
| 75°   | 129.8 | 176.9 | 246.8 | 288.9 | 297.8 |
| 77.5° | 96.6  | 146.4 | 213.7 | 231.5 | 225.2 |
| 80°   | 68.7  | 117.1 | 166.6 | 157.7 | 161.5 |
| 82.5° | 44.5  | 89.1  | 103.1 | 117.1 | 120.9 |
| 85°   | 25.5  | 52.2  | 63.7  | 68.7  | 71.2  |
| 87.5° | 11.5  | 19.0  | 25.5  | 25.5  | 24.2  |
| 90°   | 0.0   | 0.0   | 0.0   | 0.0   | 0.0   |



Report Generated By 670246072 / DESKTOP-50001EG





— 0°-180°    - - 45°-225°    - - - 90°-270°







LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-State Lighting Products

Report Prepared for

Cooper Lighting Solutions

(formerly Eaton)

METALUX

Report Number: SP1-2210-795-2

Test Date: 10/06/2022

Luminaire Tested: 9WP217084MDER4AM-3000K-315MA

Data in this report applies to families of products including 9WP217084MDER4AM-3000K.

### Test Information

Test Method: LM-79-2019  
 Report Number: SP1-2210-795-2  
 Test Lab: COOPER LIGHTING SOLUTIONS  
 Photometer: SP1 - 76IN SPHERE  
 Measurement Geometry:  $4\pi$   
 Issue Date: 10/06/2022  
 Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)  
 Product Line: METALUX  
 Catalog Number: **9WP217084MDER4AM-3000K-315MA**  
 Description: METALUX

TUNABLE BOARD, 3000K-315MA, PROGRAMMED @ 2.6Vdc.


### Spectral Parameters

CCT (K): 3004  
 CIE  $u'$ : 0.2526  
 CIE  $v'$ : 0.5127  
 Duv: -0.0061  
 CIE x: 0.4279  
 CIE y: 0.3860  
 CIE z: 0.1861  
 Peak Wavelength (nm): 632  
 Dominant Wavelength (nm): 585  
 Purity: 44.5

CRI (Ra): 93.2  
 R1: 98.5  
 R2: 96.3  
 R3: 94.1  
 R4: 96.5  
 R5: 98.5  
 R6: 90.3  
 R7: 88.3  
 R8: 83.1

R9: 67.1  
 R10: 94.0  
 R11: 97.7  
 R12: 86.0  
 R13: 98.4  
 R14: 98.1

Rf: 92.5  
 Rg: 99.9

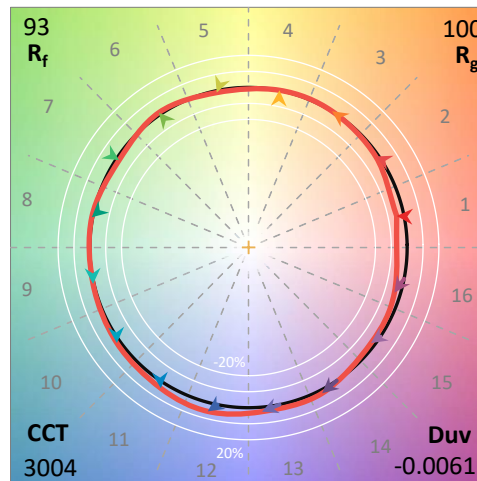

### Test Conditions

Stabilization Time: 53M  
 Operation Time: 12H  
 Room Temperature (°C) / RH%: 24.0/38%  
 Sphere Temperature (°C): 24.4

REPORT NUMBER: SP1-2210-795-2

| Measurement and Test Equipment |                       |                  |                      |
|--------------------------------|-----------------------|------------------|----------------------|
| Instrument                     | Identification Number | Calibration Date | Calibration Due Date |
| Photometer                     | 76INCH SPHERE IN0058  | 8/8/2022         | 2/8/2023             |
| Power Meter                    | XITRON 2801 IN0071    | 11/29/2021       | 11/29/2022           |
| AC Power Source                | CHROMA 61603 IN0063   | 11/29/2021       | 11/29/2022           |
| DC Power Source                | AGILENT E3634A IN0208 | 11/29/2021       | 11/29/2022           |
| Sphere Thermometer             | ONSET IN0085          | 11/29/2021       | 11/29/2022           |
| Room Thermometer               | ONSET IN0046          | 11/29/2021       | 11/29/2022           |

REPORT NUMBER: SP1-2210-795-2

**CIE 1931 Chromaticity Diagram**



**CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles**



Point lies outside the range

REPORT NUMBER: SP1-2210-795-2

**Photopic Flux vs. Wavelength**



#####

| λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) |
|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|
| 360       | 1141             | NR               | 490       | 18648            | NR               | 620       | 45240            | NR               | 750       | 1949             | NR               | 880       | 1696             | NR               |
| 365       | 981              | NR               | 495       | 19266            | NR               | 625       | 45103            | NR               | 755       | 1928             | NR               | 885       | 1176             | NR               |
| 370       | 993              | NR               | 500       | 20501            | NR               | 630       | 85243            | NR               | 760       | 1686             | NR               | 890       | 1892             | NR               |
| 375       | 1026             | NR               | 505       | 21835            | NR               | 635       | 68928            | NR               | 765       | 1435             | NR               | 895       | 1303             | NR               |
| 380       | 1011             | NR               | 510       | 23128            | NR               | 640       | 33096            | NR               | 770       | 1270             | NR               | 900       | 1197             | NR               |
| 385       | 1002             | NR               | 515       | 24473            | NR               | 645       | 32437            | NR               | 775       | 1334             | NR               | 905       | 1148             | NR               |
| 390       | 868              | NR               | 520       | 25336            | NR               | 650       | 30398            | NR               | 780       | 1218             | NR               | 910       | 1595             | NR               |
| 395       | 834              | NR               | 525       | 26013            | NR               | 655       | 22347            | NR               | 785       | 928              | NR               | 915       | 1266             | NR               |
| 400       | 731              | NR               | 530       | 26667            | NR               | 660       | 18602            | NR               | 790       | 989              | NR               | 920       | 1495             | NR               |
| 405       | 725              | NR               | 535       | 27195            | NR               | 665       | 15938            | NR               | 795       | 1224             | NR               | 925       | 855              | NR               |
| 410       | 825              | NR               | 540       | 28268            | NR               | 670       | 14142            | NR               | 800       | 1005             | NR               | 930       | 1185             | NR               |
| 415       | 1102             | NR               | 545       | 29091            | NR               | 675       | 11970            | NR               | 805       | 1076             | NR               | 935       | 1186             | NR               |
| 420       | 1695             | NR               | 550       | 30262            | NR               | 680       | 10212            | NR               | 810       | 1018             | NR               | 940       | 1843             | NR               |
| 425       | 2899             | NR               | 555       | 31582            | NR               | 685       | 8911             | NR               | 815       | 1059             | NR               | 945       | 1344             | NR               |
| 430       | 5092             | NR               | 560       | 33069            | NR               | 690       | 7775             | NR               | 820       | 1047             | NR               | 950       | 827              | NR               |
| 435       | 8866             | NR               | 565       | 34747            | NR               | 695       | 6796             | NR               | 825       | 1259             | NR               | 955       | 984              | NR               |
| 440       | 15398            | NR               | 570       | 36451            | NR               | 700       | 5894             | NR               | 830       | 1151             | NR               | 960       | 1985             | NR               |
| 445       | 23004            | NR               | 575       | 38145            | NR               | 705       | 5150             | NR               | 835       | 1045             | NR               | 965       | 2009             | NR               |
| 450       | 25734            | NR               | 580       | 39543            | NR               | 710       | 4545             | NR               | 840       | 1037             | NR               | 970       | 1686             | NR               |
| 455       | 21534            | NR               | 585       | 41063            | NR               | 715       | 4197             | NR               | 845       | 888              | NR               | 975       | 1733             | NR               |
| 460       | 18246            | NR               | 590       | 42070            | NR               | 720       | 3650             | NR               | 850       | 1271             | NR               | 980       | 2039             | NR               |
| 465       | 18978            | NR               | 595       | 43067            | NR               | 725       | 3265             | NR               | 855       | 1028             | NR               | 985       | 919              | NR               |
| 470       | 21128            | NR               | 600       | 43863            | NR               | 730       | 2885             | NR               | 860       | 867              | NR               | 990       | 1621             | NR               |
| 475       | 21866            | NR               | 605       | 46127            | NR               | 735       | 2521             | NR               | 865       | 1316             | NR               | 995       | 2360             | NR               |
| 480       | 20628            | NR               | 610       | 59905            | NR               | 740       | 2317             | NR               | 870       | 1674             | NR               | 1000      | 905              | NR               |
| 485       | 18888            | NR               | 615       | 62018            | NR               | 745       | 2212             | NR               | 875       | 1299             | NR               |           |                  |                  |

REPORT NUMBER: SP1-2210-795-2

Scotopic Flux vs. Wavelength



Scotopic Lumens: 3849.1

S/P: 1.53

| λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) |
|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|
| 360       | 1141             | NR               | 490       | 18648            | NR               | 620       | 45240            | NR               | 750       | 1949             | NR               | 880       | 1696             | NR               |
| 365       | 981              | NR               | 495       | 19266            | NR               | 625       | 45103            | NR               | 755       | 1928             | NR               | 885       | 1176             | NR               |
| 370       | 993              | NR               | 500       | 20501            | NR               | 630       | 85243            | NR               | 760       | 1686             | NR               | 890       | 1892             | NR               |
| 375       | 1026             | NR               | 505       | 21835            | NR               | 635       | 68928            | NR               | 765       | 1435             | NR               | 895       | 1303             | NR               |
| 380       | 1011             | NR               | 510       | 23128            | NR               | 640       | 33096            | NR               | 770       | 1270             | NR               | 900       | 1197             | NR               |
| 385       | 1002             | NR               | 515       | 24473            | NR               | 645       | 32437            | NR               | 775       | 1334             | NR               | 905       | 1148             | NR               |
| 390       | 868              | NR               | 520       | 25336            | NR               | 650       | 30398            | NR               | 780       | 1218             | NR               | 910       | 1595             | NR               |
| 395       | 834              | NR               | 525       | 26013            | NR               | 655       | 22347            | NR               | 785       | 928              | NR               | 915       | 1266             | NR               |
| 400       | 731              | NR               | 530       | 26667            | NR               | 660       | 18602            | NR               | 790       | 989              | NR               | 920       | 1495             | NR               |
| 405       | 725              | NR               | 535       | 27195            | NR               | 665       | 15938            | NR               | 795       | 1224             | NR               | 925       | 855              | NR               |
| 410       | 825              | NR               | 540       | 28268            | NR               | 670       | 14142            | NR               | 800       | 1005             | NR               | 930       | 1185             | NR               |
| 415       | 1102             | NR               | 545       | 29091            | NR               | 675       | 11970            | NR               | 805       | 1076             | NR               | 935       | 1186             | NR               |
| 420       | 1695             | NR               | 550       | 30262            | NR               | 680       | 10212            | NR               | 810       | 1018             | NR               | 940       | 1843             | NR               |
| 425       | 2899             | NR               | 555       | 31582            | NR               | 685       | 8911             | NR               | 815       | 1059             | NR               | 945       | 1344             | NR               |
| 430       | 5092             | NR               | 560       | 33069            | NR               | 690       | 7775             | NR               | 820       | 1047             | NR               | 950       | 827              | NR               |
| 435       | 8866             | NR               | 565       | 34747            | NR               | 695       | 6796             | NR               | 825       | 1259             | NR               | 955       | 984              | NR               |
| 440       | 15398            | NR               | 570       | 36451            | NR               | 700       | 5894             | NR               | 830       | 1151             | NR               | 960       | 1985             | NR               |
| 445       | 23004            | NR               | 575       | 38145            | NR               | 705       | 5150             | NR               | 835       | 1045             | NR               | 965       | 2009             | NR               |
| 450       | 25734            | NR               | 580       | 39543            | NR               | 710       | 4545             | NR               | 840       | 1037             | NR               | 970       | 1686             | NR               |
| 455       | 21534            | NR               | 585       | 41063            | NR               | 715       | 4197             | NR               | 845       | 888              | NR               | 975       | 1733             | NR               |
| 460       | 18246            | NR               | 590       | 42070            | NR               | 720       | 3650             | NR               | 850       | 1271             | NR               | 980       | 2039             | NR               |
| 465       | 18978            | NR               | 595       | 43067            | NR               | 725       | 3265             | NR               | 855       | 1028             | NR               | 985       | 919              | NR               |
| 470       | 21128            | NR               | 600       | 43863            | NR               | 730       | 2885             | NR               | 860       | 867              | NR               | 990       | 1621             | NR               |
| 475       | 21866            | NR               | 605       | 46127            | NR               | 735       | 2521             | NR               | 865       | 1316             | NR               | 995       | 2360             | NR               |
| 480       | 20628            | NR               | 610       | 59905            | NR               | 740       | 2317             | NR               | 870       | 1674             | NR               | 1000      | 905              | NR               |
| 485       | 18888            | NR               | 615       | 62018            | NR               | 745       | 2212             | NR               | 875       | 1299             | NR               |           |                  |                  |

REPORT NUMBER: SP1-2210-795-2

**Melanopic Flux vs. Wavelength**



**Melanopic Lumens: 1558.5**

**S/P: 0.62**

| λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) |
|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|
| 360       | 1141             | NR               | 490       | 18648            | NR               | 620       | 45240            | NR               | 750       | 1949             | NR               | 880       | 1696             | NR               |
| 365       | 981              | NR               | 495       | 19266            | NR               | 625       | 45103            | NR               | 755       | 1928             | NR               | 885       | 1176             | NR               |
| 370       | 993              | NR               | 500       | 20501            | NR               | 630       | 85243            | NR               | 760       | 1686             | NR               | 890       | 1892             | NR               |
| 375       | 1026             | NR               | 505       | 21835            | NR               | 635       | 68928            | NR               | 765       | 1435             | NR               | 895       | 1303             | NR               |
| 380       | 1011             | NR               | 510       | 23128            | NR               | 640       | 33096            | NR               | 770       | 1270             | NR               | 900       | 1197             | NR               |
| 385       | 1002             | NR               | 515       | 24473            | NR               | 645       | 32437            | NR               | 775       | 1334             | NR               | 905       | 1148             | NR               |
| 390       | 868              | NR               | 520       | 25336            | NR               | 650       | 30398            | NR               | 780       | 1218             | NR               | 910       | 1595             | NR               |
| 395       | 834              | NR               | 525       | 26013            | NR               | 655       | 22347            | NR               | 785       | 928              | NR               | 915       | 1266             | NR               |
| 400       | 731              | NR               | 530       | 26667            | NR               | 660       | 18602            | NR               | 790       | 989              | NR               | 920       | 1495             | NR               |
| 405       | 725              | NR               | 535       | 27195            | NR               | 665       | 15938            | NR               | 795       | 1224             | NR               | 925       | 855              | NR               |
| 410       | 825              | NR               | 540       | 28268            | NR               | 670       | 14142            | NR               | 800       | 1005             | NR               | 930       | 1185             | NR               |
| 415       | 1102             | NR               | 545       | 29091            | NR               | 675       | 11970            | NR               | 805       | 1076             | NR               | 935       | 1186             | NR               |
| 420       | 1695             | NR               | 550       | 30262            | NR               | 680       | 10212            | NR               | 810       | 1018             | NR               | 940       | 1843             | NR               |
| 425       | 2899             | NR               | 555       | 31582            | NR               | 685       | 8911             | NR               | 815       | 1059             | NR               | 945       | 1344             | NR               |
| 430       | 5092             | NR               | 560       | 33069            | NR               | 690       | 7775             | NR               | 820       | 1047             | NR               | 950       | 827              | NR               |
| 435       | 8866             | NR               | 565       | 34747            | NR               | 695       | 6796             | NR               | 825       | 1259             | NR               | 955       | 984              | NR               |
| 440       | 15398            | NR               | 570       | 36451            | NR               | 700       | 5894             | NR               | 830       | 1151             | NR               | 960       | 1985             | NR               |
| 445       | 23004            | NR               | 575       | 38145            | NR               | 705       | 5150             | NR               | 835       | 1045             | NR               | 965       | 2009             | NR               |
| 450       | 25734            | NR               | 580       | 39543            | NR               | 710       | 4545             | NR               | 840       | 1037             | NR               | 970       | 1686             | NR               |
| 455       | 21534            | NR               | 585       | 41063            | NR               | 715       | 4197             | NR               | 845       | 888              | NR               | 975       | 1733             | NR               |
| 460       | 18246            | NR               | 590       | 42070            | NR               | 720       | 3650             | NR               | 850       | 1271             | NR               | 980       | 2039             | NR               |
| 465       | 18978            | NR               | 595       | 43067            | NR               | 725       | 3265             | NR               | 855       | 1028             | NR               | 985       | 919              | NR               |
| 470       | 21128            | NR               | 600       | 43863            | NR               | 730       | 2885             | NR               | 860       | 867              | NR               | 990       | 1621             | NR               |
| 475       | 21866            | NR               | 605       | 46127            | NR               | 735       | 2521             | NR               | 865       | 1316             | NR               | 995       | 2360             | NR               |
| 480       | 20628            | NR               | 610       | 59905            | NR               | 740       | 2317             | NR               | 870       | 1674             | NR               | 1000      | 905              | NR               |
| 485       | 18888            | NR               | 615       | 62018            | NR               | 745       | 2212             | NR               | 875       | 1299             | NR               |           |                  |                  |

REPORT NUMBER: SP1-2210-795-2

TM-30-18

### Summary

$R_f = 92.5$   
 $R_g = 99.9$   
 CIE  $R_a = 93.2$   
 $R_g = 67.1$



### Color Vector Graphics



REPORT NUMBER: SP1-2210-795-2

TM-30-18

**Individual Sample Fidelity Index ( $R_{f,i}$ )**

|            |             |            |            |
|------------|-------------|------------|------------|
| CES01 = 86 | CES26 = 97  | CES51 = 97 | CES76 = 94 |
| CES02 = 63 | CES27 = 93  | CES52 = 98 | CES77 = 81 |
| CES03 = 32 | CES28 = 99  | CES53 = 97 | CES78 = 91 |
| CES04 = 70 | CES29 = 99  | CES54 = 93 | CES79 = 85 |
| CES05 = 51 | CES30 = 95  | CES55 = 93 | CES80 = 87 |
| CES06 = 51 | CES31 = 99  | CES56 = 96 | CES81 = 67 |
| CES07 = 44 | CES32 = 92  | CES57 = 95 | CES82 = 94 |
| CES08 = 42 | CES33 = 99  | CES58 = 95 | CES83 = 91 |
| CES09 = 29 | CES34 = 96  | CES59 = 97 | CES84 = 97 |
| CES10 = 76 | CES35 = 98  | CES60 = 94 | CES85 = 78 |
| CES11 = 59 | CES36 = 87  | CES61 = 94 | CES86 = 76 |
| CES12 = 65 | CES37 = 98  | CES62 = 89 | CES87 = 93 |
| CES13 = 44 | CES38 = 91  | CES63 = 99 | CES88 = 96 |
| CES14 = 74 | CES39 = 100 | CES64 = 94 | CES89 = 83 |
| CES15 = 72 | CES40 = 98  | CES65 = 94 | CES90 = 96 |
| CES16 = 48 | CES41 = 95  | CES66 = 95 | CES91 = 81 |
| CES17 = 50 | CES42 = 96  | CES67 = 94 | CES92 = 78 |
| CES18 = 57 | CES43 = 93  | CES68 = 93 | CES93 = 86 |
| CES19 = 72 | CES44 = 99  | CES69 = 94 | CES94 = 75 |
| CES20 = 67 | CES45 = 97  | CES70 = 93 | CES95 = 86 |
| CES21 = 86 | CES46 = 97  | CES71 = 92 | CES96 = 93 |
| CES22 = 79 | CES47 = 87  | CES72 = 96 | CES97 = 96 |
| CES23 = 92 | CES48 = 93  | CES73 = 90 | CES98 = 95 |
| CES24 = 90 | CES49 = 97  | CES74 = 88 | CES99 = 92 |
| CES25 = 72 | CES50 = 97  | CES75 = 93 |            |



REPORT NUMBER: SP1-2210-795-2

**TM-30-18**

Color Rendition by Hue-Angle Bin



REPORT NUMBER: SP1-2210-795-2

**TM-30-18**

**Measure Comparisons**



(END OF REPORT)