

Cooper Lighting Solutions Photometric Lab
1121 Highway 74 South
Peachtree City, GA 30269



Scaled data based on original data using
LM-79-08 Approved Method: Electrical and Photometric Measurements of Solid-State
Lighting Products

Test Report Prepared for

Cooper Lighting Solutions

(formerly Eaton)

Brand: METALUX

Report Number: P732305

Luminaire Tested: **24CZ2-50-S-B2750-W2D-5000K**

Issue Date: 1/5/2024



Test Information

Test Method: LM-79-08
Report Number: P732305
TEST IS SCALED FROM IESNA LM-79-08 TEST DATA (P272125)
Test Lab: INNOVATION CENTER(G3)
Issue Date: 1/5/2024
Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)
Product Line: METALUX
Catalog Number: 24CZ2-50-S-B2750-W2D-5000K
Description: 2X4 5000 LUMEN CRUZE TROFFER WITH BIO UP LEDS AT 5000K CCT AND SMOOTH LENS

Light Source: -
Ballast/Driver: -

Summary


Lumens per Lamp: N/A
Luminaire Lumens: 4675.0 lumens
Efficiency: N/A
Efficacy: 116.9 lumens/watt
Spacing Criteria (0/90/45): 1.2 / 1.26 / 1.35
Luminous Opening: Rectangular (W 1.92' x L: 3.98' x H: 0')
CIE Type: Direct

Input Watts (W): 40
Input Voltage (V): NR
Input Current (Ain): NR
Voltage Rise (V): NR
Power Factor: NR
Total Harmonic Distortion (THDi): NR
Frequency (hertz): 60
Stabilization Time: NR
Operation Time: NR
Ambient Temperature (°C): NR
Test Distance: 25 FT

TEST NUMBER: P732305

CATALOG NUMBER: 24CZ2-50-S-B2750-W2D-5000K

Luminous Intensity Polar Plot

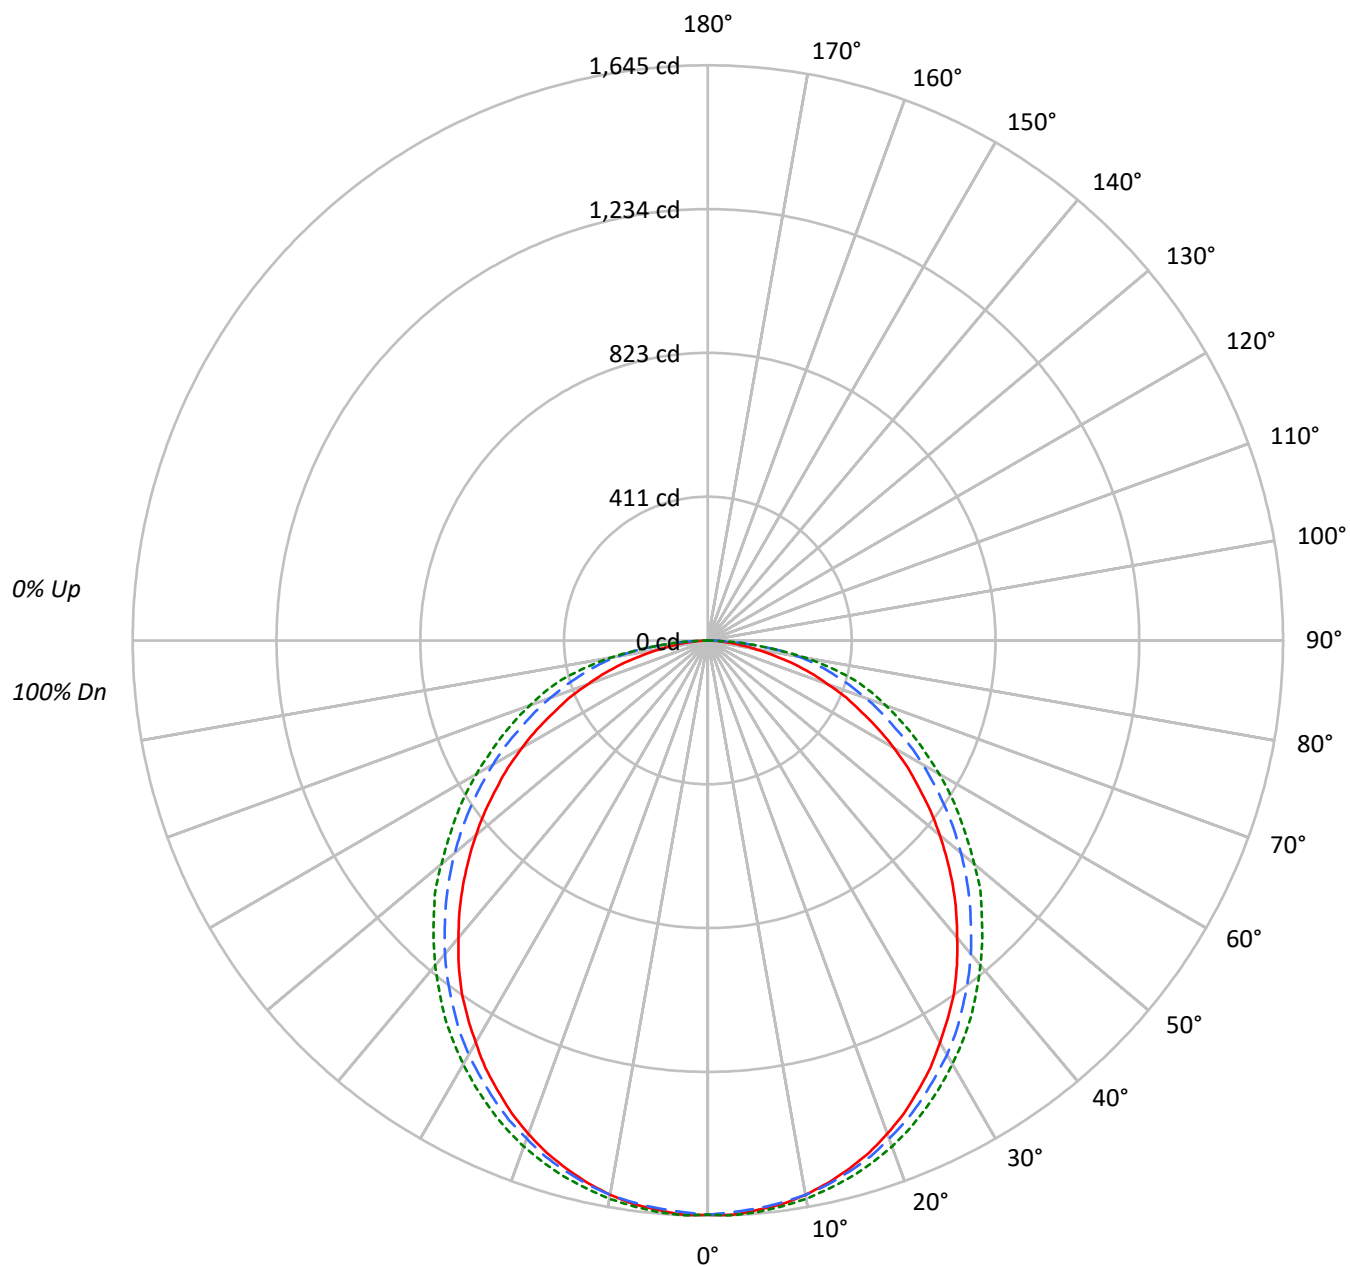



TEST NUMBER: P732305

CATALOG NUMBER: 24CZ2-50-S-B2750-W2D-5000K

COEFFICIENT OF UTILIZATION - ZONAL CAVITY METHOD:

RF	20				20					20					20					20
RC	80				70					50					30					10
RW	70	50	30	10	70	50	30	10	50	30	10	50	30	10	50	30	10	50	30	10
RCR																				
0	119	119	119	119	116	116	116	116	111	111	111	106	106	106	102	102	102	100		
1	108	103	99	95	106	101	97	93	97	93	90	93	90	88	89	87	85	83		
2	98	90	83	77	96	88	81	76	84	79	74	81	76	72	78	74	71	69		
3	89	79	70	64	87	77	69	63	74	67	62	71	66	61	69	64	60	58		
4	82	70	61	54	80	68	60	54	66	59	53	63	57	52	61	56	51	49		
5	75	62	53	46	73	61	53	46	59	51	46	57	50	45	55	49	45	42		
6	70	56	47	40	68	55	47	40	53	46	40	52	45	40	50	44	39	37		
7	64	51	42	36	63	50	42	36	48	41	35	47	40	35	46	39	35	33		
8	60	46	38	32	58	46	37	32	44	37	32	43	36	31	42	36	31	29		
9	56	43	34	29	55	42	34	29	41	34	28	40	33	28	39	33	28	26		
10	53	39	31	26	51	39	31	26	38	31	26	37	30	26	36	30	26	24		

AVERAGE LUMINANCE (cd/sqm):

	0°	45°	90°
0°	2318	2318	2318
5°	2316	2310	2325
10°	2307	2307	2324
15°	2285	2295	2320
20°	2255	2277	2313
25°	2213	2255	2298
30°	2163	2229	2280
35°	2116	2193	2262
40°	2044	2156	2235
45°	1977	2113	2211
50°	1901	2074	2184
55°	1816	2035	2163
60°	1731	2004	2159
65°	1622	1969	2172
70°	1501	1979	2230
75°	1344	2017	2356
80°	1086	2136	2305
85°	818	1875	1828



TEST NUMBER: P732305

CATALOG NUMBER: 24CZ2-50-S-B2750-W2D-5000K

ZONAL LUMENS:

Zone	Lumens	% Fixture
0°-10°	155.5	3.3
10°-20°	444.3	9.5
20°-30°	667.8	14.3
30°-40°	795.5	17.0
40°-50°	814.2	17.4
50°-60°	733.0	15.7
60°-70°	575.6	12.3
70°-80°	373.6	8.0
80°-90°	115.5	2.5
90°-100°	0.0	0.0
100°-110°	0.0	0.0
110°-120°	0.0	0.0
120°-130°	0.0	0.0
130°-140°	0.0	0.0
140°-150°	0.0	0.0
150°-160°	0.0	0.0
160°-170°	0.0	0.0
170°-180°	0.0	0.0
0°-30°	1267.6	27.1
0°-40°	2063.1	44.1
0°-60°	3610.2	77.2
0°-90°	4675.0	100.0
90°-120°	0.0	0.0
90°-150°	0.0	0.0
90°-180°	0.0	0.0
0°-180°	4675.0	100.0

CANDELA DISTRIBUTION:

	0°	22.5°	45°	67.5°	90°	Flux
0°	1642	1642	1642	1642	1642	
5°	1635	1638	1630	1639	1641	155
15°	1564	1568	1571	1584	1588	441
25°	1421	1433	1448	1472	1476	655
35°	1228	1243	1273	1304	1313	766
45°	990	1014	1059	1099	1108	764
55°	738	771	827	870	879	662
65°	486	523	590	638	650	483
75°	246	294	370	420	432	261
85°	50	94	116	113	113	61
90°	0	0	0	0	0	



TEST NUMBER: P732305

CATALOG NUMBER: 24CZ2-50-S-B2750-W2D-5000K

CANDELA DISTRIBUTION (FULL):

	0°	22.5°	45°	67.5°	90°
0°	1642.4	1642.4	1642.4	1642.4	1642.4
2.5°	1643.9	1643.9	1636.4	1643.9	1645.3
5°	1634.9	1638.0	1630.4	1639.4	1640.8
7.5°	1626.0	1626.0	1621.5	1630.4	1632.1
10°	1609.7	1611.1	1609.7	1620.1	1621.5
12.5°	1588.9	1591.8	1593.4	1603.8	1605.2
15°	1563.7	1568.2	1571.0	1584.5	1587.5
17.5°	1535.4	1539.9	1547.3	1562.1	1565.1
20°	1501.3	1507.2	1516.1	1535.4	1539.9
22.5°	1464.2	1470.1	1485.0	1502.7	1510.2
25°	1421.1	1432.9	1447.8	1471.6	1476.0
27.5°	1378.0	1388.4	1407.7	1432.9	1439.0
30°	1327.5	1343.8	1367.6	1392.8	1398.8
32.5°	1278.5	1294.8	1323.1	1349.9	1357.2
35°	1228.1	1242.9	1272.6	1303.7	1312.7
37.5°	1170.1	1189.4	1222.2	1253.3	1262.2
40°	1109.3	1133.1	1170.1	1202.8	1213.2
42.5°	1051.3	1076.5	1113.7	1149.3	1161.2
45°	990.5	1014.3	1058.8	1098.9	1107.8
47.5°	928.0	954.9	1002.3	1042.4	1057.2
50°	865.8	894.0	944.5	986.0	994.9
52.5°	803.3	833.0	886.5	931.1	935.5
55°	738.0	770.8	827.1	870.2	879.2
57.5°	678.6	706.9	767.7	812.3	822.6
60°	613.3	644.4	709.8	751.4	764.7
62.5°	550.9	583.6	652.0	693.5	705.3
65°	485.6	522.8	589.5	638.5	650.4
67.5°	429.2	464.8	536.0	583.6	595.4
70°	363.7	404.0	479.7	528.7	540.5
72.5°	307.4	348.9	424.7	472.2	490.0
75°	246.5	294.0	369.8	420.3	432.1
77.5°	187.1	242.1	319.2	357.8	357.8
80°	133.6	191.6	262.8	280.7	283.6
82.5°	87.7	144.0	194.5	193.0	193.0
85°	50.5	93.6	115.8	112.9	112.9
87.5°	19.3	38.6	41.5	41.5	40.1
90°	0.0	0.0	0.0	0.0	0.0



Report Generated By 670246072 / DESKTOP-50001EG





— 0°-180° - - 45°-225° - - - 90°-270°







LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-State Lighting Products

Report Prepared for

Cooper Lighting Solutions

(formerly Eaton)

METALUX

Report Number: SP1-2210-795-5

Test Date: 10/06/2022

Luminaire Tested: 9WP217084MDER4AM-5000K-315MA

Data in this report applies to families of products including 9WP217084MDER4AM-5000K.


Test Information

Test Method: LM-79-2019
 Report Number: SP1-2210-795-5
 Test Lab: COOPER LIGHTING SOLUTIONS
 Photometer: SP1 - 76IN SPHERE
 Measurement Geometry: 4π
 Issue Date: 10/06/2022
 Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)
 Product Line: METALUX
 Catalog Number: **9WP217084MDER4AM-5000K-315MA**
 Description: METALUX

TUNABLE BOARD, 5000K-315MA, PROGRAMMED @ 6.5Vdc.

Spectral Parameters

CCT (K):	5031	CRI (Ra):	84.5		
CIE u':	0.2182	R1:	91.8	R9:	77.5
CIE v':	0.4734	R2:	85.4	R10:	70.0
Duv:	-0.0101	R3:	79.8	R11:	87.5
CIE x:	0.3424	R4:	86.6	R12:	69.3
CIE y:	0.3302	R5:	89.4	R13:	89.5
CIE z:	0.3273	R6:	79.4	R14:	89.8
Peak Wavelength (nm):	476	R7:	81.5		
Dominant Wavelength (nm):	495	R8:	82.5		
Purity:	3.1				
Rf:	85.9				
Rg:	94.8				

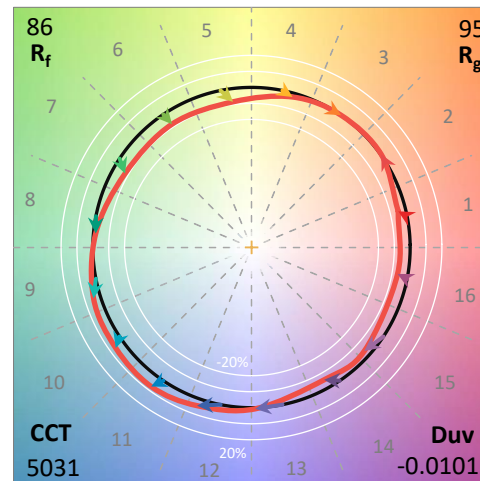

Test Conditions


Stabilization Time: 58M
 Operation Time: 12H
 Room Temperature (°C) / RH%: 24.0/38%
 Sphere Temperature (°C): 24.4

REPORT NUMBER: SP1-2210-795-5


Measurement and Test Equipment			
Instrument	Identification Number	Calibration Date	Calibration Due Date
Photometer	76INCH SPHERE IN0058	8/8/2022	2/8/2023
Power Meter	XITRON 2801 IN0071	11/29/2021	11/29/2022
AC Power Source	CHROMA 61603 IN0063	11/29/2021	11/29/2022
DC Power Source	AGILENT E3634A IN0208	11/29/2021	11/29/2022
Sphere Thermometer	ONSET IN0085	11/29/2021	11/29/2022
Room Thermometer	ONSET IN0046	11/29/2021	11/29/2022

REPORT NUMBER: SP1-2210-795-5

CIE 1931 Chromaticity Diagram

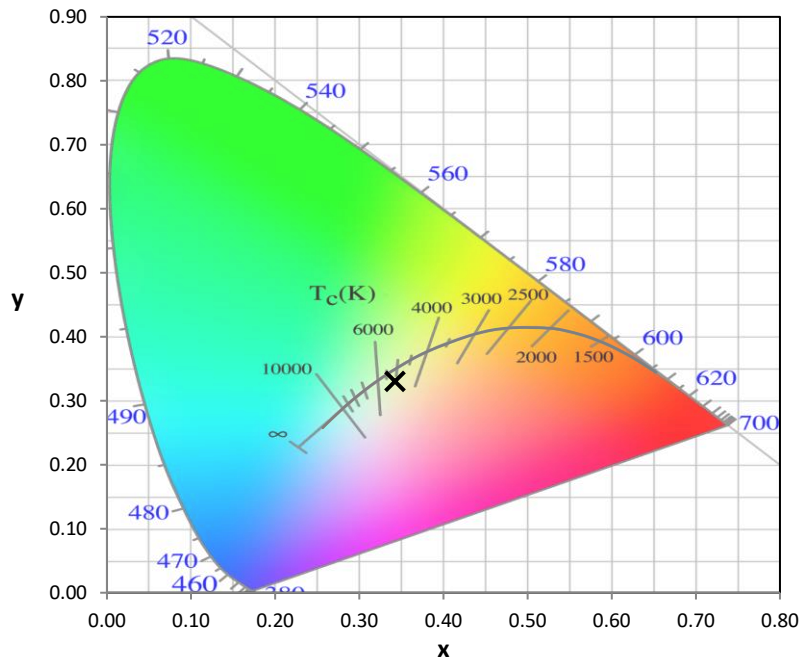


CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles

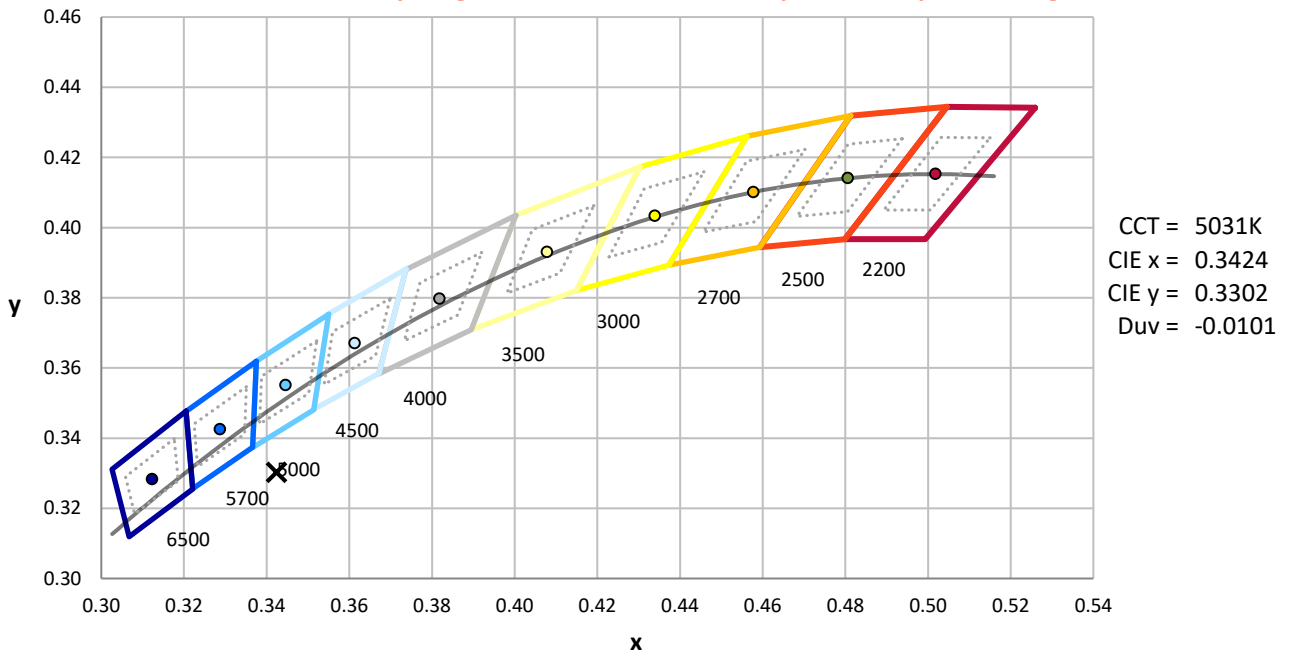

Point lies outside the range

REPORT NUMBER: SP1-2210-795-5

Photopic Flux vs. Wavelength

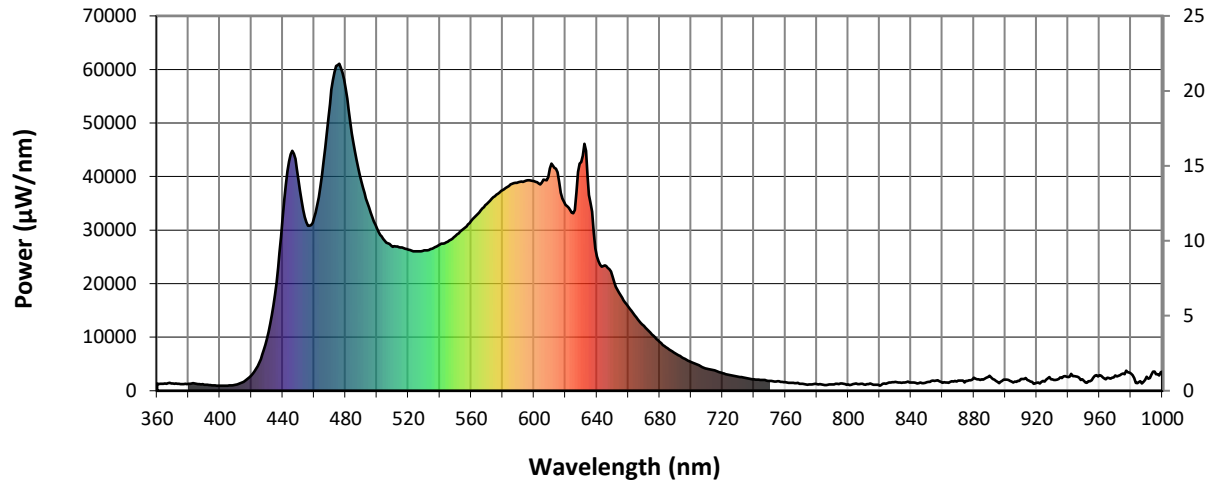


#####

λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)
360	1378	NR	490	39050	NR	620	34698	NR	750	1822	NR	880	2439	NR
365	1331	NR	495	34202	NR	625	33140	NR	755	1777	NR	885	2149	NR
370	1335	NR	500	30309	NR	630	42721	NR	760	1599	NR	890	2769	NR
375	1253	NR	505	28003	NR	635	36567	NR	765	1448	NR	895	1685	NR
380	1292	NR	510	26874	NR	640	25112	NR	770	1318	NR	900	2065	NR
385	1298	NR	515	26736	NR	645	23382	NR	775	1208	NR	905	1550	NR
390	1143	NR	520	26353	NR	650	21346	NR	780	1268	NR	910	2207	NR
395	1012	NR	525	26016	NR	655	17849	NR	785	1072	NR	915	1905	NR
400	913	NR	530	26219	NR	660	15701	NR	790	1151	NR	920	1492	NR
405	948	NR	535	26516	NR	665	13709	NR	795	1361	NR	925	1709	NR
410	1112	NR	540	27283	NR	670	12105	NR	800	1152	NR	930	2138	NR
415	1681	NR	545	27836	NR	675	10522	NR	805	1330	NR	935	2497	NR
420	2833	NR	550	28917	NR	680	9121	NR	810	1205	NR	940	2581	NR
425	5230	NR	555	30224	NR	685	7915	NR	815	1233	NR	945	2662	NR
430	9705	NR	560	31691	NR	690	6967	NR	820	960	NR	950	1809	NR
435	17926	NR	565	33290	NR	695	6106	NR	825	1423	NR	955	1977	NR
440	32347	NR	570	34911	NR	700	5390	NR	830	1655	NR	960	2906	NR
445	44160	NR	575	36327	NR	705	4734	NR	835	1541	NR	965	2456	NR
450	39460	NR	580	37455	NR	710	4108	NR	840	1555	NR	970	2874	NR
455	31448	NR	585	38519	NR	715	3797	NR	845	1414	NR	975	3194	NR
460	32233	NR	590	38974	NR	720	3287	NR	850	1598	NR	980	3237	NR
465	40342	NR	595	39274	NR	725	2926	NR	855	1852	NR	985	1591	NR
470	53556	NR	600	39138	NR	730	2611	NR	860	1463	NR	990	2611	NR
475	60829	NR	605	38865	NR	735	2376	NR	865	1656	NR	995	3556	NR
480	56377	NR	610	41532	NR	740	2107	NR	870	1883	NR	1000	3556	NR
485	46320	NR	615	40776	NR	745	2023	NR	875	1818	NR			

REPORT NUMBER: SP1-2210-795-5

Scotopic Flux vs. Wavelength

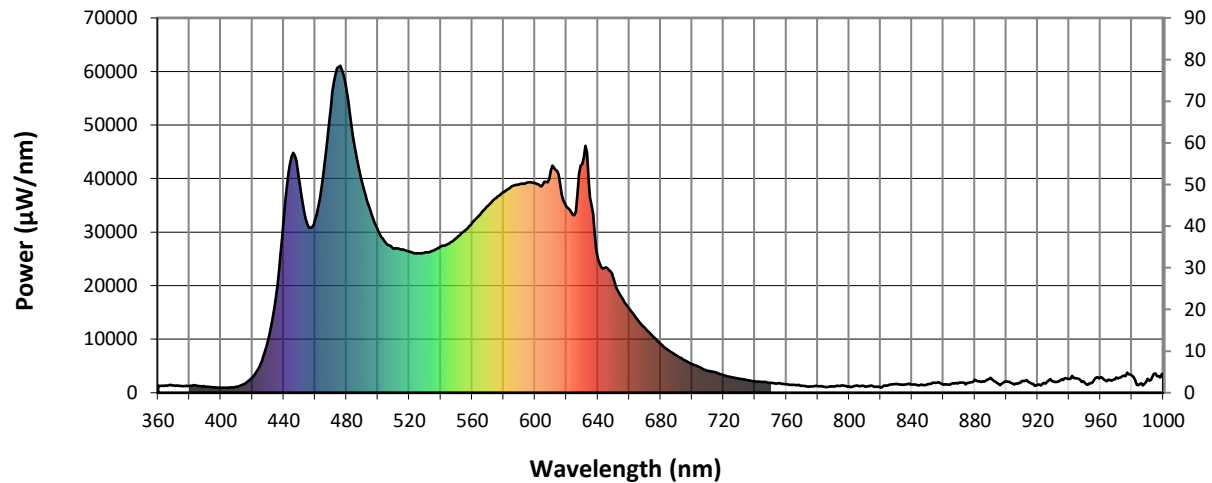


Scotopic Lumens: 5560

S/P: 2.33

λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)
360	1378	NR	490	39050	NR	620	34698	NR	750	1822	NR	880	2439	NR
365	1331	NR	495	34202	NR	625	33140	NR	755	1777	NR	885	2149	NR
370	1335	NR	500	30309	NR	630	42721	NR	760	1599	NR	890	2769	NR
375	1253	NR	505	28003	NR	635	36567	NR	765	1448	NR	895	1685	NR
380	1292	NR	510	26874	NR	640	25112	NR	770	1318	NR	900	2065	NR
385	1298	NR	515	26736	NR	645	23382	NR	775	1208	NR	905	1550	NR
390	1143	NR	520	26353	NR	650	21346	NR	780	1268	NR	910	2207	NR
395	1012	NR	525	26016	NR	655	17849	NR	785	1072	NR	915	1905	NR
400	913	NR	530	26219	NR	660	15701	NR	790	1151	NR	920	1492	NR
405	948	NR	535	26516	NR	665	13709	NR	795	1361	NR	925	1709	NR
410	1112	NR	540	27283	NR	670	12105	NR	800	1152	NR	930	2138	NR
415	1681	NR	545	27836	NR	675	10522	NR	805	1330	NR	935	2497	NR
420	2833	NR	550	28917	NR	680	9121	NR	810	1205	NR	940	2581	NR
425	5230	NR	555	30224	NR	685	7915	NR	815	1233	NR	945	2662	NR
430	9705	NR	560	31691	NR	690	6967	NR	820	960	NR	950	1809	NR
435	17926	NR	565	33290	NR	695	6106	NR	825	1423	NR	955	1977	NR
440	32347	NR	570	34911	NR	700	5390	NR	830	1655	NR	960	2906	NR
445	44160	NR	575	36327	NR	705	4734	NR	835	1541	NR	965	2456	NR
450	39460	NR	580	37455	NR	710	4108	NR	840	1555	NR	970	2874	NR
455	31448	NR	585	38519	NR	715	3797	NR	845	1414	NR	975	3194	NR
460	32233	NR	590	38974	NR	720	3287	NR	850	1598	NR	980	3237	NR
465	40342	NR	595	39274	NR	725	2926	NR	855	1852	NR	985	1591	NR
470	53556	NR	600	39138	NR	730	2611	NR	860	1463	NR	990	2611	NR
475	60829	NR	605	38865	NR	735	2376	NR	865	1656	NR	995	3556	NR
480	56377	NR	610	41532	NR	740	2107	NR	870	1883	NR	1000	3556	NR
485	46320	NR	615	40776	NR	745	2023	NR	875	1818	NR			

REPORT NUMBER: SP1-2210-795-5

Melanopic Flux vs. Wavelength

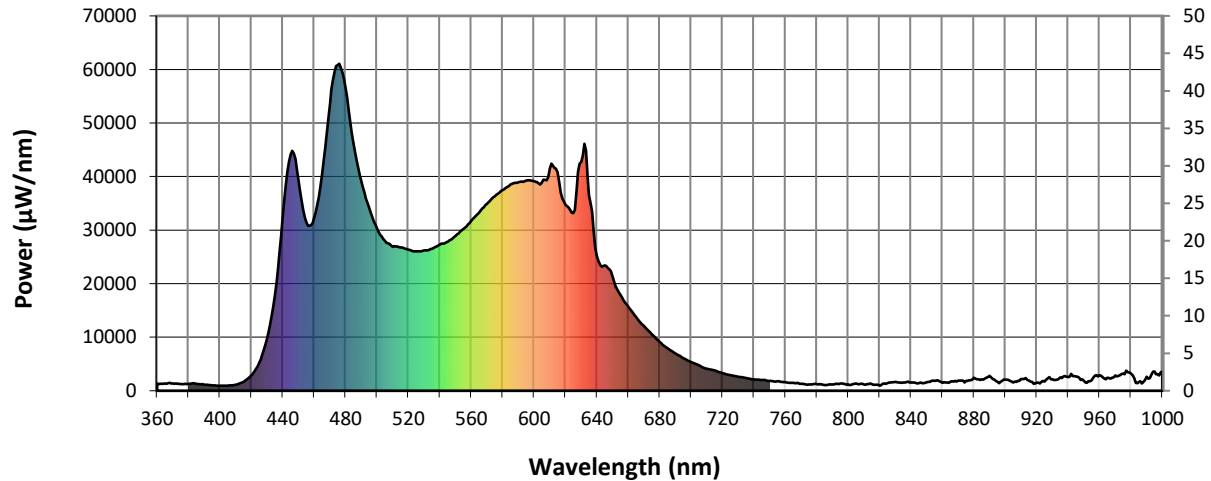

Melanopic Lumens: 2561.9

S/P: 1.07

λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)
360	1378	NR	490	39050	NR	620	34698	NR	750	1822	NR	880	2439	NR
365	1331	NR	495	34202	NR	625	33140	NR	755	1777	NR	885	2149	NR
370	1335	NR	500	30309	NR	630	42721	NR	760	1599	NR	890	2769	NR
375	1253	NR	505	28003	NR	635	36567	NR	765	1448	NR	895	1685	NR
380	1292	NR	510	26874	NR	640	25112	NR	770	1318	NR	900	2065	NR
385	1298	NR	515	26736	NR	645	23382	NR	775	1208	NR	905	1550	NR
390	1143	NR	520	26353	NR	650	21346	NR	780	1268	NR	910	2207	NR
395	1012	NR	525	26016	NR	655	17849	NR	785	1072	NR	915	1905	NR
400	913	NR	530	26219	NR	660	15701	NR	790	1151	NR	920	1492	NR
405	948	NR	535	26516	NR	665	13709	NR	795	1361	NR	925	1709	NR
410	1112	NR	540	27283	NR	670	12105	NR	800	1152	NR	930	2138	NR
415	1681	NR	545	27836	NR	675	10522	NR	805	1330	NR	935	2497	NR
420	2833	NR	550	28917	NR	680	9121	NR	810	1205	NR	940	2581	NR
425	5230	NR	555	30224	NR	685	7915	NR	815	1233	NR	945	2662	NR
430	9705	NR	560	31691	NR	690	6967	NR	820	960	NR	950	1809	NR
435	17926	NR	565	33290	NR	695	6106	NR	825	1423	NR	955	1977	NR
440	32347	NR	570	34911	NR	700	5390	NR	830	1655	NR	960	2906	NR
445	44160	NR	575	36327	NR	705	4734	NR	835	1541	NR	965	2456	NR
450	39460	NR	580	37455	NR	710	4108	NR	840	1555	NR	970	2874	NR
455	31448	NR	585	38519	NR	715	3797	NR	845	1414	NR	975	3194	NR
460	32233	NR	590	38974	NR	720	3287	NR	850	1598	NR	980	3237	NR
465	40342	NR	595	39274	NR	725	2926	NR	855	1852	NR	985	1591	NR
470	53556	NR	600	39138	NR	730	2611	NR	860	1463	NR	990	2611	NR
475	60829	NR	605	38865	NR	735	2376	NR	865	1656	NR	995	3556	NR
480	56377	NR	610	41532	NR	740	2107	NR	870	1883	NR	1000	3556	NR
485	46320	NR	615	40776	NR	745	2023	NR	875	1818	NR			


REPORT NUMBER: SP1-2210-795-5

TM-30-18





Summary

$R_f = 85.9$
 $R_g = 94.8$
 CIE $R_a = 84.5$
 $R_g = 77.5$

Spectral Power Distribution Comparison

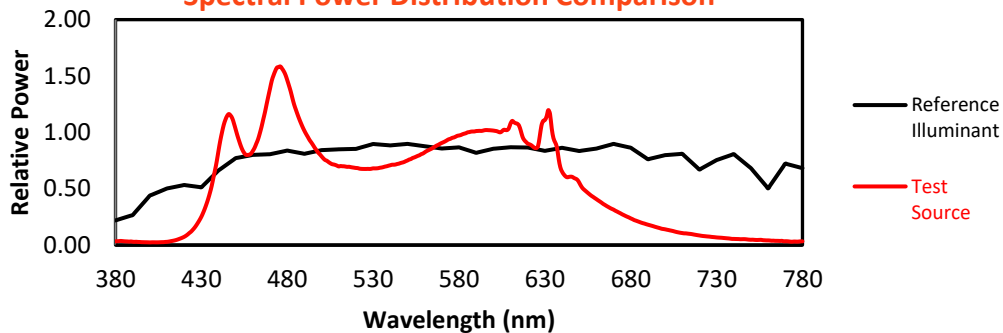

Color Vector Graphics

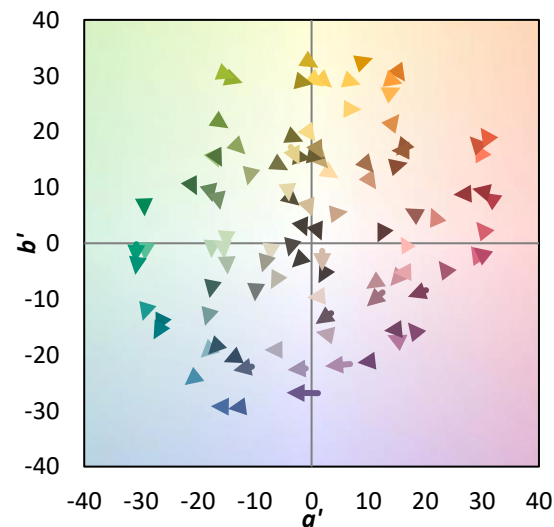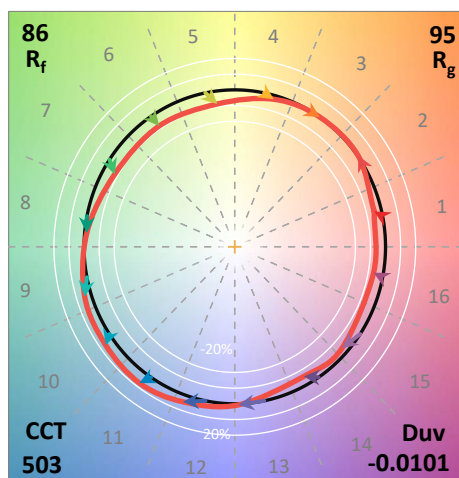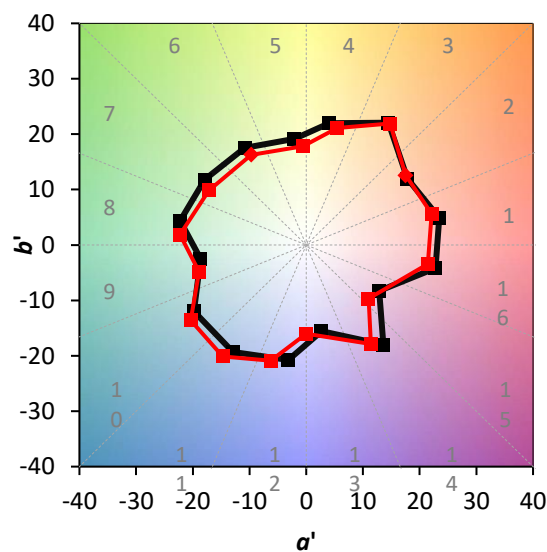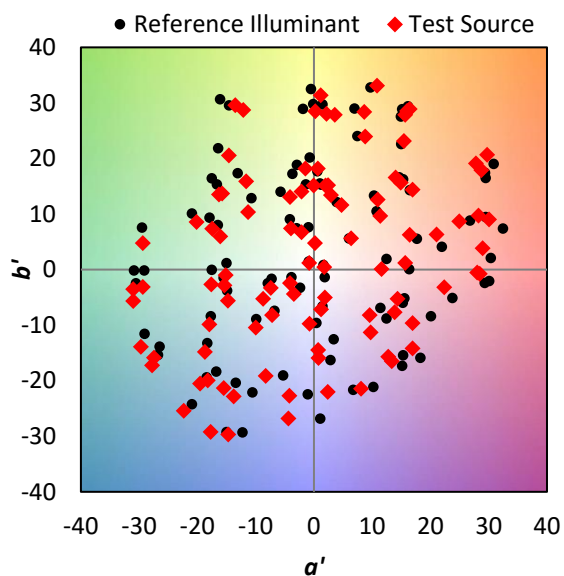


REPORT NUMBER: SP1-2210-795-5

TM-30-18

Individual Sample Fidelity Index ($R_{f,i}$)




CES01 = 86	CES26 = 88	CES51 = 85	CES76 = 81
CES02 = 61	CES27 = 83	CES52 = 87	CES77 = 77
CES03 = 31	CES28 = 90	CES53 = 79	CES78 = 83
CES04 = 69	CES29 = 81	CES54 = 85	CES79 = 80
CES05 = 48	CES30 = 81	CES55 = 82	CES80 = 78
CES06 = 50	CES31 = 81	CES56 = 79	CES81 = 63
CES07 = 41	CES32 = 87	CES57 = 77	CES82 = 92
CES08 = 40	CES33 = 84	CES58 = 77	CES83 = 86
CES09 = 29	CES34 = 85	CES59 = 91	CES84 = 96
CES10 = 74	CES35 = 91	CES60 = 89	CES85 = 77
CES11 = 57	CES36 = 80	CES61 = 87	CES86 = 70
CES12 = 63	CES37 = 89	CES62 = 81	CES87 = 85
CES13 = 43	CES38 = 76	CES63 = 92	CES88 = 86
CES14 = 74	CES39 = 93	CES64 = 83	CES89 = 82
CES15 = 71	CES40 = 87	CES65 = 90	CES90 = 85
CES16 = 47	CES41 = 89	CES66 = 85	CES91 = 76
CES17 = 49	CES42 = 81	CES67 = 86	CES92 = 75
CES18 = 56	CES43 = 80	CES68 = 89	CES93 = 85
CES19 = 71	CES44 = 99	CES69 = 90	CES94 = 77
CES20 = 66	CES45 = 84	CES70 = 89	CES95 = 85
CES21 = 85	CES46 = 86	CES71 = 86	CES96 = 92
CES22 = 77	CES47 = 83	CES72 = 94	CES97 = 82
CES23 = 91	CES48 = 79	CES73 = 87	CES98 = 83
CES24 = 89	CES49 = 87	CES74 = 89	CES99 = 86
CES25 = 70	CES50 = 85	CES75 = 84	

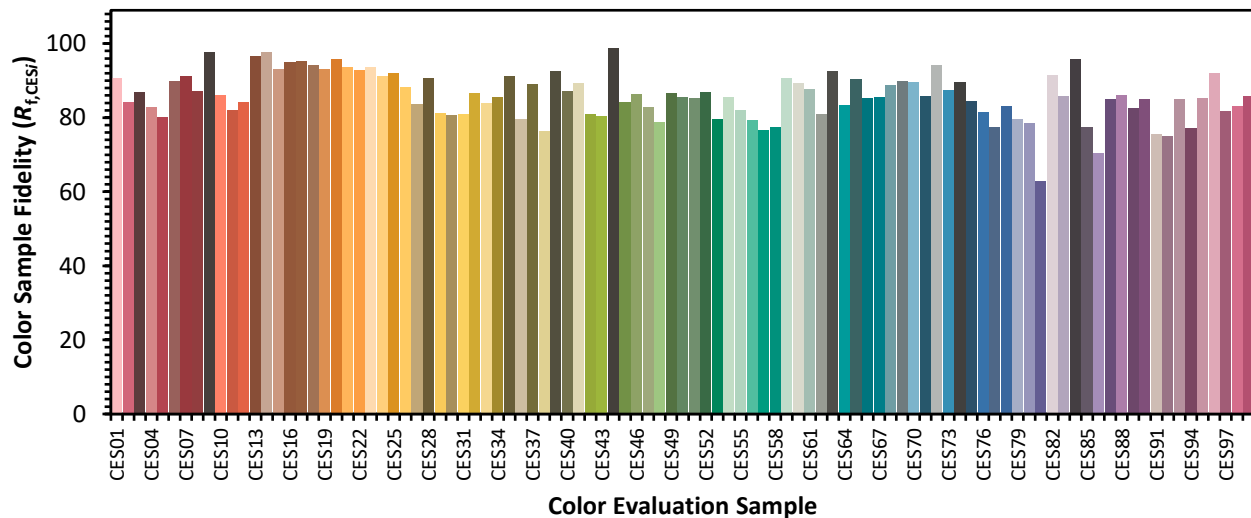

REPORT NUMBER: SP1-2210-795-5

TM-30-18



Color Rendition by Hue-Angle Bin

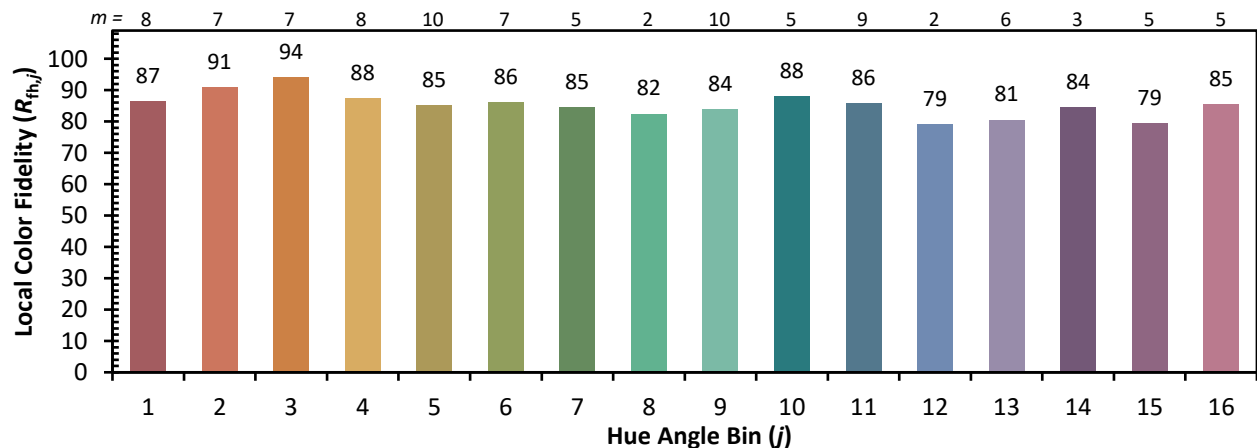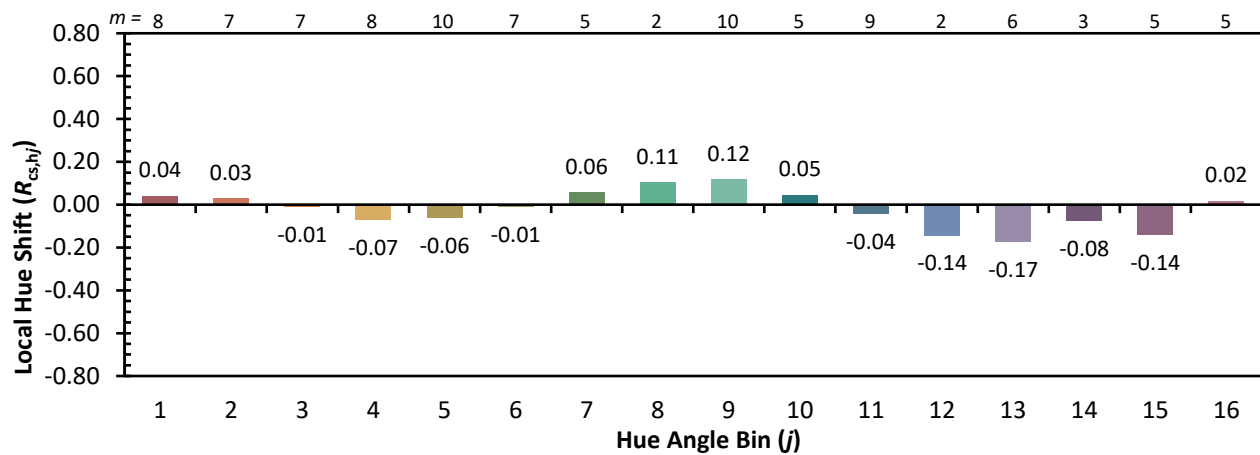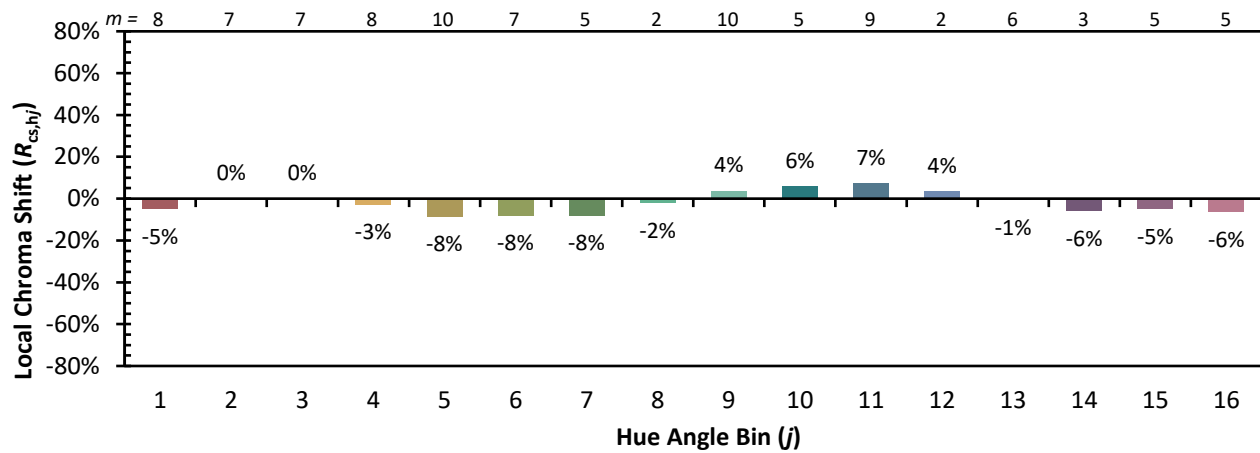

REPORT NUMBER: SP1-2210-795-5

TM-30-18

Measure Comparisons

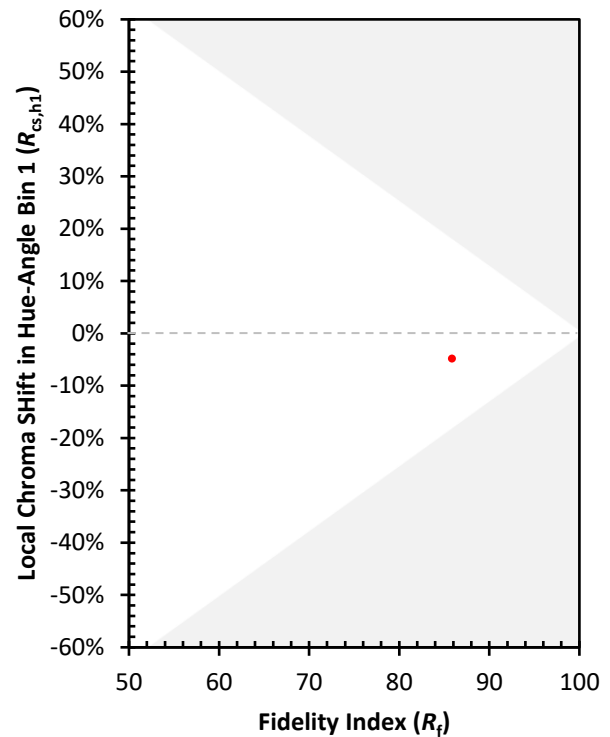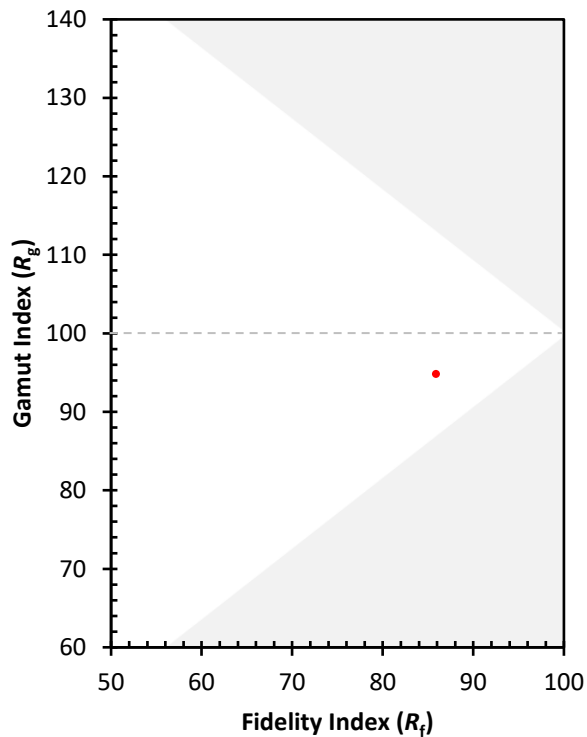

(END OF REPORT)