

Cooper Lighting Solutions Photometric Lab  
1121 Highway 74 South  
Peachtree City, GA 30269



Scaled data based on original data using  
LM-79-08 Approved Method: Electrical and Photometric Measurements of Solid-State  
Lighting Products

Test Report Prepared for

Cooper Lighting Solutions

(formerly Eaton)

Brand: METALUX

Report Number: P732345

Luminaire Tested: **24CZ2-55HE-HRP-B2750-W2D-5000K**

Issue Date: 1/5/2024



**Test Information**

Test Method: LM-79-08  
Report Number: P732345  
TEST IS SCALED FROM IESNA LM-79-08 TEST DATA (P295011)  
Test Lab: INNOVATIONS CENTER(G3)  
Issue Date: 1/5/2024  
Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)  
Product Line: METALUX  
Catalog Number: 24CZ2-55HE-HRP-B2750-W2D-5000K  
Description: 2X4 5500 LUMEN CRUZE TROFFER WITH BIO UP LEDS AT 5000K CCT AND HRP LENS

Light Source: -  
Ballast/Driver: -

**Summary**


Lumens per Lamp: N/A  
Luminaire Lumens: 4094.0 lumens  
Efficiency: N/A  
Efficacy: 97.5 lumens/watt  
Spacing Criteria (0/90/45): 1.24 / 1.3 / 1.4  
Luminous Opening: Rectangular (W 1.92' x L: 3.98' x H: 0')  
CIE Type: Direct

Input Watts (W): 42  
Input Voltage (V): NR  
Input Current (Ain): NR  
Voltage Rise (V): NR  
Power Factor: NR  
Total Harmonic Distortion (THDi): NR  
Frequency (hertz): 60  
Stabilization Time: NR  
Operation Time: NR  
Ambient Temperature (°C): NR  
Test Distance: 25 FT

TEST NUMBER: P732345

CATALOG NUMBER: 24CZ2-55HE-HRP-B2750-W2D-5000K

### Luminous Intensity Polar Plot

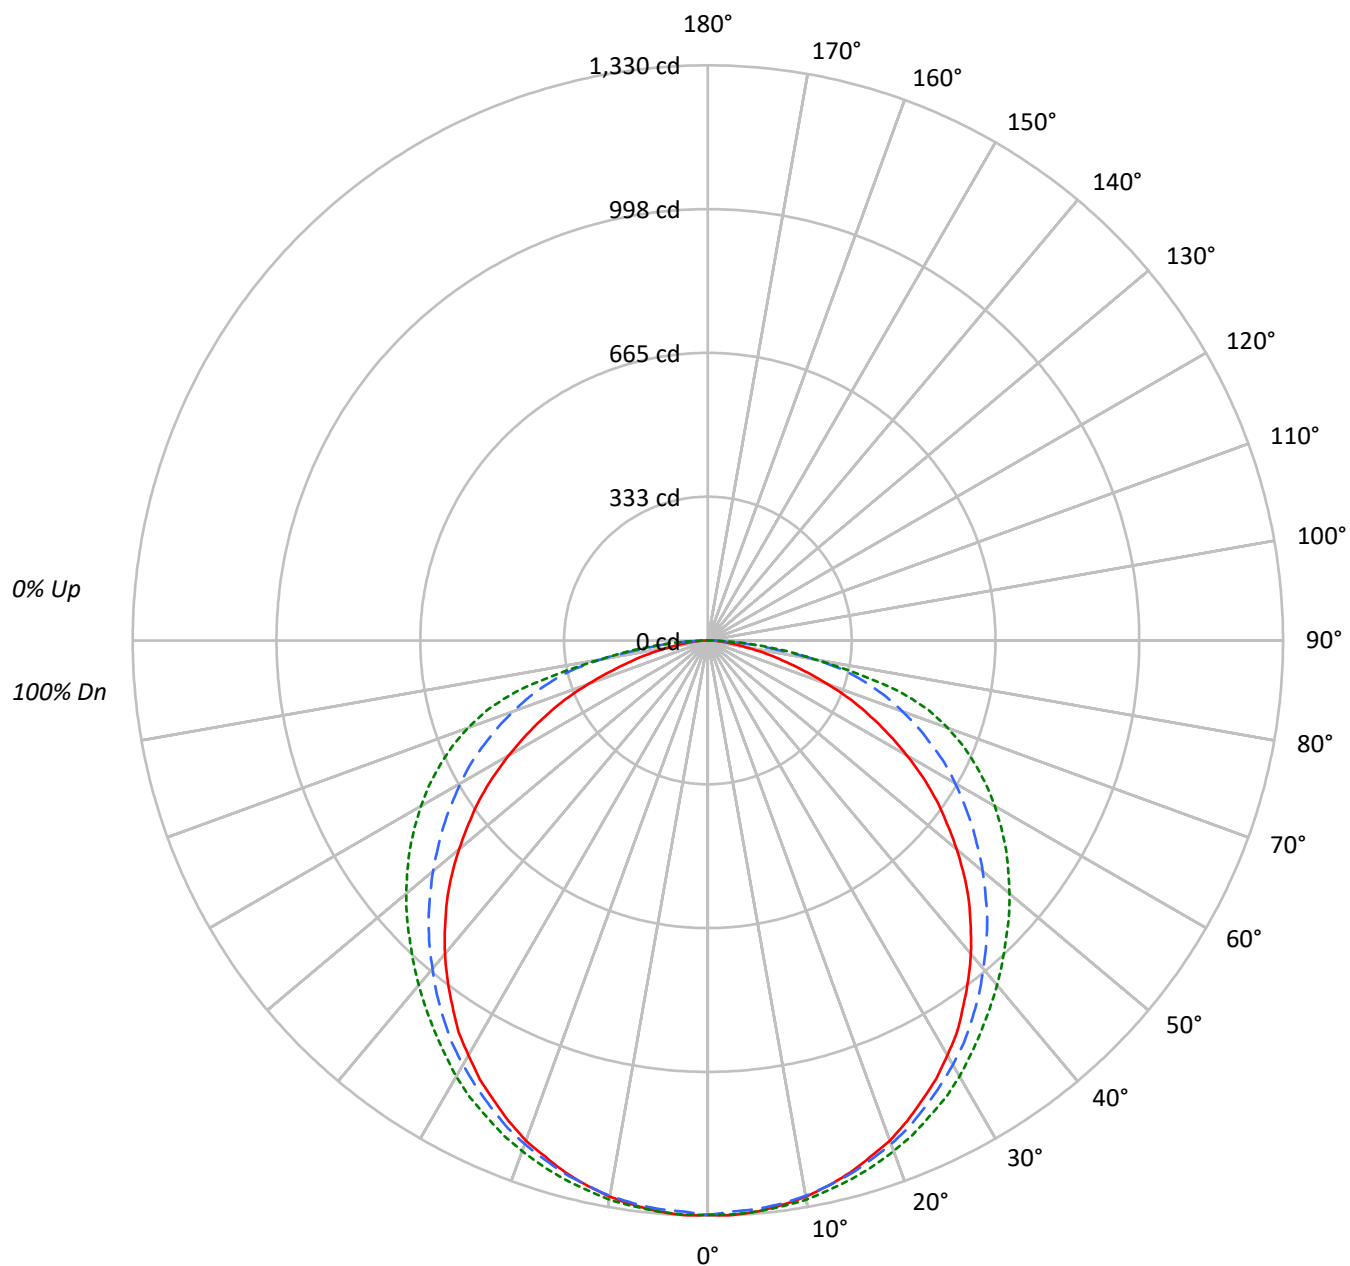



TEST NUMBER: P732345

CATALOG NUMBER: 24CZ2-55HE-HRP-B2750-W2D-5000K

**COEFFICIENT OF UTILIZATION - ZONAL CAVITY METHOD:**

|     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |    |    |
|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|----|----|
| RF  | 20  |     |     |     | 20  |     |     |     |     | 20  |     |     |     |     | 20  |     |     |     |    | 20 |
| RC  | 80  |     |     |     | 70  |     |     |     |     | 50  |     |     |     |     | 30  |     |     |     |    | 10 |
| RW  | 70  | 50  | 30  | 10  | 70  | 50  | 30  | 10  | 50  | 30  | 10  | 50  | 30  | 10  | 50  | 30  | 10  | 50  | 30 | 10 |
| RCR |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |     |    |    |
| 0   | 119 | 119 | 119 | 119 | 116 | 116 | 116 | 116 | 111 | 111 | 111 | 106 | 106 | 106 | 102 | 102 | 102 | 100 |    |    |
| 1   | 108 | 103 | 98  | 94  | 105 | 101 | 96  | 93  | 96  | 93  | 90  | 92  | 90  | 87  | 89  | 86  | 84  | 82  |    |    |
| 2   | 98  | 89  | 82  | 76  | 95  | 87  | 80  | 75  | 83  | 78  | 73  | 80  | 75  | 71  | 77  | 73  | 70  | 67  |    |    |
| 3   | 89  | 78  | 69  | 62  | 86  | 76  | 68  | 62  | 73  | 66  | 61  | 70  | 64  | 59  | 68  | 63  | 58  | 56  |    |    |
| 4   | 81  | 68  | 59  | 52  | 79  | 67  | 59  | 52  | 65  | 57  | 51  | 62  | 56  | 50  | 60  | 54  | 50  | 48  |    |    |
| 5   | 74  | 61  | 52  | 45  | 72  | 60  | 51  | 45  | 58  | 50  | 44  | 56  | 49  | 44  | 54  | 48  | 43  | 41  |    |    |
| 6   | 69  | 55  | 46  | 39  | 67  | 54  | 45  | 39  | 52  | 44  | 38  | 50  | 43  | 38  | 49  | 42  | 38  | 36  |    |    |
| 7   | 63  | 50  | 41  | 34  | 62  | 49  | 40  | 34  | 47  | 39  | 34  | 46  | 39  | 34  | 44  | 38  | 33  | 31  |    |    |
| 8   | 59  | 45  | 36  | 30  | 57  | 44  | 36  | 30  | 43  | 36  | 30  | 42  | 35  | 30  | 41  | 34  | 30  | 28  |    |    |
| 9   | 55  | 41  | 33  | 27  | 54  | 41  | 33  | 27  | 40  | 32  | 27  | 39  | 32  | 27  | 38  | 31  | 27  | 25  |    |    |
| 10  | 52  | 38  | 30  | 25  | 50  | 38  | 30  | 25  | 37  | 30  | 25  | 36  | 29  | 24  | 35  | 29  | 24  | 23  |    |    |

**AVERAGE LUMINANCE (cd/sqm):**

|     | 0°   | 45°  | 90°  |
|-----|------|------|------|
| 0°  | 1875 | 1875 | 1875 |
| 5°  | 1877 | 1870 | 1877 |
| 10° | 1872 | 1869 | 1882 |
| 15° | 1861 | 1866 | 1883 |
| 20° | 1848 | 1861 | 1887 |
| 25° | 1826 | 1852 | 1890 |
| 30° | 1805 | 1846 | 1896 |
| 35° | 1775 | 1837 | 1899 |
| 40° | 1743 | 1825 | 1917 |
| 45° | 1704 | 1823 | 1946 |
| 50° | 1648 | 1822 | 1998 |
| 55° | 1590 | 1834 | 2071 |
| 60° | 1500 | 1862 | 2162 |
| 65° | 1385 | 1906 | 2284 |
| 70° | 1209 | 1973 | 2433 |
| 75° | 982  | 2075 | 2514 |
| 80° | 723  | 2034 | 2034 |
| 85° | 555  | 1500 | 1692 |



TEST NUMBER: P732345

CATALOG NUMBER: 24CZ2-55HE-HRP-B2750-W2D-5000K

**ZONAL LUMENS:**

| Zone      | Lumens | % Fixture |
|-----------|--------|-----------|
| 0°-10°    | 125.8  | 3.1       |
| 10°-20°   | 361.3  | 8.8       |
| 20°-30°   | 550.1  | 13.4      |
| 30°-40°   | 667.9  | 16.3      |
| 40°-50°   | 705.7  | 17.2      |
| 50°-60°   | 665.9  | 16.3      |
| 60°-70°   | 553.7  | 13.5      |
| 70°-80°   | 364.3  | 8.9       |
| 80°-90°   | 99.3   | 2.4       |
| 90°-100°  | 0.0    | 0.0       |
| 100°-110° | 0.0    | 0.0       |
| 110°-120° | 0.0    | 0.0       |
| 120°-130° | 0.0    | 0.0       |
| 130°-140° | 0.0    | 0.0       |
| 140°-150° | 0.0    | 0.0       |
| 150°-160° | 0.0    | 0.0       |
| 160°-170° | 0.0    | 0.0       |
| 170°-180° | 0.0    | 0.0       |
| 0°-30°    | 1037.3 | 25.3      |
| 0°-40°    | 1705.2 | 41.7      |
| 0°-60°    | 3076.8 | 75.2      |
| 0°-90°    | 4094.0 | 100.0     |
| 90°-120°  | 0.0    | 0.0       |
| 90°-150°  | 0.0    | 0.0       |
| 90°-180°  | 0.0    | 0.0       |
| 0°-180°   | 4094.0 | 100.0     |

**CANDELA DISTRIBUTION:**

|     | 0°   | 22.5° | 45°  | 67.5° | 90°  | Flux |
|-----|------|-------|------|-------|------|------|
| 0°  | 1328 | 1328  | 1328 | 1328  | 1328 |      |
| 5°  | 1325 | 1325  | 1320 | 1325  | 1325 | 126  |
| 15° | 1274 | 1275  | 1277 | 1289  | 1289 | 359  |
| 25° | 1172 | 1179  | 1190 | 1210  | 1214 | 541  |
| 35° | 1030 | 1042  | 1066 | 1094  | 1102 | 645  |
| 45° | 854  | 871   | 914  | 958   | 975  | 657  |
| 55° | 646  | 674   | 746  | 816   | 842  | 576  |
| 65° | 415  | 463   | 571  | 655   | 684  | 410  |
| 75° | 180  | 262   | 380  | 451   | 461  | 194  |
| 85° | 34   | 76    | 93   | 103   | 104  | 42   |
| 90° | 0    | 0     | 0    | 0     | 0    |      |



TEST NUMBER: P732345

CATALOG NUMBER: 24CZ2-55HE-HRP-B2750-W2D-5000K

**CANDELA DISTRIBUTION (FULL):**

|       | 0°     | 22.5°  | 45°    | 67.5°  | 90°    |
|-------|--------|--------|--------|--------|--------|
| 0°    | 1328.4 | 1328.4 | 1328.4 | 1328.4 | 1328.4 |
| 2.5°  | 1330.0 | 1328.4 | 1321.4 | 1328.4 | 1328.4 |
| 5°    | 1325.0 | 1325.0 | 1319.7 | 1325.0 | 1325.0 |
| 7.5°  | 1316.3 | 1316.3 | 1312.9 | 1319.7 | 1319.7 |
| 10°   | 1306.1 | 1306.1 | 1304.2 | 1312.9 | 1312.9 |
| 12.5° | 1290.6 | 1292.3 | 1290.6 | 1300.8 | 1300.8 |
| 15°   | 1273.5 | 1275.2 | 1276.8 | 1288.9 | 1288.9 |
| 17.5° | 1251.2 | 1254.6 | 1258.0 | 1271.8 | 1273.5 |
| 20°   | 1230.6 | 1232.3 | 1239.1 | 1254.6 | 1256.3 |
| 22.5° | 1203.1 | 1208.4 | 1216.9 | 1232.3 | 1237.4 |
| 25°   | 1172.4 | 1179.1 | 1189.5 | 1210.1 | 1213.5 |
| 27.5° | 1143.1 | 1148.4 | 1162.0 | 1184.2 | 1191.2 |
| 30°   | 1107.3 | 1115.8 | 1132.9 | 1155.2 | 1163.7 |
| 32.5° | 1072.9 | 1081.4 | 1102.0 | 1126.1 | 1132.9 |
| 35°   | 1030.1 | 1042.0 | 1066.2 | 1093.5 | 1102.0 |
| 37.5° | 989.0  | 1000.9 | 1030.1 | 1060.9 | 1071.2 |
| 40°   | 946.0  | 959.8  | 990.7  | 1026.7 | 1040.3 |
| 42.5° | 899.8  | 918.6  | 953.0  | 992.4  | 1007.9 |
| 45°   | 853.6  | 870.7  | 913.5  | 958.1  | 975.2  |
| 47.5° | 803.8  | 824.3  | 870.7  | 923.7  | 944.3  |
| 50°   | 750.8  | 776.4  | 829.6  | 887.9  | 910.2  |
| 52.5° | 697.6  | 726.6  | 786.6  | 851.9  | 875.8  |
| 55°   | 646.1  | 673.6  | 745.5  | 815.8  | 841.5  |
| 57.5° | 589.7  | 623.8  | 702.6  | 778.1  | 803.8  |
| 60°   | 531.4  | 569.1  | 659.8  | 738.7  | 766.0  |
| 62.5° | 473.1  | 515.9  | 618.7  | 697.6  | 726.6  |
| 65°   | 414.8  | 462.7  | 570.8  | 654.7  | 683.8  |
| 67.5° | 358.2  | 411.4  | 526.1  | 610.2  | 639.3  |
| 70°   | 293.1  | 359.9  | 478.2  | 560.4  | 589.7  |
| 72.5° | 233.2  | 310.3  | 432.0  | 509.1  | 534.8  |
| 75°   | 180.0  | 262.2  | 380.5  | 450.8  | 461.0  |
| 77.5° | 132.1  | 214.3  | 327.3  | 351.4  | 353.1  |
| 80°   | 89.0   | 171.5  | 250.3  | 246.7  | 250.3  |
| 82.5° | 58.3   | 128.4  | 157.7  | 176.6  | 178.3  |
| 85°   | 34.3   | 75.5   | 92.6   | 102.8  | 104.5  |
| 87.5° | 17.2   | 25.6   | 32.6   | 34.3   | 37.7   |
| 90°   | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    |



Report Generated By 670246072 / DESKTOP-50001EG





— 0°-180°    - - 45°-225°    - - - 90°-270°







LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-State Lighting Products

Report Prepared for

Cooper Lighting Solutions

(formerly Eaton)

METALUX

Report Number: SP1-2210-795-5

Test Date: 10/06/2022

Luminaire Tested: 9WP217084MDER4AM-5000K-315MA

Data in this report applies to families of products including 9WP217084MDER4AM-5000K.

### Test Information

Test Method: LM-79-2019  
 Report Number: SP1-2210-795-5  
 Test Lab: COOPER LIGHTING SOLUTIONS  
 Photometer: SP1 - 76IN SPHERE  
 Measurement Geometry:  $4\pi$   
 Issue Date: 10/06/2022  
 Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)  
 Product Line: METALUX  
 Catalog Number: **9WP217084MDER4AM-5000K-315MA**  
 Description: METALUX

TUNABLE BOARD, 5000K-315MA, PROGRAMMED @ 6.5Vdc.

### Spectral Parameters

CCT (K): 5031  
 CIE  $u'$ : 0.2182  
 CIE  $v'$ : 0.4734  
 Duv: -0.0101  
 CIE x: 0.3424  
 CIE y: 0.3302  
 CIE z: 0.3273  
 Peak Wavelength (nm): 476  
 Dominant Wavelength (nm): 495  
 Purity: 3.1

CRI (Ra): 84.5

|     |      |      |      |
|-----|------|------|------|
| R1: | 91.8 | R9:  | 77.5 |
| R2: | 85.4 | R10: | 70.0 |
| R3: | 79.8 | R11: | 87.5 |
| R4: | 86.6 | R12: | 69.3 |
| R5: | 89.4 | R13: | 89.5 |
| R6: | 79.4 | R14: | 89.8 |
| R7: | 81.5 |      |      |
| R8: | 82.5 |      |      |

Rf: 85.9  
 Rg: 94.8

### Test Conditions

Stabilization Time: 58M  
 Operation Time: 12H  
 Room Temperature (°C) / RH%: 24.0/38%  
 Sphere Temperature (°C): 24.4



REPORT NUMBER: SP1-2210-795-5

| Measurement and Test Equipment |                       |                  |                      |
|--------------------------------|-----------------------|------------------|----------------------|
| Instrument                     | Identification Number | Calibration Date | Calibration Due Date |
| Photometer                     | 76INCH SPHERE IN0058  | 8/8/2022         | 2/8/2023             |
| Power Meter                    | XITRON 2801 IN0071    | 11/29/2021       | 11/29/2022           |
| AC Power Source                | CHROMA 61603 IN0063   | 11/29/2021       | 11/29/2022           |
| DC Power Source                | AGILENT E3634A IN0208 | 11/29/2021       | 11/29/2022           |
| Sphere Thermometer             | ONSET IN0085          | 11/29/2021       | 11/29/2022           |
| Room Thermometer               | ONSET IN0046          | 11/29/2021       | 11/29/2022           |

REPORT NUMBER: SP1-2210-795-5

**CIE 1931 Chromaticity Diagram**



**CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles**



Point lies outside the range

REPORT NUMBER: SP1-2210-795-5

**Photopic Flux vs. Wavelength**



#####

| λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) |
|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|
| 360       | 1378             | NR               | 490       | 39050            | NR               | 620       | 34698            | NR               | 750       | 1822             | NR               | 880       | 2439             | NR               |
| 365       | 1331             | NR               | 495       | 34202            | NR               | 625       | 33140            | NR               | 755       | 1777             | NR               | 885       | 2149             | NR               |
| 370       | 1335             | NR               | 500       | 30309            | NR               | 630       | 42721            | NR               | 760       | 1599             | NR               | 890       | 2769             | NR               |
| 375       | 1253             | NR               | 505       | 28003            | NR               | 635       | 36567            | NR               | 765       | 1448             | NR               | 895       | 1685             | NR               |
| 380       | 1292             | NR               | 510       | 26874            | NR               | 640       | 25112            | NR               | 770       | 1318             | NR               | 900       | 2065             | NR               |
| 385       | 1298             | NR               | 515       | 26736            | NR               | 645       | 23382            | NR               | 775       | 1208             | NR               | 905       | 1550             | NR               |
| 390       | 1143             | NR               | 520       | 26353            | NR               | 650       | 21346            | NR               | 780       | 1268             | NR               | 910       | 2207             | NR               |
| 395       | 1012             | NR               | 525       | 26016            | NR               | 655       | 17849            | NR               | 785       | 1072             | NR               | 915       | 1905             | NR               |
| 400       | 913              | NR               | 530       | 26219            | NR               | 660       | 15701            | NR               | 790       | 1151             | NR               | 920       | 1492             | NR               |
| 405       | 948              | NR               | 535       | 26516            | NR               | 665       | 13709            | NR               | 795       | 1361             | NR               | 925       | 1709             | NR               |
| 410       | 1112             | NR               | 540       | 27283            | NR               | 670       | 12105            | NR               | 800       | 1152             | NR               | 930       | 2138             | NR               |
| 415       | 1681             | NR               | 545       | 27836            | NR               | 675       | 10522            | NR               | 805       | 1330             | NR               | 935       | 2497             | NR               |
| 420       | 2833             | NR               | 550       | 28917            | NR               | 680       | 9121             | NR               | 810       | 1205             | NR               | 940       | 2581             | NR               |
| 425       | 5230             | NR               | 555       | 30224            | NR               | 685       | 7915             | NR               | 815       | 1233             | NR               | 945       | 2662             | NR               |
| 430       | 9705             | NR               | 560       | 31691            | NR               | 690       | 6967             | NR               | 820       | 960              | NR               | 950       | 1809             | NR               |
| 435       | 17926            | NR               | 565       | 33290            | NR               | 695       | 6106             | NR               | 825       | 1423             | NR               | 955       | 1977             | NR               |
| 440       | 32347            | NR               | 570       | 34911            | NR               | 700       | 5390             | NR               | 830       | 1655             | NR               | 960       | 2906             | NR               |
| 445       | 44160            | NR               | 575       | 36327            | NR               | 705       | 4734             | NR               | 835       | 1541             | NR               | 965       | 2456             | NR               |
| 450       | 39460            | NR               | 580       | 37455            | NR               | 710       | 4108             | NR               | 840       | 1555             | NR               | 970       | 2874             | NR               |
| 455       | 31448            | NR               | 585       | 38519            | NR               | 715       | 3797             | NR               | 845       | 1414             | NR               | 975       | 3194             | NR               |
| 460       | 32233            | NR               | 590       | 38974            | NR               | 720       | 3287             | NR               | 850       | 1598             | NR               | 980       | 3237             | NR               |
| 465       | 40342            | NR               | 595       | 39274            | NR               | 725       | 2926             | NR               | 855       | 1852             | NR               | 985       | 1591             | NR               |
| 470       | 53556            | NR               | 600       | 39138            | NR               | 730       | 2611             | NR               | 860       | 1463             | NR               | 990       | 2611             | NR               |
| 475       | 60829            | NR               | 605       | 38865            | NR               | 735       | 2376             | NR               | 865       | 1656             | NR               | 995       | 3556             | NR               |
| 480       | 56377            | NR               | 610       | 41532            | NR               | 740       | 2107             | NR               | 870       | 1883             | NR               | 1000      | 3556             | NR               |
| 485       | 46320            | NR               | 615       | 40776            | NR               | 745       | 2023             | NR               | 875       | 1818             | NR               |           |                  |                  |

REPORT NUMBER: SP1-2210-795-5

**Scotopic Flux vs. Wavelength**



**Scotopic Lumens: 5560**

**S/P: 2.33**

| λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) |
|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|
| 360       | 1378             | NR               | 490       | 39050            | NR               | 620       | 34698            | NR               | 750       | 1822             | NR               | 880       | 2439             | NR               |
| 365       | 1331             | NR               | 495       | 34202            | NR               | 625       | 33140            | NR               | 755       | 1777             | NR               | 885       | 2149             | NR               |
| 370       | 1335             | NR               | 500       | 30309            | NR               | 630       | 42721            | NR               | 760       | 1599             | NR               | 890       | 2769             | NR               |
| 375       | 1253             | NR               | 505       | 28003            | NR               | 635       | 36567            | NR               | 765       | 1448             | NR               | 895       | 1685             | NR               |
| 380       | 1292             | NR               | 510       | 26874            | NR               | 640       | 25112            | NR               | 770       | 1318             | NR               | 900       | 2065             | NR               |
| 385       | 1298             | NR               | 515       | 26736            | NR               | 645       | 23382            | NR               | 775       | 1208             | NR               | 905       | 1550             | NR               |
| 390       | 1143             | NR               | 520       | 26353            | NR               | 650       | 21346            | NR               | 780       | 1268             | NR               | 910       | 2207             | NR               |
| 395       | 1012             | NR               | 525       | 26016            | NR               | 655       | 17849            | NR               | 785       | 1072             | NR               | 915       | 1905             | NR               |
| 400       | 913              | NR               | 530       | 26219            | NR               | 660       | 15701            | NR               | 790       | 1151             | NR               | 920       | 1492             | NR               |
| 405       | 948              | NR               | 535       | 26516            | NR               | 665       | 13709            | NR               | 795       | 1361             | NR               | 925       | 1709             | NR               |
| 410       | 1112             | NR               | 540       | 27283            | NR               | 670       | 12105            | NR               | 800       | 1152             | NR               | 930       | 2138             | NR               |
| 415       | 1681             | NR               | 545       | 27836            | NR               | 675       | 10522            | NR               | 805       | 1330             | NR               | 935       | 2497             | NR               |
| 420       | 2833             | NR               | 550       | 28917            | NR               | 680       | 9121             | NR               | 810       | 1205             | NR               | 940       | 2581             | NR               |
| 425       | 5230             | NR               | 555       | 30224            | NR               | 685       | 7915             | NR               | 815       | 1233             | NR               | 945       | 2662             | NR               |
| 430       | 9705             | NR               | 560       | 31691            | NR               | 690       | 6967             | NR               | 820       | 960              | NR               | 950       | 1809             | NR               |
| 435       | 17926            | NR               | 565       | 33290            | NR               | 695       | 6106             | NR               | 825       | 1423             | NR               | 955       | 1977             | NR               |
| 440       | 32347            | NR               | 570       | 34911            | NR               | 700       | 5390             | NR               | 830       | 1655             | NR               | 960       | 2906             | NR               |
| 445       | 44160            | NR               | 575       | 36327            | NR               | 705       | 4734             | NR               | 835       | 1541             | NR               | 965       | 2456             | NR               |
| 450       | 39460            | NR               | 580       | 37455            | NR               | 710       | 4108             | NR               | 840       | 1555             | NR               | 970       | 2874             | NR               |
| 455       | 31448            | NR               | 585       | 38519            | NR               | 715       | 3797             | NR               | 845       | 1414             | NR               | 975       | 3194             | NR               |
| 460       | 32233            | NR               | 590       | 38974            | NR               | 720       | 3287             | NR               | 850       | 1598             | NR               | 980       | 3237             | NR               |
| 465       | 40342            | NR               | 595       | 39274            | NR               | 725       | 2926             | NR               | 855       | 1852             | NR               | 985       | 1591             | NR               |
| 470       | 53556            | NR               | 600       | 39138            | NR               | 730       | 2611             | NR               | 860       | 1463             | NR               | 990       | 2611             | NR               |
| 475       | 60829            | NR               | 605       | 38865            | NR               | 735       | 2376             | NR               | 865       | 1656             | NR               | 995       | 3556             | NR               |
| 480       | 56377            | NR               | 610       | 41532            | NR               | 740       | 2107             | NR               | 870       | 1883             | NR               | 1000      | 3556             | NR               |
| 485       | 46320            | NR               | 615       | 40776            | NR               | 745       | 2023             | NR               | 875       | 1818             | NR               |           |                  |                  |

REPORT NUMBER: SP1-2210-795-5

**Melanopic Flux vs. Wavelength**



**Melanopic Lumens: 2561.9 S/P: 1.07**

| λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) |
|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|
| 360       | 1378             | NR               | 490       | 39050            | NR               | 620       | 34698            | NR               | 750       | 1822             | NR               | 880       | 2439             | NR               |
| 365       | 1331             | NR               | 495       | 34202            | NR               | 625       | 33140            | NR               | 755       | 1777             | NR               | 885       | 2149             | NR               |
| 370       | 1335             | NR               | 500       | 30309            | NR               | 630       | 42721            | NR               | 760       | 1599             | NR               | 890       | 2769             | NR               |
| 375       | 1253             | NR               | 505       | 28003            | NR               | 635       | 36567            | NR               | 765       | 1448             | NR               | 895       | 1685             | NR               |
| 380       | 1292             | NR               | 510       | 26874            | NR               | 640       | 25112            | NR               | 770       | 1318             | NR               | 900       | 2065             | NR               |
| 385       | 1298             | NR               | 515       | 26736            | NR               | 645       | 23382            | NR               | 775       | 1208             | NR               | 905       | 1550             | NR               |
| 390       | 1143             | NR               | 520       | 26353            | NR               | 650       | 21346            | NR               | 780       | 1268             | NR               | 910       | 2207             | NR               |
| 395       | 1012             | NR               | 525       | 26016            | NR               | 655       | 17849            | NR               | 785       | 1072             | NR               | 915       | 1905             | NR               |
| 400       | 913              | NR               | 530       | 26219            | NR               | 660       | 15701            | NR               | 790       | 1151             | NR               | 920       | 1492             | NR               |
| 405       | 948              | NR               | 535       | 26516            | NR               | 665       | 13709            | NR               | 795       | 1361             | NR               | 925       | 1709             | NR               |
| 410       | 1112             | NR               | 540       | 27283            | NR               | 670       | 12105            | NR               | 800       | 1152             | NR               | 930       | 2138             | NR               |
| 415       | 1681             | NR               | 545       | 27836            | NR               | 675       | 10522            | NR               | 805       | 1330             | NR               | 935       | 2497             | NR               |
| 420       | 2833             | NR               | 550       | 28917            | NR               | 680       | 9121             | NR               | 810       | 1205             | NR               | 940       | 2581             | NR               |
| 425       | 5230             | NR               | 555       | 30224            | NR               | 685       | 7915             | NR               | 815       | 1233             | NR               | 945       | 2662             | NR               |
| 430       | 9705             | NR               | 560       | 31691            | NR               | 690       | 6967             | NR               | 820       | 960              | NR               | 950       | 1809             | NR               |
| 435       | 17926            | NR               | 565       | 33290            | NR               | 695       | 6106             | NR               | 825       | 1423             | NR               | 955       | 1977             | NR               |
| 440       | 32347            | NR               | 570       | 34911            | NR               | 700       | 5390             | NR               | 830       | 1655             | NR               | 960       | 2906             | NR               |
| 445       | 44160            | NR               | 575       | 36327            | NR               | 705       | 4734             | NR               | 835       | 1541             | NR               | 965       | 2456             | NR               |
| 450       | 39460            | NR               | 580       | 37455            | NR               | 710       | 4108             | NR               | 840       | 1555             | NR               | 970       | 2874             | NR               |
| 455       | 31448            | NR               | 585       | 38519            | NR               | 715       | 3797             | NR               | 845       | 1414             | NR               | 975       | 3194             | NR               |
| 460       | 32233            | NR               | 590       | 38974            | NR               | 720       | 3287             | NR               | 850       | 1598             | NR               | 980       | 3237             | NR               |
| 465       | 40342            | NR               | 595       | 39274            | NR               | 725       | 2926             | NR               | 855       | 1852             | NR               | 985       | 1591             | NR               |
| 470       | 53556            | NR               | 600       | 39138            | NR               | 730       | 2611             | NR               | 860       | 1463             | NR               | 990       | 2611             | NR               |
| 475       | 60829            | NR               | 605       | 38865            | NR               | 735       | 2376             | NR               | 865       | 1656             | NR               | 995       | 3556             | NR               |
| 480       | 56377            | NR               | 610       | 41532            | NR               | 740       | 2107             | NR               | 870       | 1883             | NR               | 1000      | 3556             | NR               |
| 485       | 46320            | NR               | 615       | 40776            | NR               | 745       | 2023             | NR               | 875       | 1818             | NR               |           |                  |                  |

REPORT NUMBER: SP1-2210-795-5

**TM-30-18**

**Summary**

$R_f = 85.9$   
 $R_g = 94.8$   
 $CIE R_a = 84.5$   
 $R_g = 77.5$



**Color Vector Graphics**



REPORT NUMBER: SP1-2210-795-5

**TM-30-18**

**Individual Sample Fidelity Index ( $R_{f,i}$ )**



|            |            |            |            |
|------------|------------|------------|------------|
| CES01 = 86 | CES26 = 88 | CES51 = 85 | CES76 = 81 |
| CES02 = 61 | CES27 = 83 | CES52 = 87 | CES77 = 77 |
| CES03 = 31 | CES28 = 90 | CES53 = 79 | CES78 = 83 |
| CES04 = 69 | CES29 = 81 | CES54 = 85 | CES79 = 80 |
| CES05 = 48 | CES30 = 81 | CES55 = 82 | CES80 = 78 |
| CES06 = 50 | CES31 = 81 | CES56 = 79 | CES81 = 63 |
| CES07 = 41 | CES32 = 87 | CES57 = 77 | CES82 = 92 |
| CES08 = 40 | CES33 = 84 | CES58 = 77 | CES83 = 86 |
| CES09 = 29 | CES34 = 85 | CES59 = 91 | CES84 = 96 |
| CES10 = 74 | CES35 = 91 | CES60 = 89 | CES85 = 77 |
| CES11 = 57 | CES36 = 80 | CES61 = 87 | CES86 = 70 |
| CES12 = 63 | CES37 = 89 | CES62 = 81 | CES87 = 85 |
| CES13 = 43 | CES38 = 76 | CES63 = 92 | CES88 = 86 |
| CES14 = 74 | CES39 = 93 | CES64 = 83 | CES89 = 82 |
| CES15 = 71 | CES40 = 87 | CES65 = 90 | CES90 = 85 |
| CES16 = 47 | CES41 = 89 | CES66 = 85 | CES91 = 76 |
| CES17 = 49 | CES42 = 81 | CES67 = 86 | CES92 = 75 |
| CES18 = 56 | CES43 = 80 | CES68 = 89 | CES93 = 85 |
| CES19 = 71 | CES44 = 99 | CES69 = 90 | CES94 = 77 |
| CES20 = 66 | CES45 = 84 | CES70 = 89 | CES95 = 85 |
| CES21 = 85 | CES46 = 86 | CES71 = 86 | CES96 = 92 |
| CES22 = 77 | CES47 = 83 | CES72 = 94 | CES97 = 82 |
| CES23 = 91 | CES48 = 79 | CES73 = 87 | CES98 = 83 |
| CES24 = 89 | CES49 = 87 | CES74 = 89 | CES99 = 86 |
| CES25 = 70 | CES50 = 85 | CES75 = 84 |            |



REPORT NUMBER: SP1-2210-795-5

**TM-30-18**

**Color Rendition by Hue-Angle Bin**

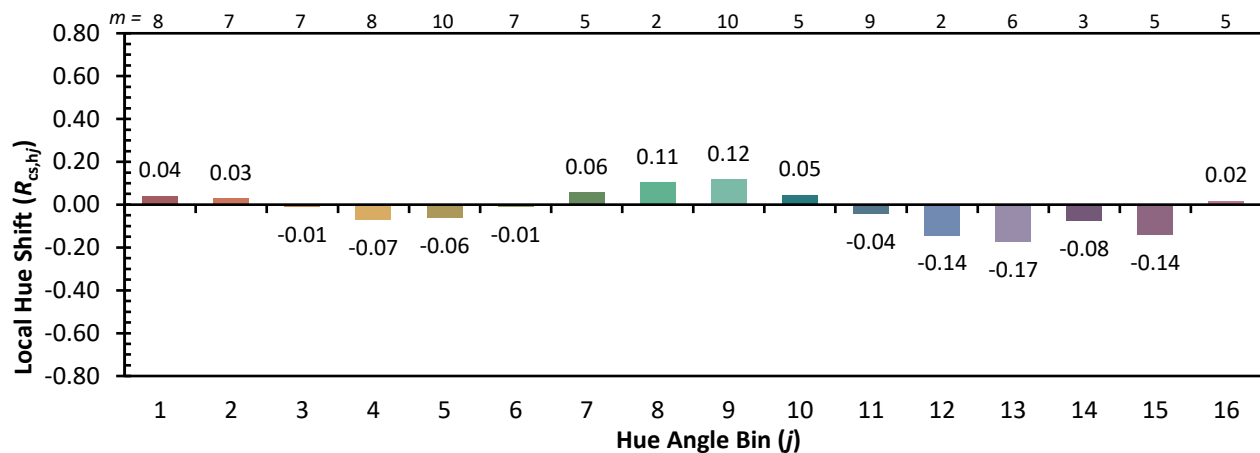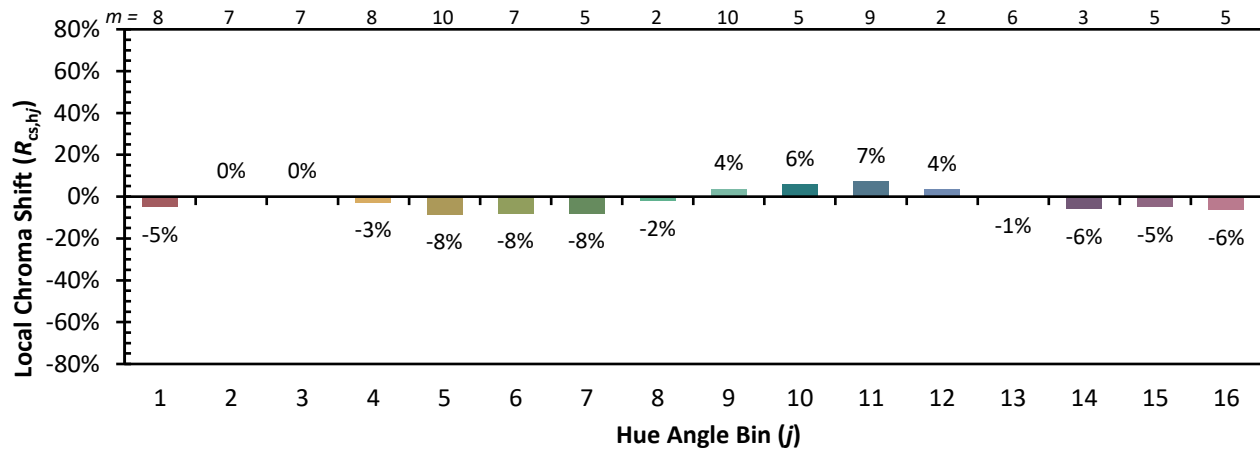

REPORT NUMBER: SP1-2210-795-5

**TM-30-18**

**Measure Comparisons**



(END OF REPORT)