

Cooper Lighting Solutions Photometric Lab
1121 Highway 74 South
Peachtree City, GA 30269



Scaled data based on original data using
LM-79-08 Approved Method: Electrical and Photometric Measurements of Solid-State
Lighting Products

Test Report Prepared for

Cooper Lighting Solutions

(formerly Eaton)

Brand: METALUX

Report Number: P732353

Luminaire Tested: **24CZ2-55HE-S-B2750-W2D-3500K**

Issue Date: 1/5/2024



Test Information

Test Method: LM-79-08
Report Number: P732353
TEST IS SCALED FROM IESNA LM-79-08 TEST DATA (P272125)
Test Lab: INNOVATION CENTER(G3)
Issue Date: 1/5/2024
Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)
Product Line: METALUX
Catalog Number: 24CZ2-55HE-S-B2750-W2D-3500K
Description: 2X4 5500 LUMEN CRUZE TROFFER WITH BIO UP LEDS AT 3500K CCT AND SMOOTH LENS

Light Source: -
Ballast/Driver: -

Summary


Lumens per Lamp: N/A
Luminaire Lumens: 5348.0 lumens
Efficiency: N/A
Efficacy: 127.3 lumens/watt
Spacing Criteria (0/90/45): 1.2 / 1.26 / 1.35
Luminous Opening: Rectangular (W 1.92' x L: 3.98' x H: 0')
CIE Type: Direct

Input Watts (W): 42
Input Voltage (V): NR
Input Current (Ain): NR
Voltage Rise (V): NR
Power Factor: NR
Total Harmonic Distortion (THDi): NR
Frequency (hertz): 60
Stabilization Time: NR
Operation Time: NR
Ambient Temperature (°C): NR
Test Distance: 25 FT

TEST NUMBER: P732353

CATALOG NUMBER: 24CZ2-55HE-S-B2750-W2D-3500K

Luminous Intensity Polar Plot

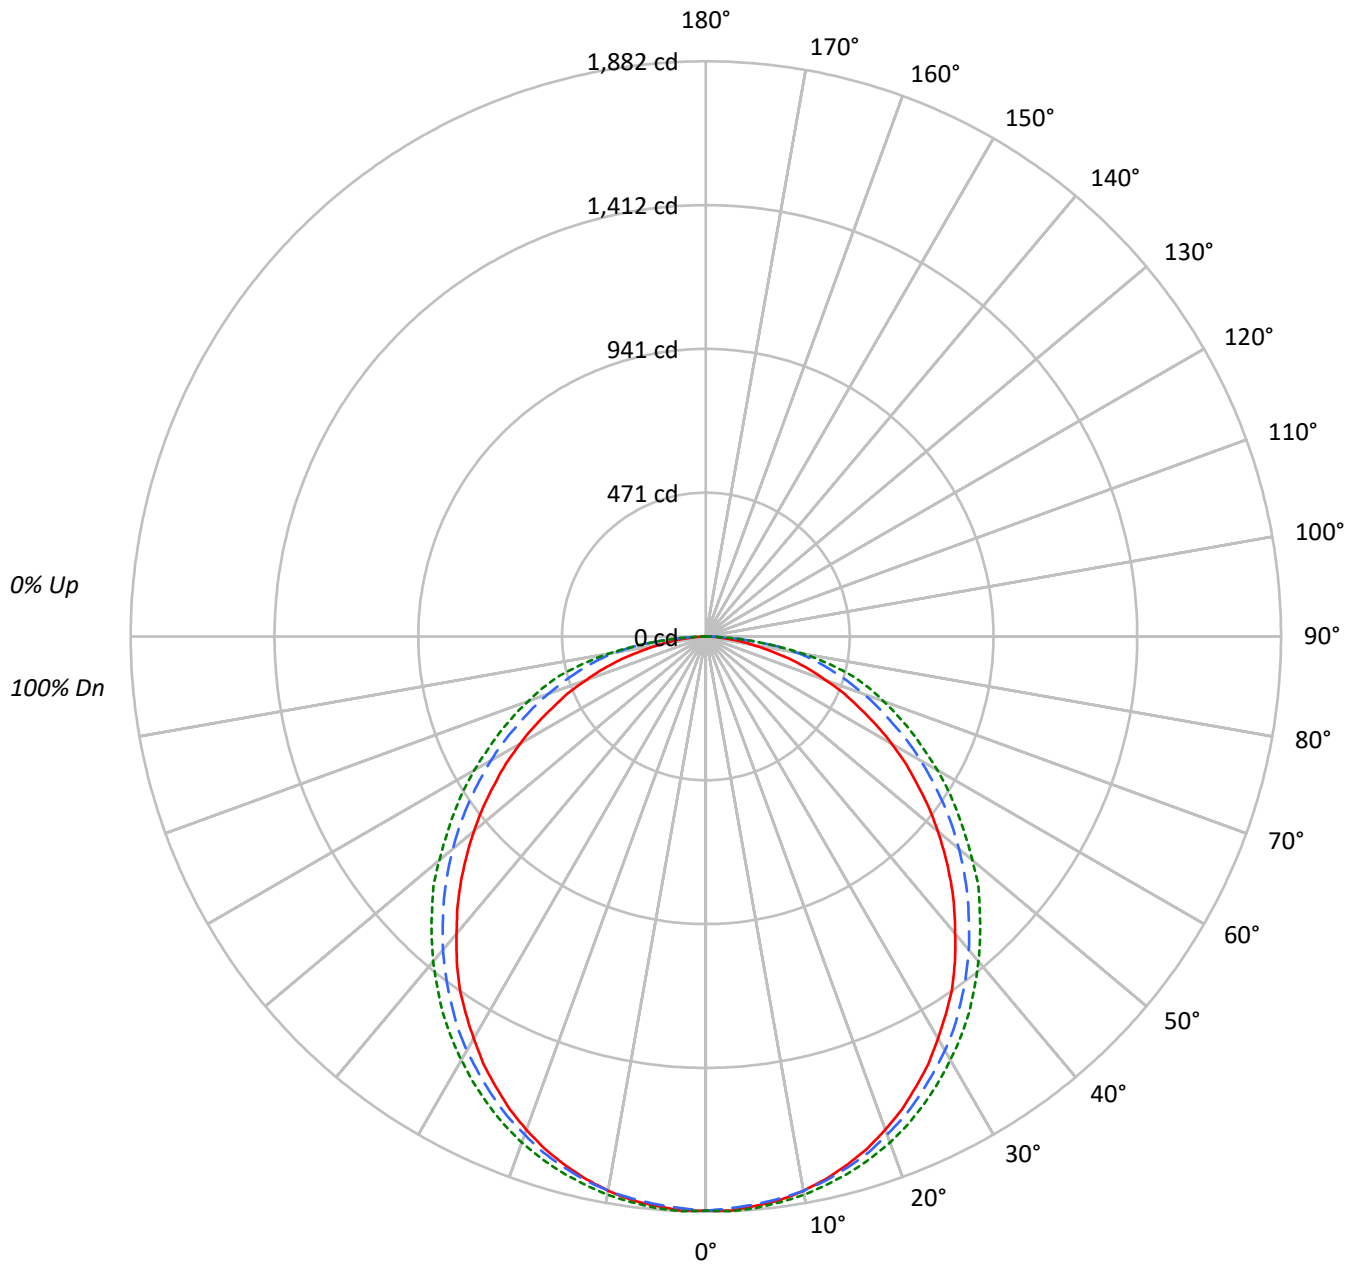



TEST NUMBER: P732353

CATALOG NUMBER: 24CZ2-55HE-S-B2750-W2D-3500K

COEFFICIENT OF UTILIZATION - ZONAL CAVITY METHOD:

RF	20				20					20					20					20
RC	80				70					50					30					10
RW	70	50	30	10	70	50	30	10	50	30	10	50	30	10	50	30	10	50	30	10
RCR																				
0	119	119	119	119	116	116	116	116	111	111	111	106	106	106	102	102	102	100		
1	108	103	99	95	106	101	97	93	97	93	90	93	90	88	89	87	85	83		
2	98	90	83	77	96	88	81	76	84	79	74	81	76	72	78	74	71	69		
3	89	79	70	64	87	77	69	63	74	67	62	71	66	61	69	64	60	58		
4	82	70	61	54	80	68	60	54	66	59	53	63	57	52	61	56	51	49		
5	75	62	53	46	73	61	53	46	59	51	46	57	50	45	55	49	45	42		
6	70	56	47	40	68	55	47	40	53	46	40	52	45	40	50	44	39	37		
7	64	51	42	36	63	50	42	36	48	41	35	47	40	35	46	39	35	33		
8	60	46	38	32	58	46	37	32	44	37	32	43	36	31	42	36	31	29		
9	56	43	34	29	55	42	34	29	41	34	28	40	33	28	39	33	28	26		
10	53	39	31	26	51	39	31	26	38	31	26	37	30	26	36	30	26	24		

AVERAGE LUMINANCE (cd/sqm):

	0°	45°	90°
0°	2652	2652	2652
5°	2650	2642	2659
10°	2639	2639	2658
15°	2614	2626	2653
20°	2579	2605	2646
25°	2532	2579	2629
30°	2475	2550	2608
35°	2421	2508	2587
40°	2338	2466	2557
45°	2262	2417	2529
50°	2175	2372	2499
55°	2077	2328	2475
60°	1980	2292	2469
65°	1855	2252	2485
70°	1717	2264	2551
75°	1538	2307	2695
80°	1243	2444	2637
85°	934	2144	2091



TEST NUMBER: P732353

CATALOG NUMBER: 24CZ2-55HE-S-B2750-W2D-3500K

ZONAL LUMENS:

Zone	Lumens	% Fixture
0°-10°	177.9	3.3
10°-20°	508.2	9.5
20°-30°	764.0	14.3
30°-40°	910.0	17.0
40°-50°	931.4	17.4
50°-60°	838.5	15.7
60°-70°	658.5	12.3
70°-80°	427.4	8.0
80°-90°	132.2	2.5
90°-100°	0.0	0.0
100°-110°	0.0	0.0
110°-120°	0.0	0.0
120°-130°	0.0	0.0
130°-140°	0.0	0.0
140°-150°	0.0	0.0
150°-160°	0.0	0.0
160°-170°	0.0	0.0
170°-180°	0.0	0.0
0°-30°	1450.1	27.1
0°-40°	2360.1	44.1
0°-60°	4129.9	77.2
0°-90°	5348.0	100.0
90°-120°	0.0	0.0
90°-150°	0.0	0.0
90°-180°	0.0	0.0
0°-180°	5348.0	100.0

CANDELA DISTRIBUTION:

	0°	22.5°	45°	67.5°	90°	Flux
0°	1879	1879	1879	1879	1879	
5°	1870	1874	1865	1875	1877	178
15°	1789	1794	1797	1813	1816	504
25°	1626	1639	1656	1683	1688	749
35°	1405	1422	1456	1491	1502	876
45°	1133	1160	1211	1257	1267	874
55°	844	882	946	996	1006	757
65°	556	598	674	730	744	553
75°	282	336	423	481	494	298
85°	58	107	132	129	129	70
90°	0	0	0	0	0	



TEST NUMBER: P732353

CATALOG NUMBER: 24CZ2-55HE-S-B2750-W2D-3500K

CANDELA DISTRIBUTION (FULL):

	0°	22.5°	45°	67.5°	90°
0°	1878.9	1878.9	1878.9	1878.9	1878.9
2.5°	1880.5	1880.5	1871.9	1880.5	1882.1
5°	1870.3	1873.8	1865.2	1875.4	1877.0
7.5°	1860.0	1860.0	1854.9	1865.2	1867.0
10°	1841.4	1843.1	1841.4	1853.3	1854.9
12.5°	1817.7	1821.0	1822.8	1834.7	1836.3
15°	1788.8	1793.9	1797.2	1812.6	1816.0
17.5°	1756.5	1761.6	1770.0	1787.0	1790.5
20°	1717.4	1724.1	1734.4	1756.5	1761.6
22.5°	1675.0	1681.8	1698.8	1719.0	1727.6
25°	1625.7	1639.2	1656.2	1683.4	1688.5
27.5°	1576.4	1588.2	1610.3	1639.2	1646.2
30°	1518.7	1537.3	1564.5	1593.4	1600.1
32.5°	1462.6	1481.2	1513.5	1544.2	1552.6
35°	1404.9	1421.8	1455.8	1491.4	1501.7
37.5°	1338.5	1360.6	1398.1	1433.7	1444.0
40°	1269.0	1296.2	1338.5	1376.0	1387.9
42.5°	1202.6	1231.5	1274.1	1314.8	1328.3
45°	1133.1	1160.3	1211.2	1257.1	1267.3
47.5°	1061.6	1092.3	1146.6	1192.4	1209.4
50°	990.4	1022.7	1080.5	1127.9	1138.2
52.5°	919.0	952.9	1014.1	1065.1	1070.2
55°	844.3	881.7	946.2	995.5	1005.8
57.5°	776.3	808.7	878.2	929.2	941.1
60°	701.6	737.2	811.9	859.6	874.8
62.5°	630.2	667.6	745.8	793.3	806.8
65°	555.5	598.0	674.4	730.5	744.0
67.5°	491.0	531.7	613.2	667.6	681.1
70°	416.1	462.1	548.7	604.8	618.3
72.5°	351.6	399.1	485.9	540.1	560.6
75°	282.0	336.3	423.1	480.8	494.3
77.5°	214.1	276.9	365.1	409.3	409.3
80°	152.9	219.2	300.7	321.1	324.4
82.5°	100.3	164.8	222.5	220.8	220.8
85°	57.7	107.0	132.4	129.1	129.1
87.5°	22.1	44.2	47.5	47.5	45.8
90°	0.0	0.0	0.0	0.0	0.0



Report Generated By 670246072 / DESKTOP-50001EG





— 0°-180° - - 45°-225° - - - 90°-270°







LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-State Lighting Products

Report Prepared for

Cooper Lighting Solutions

(formerly Eaton)

METALUX

Report Number: SP1-2210-795-3

Test Date: 10/06/2022

Luminaire Tested: 9WP217084MDER4AM-3500K-315MA

Data in this report applies to families of products including 9WP217084MDER4AM-3500K.


Test Information

Test Method: LM-79-2019
 Report Number: SP1-2210-795-3
 Test Lab: COOPER LIGHTING SOLUTIONS
 Photometer: SP1 - 76IN SPHERE
 Measurement Geometry: 4π
 Issue Date: 10/06/2022
 Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)
 Product Line: METALUX
 Catalog Number: **9WP217084MDER4AM-3500K-315MA**
 Description: METALUX

TUNABLE BOARD, 3500K-315MA, PROGRAMMED @ 4.0Vdc.

Spectral Parameters

CCT (K):	3506	CRI (Ra):	90.1		
CIE u':	0.2401	R1:	96.2	R9:	75.4
CIE v':	0.4983	R2:	91.5	R10:	83.5
Duv:	-0.0097	R3:	88.2	R11:	96.0
CIE x:	0.3952	R4:	94.5	R12:	76.6
CIE y:	0.3646	R5:	94.6	R13:	94.5
CIE z:	0.2402	R6:	84.9	R14:	94.8
Peak Wavelength (nm):	632	R7:	86.1		
Dominant Wavelength (nm):	586	R8:	84.7		
Purity:	28.3				
Rf:	90.4				
Rg:	97.8				

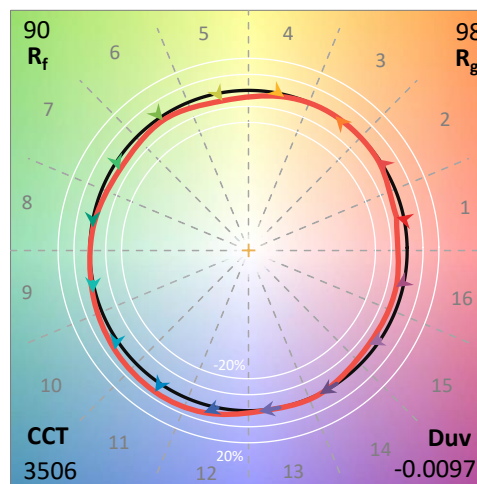

Test Conditions


Stabilization Time: 42M
 Operation Time: 12H
 Room Temperature (°C) / RH%: 24.0/38%
 Sphere Temperature (°C): 24.4

REPORT NUMBER: SP1-2210-795-3


Measurement and Test Equipment			
Instrument	Identification Number	Calibration Date	Calibration Due Date
Photometer	76INCH SPHERE IN0058	8/8/2022	2/8/2023
Power Meter	XITRON 2801 IN0071	11/29/2021	11/29/2022
AC Power Source	CHROMA 61603 IN0063	11/29/2021	11/29/2022
DC Power Source	AGILENT E3634A IN0208	11/29/2021	11/29/2022
Sphere Thermometer	ONSET IN0085	11/29/2021	11/29/2022
Room Thermometer	ONSET IN0046	11/29/2021	11/29/2022

REPORT NUMBER: SP1-2210-795-3

CIE 1931 Chromaticity Diagram

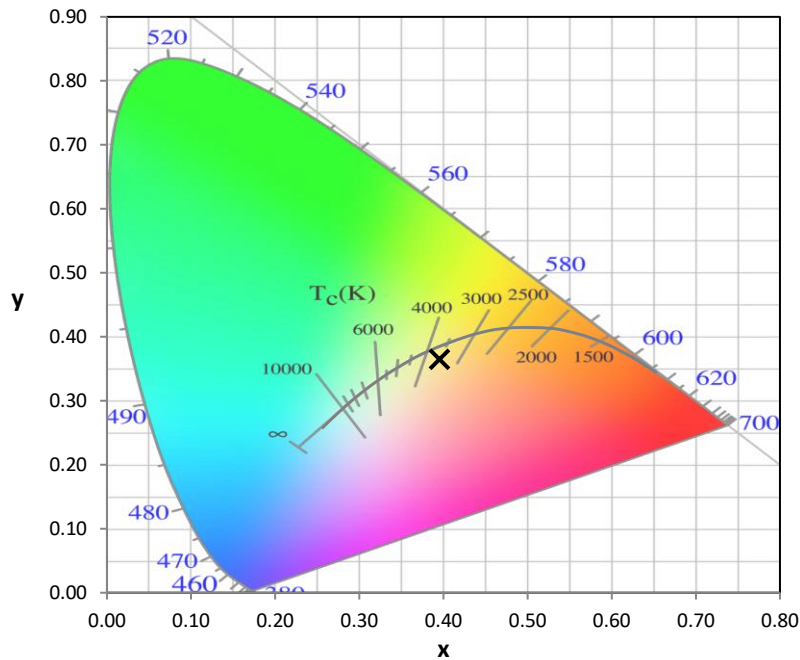


CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles

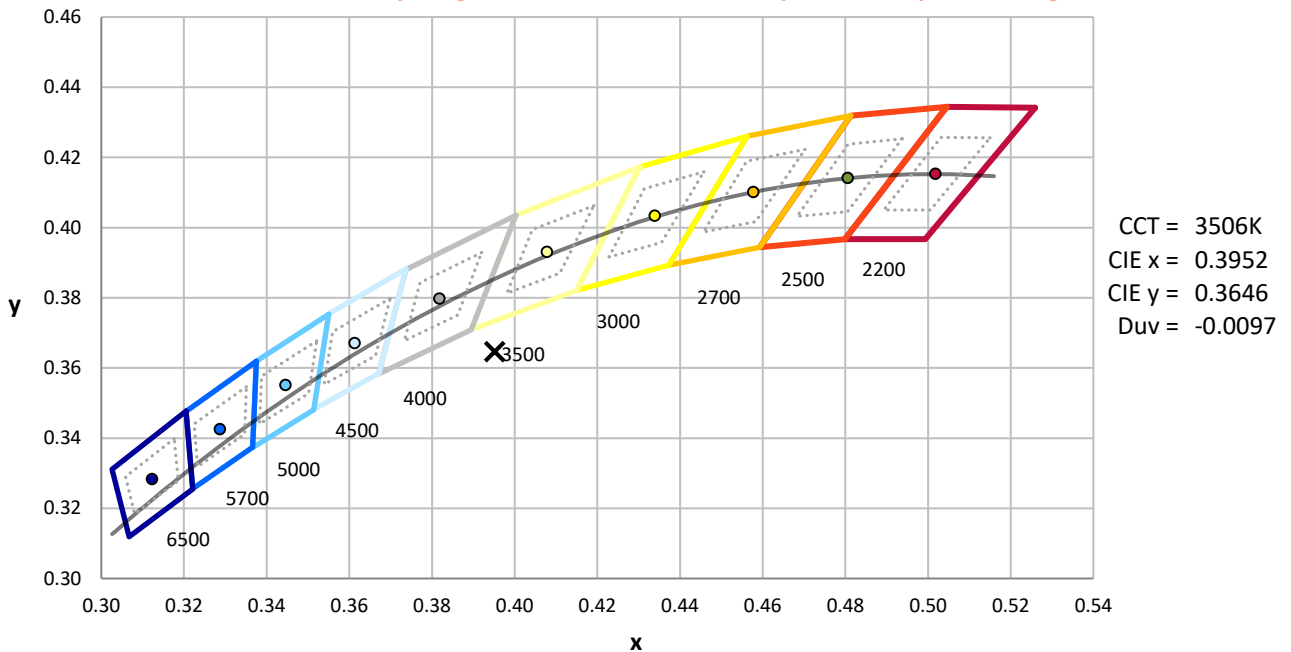

Point lies outside the range

REPORT NUMBER: SP1-2210-795-3

Photopic Flux vs. Wavelength

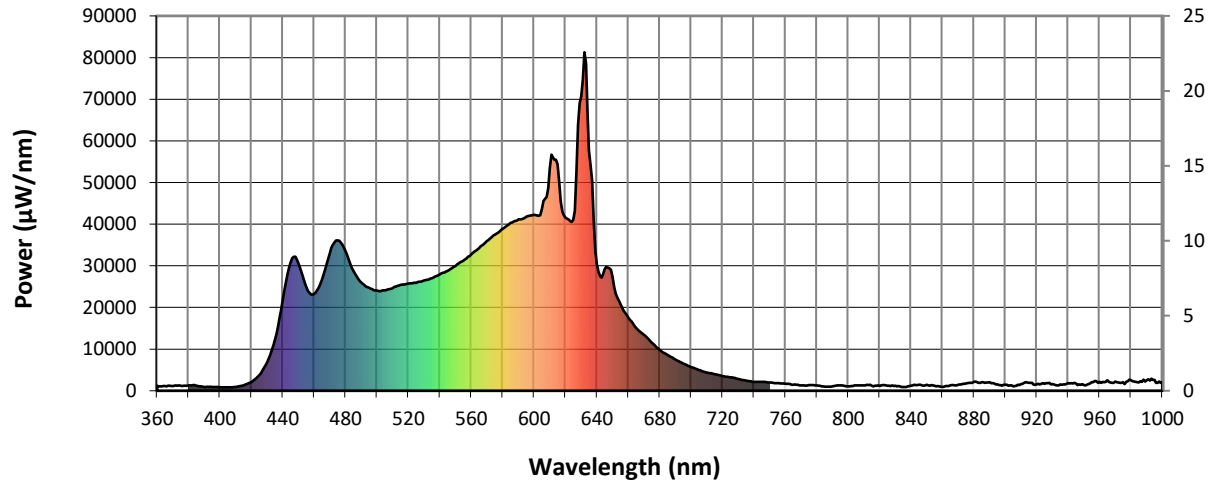


#####

λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)
360	1172	NR	490	25948	NR	620	41537	NR	750	1967	NR	880	2125	NR
365	1124	NR	495	24688	NR	625	40984	NR	755	1800	NR	885	2057	NR
370	1161	NR	500	24010	NR	630	70640	NR	760	1684	NR	890	2080	NR
375	1195	NR	505	24099	NR	635	57718	NR	765	1458	NR	895	1496	NR
380	1247	NR	510	24608	NR	640	30257	NR	770	1312	NR	900	1417	NR
385	1197	NR	515	25386	NR	645	29336	NR	775	1355	NR	905	1054	NR
390	930	NR	520	25689	NR	650	27279	NR	780	1313	NR	910	1583	NR
395	934	NR	525	25906	NR	655	20755	NR	785	1001	NR	915	1866	NR
400	841	NR	530	26477	NR	660	17587	NR	790	1065	NR	920	1529	NR
405	808	NR	535	27006	NR	665	15073	NR	795	1315	NR	925	1671	NR
410	914	NR	540	27913	NR	670	13454	NR	800	1029	NR	930	1617	NR
415	1302	NR	545	28798	NR	675	11513	NR	805	1267	NR	935	1522	NR
420	2088	NR	550	29982	NR	680	9839	NR	810	1312	NR	940	1792	NR
425	3768	NR	555	31264	NR	685	8568	NR	815	1239	NR	945	1727	NR
430	6771	NR	560	32729	NR	690	7487	NR	820	1107	NR	950	1375	NR
435	12240	NR	565	34271	NR	695	6502	NR	825	1209	NR	955	2031	NR
440	21697	NR	570	35931	NR	700	5703	NR	830	1175	NR	960	2155	NR
445	30873	NR	575	37457	NR	705	4977	NR	835	916	NR	965	2519	NR
450	30626	NR	580	38827	NR	710	4394	NR	840	1171	NR	970	2234	NR
455	24859	NR	585	40347	NR	715	3979	NR	845	1406	NR	975	2064	NR
460	23253	NR	590	41126	NR	720	3528	NR	850	1407	NR	980	2541	NR
465	26717	NR	595	41803	NR	725	3206	NR	855	1173	NR	985	1959	NR
470	33149	NR	600	42231	NR	730	2798	NR	860	928	NR	990	2532	NR
475	36075	NR	605	43629	NR	735	2417	NR	865	1256	NR	995	2564	NR
480	33381	NR	610	53581	NR	740	2135	NR	870	1460	NR	1000	2056	NR
485	28773	NR	615	54375	NR	745	2151	NR	875	1741	NR			

REPORT NUMBER: SP1-2210-795-3

Scotopic Flux vs. Wavelength

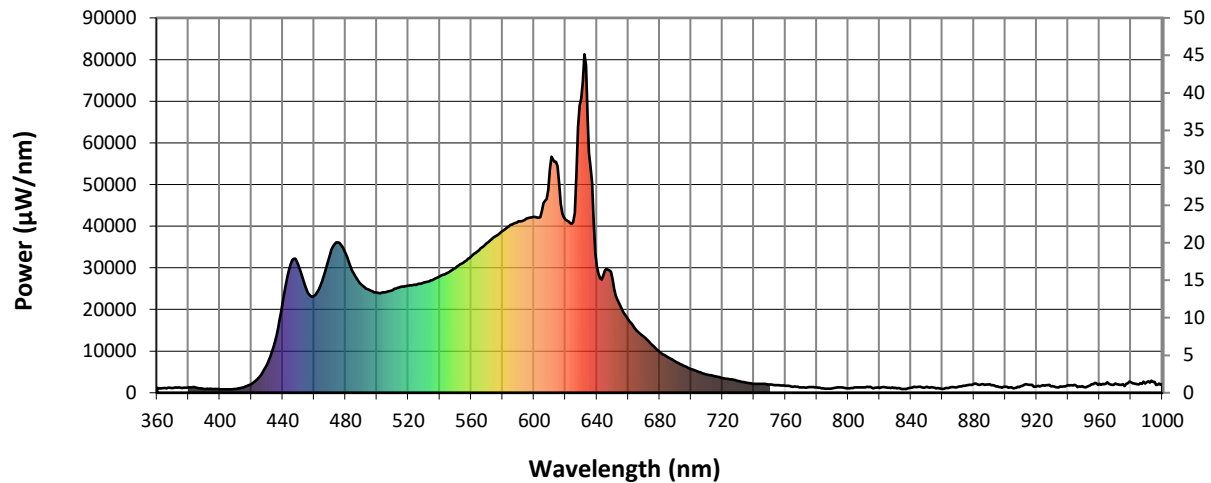


Scotopic Lumens: 4472.9

S/P: 1.81

λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)
360	1172	NR	490	25948	NR	620	41537	NR	750	1967	NR	880	2125	NR
365	1124	NR	495	24688	NR	625	40984	NR	755	1800	NR	885	2057	NR
370	1161	NR	500	24010	NR	630	70640	NR	760	1684	NR	890	2080	NR
375	1195	NR	505	24099	NR	635	57718	NR	765	1458	NR	895	1496	NR
380	1247	NR	510	24608	NR	640	30257	NR	770	1312	NR	900	1417	NR
385	1197	NR	515	25386	NR	645	29336	NR	775	1355	NR	905	1054	NR
390	930	NR	520	25689	NR	650	27279	NR	780	1313	NR	910	1583	NR
395	934	NR	525	25906	NR	655	20755	NR	785	1001	NR	915	1866	NR
400	841	NR	530	26477	NR	660	17587	NR	790	1065	NR	920	1529	NR
405	808	NR	535	27006	NR	665	15073	NR	795	1315	NR	925	1671	NR
410	914	NR	540	27913	NR	670	13454	NR	800	1029	NR	930	1617	NR
415	1302	NR	545	28798	NR	675	11513	NR	805	1267	NR	935	1522	NR
420	2088	NR	550	29982	NR	680	9839	NR	810	1312	NR	940	1792	NR
425	3768	NR	555	31264	NR	685	8568	NR	815	1239	NR	945	1727	NR
430	6771	NR	560	32729	NR	690	7487	NR	820	1107	NR	950	1375	NR
435	12240	NR	565	34271	NR	695	6502	NR	825	1209	NR	955	2031	NR
440	21697	NR	570	35931	NR	700	5703	NR	830	1175	NR	960	2155	NR
445	30873	NR	575	37457	NR	705	4977	NR	835	916	NR	965	2519	NR
450	30626	NR	580	38827	NR	710	4394	NR	840	1171	NR	970	2234	NR
455	24859	NR	585	40347	NR	715	3979	NR	845	1406	NR	975	2064	NR
460	23253	NR	590	41126	NR	720	3528	NR	850	1407	NR	980	2541	NR
465	26717	NR	595	41803	NR	725	3206	NR	855	1173	NR	985	1959	NR
470	33149	NR	600	42231	NR	730	2798	NR	860	928	NR	990	2532	NR
475	36075	NR	605	43629	NR	735	2417	NR	865	1256	NR	995	2564	NR
480	33381	NR	610	53581	NR	740	2135	NR	870	1460	NR	1000	2056	NR
485	28773	NR	615	54375	NR	745	2151	NR	875	1741	NR			

REPORT NUMBER: SP1-2210-795-3

Melanopic Flux vs. Wavelength

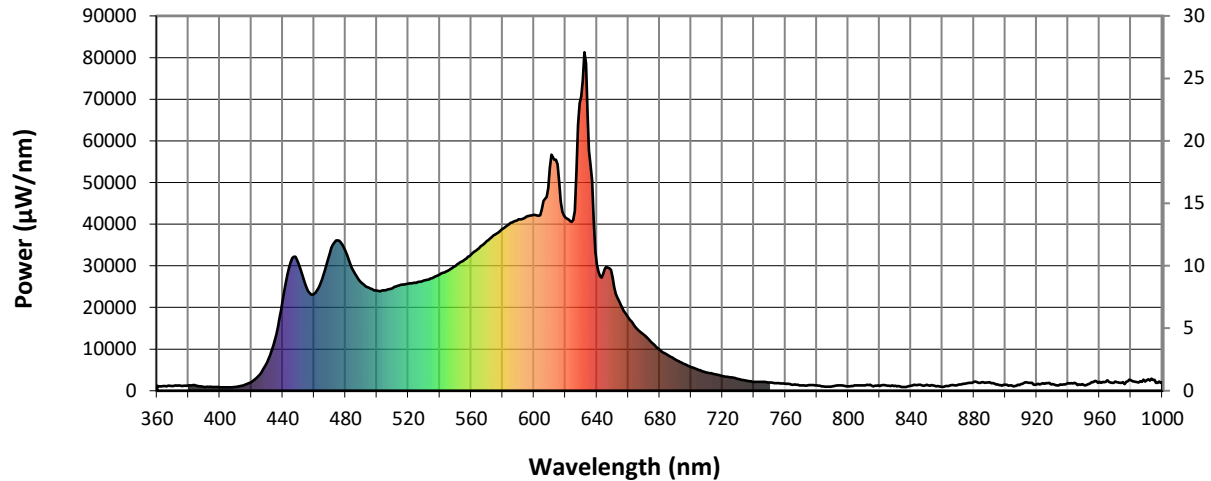

Melanopic Lumens: 1922.8

S/P: 0.78


λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)
360	1172	NR	490	25948	NR	620	41537	NR	750	1967	NR	880	2125	NR
365	1124	NR	495	24688	NR	625	40984	NR	755	1800	NR	885	2057	NR
370	1161	NR	500	24010	NR	630	70640	NR	760	1684	NR	890	2080	NR
375	1195	NR	505	24099	NR	635	57718	NR	765	1458	NR	895	1496	NR
380	1247	NR	510	24608	NR	640	30257	NR	770	1312	NR	900	1417	NR
385	1197	NR	515	25386	NR	645	29336	NR	775	1355	NR	905	1054	NR
390	930	NR	520	25689	NR	650	27279	NR	780	1313	NR	910	1583	NR
395	934	NR	525	25906	NR	655	20755	NR	785	1001	NR	915	1866	NR
400	841	NR	530	26477	NR	660	17587	NR	790	1065	NR	920	1529	NR
405	808	NR	535	27006	NR	665	15073	NR	795	1315	NR	925	1671	NR
410	914	NR	540	27913	NR	670	13454	NR	800	1029	NR	930	1617	NR
415	1302	NR	545	28798	NR	675	11513	NR	805	1267	NR	935	1522	NR
420	2088	NR	550	29982	NR	680	9839	NR	810	1312	NR	940	1792	NR
425	3768	NR	555	31264	NR	685	8568	NR	815	1239	NR	945	1727	NR
430	6771	NR	560	32729	NR	690	7487	NR	820	1107	NR	950	1375	NR
435	12240	NR	565	34271	NR	695	6502	NR	825	1209	NR	955	2031	NR
440	21697	NR	570	35931	NR	700	5703	NR	830	1175	NR	960	2155	NR
445	30873	NR	575	37457	NR	705	4977	NR	835	916	NR	965	2519	NR
450	30626	NR	580	38827	NR	710	4394	NR	840	1171	NR	970	2234	NR
455	24859	NR	585	40347	NR	715	3979	NR	845	1406	NR	975	2064	NR
460	23253	NR	590	41126	NR	720	3528	NR	850	1407	NR	980	2541	NR
465	26717	NR	595	41803	NR	725	3206	NR	855	1173	NR	985	1959	NR
470	33149	NR	600	42231	NR	730	2798	NR	860	928	NR	990	2532	NR
475	36075	NR	605	43629	NR	735	2417	NR	865	1256	NR	995	2564	NR
480	33381	NR	610	53581	NR	740	2135	NR	870	1460	NR	1000	2056	NR
485	28773	NR	615	54375	NR	745	2151	NR	875	1741	NR			

REPORT NUMBER: SP1-2210-795-3





TM-30-18

Summary

$R_f = 90.4$
 $R_g = 97.8$
 CIE $R_a = 90.1$
 $R_g = 75.4$

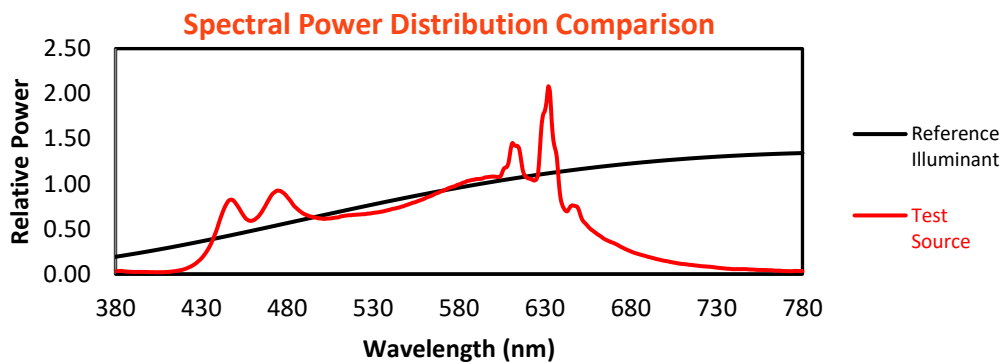

Color Vector Graphics

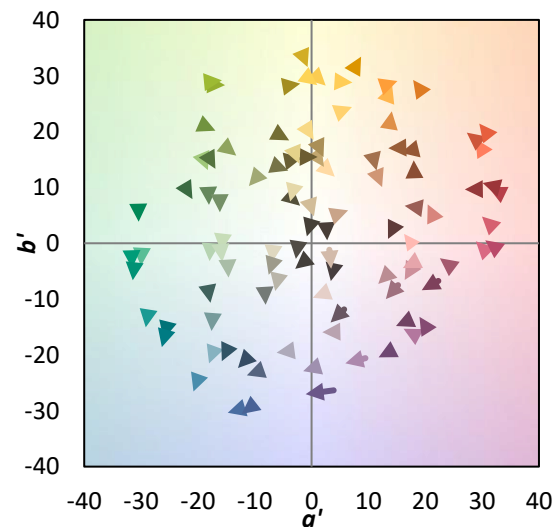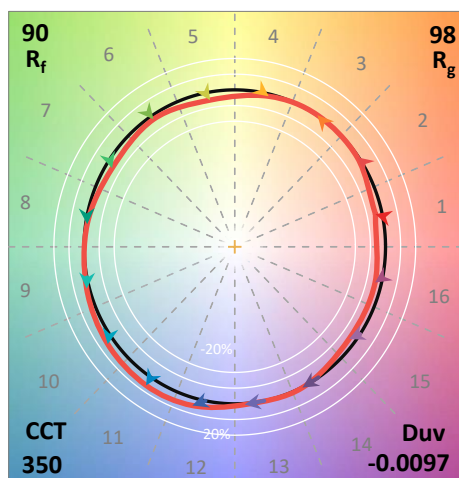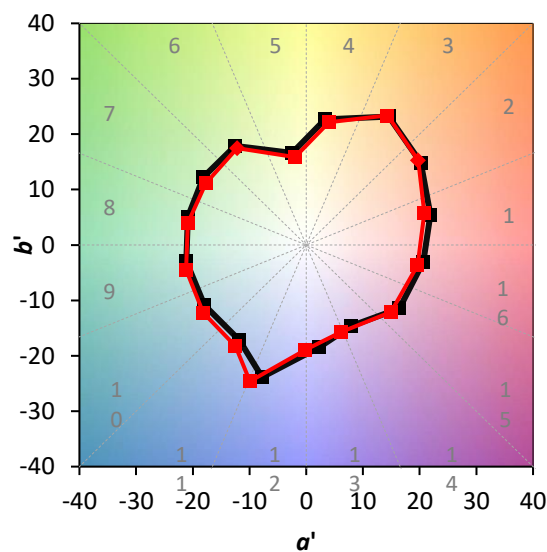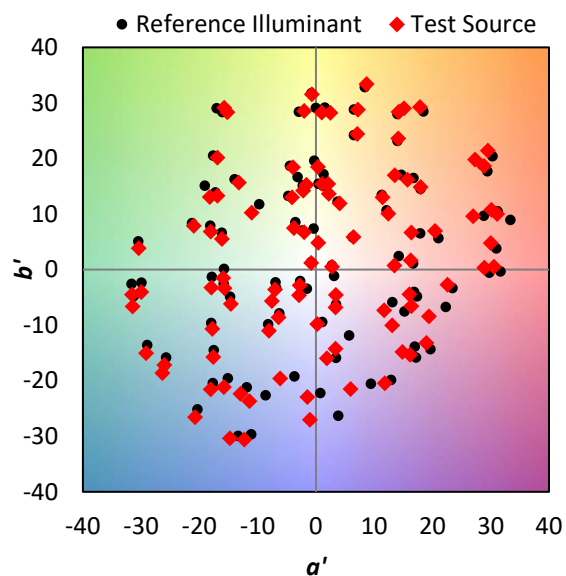


REPORT NUMBER: SP1-2210-795-3

TM-30-18

Individual Sample Fidelity Index ($R_{f,i}$)




CES01 = 86	CES26 = 96	CES51 = 92	CES76 = 90
CES02 = 63	CES27 = 88	CES52 = 95	CES77 = 80
CES03 = 32	CES28 = 96	CES53 = 91	CES78 = 90
CES04 = 70	CES29 = 91	CES54 = 89	CES79 = 83
CES05 = 50	CES30 = 87	CES55 = 87	CES80 = 84
CES06 = 51	CES31 = 92	CES56 = 88	CES81 = 66
CES07 = 43	CES32 = 97	CES57 = 87	CES82 = 94
CES08 = 42	CES33 = 92	CES58 = 87	CES83 = 89
CES09 = 29	CES34 = 94	CES59 = 95	CES84 = 96
CES10 = 76	CES35 = 96	CES60 = 91	CES85 = 77
CES11 = 58	CES36 = 82	CES61 = 91	CES86 = 75
CES12 = 64	CES37 = 96	CES62 = 84	CES87 = 91
CES13 = 44	CES38 = 83	CES63 = 95	CES88 = 92
CES14 = 74	CES39 = 97	CES64 = 90	CES89 = 84
CES15 = 72	CES40 = 95	CES65 = 93	CES90 = 91
CES16 = 48	CES41 = 93	CES66 = 91	CES91 = 77
CES17 = 49	CES42 = 93	CES67 = 91	CES92 = 78
CES18 = 56	CES43 = 91	CES68 = 92	CES93 = 86
CES19 = 71	CES44 = 99	CES69 = 92	CES94 = 77
CES20 = 67	CES45 = 94	CES70 = 92	CES95 = 86
CES21 = 86	CES46 = 94	CES71 = 89	CES96 = 94
CES22 = 78	CES47 = 86	CES72 = 95	CES97 = 92
CES23 = 91	CES48 = 86	CES73 = 90	CES98 = 91
CES24 = 90	CES49 = 95	CES74 = 88	CES99 = 90
CES25 = 71	CES50 = 92	CES75 = 89	

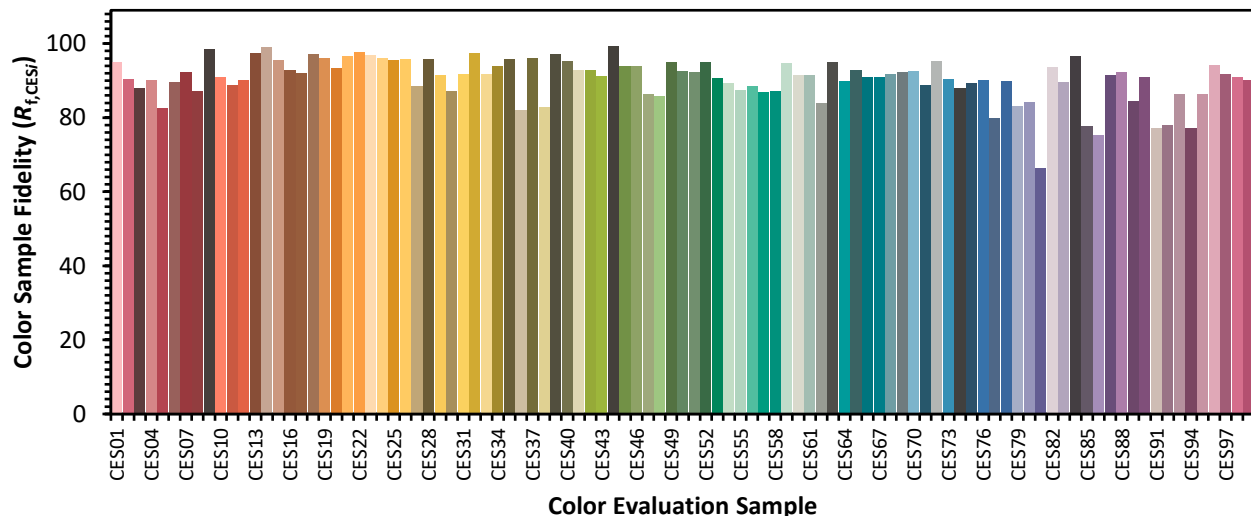

REPORT NUMBER: SP1-2210-795-3

TM-30-18



Color Rendition by Hue-Angle Bin

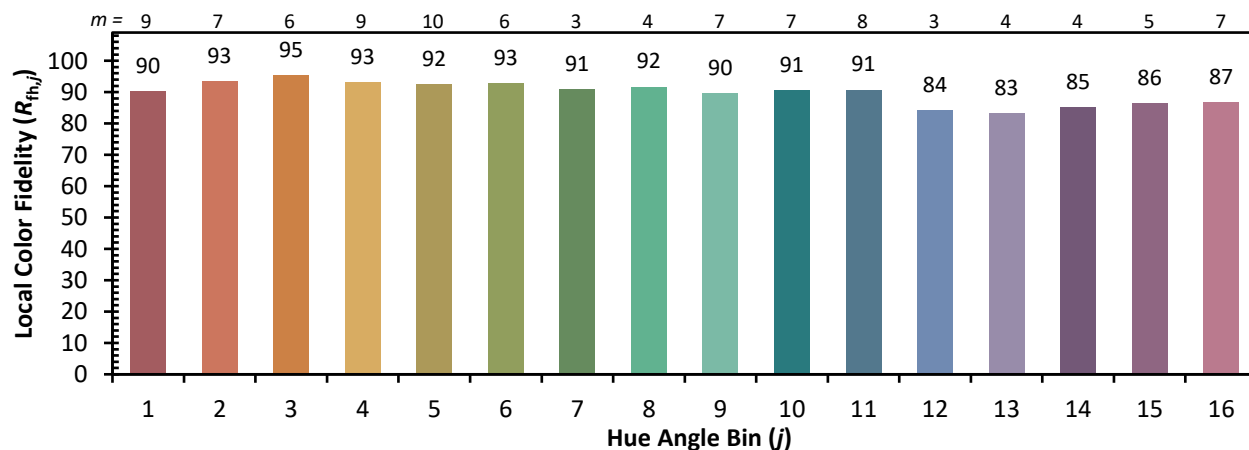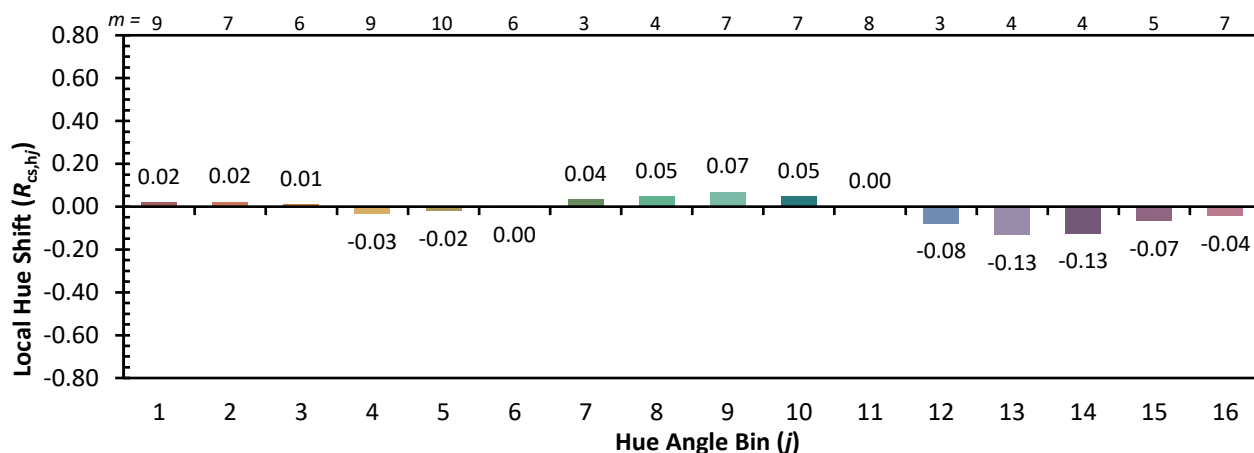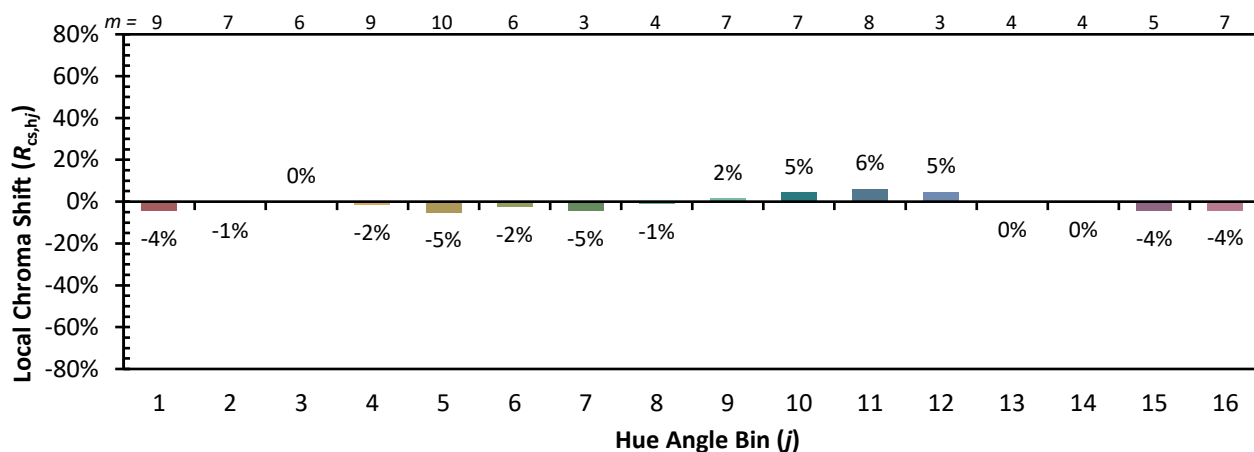

REPORT NUMBER: SP1-2210-795-3

TM-30-18

Measure Comparisons

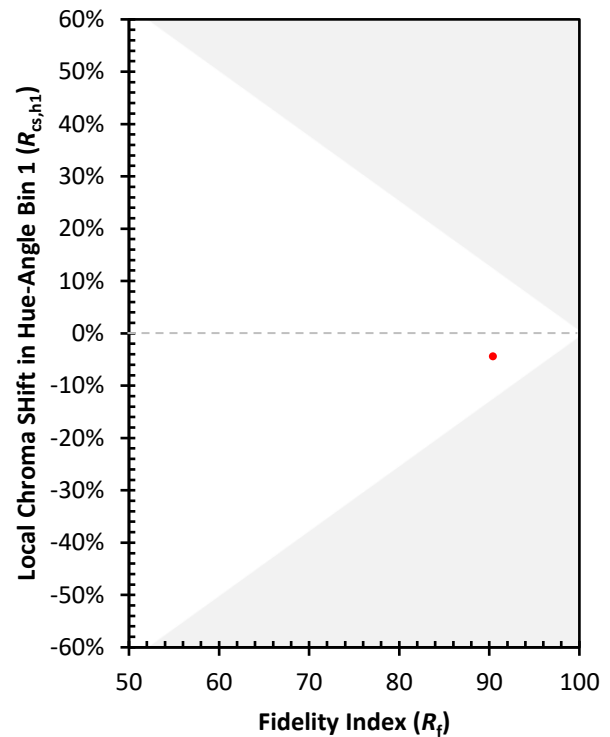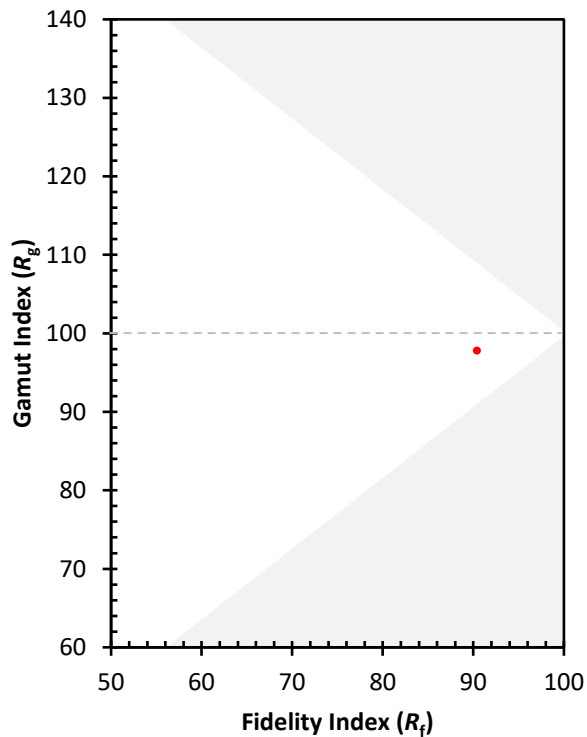

(END OF REPORT)