

Cooper Lighting Solutions Photometric Lab
1121 Highway 74 South
Peachtree City, GA 30269



Scaled data based on original data using
LM-79-08 Approved Method: Electrical and Photometric Measurements of Solid-State
Lighting Products

Test Report Prepared for

Cooper Lighting Solutions

(formerly Eaton)

Brand: METALUX

Report Number: P732365

Luminaire Tested: **24CZ2-60HE-B2750-W2D-5000K**

Issue Date: 1/5/2024



Test Information

Test Method: LM-79-08
Report Number: P732365
TEST IS SCALED FROM IESNA LM-79-08 TEST DATA (P272125)
Test Lab: INNOVATION CENTER(G3)
Issue Date: 1/5/2024
Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)
Product Line: METALUX
Catalog Number: 24CZ2-60HE-B2750-W2D-5000K
Description: 2X4 6000 LUMEN CRUZE TROFFER WITH BIO UP LEDS AT 5000K CCT AND RIBBED LENS

Light Source: -
Ballast/Driver: -

Summary


Lumens per Lamp: N/A
Luminaire Lumens: 5456.0 lumens
Efficiency: N/A
Efficacy: 121.2 lumens/watt
Spacing Criteria (0/90/45): 1.2 / 1.26 / 1.35
Luminous Opening: Rectangular (W 1.92' x L: 3.98' x H: 0')
CIE Type: Direct

Input Watts (W): 45
Input Voltage (V): NR
Input Current (Ain): NR
Voltage Rise (V): NR
Power Factor: NR
Total Harmonic Distortion (THDi): NR
Frequency (hertz): 60
Stabilization Time: NR
Operation Time: NR
Ambient Temperature (°C): NR
Test Distance: 25 FT

TEST NUMBER: P732365

CATALOG NUMBER: 24CZ2-60HE-B2750-W2D-5000K

Luminous Intensity Polar Plot

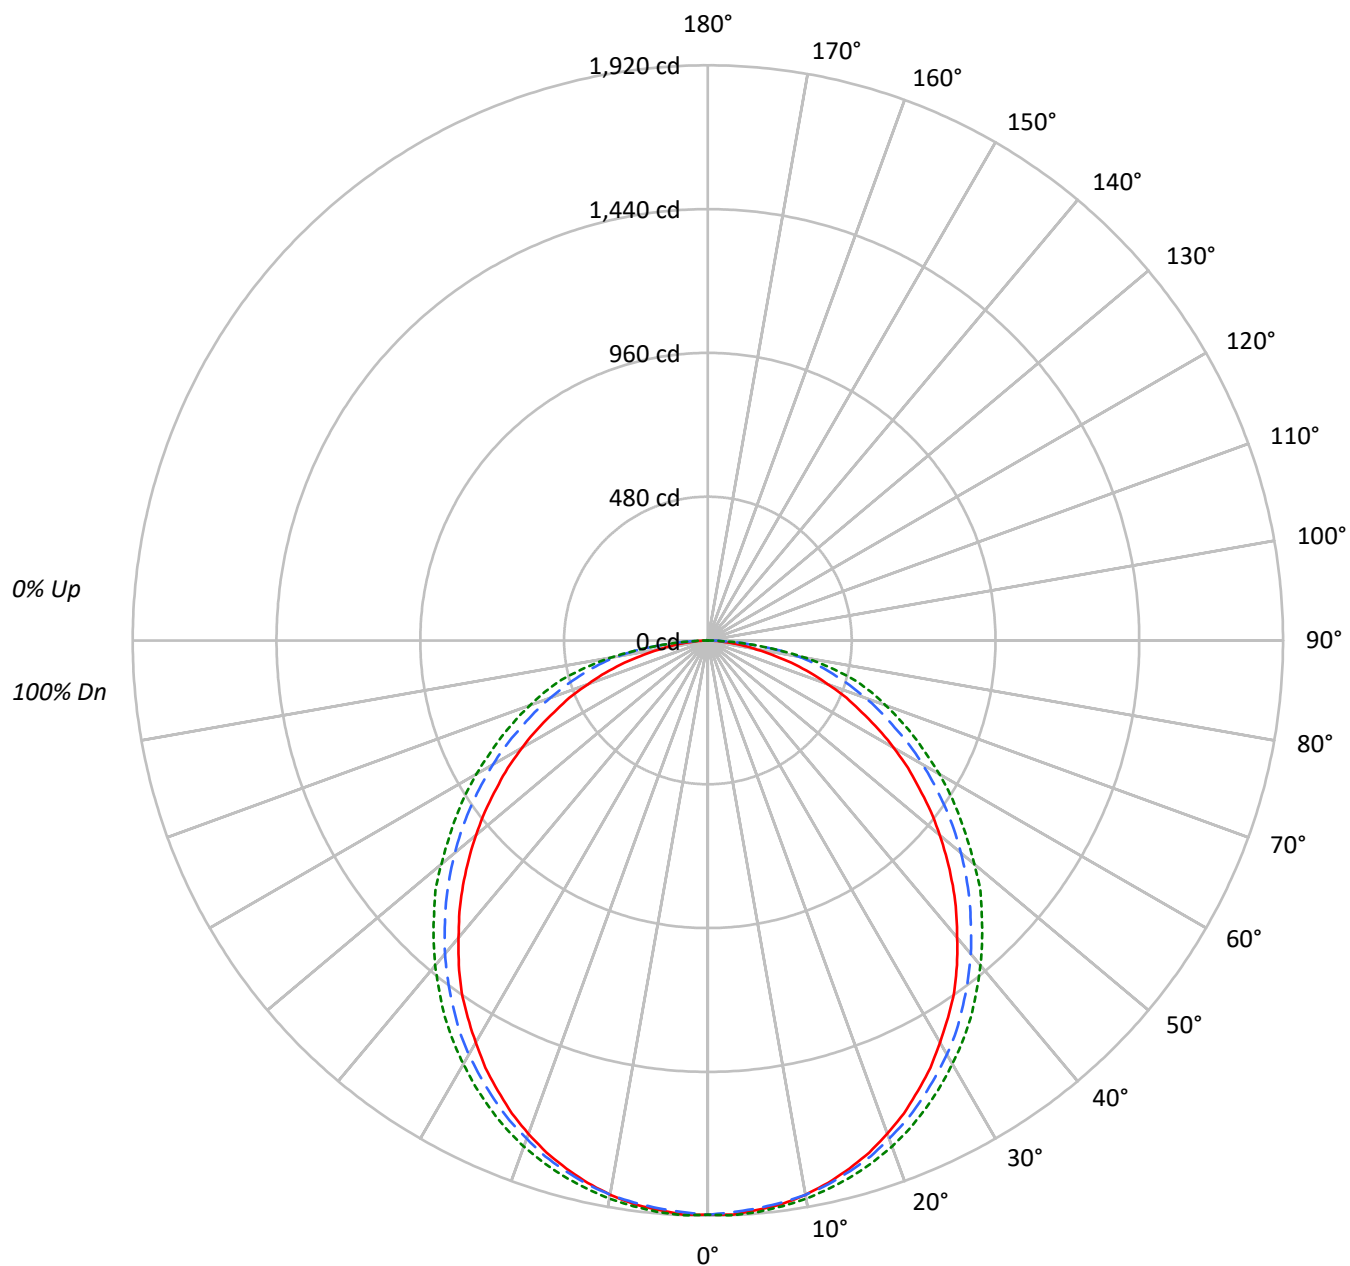



TEST NUMBER: P732365

CATALOG NUMBER: 24CZ2-60HE-B2750-W2D-5000K

COEFFICIENT OF UTILIZATION - ZONAL CAVITY METHOD:

RF	20				20					20					20					20
RC	80				70					50					30					10
RW	70	50	30	10	70	50	30	10	50	30	10	50	30	10	50	30	10	50	30	10
RCR																				
0	119	119	119	119	116	116	116	116	111	111	111	106	106	106	102	102	102	100		
1	108	103	99	95	106	101	97	93	97	93	90	93	90	88	89	87	85	83		
2	98	90	83	77	96	88	81	76	84	79	74	81	76	72	78	74	71	69		
3	89	79	70	64	87	77	69	63	74	67	62	71	66	61	69	64	60	58		
4	82	70	61	54	80	68	60	54	66	59	53	63	57	52	61	56	51	49		
5	75	62	53	46	73	61	53	46	59	51	46	57	50	45	55	49	45	42		
6	70	56	47	40	68	55	47	40	53	46	40	52	45	40	50	44	39	37		
7	64	51	42	36	63	50	42	36	48	41	35	47	40	35	46	39	35	33		
8	60	46	38	32	58	46	37	32	44	37	32	43	36	31	42	36	31	29		
9	56	43	34	29	55	42	34	29	41	34	28	40	33	28	39	33	28	26		
10	53	39	31	26	51	39	31	26	38	31	26	37	30	26	36	30	26	24		

AVERAGE LUMINANCE (cd/sqm):

	0°	45°	90°
0°	2705	2705	2705
5°	2703	2696	2713
10°	2692	2692	2712
15°	2666	2679	2707
20°	2632	2657	2699
25°	2583	2631	2683
30°	2525	2601	2660
35°	2469	2559	2640
40°	2385	2516	2609
45°	2307	2466	2581
50°	2218	2420	2550
55°	2119	2375	2525
60°	2020	2338	2519
65°	1893	2298	2535
70°	1752	2310	2603
75°	1569	2354	2750
80°	1268	2493	2690
85°	954	2188	2134



TEST NUMBER: P732365

CATALOG NUMBER: 24CZ2-60HE-B2750-W2D-5000K

ZONAL LUMENS:

Zone	Lumens	% Fixture
0°-10°	181.5	3.3
10°-20°	518.5	9.5
20°-30°	779.4	14.3
30°-40°	928.4	17.0
40°-50°	950.2	17.4
50°-60°	855.5	15.7
60°-70°	671.8	12.3
70°-80°	436.0	8.0
80°-90°	134.8	2.5
90°-100°	0.0	0.0
100°-110°	0.0	0.0
110°-120°	0.0	0.0
120°-130°	0.0	0.0
130°-140°	0.0	0.0
140°-150°	0.0	0.0
150°-160°	0.0	0.0
160°-170°	0.0	0.0
170°-180°	0.0	0.0
0°-30°	1479.3	27.1
0°-40°	2407.7	44.1
0°-60°	4213.4	77.2
0°-90°	5456.0	100.0
90°-120°	0.0	0.0
90°-150°	0.0	0.0
90°-180°	0.0	0.0
0°-180°	5456.0	100.0

CANDELA DISTRIBUTION:

	0°	22.5°	45°	67.5°	90°	Flux
0°	1917	1917	1917	1917	1917	
5°	1908	1912	1903	1913	1915	181
15°	1825	1830	1834	1849	1853	515
25°	1658	1672	1690	1717	1723	764
35°	1433	1451	1485	1522	1532	894
45°	1156	1184	1236	1282	1293	891
55°	861	900	965	1016	1026	772
65°	567	610	688	745	759	564
75°	288	343	432	490	504	304
85°	59	109	135	132	132	71
90°	0	0	0	0	0	



TEST NUMBER: P732365

CATALOG NUMBER: 24CZ2-60HE-B2750-W2D-5000K

CANDELA DISTRIBUTION (FULL):

	0°	22.5°	45°	67.5°	90°
0°	1916.8	1916.8	1916.8	1916.8	1916.8
2.5°	1918.5	1918.5	1909.7	1918.5	1920.2
5°	1908.0	1911.6	1902.8	1913.3	1914.9
7.5°	1897.6	1897.6	1892.4	1902.8	1904.7
10°	1878.6	1880.3	1878.6	1890.7	1892.4
12.5°	1854.4	1857.7	1859.6	1871.7	1873.4
15°	1824.9	1830.2	1833.5	1849.2	1852.7
17.5°	1792.0	1797.2	1805.7	1823.1	1826.6
20°	1752.1	1759.0	1769.4	1792.0	1797.2
22.5°	1708.8	1715.7	1733.1	1753.7	1762.5
25°	1658.5	1672.3	1689.6	1717.4	1722.6
27.5°	1608.2	1620.3	1642.9	1672.3	1679.4
30°	1549.3	1568.3	1596.1	1625.5	1632.4
32.5°	1492.1	1511.1	1544.1	1575.4	1584.0
35°	1433.2	1450.6	1485.2	1521.6	1532.0
37.5°	1365.6	1388.1	1426.3	1462.7	1473.1
40°	1294.6	1322.4	1365.6	1403.8	1415.9
42.5°	1226.9	1256.4	1299.8	1341.4	1355.1
45°	1155.9	1183.7	1235.7	1282.5	1292.9
47.5°	1083.1	1114.4	1169.7	1216.5	1233.8
50°	1010.4	1043.4	1102.3	1150.7	1161.2
52.5°	937.5	972.2	1034.6	1086.6	1091.8
55°	861.3	899.5	965.3	1015.6	1026.1
57.5°	792.0	825.0	896.0	948.0	960.1
60°	715.8	752.1	828.3	877.0	892.4
62.5°	642.9	681.1	760.9	809.3	823.1
65°	566.7	610.1	688.0	745.2	759.0
67.5°	500.9	542.5	625.6	681.1	694.9
70°	424.5	471.5	559.8	617.0	630.8
72.5°	358.7	407.2	495.7	551.0	571.9
75°	287.7	343.1	431.6	490.5	504.3
77.5°	218.4	282.5	372.5	417.6	417.6
80°	156.0	223.6	306.7	327.6	331.0
82.5°	102.3	168.1	227.0	225.3	225.3
85°	58.9	109.2	135.1	131.8	131.8
87.5°	22.6	45.1	48.4	48.4	46.8
90°	0.0	0.0	0.0	0.0	0.0



Report Generated By 670246072 / DESKTOP-50001EG





— 0°-180° - - 45°-225° - - - 90°-270°







LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-State Lighting Products

Report Prepared for

Cooper Lighting Solutions

(formerly Eaton)

METALUX

Report Number: SP1-2210-795-5

Test Date: 10/06/2022

Luminaire Tested: 9WP217084MDER4AM-5000K-315MA

Data in this report applies to families of products including 9WP217084MDER4AM-5000K.

Test Information

Test Method: LM-79-2019
 Report Number: SP1-2210-795-5
 Test Lab: COOPER LIGHTING SOLUTIONS
 Photometer: SP1 - 76IN SPHERE
 Measurement Geometry: 4π
 Issue Date: 10/06/2022
 Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)
 Product Line: METALUX
 Catalog Number: **9WP217084MDER4AM-5000K-315MA**
 Description: METALUX

TUNABLE BOARD, 5000K-315MA, PROGRAMMED @ 6.5Vdc.

Spectral Parameters

CCT (K):	5031	CRI (Ra):	84.5		
CIE u':	0.2182	R1:	91.8	R9:	77.5
CIE v':	0.4734	R2:	85.4	R10:	70.0
Duv:	-0.0101	R3:	79.8	R11:	87.5
CIE x:	0.3424	R4:	86.6	R12:	69.3
CIE y:	0.3302	R5:	89.4	R13:	89.5
CIE z:	0.3273	R6:	79.4	R14:	89.8
Peak Wavelength (nm):	476	R7:	81.5		
Dominant Wavelength (nm):	495	R8:	82.5		
Purity:	3.1				
Rf:	85.9				
Rg:	94.8				



Test Conditions

Stabilization Time: 58M
 Operation Time: 12H
 Room Temperature (°C) / RH%: 24.0/38%
 Sphere Temperature (°C): 24.4

REPORT NUMBER: SP1-2210-795-5

Measurement and Test Equipment			
Instrument	Identification Number	Calibration Date	Calibration Due Date
Photometer	76INCH SPHERE IN0058	8/8/2022	2/8/2023
Power Meter	XITRON 2801 IN0071	11/29/2021	11/29/2022
AC Power Source	CHROMA 61603 IN0063	11/29/2021	11/29/2022
DC Power Source	AGILENT E3634A IN0208	11/29/2021	11/29/2022
Sphere Thermometer	ONSET IN0085	11/29/2021	11/29/2022
Room Thermometer	ONSET IN0046	11/29/2021	11/29/2022

REPORT NUMBER: SP1-2210-795-5

CIE 1931 Chromaticity Diagram



CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles



Point lies outside the range

REPORT NUMBER: SP1-2210-795-5

Photopic Flux vs. Wavelength



#####

λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)
360	1378	NR	490	39050	NR	620	34698	NR	750	1822	NR	880	2439	NR
365	1331	NR	495	34202	NR	625	33140	NR	755	1777	NR	885	2149	NR
370	1335	NR	500	30309	NR	630	42721	NR	760	1599	NR	890	2769	NR
375	1253	NR	505	28003	NR	635	36567	NR	765	1448	NR	895	1685	NR
380	1292	NR	510	26874	NR	640	25112	NR	770	1318	NR	900	2065	NR
385	1298	NR	515	26736	NR	645	23382	NR	775	1208	NR	905	1550	NR
390	1143	NR	520	26353	NR	650	21346	NR	780	1268	NR	910	2207	NR
395	1012	NR	525	26016	NR	655	17849	NR	785	1072	NR	915	1905	NR
400	913	NR	530	26219	NR	660	15701	NR	790	1151	NR	920	1492	NR
405	948	NR	535	26516	NR	665	13709	NR	795	1361	NR	925	1709	NR
410	1112	NR	540	27283	NR	670	12105	NR	800	1152	NR	930	2138	NR
415	1681	NR	545	27836	NR	675	10522	NR	805	1330	NR	935	2497	NR
420	2833	NR	550	28917	NR	680	9121	NR	810	1205	NR	940	2581	NR
425	5230	NR	555	30224	NR	685	7915	NR	815	1233	NR	945	2662	NR
430	9705	NR	560	31691	NR	690	6967	NR	820	960	NR	950	1809	NR
435	17926	NR	565	33290	NR	695	6106	NR	825	1423	NR	955	1977	NR
440	32347	NR	570	34911	NR	700	5390	NR	830	1655	NR	960	2906	NR
445	44160	NR	575	36327	NR	705	4734	NR	835	1541	NR	965	2456	NR
450	39460	NR	580	37455	NR	710	4108	NR	840	1555	NR	970	2874	NR
455	31448	NR	585	38519	NR	715	3797	NR	845	1414	NR	975	3194	NR
460	32233	NR	590	38974	NR	720	3287	NR	850	1598	NR	980	3237	NR
465	40342	NR	595	39274	NR	725	2926	NR	855	1852	NR	985	1591	NR
470	53556	NR	600	39138	NR	730	2611	NR	860	1463	NR	990	2611	NR
475	60829	NR	605	38865	NR	735	2376	NR	865	1656	NR	995	3556	NR
480	56377	NR	610	41532	NR	740	2107	NR	870	1883	NR	1000	3556	NR
485	46320	NR	615	40776	NR	745	2023	NR	875	1818	NR			

REPORT NUMBER: SP1-2210-795-5

Scotopic Flux vs. Wavelength



Scotopic Lumens: 5560

S/P: 2.33

λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)
360	1378	NR	490	39050	NR	620	34698	NR	750	1822	NR	880	2439	NR
365	1331	NR	495	34202	NR	625	33140	NR	755	1777	NR	885	2149	NR
370	1335	NR	500	30309	NR	630	42721	NR	760	1599	NR	890	2769	NR
375	1253	NR	505	28003	NR	635	36567	NR	765	1448	NR	895	1685	NR
380	1292	NR	510	26874	NR	640	25112	NR	770	1318	NR	900	2065	NR
385	1298	NR	515	26736	NR	645	23382	NR	775	1208	NR	905	1550	NR
390	1143	NR	520	26353	NR	650	21346	NR	780	1268	NR	910	2207	NR
395	1012	NR	525	26016	NR	655	17849	NR	785	1072	NR	915	1905	NR
400	913	NR	530	26219	NR	660	15701	NR	790	1151	NR	920	1492	NR
405	948	NR	535	26516	NR	665	13709	NR	795	1361	NR	925	1709	NR
410	1112	NR	540	27283	NR	670	12105	NR	800	1152	NR	930	2138	NR
415	1681	NR	545	27836	NR	675	10522	NR	805	1330	NR	935	2497	NR
420	2833	NR	550	28917	NR	680	9121	NR	810	1205	NR	940	2581	NR
425	5230	NR	555	30224	NR	685	7915	NR	815	1233	NR	945	2662	NR
430	9705	NR	560	31691	NR	690	6967	NR	820	960	NR	950	1809	NR
435	17926	NR	565	33290	NR	695	6106	NR	825	1423	NR	955	1977	NR
440	32347	NR	570	34911	NR	700	5390	NR	830	1655	NR	960	2906	NR
445	44160	NR	575	36327	NR	705	4734	NR	835	1541	NR	965	2456	NR
450	39460	NR	580	37455	NR	710	4108	NR	840	1555	NR	970	2874	NR
455	31448	NR	585	38519	NR	715	3797	NR	845	1414	NR	975	3194	NR
460	32233	NR	590	38974	NR	720	3287	NR	850	1598	NR	980	3237	NR
465	40342	NR	595	39274	NR	725	2926	NR	855	1852	NR	985	1591	NR
470	53556	NR	600	39138	NR	730	2611	NR	860	1463	NR	990	2611	NR
475	60829	NR	605	38865	NR	735	2376	NR	865	1656	NR	995	3556	NR
480	56377	NR	610	41532	NR	740	2107	NR	870	1883	NR	1000	3556	NR
485	46320	NR	615	40776	NR	745	2023	NR	875	1818	NR			

REPORT NUMBER: SP1-2210-795-5

Melanopic Flux vs. Wavelength



Melanopic Lumens: 2561.9

S/P: 1.07

λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)
360	1378	NR	490	39050	NR	620	34698	NR	750	1822	NR	880	2439	NR
365	1331	NR	495	34202	NR	625	33140	NR	755	1777	NR	885	2149	NR
370	1335	NR	500	30309	NR	630	42721	NR	760	1599	NR	890	2769	NR
375	1253	NR	505	28003	NR	635	36567	NR	765	1448	NR	895	1685	NR
380	1292	NR	510	26874	NR	640	25112	NR	770	1318	NR	900	2065	NR
385	1298	NR	515	26736	NR	645	23382	NR	775	1208	NR	905	1550	NR
390	1143	NR	520	26353	NR	650	21346	NR	780	1268	NR	910	2207	NR
395	1012	NR	525	26016	NR	655	17849	NR	785	1072	NR	915	1905	NR
400	913	NR	530	26219	NR	660	15701	NR	790	1151	NR	920	1492	NR
405	948	NR	535	26516	NR	665	13709	NR	795	1361	NR	925	1709	NR
410	1112	NR	540	27283	NR	670	12105	NR	800	1152	NR	930	2138	NR
415	1681	NR	545	27836	NR	675	10522	NR	805	1330	NR	935	2497	NR
420	2833	NR	550	28917	NR	680	9121	NR	810	1205	NR	940	2581	NR
425	5230	NR	555	30224	NR	685	7915	NR	815	1233	NR	945	2662	NR
430	9705	NR	560	31691	NR	690	6967	NR	820	960	NR	950	1809	NR
435	17926	NR	565	33290	NR	695	6106	NR	825	1423	NR	955	1977	NR
440	32347	NR	570	34911	NR	700	5390	NR	830	1655	NR	960	2906	NR
445	44160	NR	575	36327	NR	705	4734	NR	835	1541	NR	965	2456	NR
450	39460	NR	580	37455	NR	710	4108	NR	840	1555	NR	970	2874	NR
455	31448	NR	585	38519	NR	715	3797	NR	845	1414	NR	975	3194	NR
460	32233	NR	590	38974	NR	720	3287	NR	850	1598	NR	980	3237	NR
465	40342	NR	595	39274	NR	725	2926	NR	855	1852	NR	985	1591	NR
470	53556	NR	600	39138	NR	730	2611	NR	860	1463	NR	990	2611	NR
475	60829	NR	605	38865	NR	735	2376	NR	865	1656	NR	995	3556	NR
480	56377	NR	610	41532	NR	740	2107	NR	870	1883	NR	1000	3556	NR
485	46320	NR	615	40776	NR	745	2023	NR	875	1818	NR			


REPORT NUMBER: SP1-2210-795-5

TM-30-18





Summary

$R_f = 85.9$
 $R_g = 94.8$
 CIE $R_a = 84.5$
 $R_g = 77.5$

Spectral Power Distribution Comparison

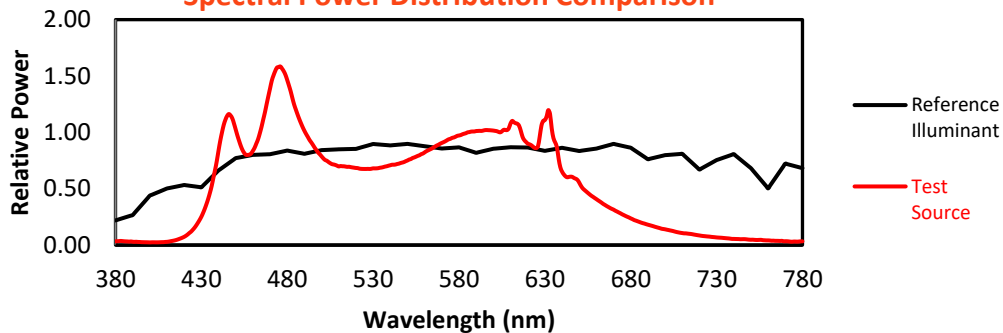

Color Vector Graphics

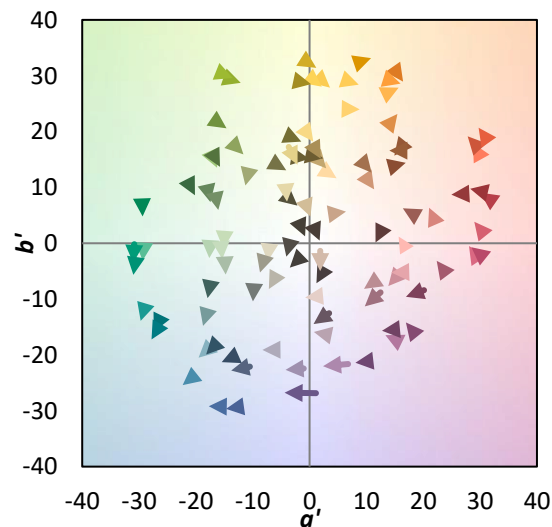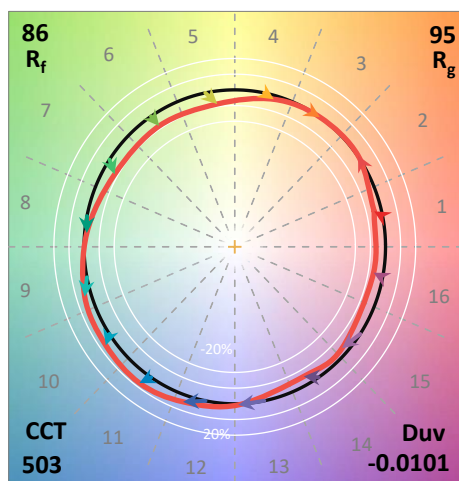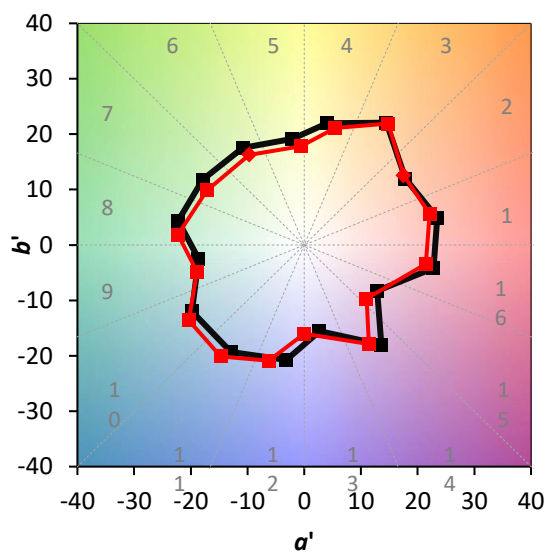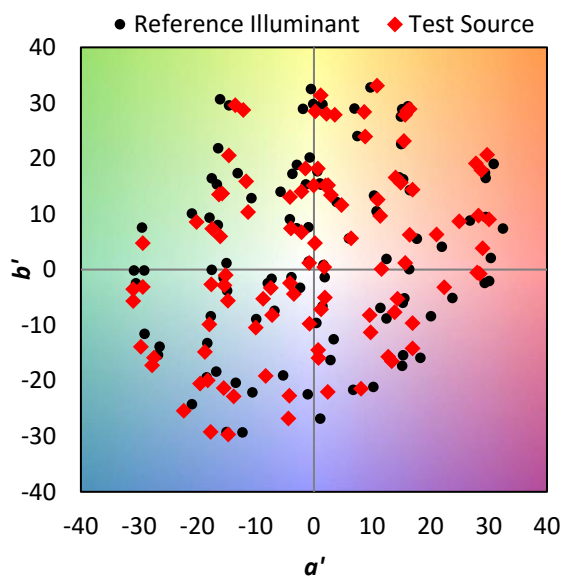


REPORT NUMBER: SP1-2210-795-5

TM-30-18

Individual Sample Fidelity Index ($R_{f,i}$)

CES01 = 86	CES26 = 88	CES51 = 85	CES76 = 81
CES02 = 61	CES27 = 83	CES52 = 87	CES77 = 77
CES03 = 31	CES28 = 90	CES53 = 79	CES78 = 83
CES04 = 69	CES29 = 81	CES54 = 85	CES79 = 80
CES05 = 48	CES30 = 81	CES55 = 82	CES80 = 78
CES06 = 50	CES31 = 81	CES56 = 79	CES81 = 63
CES07 = 41	CES32 = 87	CES57 = 77	CES82 = 92
CES08 = 40	CES33 = 84	CES58 = 77	CES83 = 86
CES09 = 29	CES34 = 85	CES59 = 91	CES84 = 96
CES10 = 74	CES35 = 91	CES60 = 89	CES85 = 77
CES11 = 57	CES36 = 80	CES61 = 87	CES86 = 70
CES12 = 63	CES37 = 89	CES62 = 81	CES87 = 85
CES13 = 43	CES38 = 76	CES63 = 92	CES88 = 86
CES14 = 74	CES39 = 93	CES64 = 83	CES89 = 82
CES15 = 71	CES40 = 87	CES65 = 90	CES90 = 85
CES16 = 47	CES41 = 89	CES66 = 85	CES91 = 76
CES17 = 49	CES42 = 81	CES67 = 86	CES92 = 75
CES18 = 56	CES43 = 80	CES68 = 89	CES93 = 85
CES19 = 71	CES44 = 99	CES69 = 90	CES94 = 77
CES20 = 66	CES45 = 84	CES70 = 89	CES95 = 85
CES21 = 85	CES46 = 86	CES71 = 86	CES96 = 92
CES22 = 77	CES47 = 83	CES72 = 94	CES97 = 82
CES23 = 91	CES48 = 79	CES73 = 87	CES98 = 83
CES24 = 89	CES49 = 87	CES74 = 89	CES99 = 86
CES25 = 70	CES50 = 85	CES75 = 84	

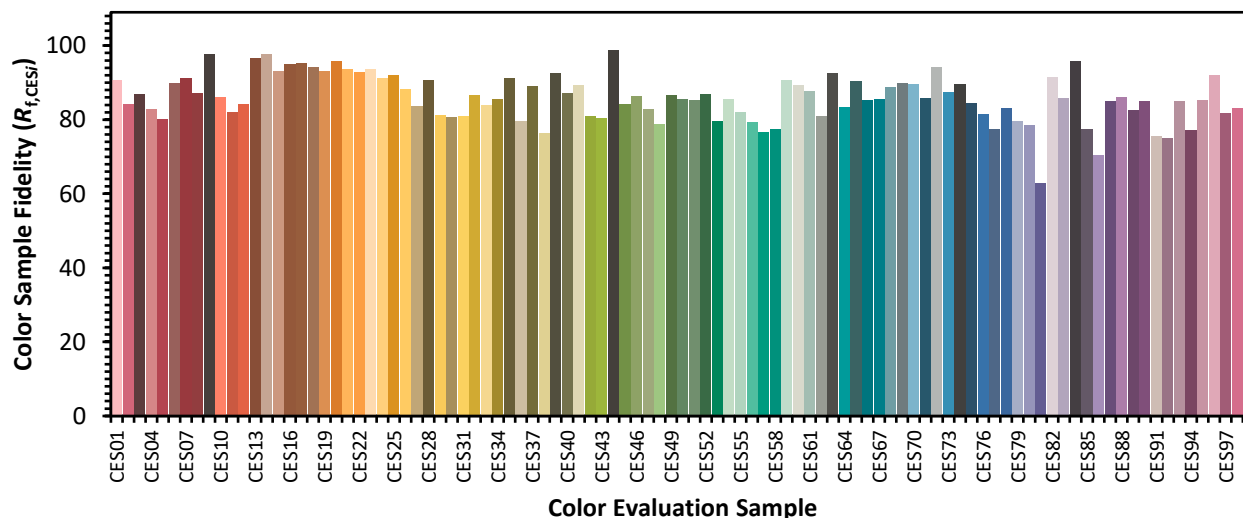

REPORT NUMBER: SP1-2210-795-5

TM-30-18

Color Rendition by Hue-Angle Bin



REPORT NUMBER: SP1-2210-795-5

TM-30-18

Measure Comparisons



(END OF REPORT)