

Cooper Lighting Solutions Photometric Lab
1121 Highway 74 South
Peachtree City, GA 30269



Scaled data based on original data using
LM-79-08 Approved Method: Electrical and Photometric Measurements of Solid-State
Lighting Products

Test Report Prepared for

Cooper Lighting Solutions

(formerly Eaton)

Brand: METALUX

Report Number: P732396

Luminaire Tested: **24CZ2-65HE-RDP-B2750-W2D-2700K**

Issue Date: 1/5/2024



Test Information

Test Method: LM-79-08
Report Number: P732396
TEST IS SCALED FROM IESNA LM-79-08 TEST DATA (P274775)
Test Lab: INNOVATION CENTER(G3)
Issue Date: 1/5/2024
Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)
Product Line: METALUX
Catalog Number: 24CZ2-65HE-RDP-B2750-W2D-2700K
Description: 2X4 6500 LUMEN CRUZE TROFFER WITH BIO UP LEDS AT 2700K CCT AND RDP LENS

Light Source: -
Ballast/Driver: -

Summary


Lumens per Lamp: N/A
Luminaire Lumens: 4253.0 lumens
Efficiency: N/A
Efficacy: 85.1 lumens/watt
Spacing Criteria (0/90/45): 1.26 / 1.3 / 1.41
Luminous Opening: Rectangular (W 1.92' x L: 3.98' x H: 0')
CIE Type: Direct

Input Watts (W): 50
Input Voltage (V): NR
Input Current (Ain): NR
Voltage Rise (V): NR
Power Factor: NR
Total Harmonic Distortion (THDi): NR
Frequency (hertz): 60
Stabilization Time: NR
Operation Time: NR
Ambient Temperature (°C): NR
Test Distance: 25 FT

TEST NUMBER: P732396

CATALOG NUMBER: 24CZ2-65HE-RDP-B2750-W2D-2700K

Luminous Intensity Polar Plot

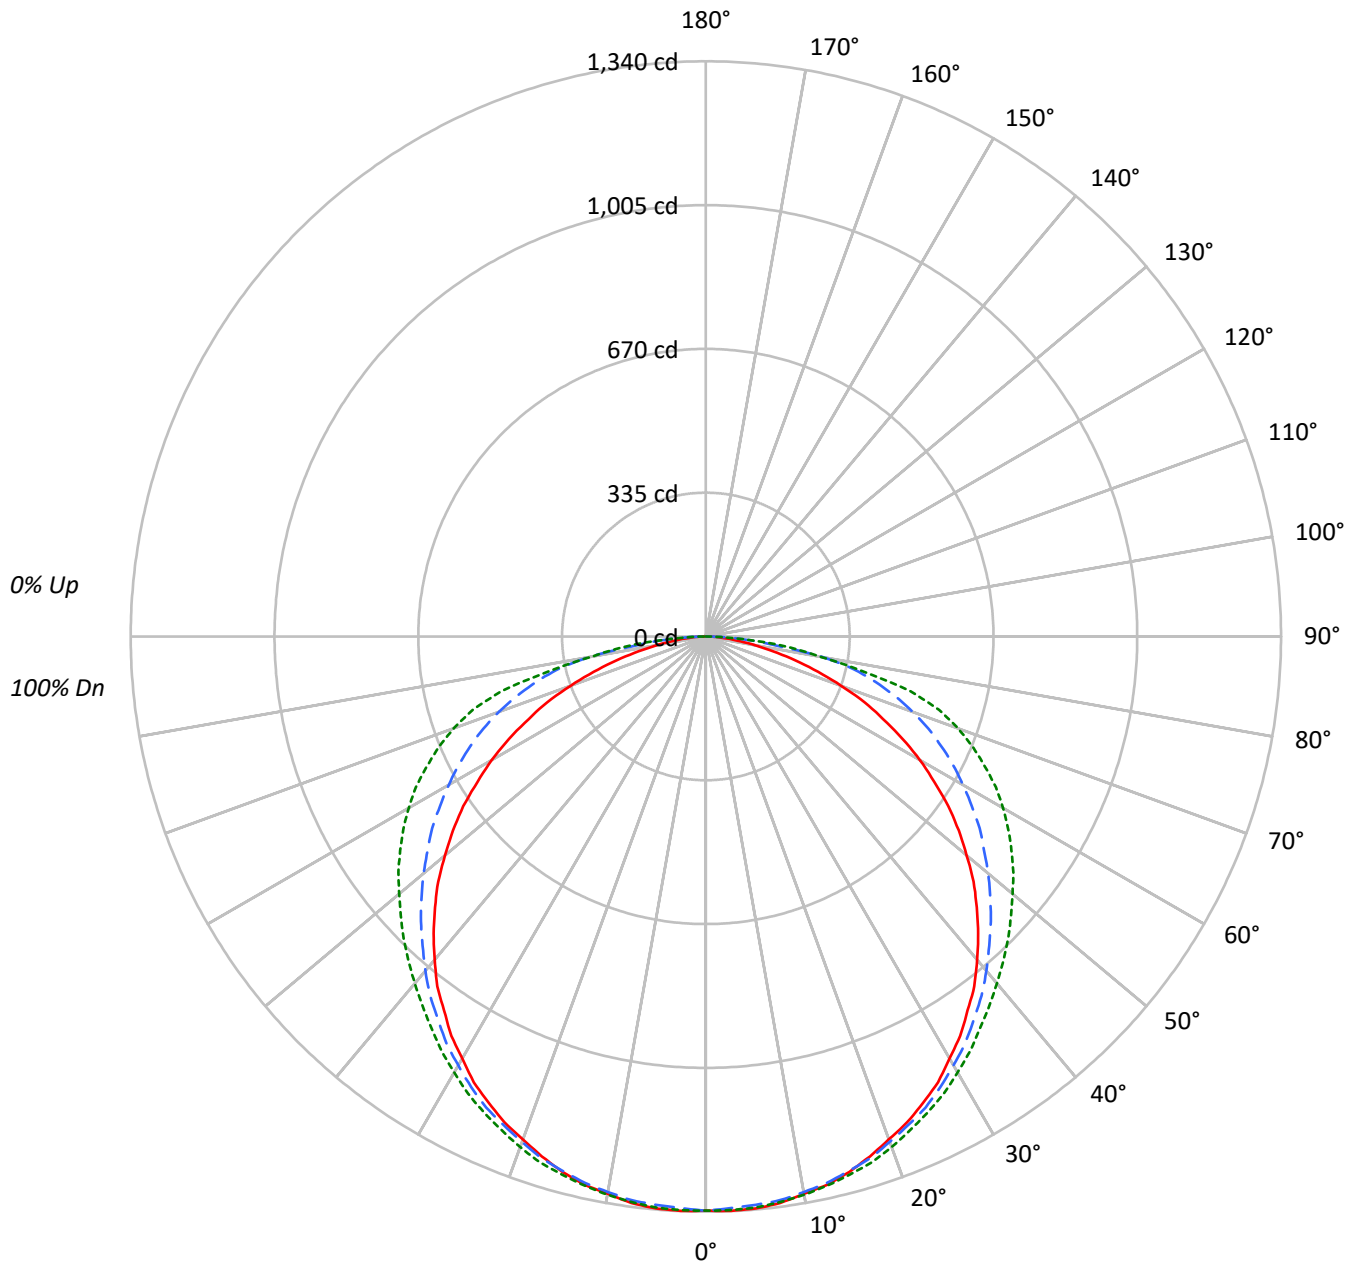



TEST NUMBER: P732396

CATALOG NUMBER: 24CZ2-65HE-RDP-B2750-W2D-2700K

COEFFICIENT OF UTILIZATION - ZONAL CAVITY METHOD:

RF	20				20					20					20					20
RC	80				70					50					30					10
RW	70	50	30	10	70	50	30	10	50	30	10	50	30	10	50	30	10	50	30	10
RCR																				
0	119	119	119	119	116	116	116	116	111	111	111	106	106	106	102	102	102	100		
1	108	103	98	94	105	100	96	92	96	93	89	92	89	87	88	86	84	82		
2	97	89	81	75	95	87	80	74	83	77	72	80	75	71	77	73	69	67		
3	88	77	68	62	86	76	67	61	72	66	60	70	64	59	67	62	58	56		
4	81	68	59	52	78	67	58	51	64	57	51	62	55	50	59	54	49	47		
5	74	60	51	44	72	59	51	44	57	49	43	55	48	43	53	47	42	40		
6	68	54	45	38	66	53	45	38	51	44	38	50	43	37	48	42	37	35		
7	63	49	40	34	61	48	40	34	47	39	33	45	38	33	44	38	33	31		
8	59	45	36	30	57	44	36	30	43	35	30	41	34	29	40	34	29	27		
9	55	41	33	27	53	40	32	27	39	32	27	38	31	26	37	31	26	24		
10	51	38	30	24	50	37	29	24	36	29	24	35	29	24	34	28	24	22		

AVERAGE LUMINANCE (cd/sqm):

	0°	45°	90°
0°	1888	1888	1888
5°	1895	1883	1892
10°	1889	1884	1893
15°	1887	1883	1896
20°	1872	1882	1901
25°	1866	1886	1905
30°	1850	1880	1911
35°	1832	1875	1919
40°	1811	1873	1944
45°	1781	1874	1987
50°	1741	1885	2047
55°	1697	1915	2139
60°	1626	1953	2257
65°	1521	2022	2395
70°	1384	2115	2577
75°	1173	2232	2692
80°	927	2245	2177
85°	683	1710	1911



TEST NUMBER: P732396

CATALOG NUMBER: 24CZ2-65HE-RDP-B2750-W2D-2700K

ZONAL LUMENS:

Zone	Lumens	% Fixture
0°-10°	126.9	3.0
10°-20°	365.1	8.6
20°-30°	558.4	13.1
30°-40°	682.6	16.0
40°-50°	727.5	17.1
50°-60°	695.6	16.4
60°-70°	589.2	13.9
70°-80°	396.0	9.3
80°-90°	111.7	2.6
90°-100°	0.0	0.0
100°-110°	0.0	0.0
110°-120°	0.0	0.0
120°-130°	0.0	0.0
130°-140°	0.0	0.0
140°-150°	0.0	0.0
150°-160°	0.0	0.0
160°-170°	0.0	0.0
170°-180°	0.0	0.0
0°-30°	1050.4	24.7
0°-40°	1732.9	40.7
0°-60°	3156.0	74.2
0°-90°	4253.0	100.0
90°-120°	0.0	0.0
90°-150°	0.0	0.0
90°-180°	0.0	0.0
0°-180°	4253.0	100.0

CANDELA DISTRIBUTION:

	0°	22.5°	45°	67.5°	90°	Flux
0°	1338	1338	1338	1338	1338	
5°	1338	1335	1329	1335	1335	127
15°	1291	1291	1289	1300	1297	364
25°	1198	1202	1211	1222	1224	552
35°	1063	1072	1088	1110	1114	666
45°	892	907	939	979	996	688
55°	690	715	778	840	869	614
65°	456	502	605	686	717	452
75°	215	293	409	479	494	230
85°	42	86	106	114	118	52
90°	0	0	0	0	0	



TEST NUMBER: P732396

CATALOG NUMBER: 24CZ2-65HE-RDP-B2750-W2D-2700K

CANDELA DISTRIBUTION (FULL):

	0°	22.5°	45°	67.5°	90°
0°	1337.5	1337.5	1337.5	1337.5	1337.5
2.5°	1339.5	1339.5	1333.1	1337.5	1337.5
5°	1337.5	1335.4	1329.1	1335.4	1335.4
7.5°	1331.1	1329.1	1324.7	1331.1	1329.1
10°	1318.4	1318.4	1314.3	1320.7	1320.7
12.5°	1308.0	1305.9	1303.6	1312.0	1310.0
15°	1291.2	1291.2	1288.9	1299.6	1297.3
17.5°	1270.1	1272.1	1274.1	1282.5	1284.8
20°	1246.7	1251.0	1253.0	1265.7	1265.7
22.5°	1225.5	1227.8	1231.9	1244.6	1244.6
25°	1198.3	1202.4	1210.8	1221.5	1223.5
27.5°	1170.8	1172.9	1183.6	1198.3	1200.4
30°	1135.0	1141.3	1153.8	1170.8	1172.9
32.5°	1103.2	1109.5	1124.3	1141.3	1145.4
35°	1063.3	1071.6	1088.4	1109.5	1113.9
37.5°	1027.4	1033.7	1054.9	1078.0	1084.4
40°	983.1	995.6	1016.7	1044.2	1054.9
42.5°	938.9	951.3	976.8	1012.6	1025.4
45°	892.3	907.1	938.9	978.8	995.6
47.5°	846.0	862.8	898.7	945.0	964.0
50°	793.1	814.2	858.5	911.4	932.5
52.5°	742.5	767.9	816.5	875.5	903.0
55°	689.8	715.0	778.4	839.7	869.2
57.5°	630.8	664.4	734.1	803.8	835.3
60°	575.9	607.4	691.9	767.9	799.5
62.5°	516.9	559.1	649.7	729.8	761.6
65°	455.6	502.1	605.4	685.5	717.3
67.5°	400.9	451.5	561.1	641.3	673.1
70°	335.5	398.6	512.5	592.7	624.5
72.5°	274.2	343.9	461.9	540.0	569.5
75°	215.2	293.3	409.3	479.0	493.7
77.5°	160.3	242.7	354.3	383.8	373.4
80°	114.0	194.1	276.2	261.5	267.8
82.5°	73.8	147.8	170.9	194.1	200.4
85°	42.2	86.5	105.6	114.0	118.0
87.5°	19.1	31.5	42.2	42.2	40.2
90°	0.0	0.0	0.0	0.0	0.0



Report Generated By 670246072 / DESKTOP-50001EG





— 0°-180° - - 45°-225° - - - 90°-270°







LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-State Lighting Products

Report Prepared for

Cooper Lighting Solutions

(formerly Eaton)

METALUX

Report Number: SP1-2210-795-1

Test Date: 10/06/2022

Luminaire Tested: 9WP217084MDER4AM-2700K-315MA

Data in this report applies to families of products including 9WP217084MDER4AM-2700K.

Test Method: LM-79-2019
Report Number: SP1-2210-795-1
Test Lab: COOPER LIGHTING SOLUTIONS
Photometer: SP1 - 76IN SPHERE
Measurement Geometry: 4π
Issue Date: 10/06/2022
Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)
Product Line: METALUX
Catalog Number: **9WP217084MDER4AM-2700K-315MA**
Description: METALUX



REPORT NUMBER: SP1-2210-795-1

Measurement and Test Equipment			
Instrument	Identification Number	Calibration Date	Calibration Due Date
Photometer	76INCH SPHERE IN0058	8/8/2022	2/8/2023
Power Meter	XITRON 2801 IN0071	11/29/2021	11/29/2022
AC Power Source	CHROMA 61603 IN0063	11/29/2021	11/29/2022
DC Power Source	AGILENT E3634A IN0208	11/29/2021	11/29/2022
Sphere Thermometer	ONSET IN0085	11/29/2021	11/29/2022
Room Thermometer	ONSET IN0046	11/29/2021	11/29/2022

REPORT NUMBER: SP1-2210-795-1

CIE 1931 Chromaticity Diagram



CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles



Point lies inside the ANSI 2700K 4-step quadrangle

REPORT NUMBER: SP1-2210-795-1

Photopic Flux vs. Wavelength



#####

λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)
360	960	NR	490	11655	NR	620	48137	NR	750	2159	NR	880	1428	NR
365	835	NR	495	14187	NR	625	48484	NR	755	2025	NR	885	1524	NR
370	889	NR	500	17034	NR	630	97268	NR	760	1802	NR	890	1952	NR
375	919	NR	505	19485	NR	635	78475	NR	765	1584	NR	895	1011	NR
380	1009	NR	510	21619	NR	640	35314	NR	770	1353	NR	900	1014	NR
385	1040	NR	515	23444	NR	645	34925	NR	775	1274	NR	905	955	NR
390	939	NR	520	24555	NR	650	32851	NR	780	1257	NR	910	1509	NR
395	813	NR	525	25491	NR	655	23599	NR	785	1107	NR	915	1506	NR
400	710	NR	530	26360	NR	660	19532	NR	790	1143	NR	920	1068	NR
405	620	NR	535	27190	NR	665	16486	NR	795	1531	NR	925	638	NR
410	774	NR	540	28277	NR	670	14655	NR	800	1331	NR	930	1536	NR
415	979	NR	545	29229	NR	675	12412	NR	805	1467	NR	935	842	NR
420	1333	NR	550	30350	NR	680	10584	NR	810	1194	NR	940	1826	NR
425	2180	NR	555	31650	NR	685	9145	NR	815	1068	NR	945	1708	NR
430	3664	NR	560	33070	NR	690	7913	NR	820	903	NR	950	1541	NR
435	5835	NR	565	34723	NR	695	6836	NR	825	1155	NR	955	1365	NR
440	9472	NR	570	36375	NR	700	6062	NR	830	1254	NR	960	2795	NR
445	15693	NR	575	38067	NR	705	5352	NR	835	969	NR	965	2273	NR
450	21182	NR	580	39619	NR	710	4621	NR	840	885	NR	970	2269	NR
455	18329	NR	585	41308	NR	715	4197	NR	845	1169	NR	975	2026	NR
460	13472	NR	590	42407	NR	720	3736	NR	850	1432	NR	980	3840	NR
465	11611	NR	595	43552	NR	725	3370	NR	855	1474	NR	985	2004	NR
470	9668	NR	600	44708	NR	730	2929	NR	860	1037	NR	990	2889	NR
475	8254	NR	605	47912	NR	735	2599	NR	865	1441	NR	995	2268	NR
480	8432	NR	610	64799	NR	740	2366	NR	870	1316	NR	1000	2322	NR
485	9747	NR	615	67855	NR	745	2257	NR	875	1515	NR			

REPORT NUMBER: SP1-2210-795-1

Scotopic Flux vs. Wavelength



Scotopic Lumens: 3229.5

S/P: 1.28

λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)
360	960	NR	490	11655	NR	620	48137	NR	750	2159	NR	880	1428	NR
365	835	NR	495	14187	NR	625	48484	NR	755	2025	NR	885	1524	NR
370	889	NR	500	17034	NR	630	97268	NR	760	1802	NR	890	1952	NR
375	919	NR	505	19485	NR	635	78475	NR	765	1584	NR	895	1011	NR
380	1009	NR	510	21619	NR	640	35314	NR	770	1353	NR	900	1014	NR
385	1040	NR	515	23444	NR	645	34925	NR	775	1274	NR	905	955	NR
390	939	NR	520	24555	NR	650	32851	NR	780	1257	NR	910	1509	NR
395	813	NR	525	25491	NR	655	23599	NR	785	1107	NR	915	1506	NR
400	710	NR	530	26360	NR	660	19532	NR	790	1143	NR	920	1068	NR
405	620	NR	535	27190	NR	665	16486	NR	795	1531	NR	925	638	NR
410	774	NR	540	28277	NR	670	14655	NR	800	1331	NR	930	1536	NR
415	979	NR	545	29229	NR	675	12412	NR	805	1467	NR	935	842	NR
420	1333	NR	550	30350	NR	680	10584	NR	810	1194	NR	940	1826	NR
425	2180	NR	555	31650	NR	685	9145	NR	815	1068	NR	945	1708	NR
430	3664	NR	560	33070	NR	690	7913	NR	820	903	NR	950	1541	NR
435	5835	NR	565	34723	NR	695	6836	NR	825	1155	NR	955	1365	NR
440	9472	NR	570	36375	NR	700	6062	NR	830	1254	NR	960	2795	NR
445	15693	NR	575	38067	NR	705	5352	NR	835	969	NR	965	2273	NR
450	21182	NR	580	39619	NR	710	4621	NR	840	885	NR	970	2269	NR
455	18329	NR	585	41308	NR	715	4197	NR	845	1169	NR	975	2026	NR
460	13472	NR	590	42407	NR	720	3736	NR	850	1432	NR	980	3840	NR
465	11611	NR	595	43552	NR	725	3370	NR	855	1474	NR	985	2004	NR
470	9668	NR	600	44708	NR	730	2929	NR	860	1037	NR	990	2889	NR
475	8254	NR	605	47912	NR	735	2599	NR	865	1441	NR	995	2268	NR
480	8432	NR	610	64799	NR	740	2366	NR	870	1316	NR	1000	2322	NR
485	9747	NR	615	67855	NR	745	2257	NR	875	1515	NR			

REPORT NUMBER: SP1-2210-795-1

Melanopic Flux vs. Wavelength



Melanopic Lumens: 1204.8

S/P: 0.48


λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)	λ (nm)	Power (μW/nm)	Lumens (φ/nm)
360	960	NR	490	11655	NR	620	48137	NR	750	2159	NR	880	1428	NR
365	835	NR	495	14187	NR	625	48484	NR	755	2025	NR	885	1524	NR
370	889	NR	500	17034	NR	630	97268	NR	760	1802	NR	890	1952	NR
375	919	NR	505	19485	NR	635	78475	NR	765	1584	NR	895	1011	NR
380	1009	NR	510	21619	NR	640	35314	NR	770	1353	NR	900	1014	NR
385	1040	NR	515	23444	NR	645	34925	NR	775	1274	NR	905	955	NR
390	939	NR	520	24555	NR	650	32851	NR	780	1257	NR	910	1509	NR
395	813	NR	525	25491	NR	655	23599	NR	785	1107	NR	915	1506	NR
400	710	NR	530	26360	NR	660	19532	NR	790	1143	NR	920	1068	NR
405	620	NR	535	27190	NR	665	16486	NR	795	1531	NR	925	638	NR
410	774	NR	540	28277	NR	670	14655	NR	800	1331	NR	930	1536	NR
415	979	NR	545	29229	NR	675	12412	NR	805	1467	NR	935	842	NR
420	1333	NR	550	30350	NR	680	10584	NR	810	1194	NR	940	1826	NR
425	2180	NR	555	31650	NR	685	9145	NR	815	1068	NR	945	1708	NR
430	3664	NR	560	33070	NR	690	7913	NR	820	903	NR	950	1541	NR
435	5835	NR	565	34723	NR	695	6836	NR	825	1155	NR	955	1365	NR
440	9472	NR	570	36375	NR	700	6062	NR	830	1254	NR	960	2795	NR
445	15693	NR	575	38067	NR	705	5352	NR	835	969	NR	965	2273	NR
450	21182	NR	580	39619	NR	710	4621	NR	840	885	NR	970	2269	NR
455	18329	NR	585	41308	NR	715	4197	NR	845	1169	NR	975	2026	NR
460	13472	NR	590	42407	NR	720	3736	NR	850	1432	NR	980	3840	NR
465	11611	NR	595	43552	NR	725	3370	NR	855	1474	NR	985	2004	NR
470	9668	NR	600	44708	NR	730	2929	NR	860	1037	NR	990	2889	NR
475	8254	NR	605	47912	NR	735	2599	NR	865	1441	NR	995	2268	NR
480	8432	NR	610	64799	NR	740	2366	NR	870	1316	NR	1000	2322	NR
485	9747	NR	615	67855	NR	745	2257	NR	875	1515	NR			

REPORT NUMBER: SP1-2210-795-1

TM-30-18

Summary

$R_f = 91.5$
 $R_g = 101.3$
 CIE $R_a = 94.1$
 $R_g = 58.8$

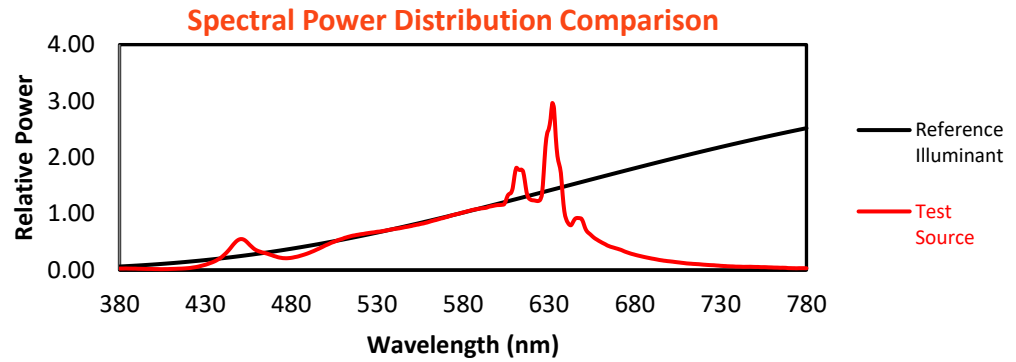

Color Vector Graphics



REPORT NUMBER: SP1-2210-795-1

TM-30-18

Individual Sample Fidelity Index ($R_{f,i}$)

CES01 = 86	CES26 = 92	CES51 = 96	CES76 = 91
CES02 = 64	CES27 = 97	CES52 = 95	CES77 = 83
CES03 = 32	CES28 = 97	CES53 = 93	CES78 = 88
CES04 = 71	CES29 = 91	CES54 = 98	CES79 = 87
CES05 = 51	CES30 = 96	CES55 = 99	CES80 = 90
CES06 = 51	CES31 = 91	CES56 = 95	CES81 = 67
CES07 = 44	CES32 = 84	CES57 = 95	CES82 = 95
CES08 = 43	CES33 = 92	CES58 = 95	CES83 = 92
CES09 = 29	CES34 = 94	CES59 = 99	CES84 = 96
CES10 = 77	CES35 = 97	CES60 = 97	CES85 = 79
CES11 = 59	CES36 = 91	CES61 = 97	CES86 = 75
CES12 = 66	CES37 = 94	CES62 = 94	CES87 = 92
CES13 = 45	CES38 = 99	CES63 = 94	CES88 = 96
CES14 = 74	CES39 = 97	CES64 = 97	CES89 = 81
CES15 = 72	CES40 = 94	CES65 = 92	CES90 = 97
CES16 = 48	CES41 = 94	CES66 = 95	CES91 = 86
CES17 = 50	CES42 = 92	CES67 = 95	CES92 = 78
CES18 = 57	CES43 = 90	CES68 = 94	CES93 = 87
CES19 = 72	CES44 = 99	CES69 = 95	CES94 = 72
CES20 = 68	CES45 = 94	CES70 = 92	CES95 = 86
CES21 = 87	CES46 = 93	CES71 = 92	CES96 = 92
CES22 = 79	CES47 = 84	CES72 = 97	CES97 = 93
CES23 = 92	CES48 = 94	CES73 = 88	CES98 = 93
CES24 = 91	CES49 = 91	CES74 = 88	CES99 = 92
CES25 = 72	CES50 = 96	CES75 = 92	



REPORT NUMBER: SP1-2210-795-1

TM-30-18

Color Rendition by Hue-Angle Bin



REPORT NUMBER: SP1-2210-795-1

TM-30-18

Measure Comparisons



(END OF REPORT)