

Cooper Lighting Solutions Photometric Lab
1121 Highway 74 South
Peachtree City, GA 30269



Scaled data based on original data using
LM-79-2019 Approved Method: Electrical and Photometric Measurements of Solid-
State Lighting Products

Test Report Prepared for
Cooper Lighting Solutions

Brand: METALUX

Report Number: P975127

Luminaire Tested: 12EN-LD2-35-UNV-L830-CD1

Issue Date: 03/13/2025

Test Information

Test Method: LM-79-2019
Report Number: P975127
Test Lab: INNOVATION CENTER(P3)
Issue Date: 03/13/2025
Manufacturer: COOPER LIGHTING SOLUTIONS
Product Line: METALUX
Catalog Number: 12EN-LD2-35-UNV-L830-CD1
Description: METALUX ENCOUNTER 1x2 3500LM PACKAGE 80CRI 3000K TROFFER
Light Source: 3000K CCT, 80+ CRI LEDS
Ballast/Driver: -

Summary


Lumens per Lamp: N/A
Luminaire Lumens: 3452.8 lumens
Efficiency: N/A
Efficacy: 110.0 lumens/watt
Spacing Criteria (0/90/45): 1.26 / 1.26 / 1.38
Luminous Opening: Rectangular (W 1' x L: 2' x H: 0')
CIE Type: Direct

Input Watts (W): 31.4
Input Voltage (V): 120
Input Current (Ain): NR
Voltage Rise (V): NR
Power Factor: NR
Total Harmonic Distortion (THDi): NR
Frequency (hertz): 60
Stabilization Time: NR
Operation Time: NR
Ambient Temperature (°C): NR
Test Distance: 25 FT

TEST NUMBER: P975127

CATALOG NUMBER: 12EN-LD2-35-UNV-L830-CD1

Luminous Intensity Polar Plot

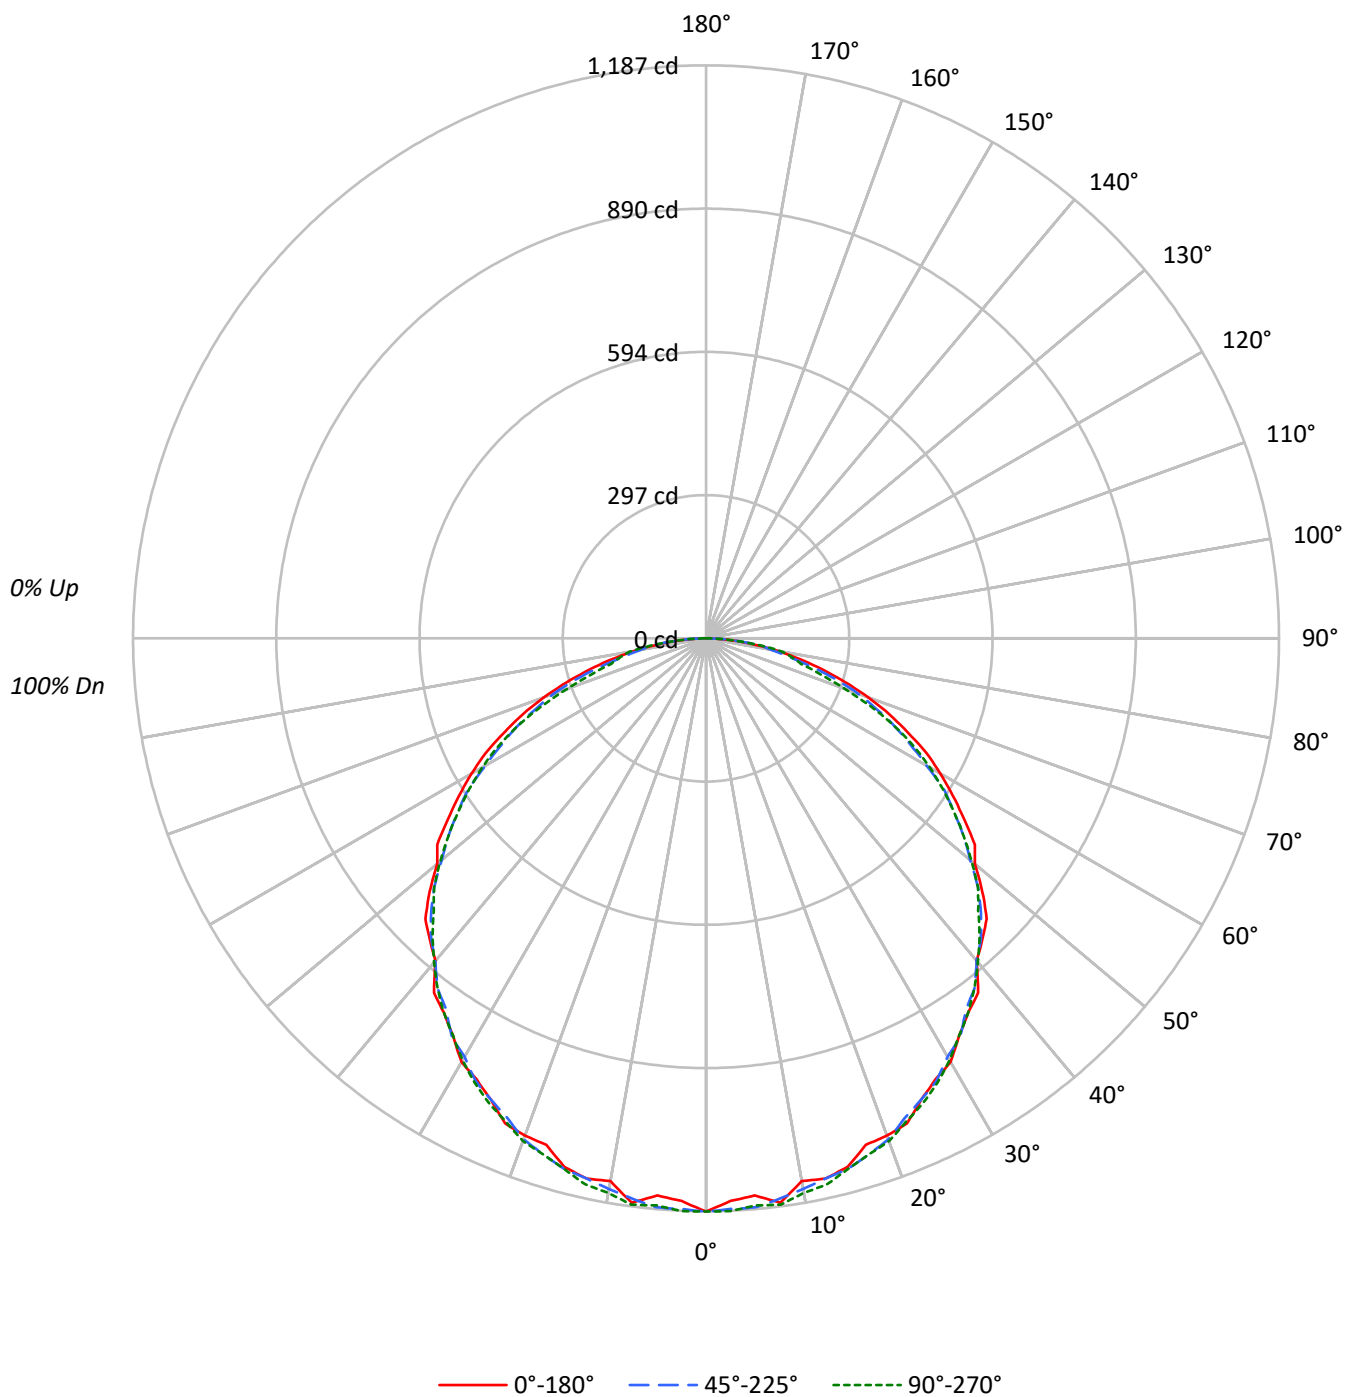

TEST NUMBER: P975127

CATALOG NUMBER: 12EN-LD2-35-UNV-L830-CD1

COEFFICIENT OF UTILIZATION - ZONAL CAVITY METHOD:

RF	20				20				20				20				20
RC	80				70				50				30				10
RW	70	50	30	10	70	50	30	10	50	30	10		50	30	10		50
RCR																	
0	119	119	119	119	116	116	116	116	111	111	111		106	106	106		102
1	109	104	99	95	106	101	97	94	97	94	91		93	90	88		90
2	99	90	83	77	96	88	82	76	85	79	75		81	77	73		78
3	90	79	71	64	87	77	70	63	74	68	62		72	66	61		69
4	82	70	61	54	80	69	60	54	66	59	53		64	57	52		61
5	75	62	53	46	73	61	53	46	59	52	46		57	50	45		55
6	70	56	47	40	68	55	47	40	53	46	40		52	45	40		50
7	64	51	42	36	63	50	42	36	48	41	35		47	40	35		46
8	60	46	38	32	58	46	37	32	44	37	31		43	36	31		42
9	56	42	34	29	55	42	34	28	41	33	28		40	33	28		39
10	52	39	31	26	51	39	31	26	38	31	26		37	30	26		36

AVERAGE LUMINANCE (cd/sqm):

	0°	45°	90°
0°	6391	6391	6391
5°	6258	6392	6370
10°	6239	6330	6375
15°	6315	6338	6338
20°	6278	6325	6349
25°	6263	6263	6312
30°	6296	6218	6270
35°	6220	6165	6220
40°	6126	6126	6155
45°	6258	6132	6068
50°	6085	5981	6015
55°	6118	5884	5884
60°	6035	5678	5767
65°	5872	5501	5501
70°	5616	5290	4832
75°	5178	4660	4230
80°	4630	4246	5018
85°	3847	4360	4100

MAXIMUM LUMINANCE 45°-90°:

Horizontal Angle: 0°

Vertical Angle: 45°

Luminance: 6258 cd/sqm

TEST NUMBER: P975127

CATALOG NUMBER: 12EN-LD2-35-UNV-L830-CD1

ZONAL LUMENS:

Zone	Lumens	% Fixture
0°-10°	112.2	3.3
10°-20°	320.6	9.3
20°-30°	488.0	14.1
30°-40°	591.2	17.1
40°-50°	620.2	18.0
50°-60°	567.4	16.4
60°-70°	433.6	12.6
70°-80°	243.6	7.1
80°-90°	76.0	2.2
90°-100°	0.0	0.0
100°-110°	0.0	0.0
110°-120°	0.0	0.0
120°-130°	0.0	0.0
130°-140°	0.0	0.0
140°-150°	0.0	0.0
150°-160°	0.0	0.0
160°-170°	0.0	0.0
170°-180°	0.0	0.0
0°-30°	920.9	26.7
0°-40°	1512.1	43.8
0°-60°	2699.6	78.2
0°-90°	3452.8	100.0
90°-120°	0.0	0.0
90°-150°	0.0	0.0
90°-180°	0.0	0.0
0°-180°	3452.8	100.0

CANDELA DISTRIBUTION:

	0°	22.5°	45°	67.5°	90°	Flux
0°	1187	1187	1187	1187	1187	
5°	1158	1179	1183	1192	1179	111
15°	1133	1133	1138	1138	1138	318
25°	1055	1059	1055	1063	1063	488
35°	947	942	938	947	947	594
45°	822	810	806	797	797	627
55°	652	644	627	627	627	583
65°	461	449	432	428	432	457
75°	249	241	224	208	203	265
85°	62	62	71	66	66	72
90°	0	0	0	0	0	

TEST NUMBER: P975127

CATALOG NUMBER: 12EN-LD2-35-UNV-L830-CD1

CANDELA DISTRIBUTION (FULL):

	0°	22.5°	45°	67.5°	90°
0°	1187.4	1187.4	1187.4	1187.4	1187.4
2.5°	1166.6	1183.2	1183.2	1191.9	1187.4
5°	1158.3	1179.1	1183.2	1191.9	1179.1
7.5°	1179.1	1174.9	1170.8	1179.1	1183.2
10°	1141.7	1158.3	1158.3	1179.1	1166.6
12.5°	1145.9	1150.0	1145.9	1145.9	1158.3
15°	1133.4	1133.4	1137.6	1137.6	1137.6
17.5°	1100.2	1116.8	1121.0	1125.1	1121.0
20°	1096.1	1100.2	1104.4	1108.5	1108.5
22.5°	1087.8	1079.5	1075.3	1091.9	1083.6
25°	1054.6	1058.7	1054.6	1062.9	1062.9
27.5°	1029.7	1029.7	1033.8	1029.7	1038.0
30°	1013.1	1008.9	1000.6	1008.9	1008.9
32.5°	975.7	979.9	979.9	975.7	975.7
35°	946.7	942.5	938.4	946.7	946.7
37.5°	925.9	905.2	913.5	909.3	913.5
40°	872.0	884.4	872.0	872.0	876.1
42.5°	847.1	842.9	842.9	838.8	838.8
45°	822.2	809.7	805.6	797.3	797.3
47.5°	776.5	776.5	764.1	755.8	764.1
50°	726.7	730.9	714.3	710.1	718.4
52.5°	701.8	689.4	672.8	676.9	672.8
55°	652.0	643.7	627.1	627.1	627.1
57.5°	606.4	602.2	585.6	581.4	581.4
60°	560.7	552.4	527.5	531.6	535.8
62.5°	515.0	502.6	477.7	486.0	486.0
65°	461.1	448.6	432.0	427.9	432.0
67.5°	411.3	394.3	381.8	377.7	369.4
70°	356.9	348.6	336.2	311.3	307.1
72.5°	303.0	290.5	282.2	253.2	249.0
75°	249.0	240.7	224.1	207.5	203.4
77.5°	199.2	195.1	174.3	174.3	182.6
80°	149.4	145.3	137.0	153.6	161.9
82.5°	103.8	99.6	112.1	116.2	116.2
85°	62.3	62.3	70.6	66.4	66.4
87.5°	24.9	29.1	29.1	33.2	33.2
90°	0.0	0.0	0.0	0.0	0.0

LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-State Lighting Products

Report Prepared for

Cooper Lighting Solutions

Metalux

Report Number: SP1-2506-457-1

Test Date: 07/15/2025

Luminaire Tested: 14EN-LD2-51-UNV-L930-CD1-U

Data in this report applies to families of products including 14EN-LD2-51-UNV-L930-CD1-U

Test Information

Test Method: LM-79-2019
 Report Number: SP1-2506-457-1
 Test Lab: COOPER LIGHTING SOLUTIONS
 Photometer: SP1 - 76IN SPHERE
 Measurement Geometry: 4π
 Issue Date: 07/15/2025
 Manufacturer: COOPER LIGHTING SOLUTIONS
 Product Line: Metalux
 Catalog Number: **14EN-LD2-51-UNV-L930-CD1-U**
 Description: 1x4 ENCOUNTER 5100LM WITH LIGHTNING BOARDS

Spectral Parameters

CCT (K): 2952
 CIE u' : 0.2521
 CIE v' : 0.5233
 Duv: 0.0007
 CIE x: 0.4415
 CIE y: 0.4074
 CIE z: 0.1512
 Peak Wavelength (nm): 630
 Dominant Wavelength (nm): 582
 Purity: 54.78275
 R_f: 91.8
 R_g: 99.1

CRI (Ra): 93.2
 R1: 93.9
 R2: 96.6
 R3: 98.6
 R4: 94.8
 R5: 93.9
 R6: 96.9
 R7: 91.0
 R8: 79.7
 R9: 53.0
 R10: 91.2
 R11: 96.9
 R12: 85.5
 R13: 94.5
 R14: 98.2
 R15: 88.3



Test Conditions


Stabilization Time: 33M
 Operation Time: 1H 33M
 Sphere Temperature (°C): 25.0

REPORT NUMBER: SP1-2506-457-1

Measurement and Test Equipment			
Instrument	Identification Number	Calibration Date	Calibration Due Date
Photometer	76INCH SPHERE IN0058	6/16/2025	12/16/2025
Power Meter	XITRON INXT2011004	1/21/2025	1/21/2026
AC Power Source	CHROMA 61603 IN0063	10/22/2024	10/22/2025
DC Power Source	AGILENT E3634A IN0208	10/22/2024	10/22/2025
Sphere Thermometer	ONSET IN0085	10/22/2024	10/22/2025
Room Thermometer	ONSET IN0046	10/22/2024	10/22/2025

REPORT NUMBER: SP1-2506-457-1

CIE 1931 Chromaticity Diagram

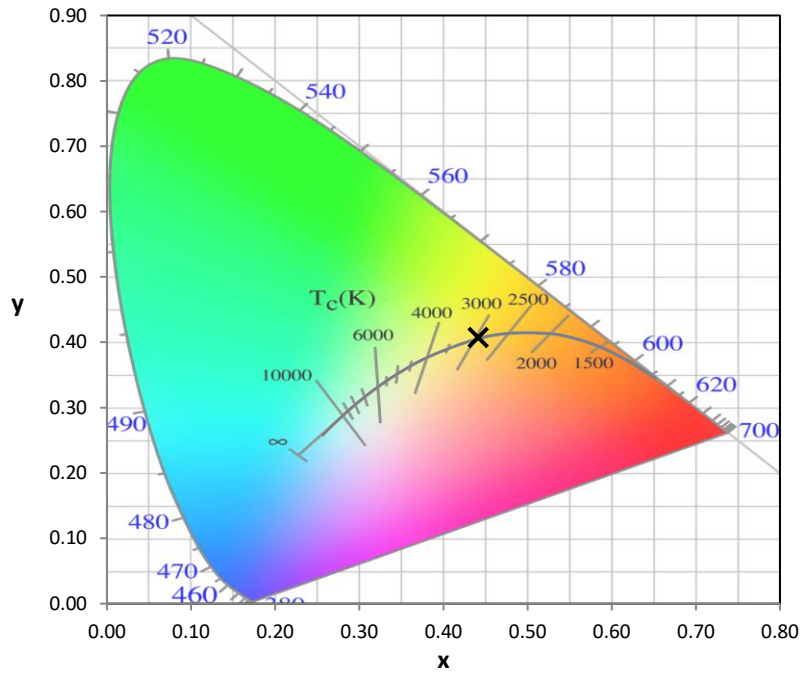

CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles



Point lies inside the ANSI 3000K 4-step quadrangle

REPORT NUMBER: SP1-2506-457-1

Photopic Flux vs. Wavelength



Photopic Lumens: NR

λ (nm)	Power W ^λ /nm	Lumens (φ/nm)	λ (nm)	Power W ^λ /nm	Lumens (φ/nm)	λ (nm)	Power W ^λ /nm	Lumens (φ/nm)	λ (nm)	Power W ^λ /nm	Lumens (φ/nm)	λ (nm)	Power W ^λ /nm	Lumens (φ/nm)
360	0	NR	490	108	NR	620	327	NR	750	7	NR	880	0	NR
365	0	NR	495	130	NR	625	330	NR	755	6	NR	885	0	NR
370	0	NR	500	150	NR	630	1000	NR	760	5	NR	890	0	NR
375	0	NR	505	166	NR	635	648	NR	765	5	NR	895	0	NR
380	0	NR	510	177	NR	640	220	NR	770	4	NR	900	0	NR
385	0	NR	515	185	NR	645	212	NR	775	3	NR	905	0	NR
390	0	NR	520	190	NR	650	184	NR	780	3	NR	910	0	NR
395	1	NR	525	196	NR	655	156	NR	785	2	NR	915	0	NR
400	1	NR	530	201	NR	660	133	NR	790	2	NR	920	0	NR
405	2	NR	535	208	NR	665	112	NR	795	2	NR	925	0	NR
410	3	NR	540	216	NR	670	103	NR	800	1	NR	930	0	NR
415	5	NR	545	223	NR	675	84	NR	805	1	NR	935	0	NR
420	10	NR	550	233	NR	680	72	NR	810	1	NR	940	0	NR
425	17	NR	555	243	NR	685	62	NR	815	1	NR	945	0	NR
430	29	NR	560	253	NR	690	53	NR	820	1	NR	950	0	NR
435	47	NR	565	262	NR	695	45	NR	825	1	NR	955	0	NR
440	77	NR	570	272	NR	700	38	NR	830	1	NR	960	0	NR
445	136	NR	575	282	NR	705	32	NR	835	1	NR	965	0	NR
450	193	NR	580	292	NR	710	27	NR	840	0	NR	970	0	NR
455	153	NR	585	301	NR	715	23	NR	845	0	NR	975	0	NR
460	105	NR	590	310	NR	720	19	NR	850	0	NR	980	0	NR
465	94	NR	595	314	NR	725	16	NR	855	0	NR	985	0	NR
470	78	NR	600	320	NR	730	13	NR	860	0	NR	990	0	NR
475	68	NR	605	323	NR	735	11	NR	865	0	NR	995	0	NR
480	74	NR	610	351	NR	740	10	NR	870	0	NR	1000	0	NR
485	89	NR	615	372	NR	745	8	NR	875	0	NR			

REPORT NUMBER: SP1-2506-457-1

Scotopic Flux vs. Wavelength




Scotopic Lumens: NR

S/P: 1.4

λ (nm)	Power W [^] /nm	Lumens (φ/nm)	λ (nm)	Power W [^] /nm	Lumens (φ/nm)	λ (nm)	Power W [^] /nm	Lumens (φ/nm)	λ (nm)	Power W [^] /nm	Lumens (φ/nm)	λ (nm)	Power W [^] /nm	Lumens (φ/nm)
360	0	NR	490	108	NR	620	327	NR	750	7	NR	880	0	NR
365	0	NR	495	130	NR	625	330	NR	755	6	NR	885	0	NR
370	0	NR	500	150	NR	630	1000	NR	760	5	NR	890	0	NR
375	0	NR	505	166	NR	635	648	NR	765	5	NR	895	0	NR
380	0	NR	510	177	NR	640	220	NR	770	4	NR	900	0	NR
385	0	NR	515	185	NR	645	212	NR	775	3	NR	905	0	NR
390	0	NR	520	190	NR	650	184	NR	780	3	NR	910	0	NR
395	1	NR	525	196	NR	655	156	NR	785	2	NR	915	0	NR
400	1	NR	530	201	NR	660	133	NR	790	2	NR	920	0	NR
405	2	NR	535	208	NR	665	112	NR	795	2	NR	925	0	NR
410	3	NR	540	216	NR	670	103	NR	800	1	NR	930	0	NR
415	5	NR	545	223	NR	675	84	NR	805	1	NR	935	0	NR
420	10	NR	550	233	NR	680	72	NR	810	1	NR	940	0	NR
425	17	NR	555	243	NR	685	62	NR	815	1	NR	945	0	NR
430	29	NR	560	253	NR	690	53	NR	820	1	NR	950	0	NR
435	47	NR	565	262	NR	695	45	NR	825	1	NR	955	0	NR
440	77	NR	570	272	NR	700	38	NR	830	1	NR	960	0	NR
445	136	NR	575	282	NR	705	32	NR	835	1	NR	965	0	NR
450	193	NR	580	292	NR	710	27	NR	840	0	NR	970	0	NR
455	153	NR	585	301	NR	715	23	NR	845	0	NR	975	0	NR
460	105	NR	590	310	NR	720	19	NR	850	0	NR	980	0	NR
465	94	NR	595	314	NR	725	16	NR	855	0	NR	985	0	NR
470	78	NR	600	320	NR	730	13	NR	860	0	NR	990	0	NR
475	68	NR	605	323	NR	735	11	NR	865	0	NR	995	0	NR
480	74	NR	610	351	NR	740	10	NR	870	0	NR	1000	0	NR
485	89	NR	615	372	NR	745	8	NR	875	0	NR			

REPORT NUMBER: SP1-2506-457-1

Melanopic Flux vs. Wavelength

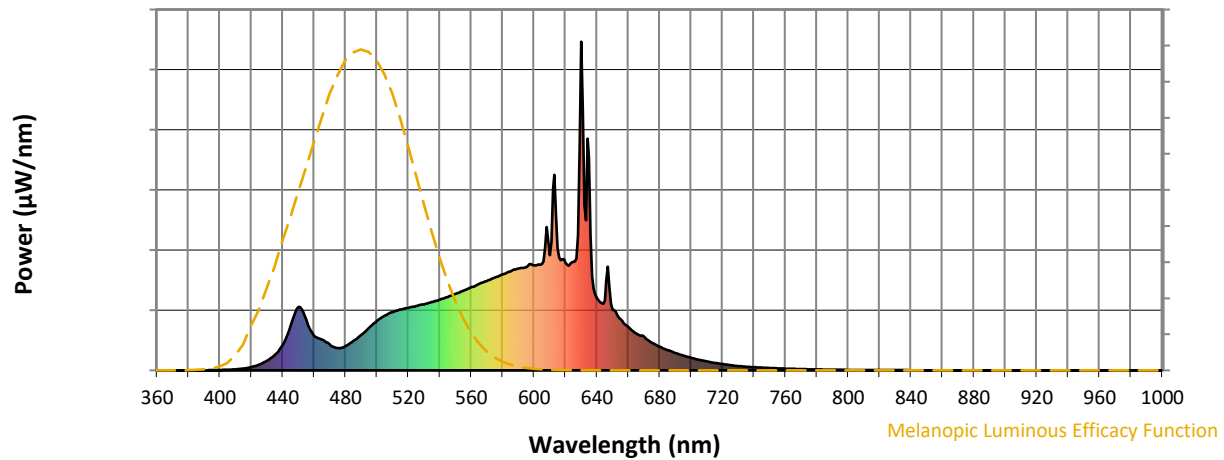

Melanopic Lumens: NR

M/P: 2.7

λ (nm)	Power W ^λ /nm	Lumens (φ/nm)	λ (nm)	Power W ^λ /nm	Lumens (φ/nm)	λ (nm)	Power W ^λ /nm	Lumens (φ/nm)	λ (nm)	Power W ^λ /nm	Lumens (φ/nm)	λ (nm)	Power W ^λ /nm	Lumens (φ/nm)
360	0	NR	490	108	NR	620	327	NR	750	7	NR	880	0	NR
365	0	NR	495	130	NR	625	330	NR	755	6	NR	885	0	NR
370	0	NR	500	150	NR	630	1000	NR	760	5	NR	890	0	NR
375	0	NR	505	166	NR	635	648	NR	765	5	NR	895	0	NR
380	0	NR	510	177	NR	640	220	NR	770	4	NR	900	0	NR
385	0	NR	515	185	NR	645	212	NR	775	3	NR	905	0	NR
390	0	NR	520	190	NR	650	184	NR	780	3	NR	910	0	NR
395	1	NR	525	196	NR	655	156	NR	785	2	NR	915	0	NR
400	1	NR	530	201	NR	660	133	NR	790	2	NR	920	0	NR
405	2	NR	535	208	NR	665	112	NR	795	2	NR	925	0	NR
410	3	NR	540	216	NR	670	103	NR	800	1	NR	930	0	NR
415	5	NR	545	223	NR	675	84	NR	805	1	NR	935	0	NR
420	10	NR	550	233	NR	680	72	NR	810	1	NR	940	0	NR
425	17	NR	555	243	NR	685	62	NR	815	1	NR	945	0	NR
430	29	NR	560	253	NR	690	53	NR	820	1	NR	950	0	NR
435	47	NR	565	262	NR	695	45	NR	825	1	NR	955	0	NR
440	77	NR	570	272	NR	700	38	NR	830	1	NR	960	0	NR
445	136	NR	575	282	NR	705	32	NR	835	1	NR	965	0	NR
450	193	NR	580	292	NR	710	27	NR	840	0	NR	970	0	NR
455	153	NR	585	301	NR	715	23	NR	845	0	NR	975	0	NR
460	105	NR	590	310	NR	720	19	NR	850	0	NR	980	0	NR
465	94	NR	595	314	NR	725	16	NR	855	0	NR	985	0	NR
470	78	NR	600	320	NR	730	13	NR	860	0	NR	990	0	NR
475	68	NR	605	323	NR	735	11	NR	865	0	NR	995	0	NR
480	74	NR	610	351	NR	740	10	NR	870	0	NR	1000	0	NR
485	89	NR	615	372	NR	745	8	NR	875	0	NR			

REPORT NUMBER: SP1-2506-457-1

TM-30-18

Summary

$R_f = 91.8$
 $R_g = 99.1$
 $CIE R_a = 93.2$
 $R_9 = 53.0$



Color Vector Graphics



Individual Sample Fidelity Index ($R_{f,i}$)

CES01 = 86	CES26 = 94	CES51 = 97	CES76 = 91
CES02 = 63	CES27 = 94	CES52 = 98	CES77 = 85
CES03 = 32	CES28 = 98	CES53 = 97	CES78 = 88
CES04 = 70	CES29 = 95	CES54 = 96	CES79 = 88
CES05 = 50	CES30 = 98	CES55 = 96	CES80 = 91
CES06 = 51	CES31 = 95	CES56 = 96	CES81 = 70
CES07 = 43	CES32 = 88	CES57 = 96	CES82 = 96
CES08 = 42	CES33 = 96	CES58 = 97	CES83 = 93
CES09 = 29	CES34 = 96	CES59 = 98	CES84 = 95
CES10 = 76	CES35 = 98	CES60 = 95	CES85 = 79
CES11 = 59	CES36 = 88	CES61 = 95	CES86 = 75
CES12 = 65	CES37 = 96	CES62 = 93	CES87 = 92
CES13 = 44	CES38 = 94	CES63 = 95	CES88 = 96
CES14 = 74	CES39 = 98	CES64 = 95	CES89 = 82
CES15 = 72	CES40 = 96	CES65 = 90	CES90 = 97
CES16 = 48	CES41 = 96	CES66 = 94	CES91 = 82
CES17 = 50	CES42 = 95	CES67 = 93	CES92 = 76
CES18 = 57	CES43 = 95	CES68 = 92	CES93 = 86
CES19 = 72	CES44 = 99	CES69 = 93	CES94 = 71
CES20 = 67	CES45 = 97	CES70 = 91	CES95 = 84
CES21 = 86	CES46 = 96	CES71 = 89	CES96 = 91
CES22 = 79	CES47 = 88	CES72 = 96	CES97 = 95
CES23 = 92	CES48 = 93	CES73 = 86	CES98 = 93
CES24 = 91	CES49 = 95	CES74 = 89	CES99 = 90
CES25 = 72	CES50 = 98	CES75 = 90	



Color Rendition by Hue-Angle Bin



Measure Comparisons



(END OF REPORT)