

Cooper Lighting Solutions Photometric Lab
1121 Highway 74 South
Peachtree City, GA 30269



Scaled data based on original data using
LM-79-2019 Approved Method: Electrical and Photometric Measurements of Solid-
State Lighting Products

Test Report Prepared for
Cooper Lighting Solutions

Brand: METALUX

Report Number: P975194

Luminaire Tested: 14EN-LD2-25-UNV-L835-CD1

Issue Date: 03/13/2025

Test Information

Test Method: LM-79-2019
Report Number: P975194
Test Lab: INNOVATION CENTER(P3)
Issue Date: 03/13/2025
Manufacturer: COOPER LIGHTING SOLUTIONS
Product Line: METALUX
Catalog Number: 14EN-LD2-25-UNV-L835-CD1
Description: METALUX ENCOUNTER 1x4 2500LM PACKAGE 80CRI 3500K STANDARD TROFFER
Light Source: 3500K CCT, 80+ CRI LEDS
Ballast/Driver: -

Summary


Lumens per Lamp: N/A
Luminaire Lumens: 2456.0 lumens
Efficiency: N/A
Efficacy: 117.5 lumens/watt
Spacing Criteria (0/90/45): 1.28 / 1.27 / 1.39
Luminous Opening: Rectangular (W 1' x L: 3.83' x H: 0')
CIE Type: Direct

Input Watts (W): 20.9
Input Voltage (V): 120
Input Current (Ain): NR
Voltage Rise (V): NR
Power Factor: NR
Total Harmonic Distortion (THDi): NR
Frequency (hertz): 60
Stabilization Time: NR
Operation Time: NR
Ambient Temperature (°C): NR
Test Distance: 25 FT

TEST NUMBER: P975194

CATALOG NUMBER: 14EN-LD2-25-UNV-L835-CD1

Luminous Intensity Polar Plot

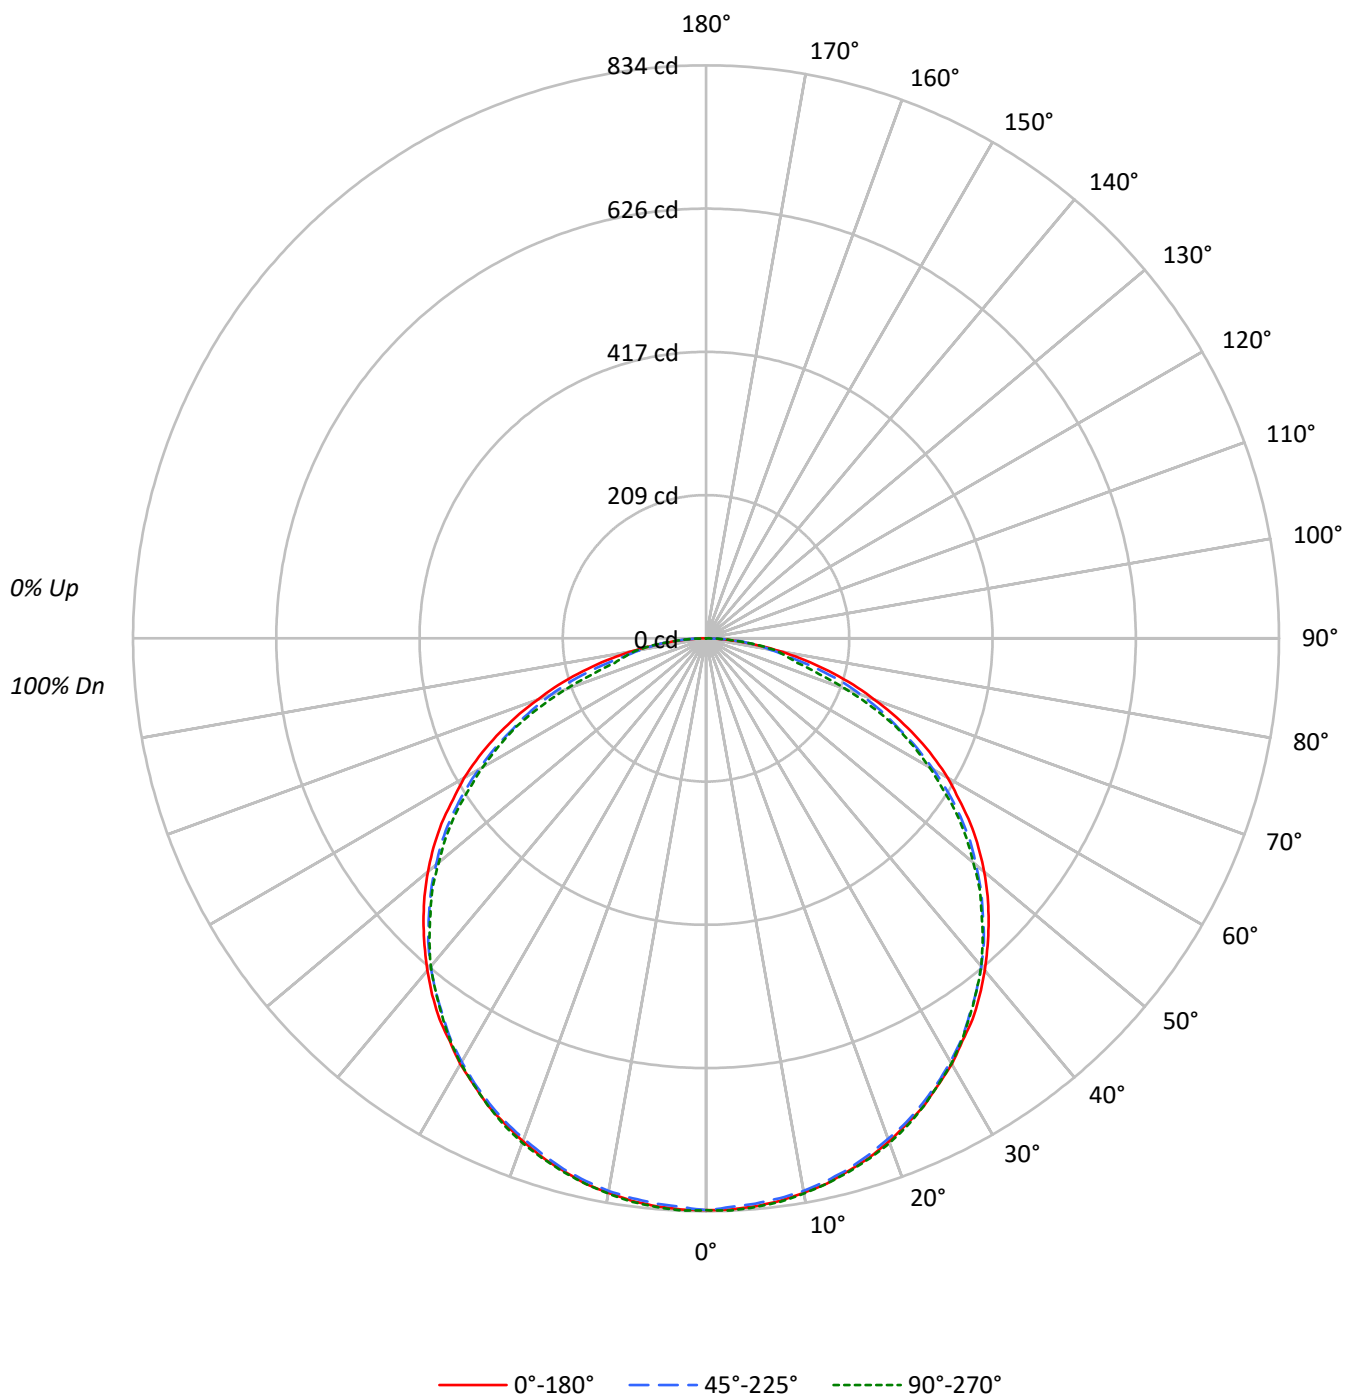

TEST NUMBER: P975194

CATALOG NUMBER: 14EN-LD2-25-UNV-L835-CD1

COEFFICIENT OF UTILIZATION - ZONAL CAVITY METHOD:

RF	20				20				20				20				20
RC	80				70				50				30				10
RW	70	50	30	10	70	50	30	10	50	30	10		50	30	10		50
RCR																	
0	119	119	119	119	116	116	116	116	111	111	111		106	106	106		102
1	109	104	99	95	106	101	97	94	97	94	91		93	90	88		90
2	99	90	83	77	96	88	82	76	85	79	75		81	77	73		78
3	90	79	71	64	87	77	70	63	74	68	62		72	66	61		69
4	82	70	61	54	80	68	60	54	66	59	53		64	57	52		61
5	75	62	53	46	73	61	53	46	59	51	46		57	50	45		55
6	69	56	47	40	68	55	46	40	53	46	40		51	45	39		50
7	64	51	42	36	63	50	41	35	48	41	35		47	40	35		45
8	60	46	38	32	58	45	37	32	44	37	31		43	36	31		42
9	56	42	34	28	54	42	34	28	41	33	28		40	33	28		38
10	52	39	31	26	51	39	31	26	38	30	26		37	30	25		36

AVERAGE LUMINANCE (cd/sqm):

	0°	45°	90°
0°	2337	2337	2337
5°	2339	2328	2342
10°	2336	2329	2340
15°	2333	2325	2337
20°	2328	2316	2336
25°	2326	2313	2326
30°	2320	2307	2316
35°	2319	2293	2297
40°	2313	2285	2285
45°	2310	2264	2253
50°	2309	2241	2218
55°	2301	2212	2181
60°	2282	2144	2108
65°	2235	2053	2027
70°	2142	1972	1781
75°	2015	1775	1493
80°	1785	1531	1680
85°	1382	1592	1505

MAXIMUM LUMINANCE 45°-90°:

Horizontal Angle: 0°
Vertical Angle: 45°
Luminance: 2310 cd/sqm

TEST NUMBER: P975194

CATALOG NUMBER: 14EN-LD2-25-UNV-L835-CD1

ZONAL LUMENS:

Zone	Lumens	% Fixture
0°-10°	78.8	3.2
10°-20°	226.4	9.2
20°-30°	345.0	14.0
30°-40°	420.2	17.1
40°-50°	441.8	18.0
50°-60°	405.5	16.5
60°-70°	311.6	12.7
70°-80°	173.9	7.1
80°-90°	52.8	2.1
90°-100°	0.0	0.0
100°-110°	0.0	0.0
110°-120°	0.0	0.0
120°-130°	0.0	0.0
130°-140°	0.0	0.0
140°-150°	0.0	0.0
150°-160°	0.0	0.0
160°-170°	0.0	0.0
170°-180°	0.0	0.0
0°-30°	650.2	26.5
0°-40°	1070.4	43.6
0°-60°	1917.7	78.1
0°-90°	2456.0	100.0
90°-120°	0.0	0.0
90°-150°	0.0	0.0
90°-180°	0.0	0.0
0°-180°	2456.0	100.0

CANDELA DISTRIBUTION:

	0°	22.5°	45°	67.5°	90°	Flux
0°	832	832	832	832	832	
5°	830	830	826	830	831	79
15°	802	802	800	802	804	227
25°	751	748	747	749	751	346
35°	677	674	669	670	670	423
45°	582	578	570	567	567	449
55°	470	466	452	444	445	419
65°	336	327	309	305	305	332
75°	186	177	164	142	138	196
85°	43	44	49	48	47	52
90°	0	0	0	0	0	

TEST NUMBER: P975194

CATALOG NUMBER: 14EN-LD2-25-UNV-L835-CD1

CANDELA DISTRIBUTION (FULL):

	0°	22.5°	45°	67.5°	90°
0°	832.3	832.3	832.3	832.3	832.3
2.5°	832.3	832.3	828.5	832.3	833.7
5°	829.7	829.7	825.9	829.7	831.0
7.5°	825.9	825.9	822.0	824.5	827.2
10°	819.4	819.4	816.7	819.4	820.7
12.5°	812.9	811.6	808.9	811.6	812.9
15°	802.4	802.4	799.9	802.4	803.8
17.5°	792.1	790.8	788.1	792.1	793.4
20°	779.1	777.8	775.2	779.1	781.7
22.5°	764.9	763.5	762.2	766.2	767.4
25°	750.6	747.9	746.6	749.2	750.6
27.5°	732.3	731.1	729.8	731.1	732.3
30°	715.5	712.8	711.5	711.5	714.2
32.5°	694.7	693.4	692.1	693.4	693.4
35°	676.6	673.9	668.8	670.0	670.0
37.5°	654.5	650.5	646.7	646.7	646.7
40°	631.1	628.4	623.3	621.9	623.3
42.5°	606.5	603.8	598.6	594.7	596.0
45°	581.7	577.9	570.1	567.4	567.4
47.5°	555.8	551.8	542.8	538.8	540.2
50°	528.5	523.4	512.9	507.7	507.7
52.5°	499.9	494.8	484.3	477.8	477.8
55°	470.0	466.2	451.9	444.1	445.4
57.5°	436.3	432.4	418.2	409.0	409.0
60°	406.4	398.7	381.8	375.3	375.3
62.5°	372.6	363.6	346.7	338.9	340.2
65°	336.4	327.2	309.0	305.1	305.1
67.5°	300.0	292.2	275.2	268.8	262.3
70°	260.9	253.3	240.2	224.7	216.9
72.5°	224.7	215.6	203.9	180.5	172.7
75°	185.7	176.7	163.6	141.6	137.6
77.5°	148.1	140.3	122.0	116.8	119.5
80°	110.4	107.7	94.7	100.0	103.9
82.5°	74.0	72.8	75.3	77.9	77.9
85°	42.9	44.2	49.4	48.0	46.7
87.5°	18.1	22.1	20.8	20.8	20.8
90°	0.0	0.0	0.0	0.0	0.0

LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-State Lighting Products

Report Prepared for

Cooper Lighting Solutions

Metalux

Report Number: SP1-2506-457-2

Test Date: 07/10/2025

Luminaire Tested: 14EN-LD2-51-UNV-L935-CD1-U

Data in this report applies to families of products including 14EN-LD2-51-UNV-L935-CD1-U

Test Information

Test Method: LM-79-2019
 Report Number: SP1-2506-457-2
 Test Lab: COOPER LIGHTING SOLUTIONS
 Photometer: SP1 - 76IN SPHERE
 Measurement Geometry: 4π
 Issue Date: 07/15/2025
 Manufacturer: COOPER LIGHTING SOLUTIONS
 Product Line: Metalux
 Catalog Number: **14EN-LD2-51-UNV-L935-CD1-U**
 Description: 1x4 ENCOUNTER 5100LM WITH LIGHTNING BOARDS

Spectral Parameters

CCT (K): 3351
 CIE u' : 0.2401
 CIE v' : 0.5129
 Duv: -0.0010
 CIE x: 0.4127
 CIE y: 0.3919
 CIE z: 0.1954
 Peak Wavelength (nm): 630
 Dominant Wavelength (nm): 581
 Purity: 41.49069
 R_f: 91.3
 R_g: 99.9

CRI (Ra): 93.4
 R1: 94.4
 R2: 96.7
 R3: 97.5
 R4: 94.5
 R5: 94.2
 R6: 95.5
 R7: 91.8
 R8: 82.4
 R9: 57.9
 R10: 91.0
 R11: 95.6
 R12: 80.9
 R13: 95.0
 R14: 97.9
 R15: 90.2



Test Conditions

Stabilization Time: 28M
 Operation Time: 1H 28M
 Sphere Temperature (°C): 24.0

REPORT NUMBER: SP1-2506-457-2

Measurement and Test Equipment			
Instrument	Identification Number	Calibration Date	Calibration Due Date
Photometer	76INCH SPHERE IN0058	6/16/2025	12/16/2025
Power Meter	XITRON INXT2011004	1/21/2025	1/21/2026
AC Power Source	CHROMA 61603 IN0063	10/22/2024	10/22/2025
DC Power Source	AGILENT E3634A IN0208	10/22/2024	10/22/2025
Sphere Thermometer	ONSET IN0085	10/22/2024	10/22/2025
Room Thermometer	ONSET IN0046	10/22/2024	10/22/2025

REPORT NUMBER: SP1-2506-457-2

CIE 1931 Chromaticity Diagram



CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles



Point lies inside the ANSI 3500K 4-step quadrangle

REPORT NUMBER: SP1-2506-457-2

Photopic Flux vs. Wavelength



Photopic Lumens: NR

λ (nm)	Power W [^] /nm	Lumens (φ/nm)	λ (nm)	Power W [^] /nm	Lumens (φ/nm)	λ (nm)	Power W [^] /nm	Lumens (φ/nm)	λ (nm)	Power W [^] /nm	Lumens (φ/nm)	λ (nm)	Power W [^] /nm	Lumens (φ/nm)
360	0	NR	490	140	NR	620	345	NR	750	8	NR	880	0	NR
365	0	NR	495	166	NR	625	344	NR	755	7	NR	885	0	NR
370	0	NR	500	190	NR	630	1000	NR	760	6	NR	890	0	NR
375	0	NR	505	208	NR	635	658	NR	765	5	NR	895	0	NR
380	0	NR	510	221	NR	640	232	NR	770	4	NR	900	0	NR
385	0	NR	515	230	NR	645	222	NR	775	4	NR	905	0	NR
390	1	NR	520	235	NR	650	194	NR	780	3	NR	910	0	NR
395	1	NR	525	241	NR	655	165	NR	785	3	NR	915	0	NR
400	2	NR	530	246	NR	660	141	NR	790	2	NR	920	0	NR
405	3	NR	535	254	NR	665	120	NR	795	2	NR	925	0	NR
410	5	NR	540	262	NR	670	109	NR	800	2	NR	930	0	NR
415	8	NR	545	269	NR	675	90	NR	805	1	NR	935	0	NR
420	14	NR	550	279	NR	680	77	NR	810	1	NR	940	0	NR
425	25	NR	555	288	NR	685	66	NR	815	1	NR	945	0	NR
430	42	NR	560	297	NR	690	57	NR	820	1	NR	950	0	NR
435	71	NR	565	305	NR	695	49	NR	825	1	NR	955	0	NR
440	117	NR	570	313	NR	700	42	NR	830	1	NR	960	0	NR
445	211	NR	575	320	NR	705	35	NR	835	1	NR	965	0	NR
450	316	NR	580	327	NR	710	30	NR	840	1	NR	970	0	NR
455	265	NR	585	334	NR	715	25	NR	845	1	NR	975	0	NR
460	175	NR	590	340	NR	720	21	NR	850	0	NR	980	0	NR
465	149	NR	595	342	NR	725	17	NR	855	0	NR	985	0	NR
470	122	NR	600	345	NR	730	14	NR	860	0	NR	990	0	NR
475	99	NR	605	346	NR	735	12	NR	865	0	NR	995	0	NR
480	103	NR	610	371	NR	740	11	NR	870	0	NR	1000	0	NR
485	120	NR	615	390	NR	745	9	NR	875	0	NR			

REPORT NUMBER: SP1-2506-457-2

Scotopic Flux vs. Wavelength



Scotopic Lumens: NR

S/P: 1.57

λ (nm)	Power W [^] /nm	Lumens (φ/nm)	λ (nm)	Power W [^] /nm	Lumens (φ/nm)	λ (nm)	Power W [^] /nm	Lumens (φ/nm)	λ (nm)	Power W [^] /nm	Lumens (φ/nm)	λ (nm)	Power W [^] /nm	Lumens (φ/nm)
360	0	NR	490	140	NR	620	345	NR	750	8	NR	880	0	NR
365	0	NR	495	166	NR	625	344	NR	755	7	NR	885	0	NR
370	0	NR	500	190	NR	630	1000	NR	760	6	NR	890	0	NR
375	0	NR	505	208	NR	635	658	NR	765	5	NR	895	0	NR
380	0	NR	510	221	NR	640	232	NR	770	4	NR	900	0	NR
385	0	NR	515	230	NR	645	222	NR	775	4	NR	905	0	NR
390	1	NR	520	235	NR	650	194	NR	780	3	NR	910	0	NR
395	1	NR	525	241	NR	655	165	NR	785	3	NR	915	0	NR
400	2	NR	530	246	NR	660	141	NR	790	2	NR	920	0	NR
405	3	NR	535	254	NR	665	120	NR	795	2	NR	925	0	NR
410	5	NR	540	262	NR	670	109	NR	800	2	NR	930	0	NR
415	8	NR	545	269	NR	675	90	NR	805	1	NR	935	0	NR
420	14	NR	550	279	NR	680	77	NR	810	1	NR	940	0	NR
425	25	NR	555	288	NR	685	66	NR	815	1	NR	945	0	NR
430	42	NR	560	297	NR	690	57	NR	820	1	NR	950	0	NR
435	71	NR	565	305	NR	695	49	NR	825	1	NR	955	0	NR
440	117	NR	570	313	NR	700	42	NR	830	1	NR	960	0	NR
445	211	NR	575	320	NR	705	35	NR	835	1	NR	965	0	NR
450	316	NR	580	327	NR	710	30	NR	840	1	NR	970	0	NR
455	265	NR	585	334	NR	715	25	NR	845	1	NR	975	0	NR
460	175	NR	590	340	NR	720	21	NR	850	0	NR	980	0	NR
465	149	NR	595	342	NR	725	17	NR	855	0	NR	985	0	NR
470	122	NR	600	345	NR	730	14	NR	860	0	NR	990	0	NR
475	99	NR	605	346	NR	735	12	NR	865	0	NR	995	0	NR
480	103	NR	610	371	NR	740	11	NR	870	0	NR	1000	0	NR
485	120	NR	615	390	NR	745	9	NR	875	0	NR			

REPORT NUMBER: SP1-2506-457-2

Melanopic Flux vs. Wavelength



Melanopic Lumens: NR

M/P: 3.16

λ (nm)	Power W ^λ /nm	Lumens (φ/nm)	λ (nm)	Power W ^λ /nm	Lumens (φ/nm)	λ (nm)	Power W ^λ /nm	Lumens (φ/nm)	λ (nm)	Power W ^λ /nm	Lumens (φ/nm)	λ (nm)	Power W ^λ /nm	Lumens (φ/nm)
360	0	NR	490	140	NR	620	345	NR	750	8	NR	880	0	NR
365	0	NR	495	166	NR	625	344	NR	755	7	NR	885	0	NR
370	0	NR	500	190	NR	630	1000	NR	760	6	NR	890	0	NR
375	0	NR	505	208	NR	635	658	NR	765	5	NR	895	0	NR
380	0	NR	510	221	NR	640	232	NR	770	4	NR	900	0	NR
385	0	NR	515	230	NR	645	222	NR	775	4	NR	905	0	NR
390	1	NR	520	235	NR	650	194	NR	780	3	NR	910	0	NR
395	1	NR	525	241	NR	655	165	NR	785	3	NR	915	0	NR
400	2	NR	530	246	NR	660	141	NR	790	2	NR	920	0	NR
405	3	NR	535	254	NR	665	120	NR	795	2	NR	925	0	NR
410	5	NR	540	262	NR	670	109	NR	800	2	NR	930	0	NR
415	8	NR	545	269	NR	675	90	NR	805	1	NR	935	0	NR
420	14	NR	550	279	NR	680	77	NR	810	1	NR	940	0	NR
425	25	NR	555	288	NR	685	66	NR	815	1	NR	945	0	NR
430	42	NR	560	297	NR	690	57	NR	820	1	NR	950	0	NR
435	71	NR	565	305	NR	695	49	NR	825	1	NR	955	0	NR
440	117	NR	570	313	NR	700	42	NR	830	1	NR	960	0	NR
445	211	NR	575	320	NR	705	35	NR	835	1	NR	965	0	NR
450	316	NR	580	327	NR	710	30	NR	840	1	NR	970	0	NR
455	265	NR	585	334	NR	715	25	NR	845	1	NR	975	0	NR
460	175	NR	590	340	NR	720	21	NR	850	0	NR	980	0	NR
465	149	NR	595	342	NR	725	17	NR	855	0	NR	985	0	NR
470	122	NR	600	345	NR	730	14	NR	860	0	NR	990	0	NR
475	99	NR	605	346	NR	735	12	NR	865	0	NR	995	0	NR
480	103	NR	610	371	NR	740	11	NR	870	0	NR	1000	0	NR
485	120	NR	615	390	NR	745	9	NR	875	0	NR			

REPORT NUMBER: SP1-2506-457-2

TM-30-18

Summary

$R_f = 91.3$
 $R_g = 99.9$
 $CIE R_a = 93.4$
 $R_9 = 57.9$



Color Vector Graphics



Individual Sample Fidelity Index (R_{fi})

CES01 = 86	CES26 = 93	CES51 = 98	CES76 = 88
CES02 = 63	CES27 = 93	CES52 = 98	CES77 = 87
CES03 = 31	CES28 = 96	CES53 = 97	CES78 = 85
CES04 = 70	CES29 = 95	CES54 = 95	CES79 = 91
CES05 = 50	CES30 = 96	CES55 = 94	CES80 = 92
CES06 = 51	CES31 = 95	CES56 = 96	CES81 = 75
CES07 = 43	CES32 = 87	CES57 = 95	CES82 = 96
CES08 = 41	CES33 = 97	CES58 = 96	CES83 = 94
CES09 = 29	CES34 = 94	CES59 = 97	CES84 = 95
CES10 = 75	CES35 = 96	CES60 = 94	CES85 = 80
CES11 = 58	CES36 = 84	CES61 = 93	CES86 = 79
CES12 = 64	CES37 = 95	CES62 = 90	CES87 = 91
CES13 = 44	CES38 = 91	CES63 = 94	CES88 = 97
CES14 = 74	CES39 = 98	CES64 = 92	CES89 = 83
CES15 = 72	CES40 = 96	CES65 = 90	CES90 = 97
CES16 = 48	CES41 = 97	CES66 = 91	CES91 = 77
CES17 = 49	CES42 = 94	CES67 = 90	CES92 = 76
CES18 = 56	CES43 = 93	CES68 = 89	CES93 = 86
CES19 = 71	CES44 = 99	CES69 = 91	CES94 = 73
CES20 = 67	CES45 = 96	CES70 = 87	CES95 = 83
CES21 = 86	CES46 = 96	CES71 = 84	CES96 = 91
CES22 = 78	CES47 = 91	CES72 = 94	CES97 = 95
CES23 = 91	CES48 = 93	CES73 = 82	CES98 = 94
CES24 = 90	CES49 = 95	CES74 = 91	CES99 = 91
CES25 = 71	CES50 = 99	CES75 = 86	



Color Rendition by Hue-Angle Bin



Measure Comparisons


(END OF REPORT)