

Cooper Lighting Solutions Photometric Lab  
1121 Highway 74 South  
Peachtree City, GA 30269



Scaled data based on original data using  
LM-79-2019 Approved Method: Electrical and Photometric Measurements of Solid-  
State Lighting Products

Test Report Prepared for  
Cooper Lighting Solutions

Brand: PrentaLux

Report Number: P1057205

Luminaire Tested: PRLX-CYL2W-DI-X-927-10L-FL-FL-U-S-X-X-BLAK

Issue Date: 8/6/2025

**Test Information**

Test Method: LM-79-2019  
Report Number: P1057205  
REPORT IS SCALED FROM IESNA LM-79-08 TEST DATA (G2-2504-407-2, G2-2504-407-2)  
Test Lab: INNOVATION CENTER  
Issue Date: 8/6/2025  
Manufacturer: COOPER LIGHTING SOLUTIONS  
Product Line: PrentaLux  
Catalog Number: PRLX-CYL2W-DI-X-927-10L-FL-FL-U-S-X-X-BLAK  
Description: PrentaLux 2-INCH CYLINDER  
DOWNLIGHT 500 LUMENS, FLOOD OPTIC (38-DEGREES)  
UPLIGHT 500 LUMENS, FLOOD OPTIC (38-DEGREES)  
Light Source: 2700K CCT, 90 CRI LEDS  
Ballast/Driver: -

**Summary**


Lumens per Lamp: N/A  
Luminaire Lumens: 1134.6 lumens  
Efficiency: N/A  
Efficacy: 128.9 lumens/watt  
Spacing Criteria (0/90/45): 0.61 / 0.61 / 0.6  
Luminous Opening: Circular (Dia: 0.15' x H: 0')  
CIE Type: General Diffuse

Input Watts (W): 8.8  
Input Voltage (V): 120  
Input Current (Ain): NR  
Voltage Rise (V): NR  
Power Factor: NR  
Total Harmonic Distortion (THDi): NR  
Frequency (hertz): 60  
Stabilization Time: NR  
Operation Time: NR  
Ambient Temperature (°C): NR  
Test Distance: 24 FT

TEST NUMBER: P1057205

CATALOG NUMBER: PRLX-CYL2W-DI-X-927-10L-FL-FL-U-S-X-X-BLAK

### Luminous Intensity Polar Plot

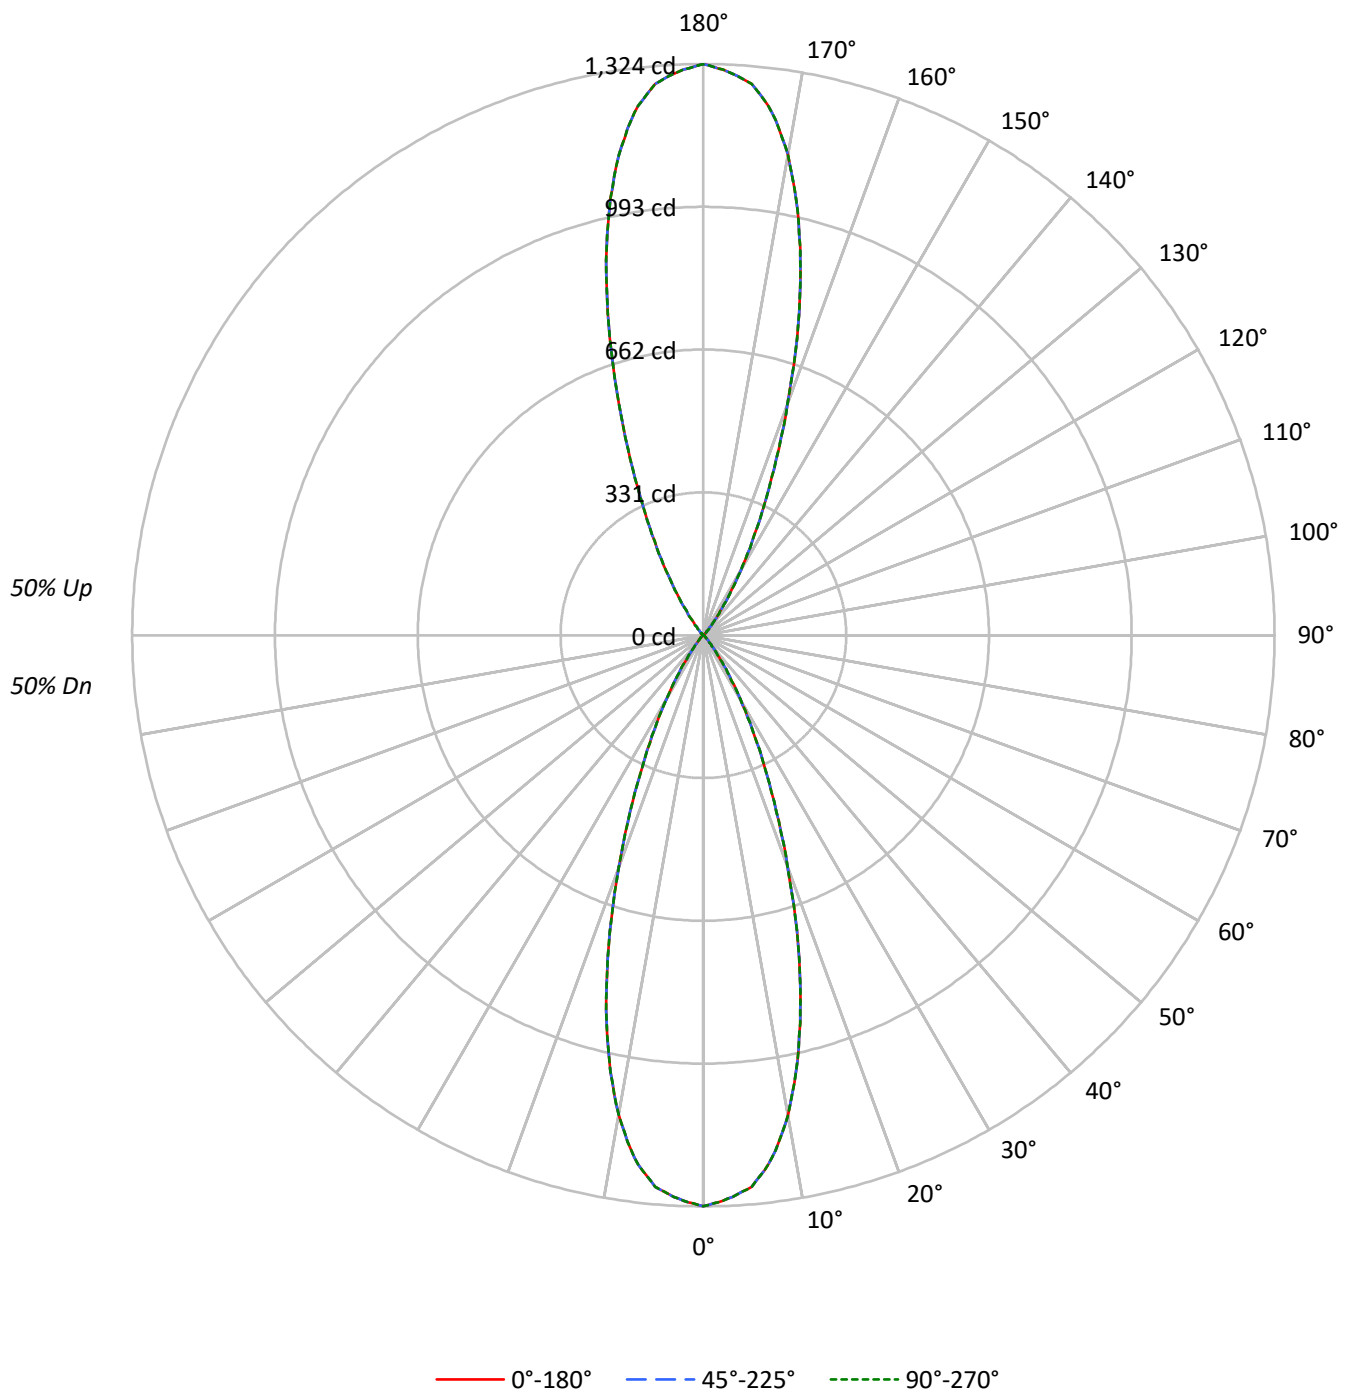

TEST NUMBER: P1057205

CATALOG NUMBER: PRLX-CYL2W-DI-X-927-10L-FL-FL-U-S-X-X-BLAK

**COEFFICIENT OF UTILIZATION - ZONAL CAVITY METHOD:**

|     |     |     |     |     |    |    |    |    |    |    |    |    |    |    |    |    |    |
|-----|-----|-----|-----|-----|----|----|----|----|----|----|----|----|----|----|----|----|----|
| RF  | 20  |     |     |     | 20 |    |    |    | 20 |    |    |    | 20 |    |    |    | 20 |
| RC  | 80  |     |     |     | 70 |    |    |    | 50 |    |    |    | 30 |    |    |    | 10 |
| RW  | 70  | 50  | 30  | 10  | 70 | 50 | 30 | 10 | 50 | 30 | 10 | 50 | 30 | 10 | 50 | 30 | 10 |
| RCR |     |     |     |     |    |    |    |    |    |    |    |    |    |    |    |    |    |
| 0   | 107 | 107 | 107 | 107 | 99 | 99 | 99 | 99 | 83 | 83 | 83 | 69 | 69 | 69 | 56 | 56 | 56 |
| 1   | 101 | 97  | 94  | 92  | 93 | 90 | 88 | 86 | 77 | 76 | 74 | 65 | 64 | 63 | 54 | 53 | 53 |
| 2   | 94  | 89  | 84  | 81  | 87 | 83 | 79 | 76 | 72 | 69 | 67 | 61 | 60 | 58 | 52 | 51 | 50 |
| 3   | 89  | 82  | 76  | 72  | 82 | 77 | 72 | 68 | 67 | 64 | 61 | 58 | 56 | 54 | 49 | 48 | 47 |
| 4   | 83  | 75  | 70  | 65  | 78 | 71 | 66 | 62 | 62 | 59 | 56 | 55 | 52 | 50 | 47 | 46 | 44 |
| 5   | 79  | 70  | 64  | 59  | 73 | 66 | 61 | 57 | 59 | 55 | 52 | 52 | 49 | 47 | 45 | 44 | 42 |
| 6   | 74  | 65  | 59  | 55  | 70 | 62 | 56 | 53 | 55 | 51 | 48 | 49 | 46 | 44 | 43 | 42 | 40 |
| 7   | 70  | 61  | 55  | 51  | 66 | 58 | 53 | 49 | 52 | 48 | 45 | 47 | 44 | 42 | 42 | 40 | 38 |
| 8   | 67  | 57  | 51  | 47  | 63 | 55 | 49 | 46 | 49 | 45 | 43 | 45 | 42 | 40 | 40 | 38 | 37 |
| 9   | 64  | 54  | 48  | 44  | 60 | 52 | 46 | 43 | 47 | 43 | 40 | 43 | 40 | 38 | 38 | 36 | 35 |
| 10  | 61  | 51  | 45  | 42  | 57 | 49 | 44 | 40 | 45 | 41 | 38 | 41 | 38 | 36 | 37 | 35 | 33 |

**AVERAGE LUMINANCE (cd/sqm):**

|     | 0°     | 45°    | 90°    |
|-----|--------|--------|--------|
| 0°  | 852954 | 852954 | 852954 |
| 5°  | 830143 | 830143 | 830143 |
| 10° | 739689 | 739689 | 739689 |
| 15° | 580356 | 580356 | 580356 |
| 20° | 391442 | 391442 | 391442 |
| 25° | 235780 | 235780 | 235780 |
| 30° | 127541 | 127541 | 127541 |
| 35° | 53731  | 53731  | 53731  |
| 40° | 17918  | 17918  | 17918  |
| 45° | 7655   | 7655   | 7655   |
| 50° | 4511   | 4511   | 4511   |
| 55° | 3146   | 3146   | 3146   |
| 60° | 2191   | 2191   | 2191   |
| 65° | 1677   | 1677   | 1677   |
| 70° | 1130   | 1130   | 1130   |
| 75° | 0      | 0      | 0      |
| 80° | 0      | 0      | 0      |
| 85° | 0      | 0      | 0      |

**MAXIMUM LUMINANCE 45°-90°:**

Horizontal Angle: 0°

Vertical Angle: 45°

Luminance: 7655 cd/sqm

TEST NUMBER: P1057205

CATALOG NUMBER: PRLX-CYL2W-DI-X-927-10L-FL-FL-U-S-X-X-BLAK

**ZONAL LUMENS:**

| Zone      | Lumens | % Fixture |
|-----------|--------|-----------|
| 0°-10°    | 117.4  | 10.4      |
| 10°-20°   | 235.9  | 20.8      |
| 20°-30°   | 154.9  | 13.7      |
| 30°-40°   | 47.7   | 4.2       |
| 40°-50°   | 7.6    | 0.7       |
| 50°-60°   | 2.6    | 0.2       |
| 60°-70°   | 1.0    | 0.1       |
| 70°-80°   | 0.2    | 0.0       |
| 80°-90°   | 0.0    | 0.0       |
| 90°-100°  | 0.0    | 0.0       |
| 100°-110° | 0.2    | 0.0       |
| 110°-120° | 1.0    | 0.1       |
| 120°-130° | 2.6    | 0.2       |
| 130°-140° | 7.6    | 0.7       |
| 140°-150° | 47.7   | 4.2       |
| 150°-160° | 154.9  | 13.7      |
| 160°-170° | 235.9  | 20.8      |
| 170°-180° | 117.4  | 10.4      |
| <hr/>     |        |           |
| 0°-30°    | 508.3  | 44.8      |
| 0°-40°    | 556.0  | 49.0      |
| 0°-60°    | 566.1  | 49.9      |
| 0°-90°    | 567.3  | 50.0      |
| 90°-120°  | 1.2    | 0.1       |
| 90°-150°  | 59.0   | 5.2       |
| 90°-180°  | 567.0  | 50.0      |
| 0°-180°   | 1134.6 | 100.0     |

**CANDELA DISTRIBUTION:**

|      | 0°   | 22.5° | 45°  | 67.5° | 90°  | Flux |
|------|------|-------|------|-------|------|------|
| 0°   | 1324 | 1324  | 1324 | 1324  | 1324 |      |
| 5°   | 1283 | 1283  | 1283 | 1283  | 1283 | 117  |
| 15°  | 870  | 870   | 870  | 870   | 870  | 236  |
| 25°  | 332  | 332   | 332  | 332   | 332  | 155  |
| 35°  | 68   | 68    | 68   | 68    | 68   | 48   |
| 45°  | 8    | 8     | 8    | 8     | 8    | 8    |
| 55°  | 3    | 3     | 3    | 3     | 3    | 3    |
| 65°  | 1    | 1     | 1    | 1     | 1    | 1    |
| 75°  | 0    | 0     | 0    | 0     | 0    | 0    |
| 85°  | 0    | 0     | 0    | 0     | 0    | 0    |
| 90°  | 0    | 0     | 0    | 0     | 0    | 0    |
| 95°  | 0    | 0     | 0    | 0     | 0    | 0    |
| 105° | 0    | 0     | 0    | 0     | 0    | 0    |
| 115° | 1    | 1     | 1    | 1     | 1    | 1    |
| 125° | 3    | 3     | 3    | 3     | 3    | 3    |
| 135° | 8    | 8     | 8    | 8     | 8    | 8    |
| 145° | 68   | 68    | 68   | 68    | 68   | 48   |
| 155° | 332  | 332   | 332  | 332   | 332  | 155  |
| 165° | 870  | 870   | 870  | 870   | 870  | 236  |
| 175° | 1283 | 1283  | 1283 | 1283  | 1283 | 117  |
| 180° | 1324 | 1324  | 1324 | 1324  | 1324 |      |

TEST NUMBER: P1057205

CATALOG NUMBER: PRLX-CYL2W-DI-X-927-10L-FL-FL-U-S-X-X-BLAK

**CANDELA DISTRIBUTION (FULL):**

|     | 0°     | 22.5°  | 45°    | 67.5°  | 90°    |
|-----|--------|--------|--------|--------|--------|
| 0°  | 1323.6 | 1323.6 | 1323.6 | 1323.6 | 1323.6 |
| 1°  | 1317.6 | 1317.6 | 1317.6 | 1317.6 | 1317.6 |
| 2°  | 1311.5 | 1311.5 | 1311.5 | 1311.5 | 1311.5 |
| 3°  | 1303.5 | 1303.5 | 1303.5 | 1303.5 | 1303.5 |
| 4°  | 1293.4 | 1293.4 | 1293.4 | 1293.4 | 1293.4 |
| 5°  | 1283.3 | 1283.3 | 1283.3 | 1283.3 | 1283.3 |
| 6°  | 1259.8 | 1259.8 | 1259.8 | 1259.8 | 1259.8 |
| 7°  | 1236.3 | 1236.3 | 1236.3 | 1236.3 | 1236.3 |
| 8°  | 1205.7 | 1205.7 | 1205.7 | 1205.7 | 1205.7 |
| 9°  | 1168.0 | 1168.0 | 1168.0 | 1168.0 | 1168.0 |
| 10° | 1130.4 | 1130.4 | 1130.4 | 1130.4 | 1130.4 |
| 11° | 1082.4 | 1082.4 | 1082.4 | 1082.4 | 1082.4 |
| 12° | 1034.5 | 1034.5 | 1034.5 | 1034.5 | 1034.5 |
| 13° | 982.4  | 982.4  | 982.4  | 982.4  | 982.4  |
| 14° | 926.2  | 926.2  | 926.2  | 926.2  | 926.2  |
| 15° | 869.9  | 869.9  | 869.9  | 869.9  | 869.9  |
| 16° | 810.1  | 810.1  | 810.1  | 810.1  | 810.1  |
| 17° | 750.3  | 750.3  | 750.3  | 750.3  | 750.3  |
| 18° | 690.4  | 690.4  | 690.4  | 690.4  | 690.4  |
| 19° | 630.6  | 630.6  | 630.6  | 630.6  | 630.6  |
| 20° | 570.8  | 570.8  | 570.8  | 570.8  | 570.8  |
| 21° | 518.6  | 518.6  | 518.6  | 518.6  | 518.6  |
| 22° | 466.4  | 466.4  | 466.4  | 466.4  | 466.4  |
| 23° | 418.5  | 418.5  | 418.5  | 418.5  | 418.5  |
| 24° | 375.1  | 375.1  | 375.1  | 375.1  | 375.1  |
| 25° | 331.6  | 331.6  | 331.6  | 331.6  | 331.6  |
| 26° | 296.7  | 296.7  | 296.7  | 296.7  | 296.7  |
| 27° | 261.7  | 261.7  | 261.7  | 261.7  | 261.7  |
| 28° | 229.7  | 229.7  | 229.7  | 229.7  | 229.7  |
| 29° | 200.5  | 200.5  | 200.5  | 200.5  | 200.5  |
| 30° | 171.4  | 171.4  | 171.4  | 171.4  | 171.4  |
| 31° | 147.7  | 147.7  | 147.7  | 147.7  | 147.7  |
| 32° | 123.9  | 123.9  | 123.9  | 123.9  | 123.9  |
| 33° | 103.3  | 103.3  | 103.3  | 103.3  | 103.3  |
| 34° | 85.8   | 85.8   | 85.8   | 85.8   | 85.8   |
| 35° | 68.3   | 68.3   | 68.3   | 68.3   | 68.3   |
| 36° | 56.5   | 56.5   | 56.5   | 56.5   | 56.5   |
| 37° | 44.6   | 44.6   | 44.6   | 44.6   | 44.6   |
| 38° | 35.2   | 35.2   | 35.2   | 35.2   | 35.2   |
| 39° | 28.2   | 28.2   | 28.2   | 28.2   | 28.2   |
| 40° | 21.3   | 21.3   | 21.3   | 21.3   | 21.3   |
| 41° | 17.7   | 17.7   | 17.7   | 17.7   | 17.7   |
| 42° | 14.1   | 14.1   | 14.1   | 14.1   | 14.1   |
| 43° | 11.5   | 11.5   | 11.5   | 11.5   | 11.5   |
| 44° | 10.0   | 10.0   | 10.0   | 10.0   | 10.0   |

TEST NUMBER: P1057205

CATALOG NUMBER: PRLX-CYL2W-DI-X-927-10L-FL-FL-U-S-X-X-BLAK

**CANDELA DISTRIBUTION (continued):**

|     | 0°  | 22.5° | 45° | 67.5° | 90° |
|-----|-----|-------|-----|-------|-----|
| 45° | 8.4 | 8.4   | 8.4 | 8.4   | 8.4 |
| 46° | 7.5 | 7.5   | 7.5 | 7.5   | 7.5 |
| 47° | 6.6 | 6.6   | 6.6 | 6.6   | 6.6 |
| 48° | 5.8 | 5.8   | 5.8 | 5.8   | 5.8 |
| 49° | 5.2 | 5.2   | 5.2 | 5.2   | 5.2 |
| 50° | 4.5 | 4.5   | 4.5 | 4.5   | 4.5 |
| 51° | 4.0 | 4.0   | 4.0 | 4.0   | 4.0 |
| 52° | 3.6 | 3.6   | 3.6 | 3.6   | 3.6 |
| 53° | 3.2 | 3.2   | 3.2 | 3.2   | 3.2 |
| 54° | 3.0 | 3.0   | 3.0 | 3.0   | 3.0 |
| 55° | 2.8 | 2.8   | 2.8 | 2.8   | 2.8 |
| 56° | 2.6 | 2.6   | 2.6 | 2.6   | 2.6 |
| 57° | 2.4 | 2.4   | 2.4 | 2.4   | 2.4 |
| 58° | 2.1 | 2.1   | 2.1 | 2.1   | 2.1 |
| 59° | 1.9 | 1.9   | 1.9 | 1.9   | 1.9 |
| 60° | 1.7 | 1.7   | 1.7 | 1.7   | 1.7 |
| 61° | 1.5 | 1.5   | 1.5 | 1.5   | 1.5 |
| 62° | 1.2 | 1.2   | 1.2 | 1.2   | 1.2 |
| 63° | 1.1 | 1.1   | 1.1 | 1.1   | 1.1 |
| 64° | 1.1 | 1.1   | 1.1 | 1.1   | 1.1 |
| 65° | 1.1 | 1.1   | 1.1 | 1.1   | 1.1 |
| 66° | 0.9 | 0.9   | 0.9 | 0.9   | 0.9 |
| 67° | 0.7 | 0.7   | 0.7 | 0.7   | 0.7 |
| 68° | 0.6 | 0.6   | 0.6 | 0.6   | 0.6 |
| 69° | 0.6 | 0.6   | 0.6 | 0.6   | 0.6 |
| 70° | 0.6 | 0.6   | 0.6 | 0.6   | 0.6 |
| 71° | 0.6 | 0.6   | 0.6 | 0.6   | 0.6 |
| 72° | 0.6 | 0.6   | 0.6 | 0.6   | 0.6 |
| 73° | 0.4 | 0.4   | 0.4 | 0.4   | 0.4 |
| 74° | 0.2 | 0.2   | 0.2 | 0.2   | 0.2 |
| 75° | 0.0 | 0.0   | 0.0 | 0.0   | 0.0 |
| 76° | 0.0 | 0.0   | 0.0 | 0.0   | 0.0 |
| 77° | 0.0 | 0.0   | 0.0 | 0.0   | 0.0 |
| 78° | 0.0 | 0.0   | 0.0 | 0.0   | 0.0 |
| 79° | 0.0 | 0.0   | 0.0 | 0.0   | 0.0 |
| 80° | 0.0 | 0.0   | 0.0 | 0.0   | 0.0 |
| 81° | 0.0 | 0.0   | 0.0 | 0.0   | 0.0 |
| 82° | 0.0 | 0.0   | 0.0 | 0.0   | 0.0 |
| 83° | 0.0 | 0.0   | 0.0 | 0.0   | 0.0 |
| 84° | 0.0 | 0.0   | 0.0 | 0.0   | 0.0 |
| 85° | 0.0 | 0.0   | 0.0 | 0.0   | 0.0 |
| 86° | 0.0 | 0.0   | 0.0 | 0.0   | 0.0 |
| 87° | 0.0 | 0.0   | 0.0 | 0.0   | 0.0 |
| 88° | 0.0 | 0.0   | 0.0 | 0.0   | 0.0 |
| 89° | 0.0 | 0.0   | 0.0 | 0.0   | 0.0 |

TEST NUMBER: P1057205

CATALOG NUMBER: PRLX-CYL2W-DI-X-927-10L-FL-FL-U-S-X-X-BLAK

**CANDELA DISTRIBUTION (continued):**

|      | 0°  | 22.5° | 45° | 67.5° | 90° |
|------|-----|-------|-----|-------|-----|
| 90°  | 0.0 | 0.0   | 0.0 | 0.0   | 0.0 |
| 91°  | 0.0 | 0.0   | 0.0 | 0.0   | 0.0 |
| 92°  | 0.0 | 0.0   | 0.0 | 0.0   | 0.0 |
| 93°  | 0.0 | 0.0   | 0.0 | 0.0   | 0.0 |
| 94°  | 0.0 | 0.0   | 0.0 | 0.0   | 0.0 |
| 95°  | 0.0 | 0.0   | 0.0 | 0.0   | 0.0 |
| 96°  | 0.0 | 0.0   | 0.0 | 0.0   | 0.0 |
| 97°  | 0.0 | 0.0   | 0.0 | 0.0   | 0.0 |
| 98°  | 0.0 | 0.0   | 0.0 | 0.0   | 0.0 |
| 99°  | 0.0 | 0.0   | 0.0 | 0.0   | 0.0 |
| 100° | 0.0 | 0.0   | 0.0 | 0.0   | 0.0 |
| 101° | 0.0 | 0.0   | 0.0 | 0.0   | 0.0 |
| 102° | 0.0 | 0.0   | 0.0 | 0.0   | 0.0 |
| 103° | 0.0 | 0.0   | 0.0 | 0.0   | 0.0 |
| 104° | 0.0 | 0.0   | 0.0 | 0.0   | 0.0 |
| 105° | 0.0 | 0.0   | 0.0 | 0.0   | 0.0 |
| 106° | 0.2 | 0.2   | 0.2 | 0.2   | 0.2 |
| 107° | 0.4 | 0.4   | 0.4 | 0.4   | 0.4 |
| 108° | 0.6 | 0.6   | 0.6 | 0.6   | 0.6 |
| 109° | 0.6 | 0.6   | 0.6 | 0.6   | 0.6 |
| 110° | 0.6 | 0.6   | 0.6 | 0.6   | 0.6 |
| 111° | 0.6 | 0.6   | 0.6 | 0.6   | 0.6 |
| 112° | 0.6 | 0.6   | 0.6 | 0.6   | 0.6 |
| 113° | 0.7 | 0.7   | 0.7 | 0.7   | 0.7 |
| 114° | 0.9 | 0.9   | 0.9 | 0.9   | 0.9 |
| 115° | 1.1 | 1.1   | 1.1 | 1.1   | 1.1 |
| 116° | 1.1 | 1.1   | 1.1 | 1.1   | 1.1 |
| 117° | 1.1 | 1.1   | 1.1 | 1.1   | 1.1 |
| 118° | 1.2 | 1.2   | 1.2 | 1.2   | 1.2 |
| 119° | 1.5 | 1.5   | 1.5 | 1.5   | 1.5 |
| 120° | 1.7 | 1.7   | 1.7 | 1.7   | 1.7 |
| 121° | 1.9 | 1.9   | 1.9 | 1.9   | 1.9 |
| 122° | 2.1 | 2.1   | 2.1 | 2.1   | 2.1 |
| 123° | 2.4 | 2.4   | 2.4 | 2.4   | 2.4 |
| 124° | 2.6 | 2.6   | 2.6 | 2.6   | 2.6 |
| 125° | 2.8 | 2.8   | 2.8 | 2.8   | 2.8 |
| 126° | 3.0 | 3.0   | 3.0 | 3.0   | 3.0 |
| 127° | 3.2 | 3.2   | 3.2 | 3.2   | 3.2 |
| 128° | 3.6 | 3.6   | 3.6 | 3.6   | 3.6 |
| 129° | 4.0 | 4.0   | 4.0 | 4.0   | 4.0 |
| 130° | 4.5 | 4.5   | 4.5 | 4.5   | 4.5 |
| 131° | 5.2 | 5.2   | 5.2 | 5.2   | 5.2 |
| 132° | 5.8 | 5.8   | 5.8 | 5.8   | 5.8 |
| 133° | 6.6 | 6.6   | 6.6 | 6.6   | 6.6 |
| 134° | 7.5 | 7.5   | 7.5 | 7.5   | 7.5 |

TEST NUMBER: P1057205

CATALOG NUMBER: PRLX-CYL2W-DI-X-927-10L-FL-FL-U-S-X-X-BLAK

**CANDELA DISTRIBUTION (continued):**

|      | 0°     | 22.5°  | 45°    | 67.5°  | 90°    |
|------|--------|--------|--------|--------|--------|
| 135° | 8.4    | 8.4    | 8.4    | 8.4    | 8.4    |
| 136° | 10.0   | 10.0   | 10.0   | 10.0   | 10.0   |
| 137° | 11.5   | 11.5   | 11.5   | 11.5   | 11.5   |
| 138° | 14.1   | 14.1   | 14.1   | 14.1   | 14.1   |
| 139° | 17.7   | 17.7   | 17.7   | 17.7   | 17.7   |
| 140° | 21.3   | 21.3   | 21.3   | 21.3   | 21.3   |
| 141° | 28.2   | 28.2   | 28.2   | 28.2   | 28.2   |
| 142° | 35.2   | 35.2   | 35.2   | 35.2   | 35.2   |
| 143° | 44.6   | 44.6   | 44.6   | 44.6   | 44.6   |
| 144° | 56.5   | 56.5   | 56.5   | 56.5   | 56.5   |
| 145° | 68.3   | 68.3   | 68.3   | 68.3   | 68.3   |
| 146° | 85.8   | 85.8   | 85.8   | 85.8   | 85.8   |
| 147° | 103.3  | 103.3  | 103.3  | 103.3  | 103.3  |
| 148° | 123.9  | 123.9  | 123.9  | 123.9  | 123.9  |
| 149° | 147.7  | 147.7  | 147.7  | 147.7  | 147.7  |
| 150° | 171.4  | 171.4  | 171.4  | 171.4  | 171.4  |
| 151° | 200.5  | 200.5  | 200.5  | 200.5  | 200.5  |
| 152° | 229.7  | 229.7  | 229.7  | 229.7  | 229.7  |
| 153° | 261.7  | 261.7  | 261.7  | 261.7  | 261.7  |
| 154° | 296.7  | 296.7  | 296.7  | 296.7  | 296.7  |
| 155° | 331.6  | 331.6  | 331.6  | 331.6  | 331.6  |
| 156° | 375.1  | 375.1  | 375.1  | 375.1  | 375.1  |
| 157° | 418.5  | 418.5  | 418.5  | 418.5  | 418.5  |
| 158° | 466.4  | 466.4  | 466.4  | 466.4  | 466.4  |
| 159° | 518.6  | 518.6  | 518.6  | 518.6  | 518.6  |
| 160° | 570.8  | 570.8  | 570.8  | 570.8  | 570.8  |
| 161° | 630.6  | 630.6  | 630.6  | 630.6  | 630.6  |
| 162° | 690.4  | 690.4  | 690.4  | 690.4  | 690.4  |
| 163° | 750.3  | 750.3  | 750.3  | 750.3  | 750.3  |
| 164° | 810.1  | 810.1  | 810.1  | 810.1  | 810.1  |
| 165° | 869.9  | 869.9  | 869.9  | 869.9  | 869.9  |
| 166° | 926.2  | 926.2  | 926.2  | 926.2  | 926.2  |
| 167° | 982.4  | 982.4  | 982.4  | 982.4  | 982.4  |
| 168° | 1034.5 | 1034.5 | 1034.5 | 1034.5 | 1034.5 |
| 169° | 1082.4 | 1082.4 | 1082.4 | 1082.4 | 1082.4 |
| 170° | 1130.4 | 1130.4 | 1130.4 | 1130.4 | 1130.4 |
| 171° | 1168.0 | 1168.0 | 1168.0 | 1168.0 | 1168.0 |
| 172° | 1205.7 | 1205.7 | 1205.7 | 1205.7 | 1205.7 |
| 173° | 1236.3 | 1236.3 | 1236.3 | 1236.3 | 1236.3 |
| 174° | 1259.8 | 1259.8 | 1259.8 | 1259.8 | 1259.8 |
| 175° | 1283.3 | 1283.3 | 1283.3 | 1283.3 | 1283.3 |
| 176° | 1293.4 | 1293.4 | 1293.4 | 1293.4 | 1293.4 |
| 177° | 1303.5 | 1303.5 | 1303.5 | 1303.5 | 1303.5 |
| 178° | 1311.5 | 1311.5 | 1311.5 | 1311.5 | 1311.5 |
| 179° | 1317.6 | 1317.6 | 1317.6 | 1317.6 | 1317.6 |



TEST NUMBER: P1057205  
CATALOG NUMBER: PRLX-CYL2W-DI-X-927-10L-FL-FL-U-S-X-X-BLAK

CANDELA DISTRIBUTION (continued):

|      | 0°     | 22.5°  | 45°    | 67.5°  | 90°    |
|------|--------|--------|--------|--------|--------|
| 180° | 1323.6 | 1323.6 | 1323.6 | 1323.6 | 1323.6 |

TEST NUMBER: P1057205

CATALOG NUMBER: PRLX-CYL2W-DI-X-927-10L-FL-FL-U-S-X-X-BLAK

**CIE UGR TABLE:**

| Reflectances:   |      |                  |      |      |      |      |                |      |      |      |      |
|-----------------|------|------------------|------|------|------|------|----------------|------|------|------|------|
| Ceiling         |      | 0.7              | 0.7  | 0.5  | 0.5  | 0.3  | 0.7            | 0.7  | 0.5  | 0.5  | 0.3  |
| Wall            |      | 0.5              | 0.3  | 0.5  | 0.3  | 0.3  | 0.5            | 0.3  | 0.5  | 0.3  | 0.3  |
| Reference plane |      | 0.2              | 0.2  | 0.2  | 0.2  | 0.2  | 0.2            | 0.2  | 0.2  | 0.2  | 0.2  |
| Room dimensions |      | Viewed crosswise |      |      |      |      | Viewed endwise |      |      |      |      |
| X=2H            | Y=2H | 0.00             | 0.00 | 0.02 | 0.63 | 1.92 | 0.00           | 0.00 | 0.02 | 0.63 | 1.92 |
|                 | 3H   | 0.00             | 0.00 | 0.29 | 0.83 | 2.14 | 0.00           | 0.00 | 0.29 | 0.83 | 2.14 |
|                 | 4H   | 0.00             | 0.00 | 0.22 | 0.72 | 2.05 | 0.00           | 0.00 | 0.22 | 0.72 | 2.05 |
|                 | 6H   | 0.00             | 0.00 | 0.11 | 0.57 | 1.90 | 0.00           | 0.00 | 0.11 | 0.57 | 1.90 |
|                 | 8H   | 0.00             | 0.00 | 0.06 | 0.49 | 1.82 | 0.00           | 0.00 | 0.06 | 0.49 | 1.82 |
|                 | 12H  | 0.00             | 0.00 | 0.00 | 0.40 | 1.74 | 0.00           | 0.00 | 0.00 | 0.40 | 1.74 |
| 4H              | 2H   | 0.00             | 0.00 | 0.12 | 0.61 | 1.93 | 0.00           | 0.00 | 0.12 | 0.61 | 1.93 |
|                 | 3H   | 0.00             | 0.00 | 0.56 | 0.99 | 2.32 | 0.00           | 0.00 | 0.56 | 0.99 | 2.32 |
|                 | 4H   | 0.00             | 0.00 | 0.47 | 0.85 | 2.21 | 0.00           | 0.00 | 0.47 | 0.85 | 2.21 |
|                 | 6H   | 0.00             | 0.00 | 0.37 | 0.70 | 2.05 | 0.00           | 0.00 | 0.37 | 0.70 | 2.05 |
|                 | 8H   | 0.00             | 0.00 | 0.30 | 0.60 | 1.96 | 0.00           | 0.00 | 0.30 | 0.60 | 1.96 |
|                 | 12H  | 0.00             | 0.00 | 0.24 | 0.51 | 1.87 | 0.00           | 0.00 | 0.24 | 0.51 | 1.87 |
| 8H              | 4H   | 0.00             | 0.00 | 0.35 | 0.65 | 2.01 | 0.00           | 0.00 | 0.35 | 0.65 | 2.01 |
|                 | 6H   | 0.00             | 0.00 | 0.25 | 0.51 | 1.87 | 0.00           | 0.00 | 0.25 | 0.51 | 1.87 |
|                 | 8H   | 0.00             | 0.00 | 0.19 | 0.40 | 1.78 | 0.00           | 0.00 | 0.19 | 0.40 | 1.78 |
|                 | 12H  | 0.00             | 0.00 | 0.12 | 0.29 | 1.72 | 0.00           | 0.00 | 0.12 | 0.29 | 1.72 |
| 12H             | 4H   | 0.00             | 0.00 | 0.29 | 0.55 | 1.92 | 0.00           | 0.00 | 0.29 | 0.55 | 1.92 |
|                 | 6H   | 0.00             | 0.00 | 0.19 | 0.40 | 1.78 | 0.00           | 0.00 | 0.19 | 0.40 | 1.78 |
|                 | 8H   | 0.00             | 0.00 | 0.12 | 0.29 | 1.72 | 0.00           | 0.00 | 0.12 | 0.29 | 1.72 |

LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-State Lighting Products

Report Prepared for

Cooper Lighting Solutions

PrentaLux 3D Printing

Report Number: SP1-2504-407-1

Test Date: 07/16/2025

Luminaire Tested: PRLX-CYL2-X-927-10L-FL-U-S-X-X-BLAK

Data in this report applies to families of products including PRLX-CYL2-X-927-10L-FL-U-S-X-X-BLAK

### Test Information

Test Method: LM-79-2019  
 Report Number: SP1-2504-407-1  
 Test Lab: COOPER LIGHTING SOLUTIONS  
 Photometer: SP1 - 76IN SPHERE  
 Measurement Geometry:  $4\pi$   
 Issue Date: 07/30/2025  
 Manufacturer: COOPER LIGHTING SOLUTIONS  
 Product Line: PentaLux 3D Printing  
 Catalog Number: **PRLX-CYL2-X-927-10L-FL-U-S-X-X-BLAK**  
 Description: PentaLux 2-INCH CYLINDER, BLACK TRIM, FLOOD OPTIC, 1000 LUMENS, 2700K

### Spectral Parameters

CCT (K): 2742  
 CIE  $u'$ : 0.2602  
 CIE  $v'$ : 0.5287  
 Duv: 0.0015  
 CIE x: 0.4591  
 CIE y: 0.4146  
 CIE z: 0.1264  
 Peak Wavelength (nm): 630  
 Dominant Wavelength (nm): 583  
 Purity: 62.24215  
 R<sub>f</sub>: 91.5  
 R<sub>g</sub>: 100.2

CRI (Ra): 93.2  
 R1: 94.5  
 R2: 95.6  
 R3: 95.5  
 R4: 95.6  
 R5: 93.8  
 R6: 96.5  
 R7: 92.3  
 R8: 81.6  
 R9: 55.9  
 R10: 87.9  
 R11: 97.0  
 R12: 84.0  
 R13: 94.5  
 R14: 96.0  
 R15: 88.9



### Test Conditions

Stabilization Time: 41M  
 Operation Time: 1H 41M  
 Sphere Temperature (°C): 24.0


REPORT NUMBER: SP1-2504-407-1

| Measurement and Test Equipment |                       |                  |                      |
|--------------------------------|-----------------------|------------------|----------------------|
| Instrument                     | Identification Number | Calibration Date | Calibration Due Date |
| Photometer                     | 76INCH SPHERE IN0058  | 6/16/2025        | 12/16/2025           |
| Power Meter                    | XITRON INXT2011004    | 1/21/2025        | 1/21/2026            |
| AC Power Source                | CHROMA 61603 IN0063   | 10/22/2024       | 10/22/2025           |
| DC Power Source                | AGILENT E3634A IN0208 | 10/22/2024       | 10/22/2025           |
| Sphere Thermometer             | ONSET IN0085          | 10/22/2024       | 10/22/2025           |
| Room Thermometer               | ONSET IN0046          | 10/22/2024       | 10/22/2025           |



REPORT NUMBER: SP1-2504-407-1

### Photopic Flux vs. Wavelength

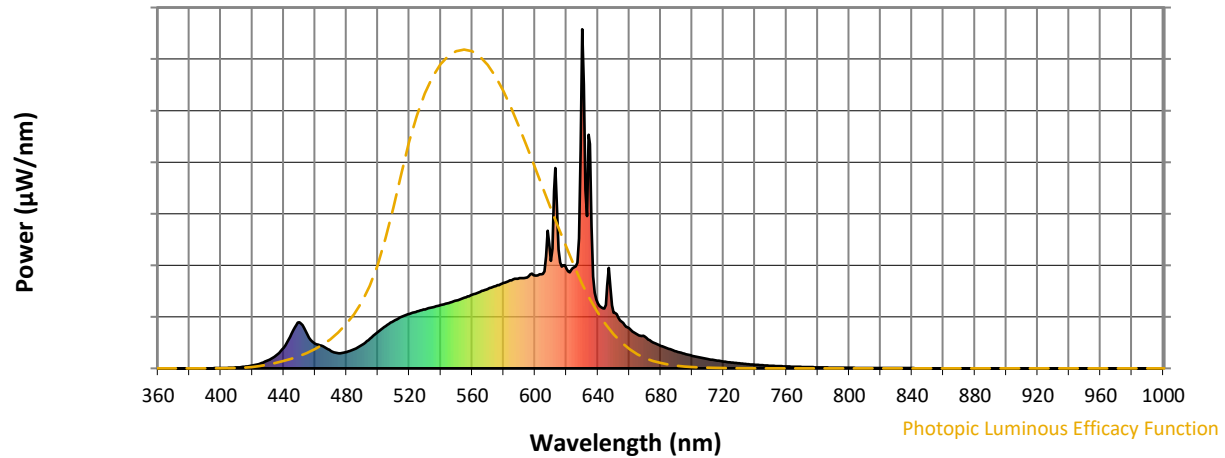

### Photopic Lumens: NR

| $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) |
|-------------------|----------------------------------------|--------------------------------|-------------------|----------------------------------------|--------------------------------|-------------------|----------------------------------------|--------------------------------|-------------------|----------------------------------------|--------------------------------|-------------------|----------------------------------------|--------------------------------|
| 360               | 0                                      | NR                             | 490               | 70                                     | NR                             | 620               | 293                                    | NR                             | 750               | 8                                      | NR                             | 880               | 0                                      | NR                             |
| 365               | 0                                      | NR                             | 495               | 88                                     | NR                             | 625               | 299                                    | NR                             | 755               | 7                                      | NR                             | 885               | 0                                      | NR                             |
| 370               | 0                                      | NR                             | 500               | 108                                    | NR                             | 630               | 1000                                   | NR                             | 760               | 6                                      | NR                             | 890               | 0                                      | NR                             |
| 375               | 0                                      | NR                             | 505               | 125                                    | NR                             | 635               | 661                                    | NR                             | 765               | 5                                      | NR                             | 895               | 0                                      | NR                             |
| 380               | 0                                      | NR                             | 510               | 140                                    | NR                             | 640               | 192                                    | NR                             | 770               | 4                                      | NR                             | 900               | 0                                      | NR                             |
| 385               | 0                                      | NR                             | 515               | 152                                    | NR                             | 645               | 187                                    | NR                             | 775               | 4                                      | NR                             | 905               | 0                                      | NR                             |
| 390               | 0                                      | NR                             | 520               | 160                                    | NR                             | 650               | 164                                    | NR                             | 780               | 3                                      | NR                             | 910               | 0                                      | NR                             |
| 395               | 0                                      | NR                             | 525               | 168                                    | NR                             | 655               | 138                                    | NR                             | 785               | 3                                      | NR                             | 915               | 0                                      | NR                             |
| 400               | 1                                      | NR                             | 530               | 174                                    | NR                             | 660               | 118                                    | NR                             | 790               | 2                                      | NR                             | 920               | 0                                      | NR                             |
| 405               | 2                                      | NR                             | 535               | 180                                    | NR                             | 665               | 100                                    | NR                             | 795               | 2                                      | NR                             | 925               | 0                                      | NR                             |
| 410               | 3                                      | NR                             | 540               | 187                                    | NR                             | 670               | 94                                     | NR                             | 800               | 2                                      | NR                             | 930               | 0                                      | NR                             |
| 415               | 5                                      | NR                             | 545               | 193                                    | NR                             | 675               | 77                                     | NR                             | 805               | 1                                      | NR                             | 935               | 0                                      | NR                             |
| 420               | 9                                      | NR                             | 550               | 200                                    | NR                             | 680               | 67                                     | NR                             | 810               | 1                                      | NR                             | 940               | 0                                      | NR                             |
| 425               | 14                                     | NR                             | 555               | 208                                    | NR                             | 685               | 58                                     | NR                             | 815               | 1                                      | NR                             | 945               | 0                                      | NR                             |
| 430               | 23                                     | NR                             | 560               | 217                                    | NR                             | 690               | 50                                     | NR                             | 820               | 1                                      | NR                             | 950               | 0                                      | NR                             |
| 435               | 38                                     | NR                             | 565               | 226                                    | NR                             | 695               | 43                                     | NR                             | 825               | 1                                      | NR                             | 955               | 0                                      | NR                             |
| 440               | 61                                     | NR                             | 570               | 234                                    | NR                             | 700               | 37                                     | NR                             | 830               | 1                                      | NR                             | 960               | 0                                      | NR                             |
| 445               | 103                                    | NR                             | 575               | 243                                    | NR                             | 705               | 32                                     | NR                             | 835               | 1                                      | NR                             | 965               | 0                                      | NR                             |
| 450               | 135                                    | NR                             | 580               | 252                                    | NR                             | 710               | 28                                     | NR                             | 840               | 1                                      | NR                             | 970               | 0                                      | NR                             |
| 455               | 100                                    | NR                             | 585               | 260                                    | NR                             | 715               | 23                                     | NR                             | 845               | 0                                      | NR                             | 975               | 0                                      | NR                             |
| 460               | 72                                     | NR                             | 590               | 266                                    | NR                             | 720               | 20                                     | NR                             | 850               | 0                                      | NR                             | 980               | 0                                      | NR                             |
| 465               | 65                                     | NR                             | 595               | 268                                    | NR                             | 725               | 17                                     | NR                             | 855               | 0                                      | NR                             | 985               | 0                                      | NR                             |
| 470               | 51                                     | NR                             | 600               | 274                                    | NR                             | 730               | 15                                     | NR                             | 860               | 0                                      | NR                             | 990               | 0                                      | NR                             |
| 475               | 45                                     | NR                             | 605               | 278                                    | NR                             | 735               | 13                                     | NR                             | 865               | 0                                      | NR                             | 995               | 0                                      | NR                             |
| 480               | 48                                     | NR                             | 610               | 317                                    | NR                             | 740               | 11                                     | NR                             | 870               | 0                                      | NR                             | 1000              | 0                                      | NR                             |
| 485               | 57                                     | NR                             | 615               | 350                                    | NR                             | 745               | 9                                      | NR                             | 875               | 0                                      | NR                             |                   |                                        |                                |

REPORT NUMBER: SP1-2504-407-1

### Scotopic Flux vs. Wavelength



Scotopic Lumens: NR

S/P: 1.28

| λ (nm) | Power W <sup>^</sup> /nm | Lumens (φ/nm) | λ (nm) | Power W <sup>^</sup> /nm | Lumens (φ/nm) | λ (nm) | Power W <sup>^</sup> /nm | Lumens (φ/nm) | λ (nm) | Power W <sup>^</sup> /nm | Lumens (φ/nm) | λ (nm) | Power W <sup>^</sup> /nm | Lumens (φ/nm) |
|--------|--------------------------|---------------|--------|--------------------------|---------------|--------|--------------------------|---------------|--------|--------------------------|---------------|--------|--------------------------|---------------|
| 360    | 0                        | NR            | 490    | 70                       | NR            | 620    | 293                      | NR            | 750    | 8                        | NR            | 880    | 0                        | NR            |
| 365    | 0                        | NR            | 495    | 88                       | NR            | 625    | 299                      | NR            | 755    | 7                        | NR            | 885    | 0                        | NR            |
| 370    | 0                        | NR            | 500    | 108                      | NR            | 630    | 1000                     | NR            | 760    | 6                        | NR            | 890    | 0                        | NR            |
| 375    | 0                        | NR            | 505    | 125                      | NR            | 635    | 661                      | NR            | 765    | 5                        | NR            | 895    | 0                        | NR            |
| 380    | 0                        | NR            | 510    | 140                      | NR            | 640    | 192                      | NR            | 770    | 4                        | NR            | 900    | 0                        | NR            |
| 385    | 0                        | NR            | 515    | 152                      | NR            | 645    | 187                      | NR            | 775    | 4                        | NR            | 905    | 0                        | NR            |
| 390    | 0                        | NR            | 520    | 160                      | NR            | 650    | 164                      | NR            | 780    | 3                        | NR            | 910    | 0                        | NR            |
| 395    | 0                        | NR            | 525    | 168                      | NR            | 655    | 138                      | NR            | 785    | 3                        | NR            | 915    | 0                        | NR            |
| 400    | 1                        | NR            | 530    | 174                      | NR            | 660    | 118                      | NR            | 790    | 2                        | NR            | 920    | 0                        | NR            |
| 405    | 2                        | NR            | 535    | 180                      | NR            | 665    | 100                      | NR            | 795    | 2                        | NR            | 925    | 0                        | NR            |
| 410    | 3                        | NR            | 540    | 187                      | NR            | 670    | 94                       | NR            | 800    | 2                        | NR            | 930    | 0                        | NR            |
| 415    | 5                        | NR            | 545    | 193                      | NR            | 675    | 77                       | NR            | 805    | 1                        | NR            | 935    | 0                        | NR            |
| 420    | 9                        | NR            | 550    | 200                      | NR            | 680    | 67                       | NR            | 810    | 1                        | NR            | 940    | 0                        | NR            |
| 425    | 14                       | NR            | 555    | 208                      | NR            | 685    | 58                       | NR            | 815    | 1                        | NR            | 945    | 0                        | NR            |
| 430    | 23                       | NR            | 560    | 217                      | NR            | 690    | 50                       | NR            | 820    | 1                        | NR            | 950    | 0                        | NR            |
| 435    | 38                       | NR            | 565    | 226                      | NR            | 695    | 43                       | NR            | 825    | 1                        | NR            | 955    | 0                        | NR            |
| 440    | 61                       | NR            | 570    | 234                      | NR            | 700    | 37                       | NR            | 830    | 1                        | NR            | 960    | 0                        | NR            |
| 445    | 103                      | NR            | 575    | 243                      | NR            | 705    | 32                       | NR            | 835    | 1                        | NR            | 965    | 0                        | NR            |
| 450    | 135                      | NR            | 580    | 252                      | NR            | 710    | 28                       | NR            | 840    | 1                        | NR            | 970    | 0                        | NR            |
| 455    | 100                      | NR            | 585    | 260                      | NR            | 715    | 23                       | NR            | 845    | 0                        | NR            | 975    | 0                        | NR            |
| 460    | 72                       | NR            | 590    | 266                      | NR            | 720    | 20                       | NR            | 850    | 0                        | NR            | 980    | 0                        | NR            |
| 465    | 65                       | NR            | 595    | 268                      | NR            | 725    | 17                       | NR            | 855    | 0                        | NR            | 985    | 0                        | NR            |
| 470    | 51                       | NR            | 600    | 274                      | NR            | 730    | 15                       | NR            | 860    | 0                        | NR            | 990    | 0                        | NR            |
| 475    | 45                       | NR            | 605    | 278                      | NR            | 735    | 13                       | NR            | 865    | 0                        | NR            | 995    | 0                        | NR            |
| 480    | 48                       | NR            | 610    | 317                      | NR            | 740    | 11                       | NR            | 870    | 0                        | NR            | 1000   | 0                        | NR            |
| 485    | 57                       | NR            | 615    | 350                      | NR            | 745    | 9                        | NR            | 875    | 0                        | NR            |        |                          |               |

REPORT NUMBER: SP1-2504-407-1

### Melanopic Flux vs. Wavelength



Melanopic Lumens: NR

M/P: 2.38


| λ (nm) | Power W <sup>^</sup> /nm | Lumens (φ/nm) | λ (nm) | Power W <sup>^</sup> /nm | Lumens (φ/nm) | λ (nm) | Power W <sup>^</sup> /nm | Lumens (φ/nm) | λ (nm) | Power W <sup>^</sup> /nm | Lumens (φ/nm) | λ (nm) | Power W <sup>^</sup> /nm | Lumens (φ/nm) |
|--------|--------------------------|---------------|--------|--------------------------|---------------|--------|--------------------------|---------------|--------|--------------------------|---------------|--------|--------------------------|---------------|
| 360    | 0                        | NR            | 490    | 70                       | NR            | 620    | 293                      | NR            | 750    | 8                        | NR            | 880    | 0                        | NR            |
| 365    | 0                        | NR            | 495    | 88                       | NR            | 625    | 299                      | NR            | 755    | 7                        | NR            | 885    | 0                        | NR            |
| 370    | 0                        | NR            | 500    | 108                      | NR            | 630    | 1000                     | NR            | 760    | 6                        | NR            | 890    | 0                        | NR            |
| 375    | 0                        | NR            | 505    | 125                      | NR            | 635    | 661                      | NR            | 765    | 5                        | NR            | 895    | 0                        | NR            |
| 380    | 0                        | NR            | 510    | 140                      | NR            | 640    | 192                      | NR            | 770    | 4                        | NR            | 900    | 0                        | NR            |
| 385    | 0                        | NR            | 515    | 152                      | NR            | 645    | 187                      | NR            | 775    | 4                        | NR            | 905    | 0                        | NR            |
| 390    | 0                        | NR            | 520    | 160                      | NR            | 650    | 164                      | NR            | 780    | 3                        | NR            | 910    | 0                        | NR            |
| 395    | 0                        | NR            | 525    | 168                      | NR            | 655    | 138                      | NR            | 785    | 3                        | NR            | 915    | 0                        | NR            |
| 400    | 1                        | NR            | 530    | 174                      | NR            | 660    | 118                      | NR            | 790    | 2                        | NR            | 920    | 0                        | NR            |
| 405    | 2                        | NR            | 535    | 180                      | NR            | 665    | 100                      | NR            | 795    | 2                        | NR            | 925    | 0                        | NR            |
| 410    | 3                        | NR            | 540    | 187                      | NR            | 670    | 94                       | NR            | 800    | 2                        | NR            | 930    | 0                        | NR            |
| 415    | 5                        | NR            | 545    | 193                      | NR            | 675    | 77                       | NR            | 805    | 1                        | NR            | 935    | 0                        | NR            |
| 420    | 9                        | NR            | 550    | 200                      | NR            | 680    | 67                       | NR            | 810    | 1                        | NR            | 940    | 0                        | NR            |
| 425    | 14                       | NR            | 555    | 208                      | NR            | 685    | 58                       | NR            | 815    | 1                        | NR            | 945    | 0                        | NR            |
| 430    | 23                       | NR            | 560    | 217                      | NR            | 690    | 50                       | NR            | 820    | 1                        | NR            | 950    | 0                        | NR            |
| 435    | 38                       | NR            | 565    | 226                      | NR            | 695    | 43                       | NR            | 825    | 1                        | NR            | 955    | 0                        | NR            |
| 440    | 61                       | NR            | 570    | 234                      | NR            | 700    | 37                       | NR            | 830    | 1                        | NR            | 960    | 0                        | NR            |
| 445    | 103                      | NR            | 575    | 243                      | NR            | 705    | 32                       | NR            | 835    | 1                        | NR            | 965    | 0                        | NR            |
| 450    | 135                      | NR            | 580    | 252                      | NR            | 710    | 28                       | NR            | 840    | 1                        | NR            | 970    | 0                        | NR            |
| 455    | 100                      | NR            | 585    | 260                      | NR            | 715    | 23                       | NR            | 845    | 0                        | NR            | 975    | 0                        | NR            |
| 460    | 72                       | NR            | 590    | 266                      | NR            | 720    | 20                       | NR            | 850    | 0                        | NR            | 980    | 0                        | NR            |
| 465    | 65                       | NR            | 595    | 268                      | NR            | 725    | 17                       | NR            | 855    | 0                        | NR            | 985    | 0                        | NR            |
| 470    | 51                       | NR            | 600    | 274                      | NR            | 730    | 15                       | NR            | 860    | 0                        | NR            | 990    | 0                        | NR            |
| 475    | 45                       | NR            | 605    | 278                      | NR            | 735    | 13                       | NR            | 865    | 0                        | NR            | 995    | 0                        | NR            |
| 480    | 48                       | NR            | 610    | 317                      | NR            | 740    | 11                       | NR            | 870    | 0                        | NR            | 1000   | 0                        | NR            |
| 485    | 57                       | NR            | 615    | 350                      | NR            | 745    | 9                        | NR            | 875    | 0                        | NR            |        |                          |               |

REPORT NUMBER: SP1-2504-407-1


TM-30-18

### Summary

$R_f = 91.5$   
 $R_g = 100.2$   
 $CIE R_a = 93.2$   
 $R_9 = 55.9$

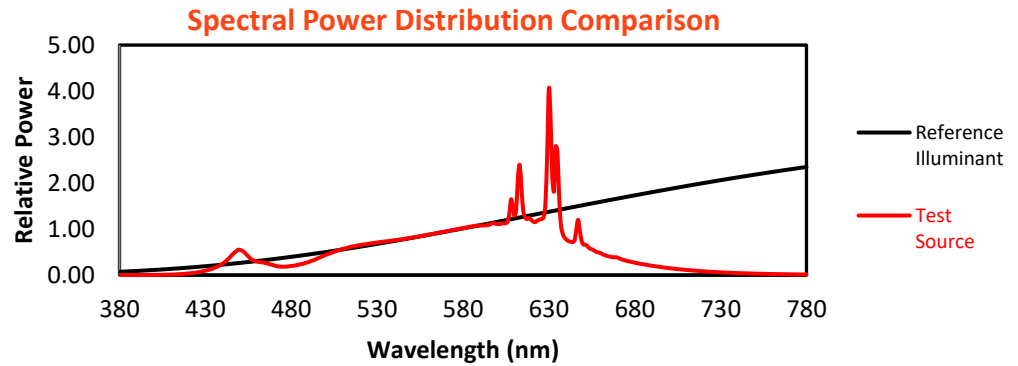


### Color Vector Graphics

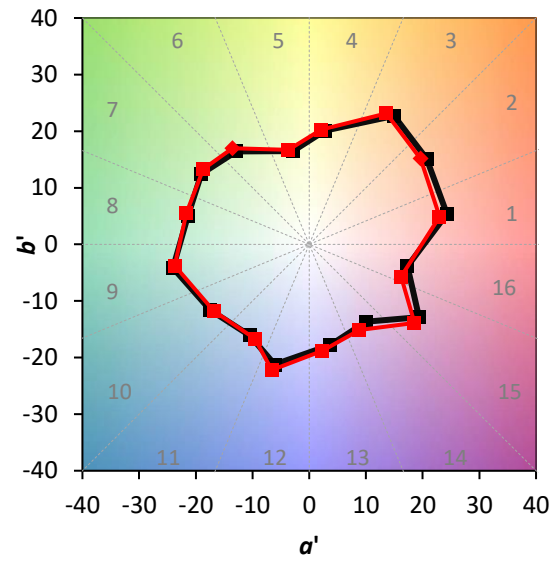

**Individual Sample Fidelity Index ( $R_{f,i}$ )**

|            |             |            |            |
|------------|-------------|------------|------------|
| CES01 = 86 | CES26 = 92  | CES51 = 97 | CES76 = 89 |
| CES02 = 64 | CES27 = 96  | CES52 = 97 | CES77 = 85 |
| CES03 = 32 | CES28 = 96  | CES53 = 94 | CES78 = 87 |
| CES04 = 70 | CES29 = 91  | CES54 = 99 | CES79 = 88 |
| CES05 = 51 | CES30 = 96  | CES55 = 99 | CES80 = 91 |
| CES06 = 51 | CES31 = 92  | CES56 = 94 | CES81 = 69 |
| CES07 = 44 | CES32 = 85  | CES57 = 93 | CES82 = 96 |
| CES08 = 43 | CES33 = 92  | CES58 = 94 | CES83 = 93 |
| CES09 = 29 | CES34 = 94  | CES59 = 98 | CES84 = 96 |
| CES10 = 77 | CES35 = 97  | CES60 = 97 | CES85 = 80 |
| CES11 = 59 | CES36 = 91  | CES61 = 97 | CES86 = 76 |
| CES12 = 66 | CES37 = 93  | CES62 = 96 | CES87 = 92 |
| CES13 = 44 | CES38 = 100 | CES63 = 93 | CES88 = 96 |
| CES14 = 74 | CES39 = 97  | CES64 = 95 | CES89 = 81 |
| CES15 = 72 | CES40 = 94  | CES65 = 90 | CES90 = 97 |
| CES16 = 48 | CES41 = 94  | CES66 = 93 | CES91 = 86 |
| CES17 = 50 | CES42 = 92  | CES67 = 92 | CES92 = 78 |
| CES18 = 57 | CES43 = 92  | CES68 = 93 | CES93 = 87 |
| CES19 = 72 | CES44 = 99  | CES69 = 95 | CES94 = 71 |
| CES20 = 68 | CES45 = 95  | CES70 = 90 | CES95 = 86 |
| CES21 = 87 | CES46 = 94  | CES71 = 90 | CES96 = 92 |
| CES22 = 79 | CES47 = 86  | CES72 = 96 | CES97 = 93 |
| CES23 = 92 | CES48 = 93  | CES73 = 86 | CES98 = 92 |
| CES24 = 91 | CES49 = 93  | CES74 = 89 | CES99 = 91 |
| CES25 = 72 | CES50 = 97  | CES75 = 90 |            |

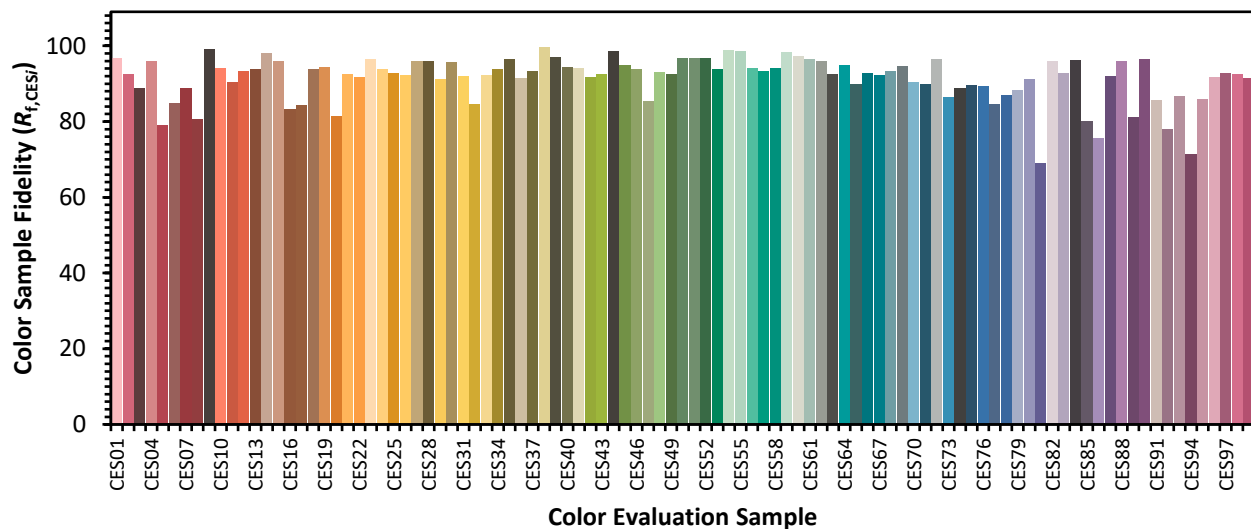

Color Rendition by Hue-Angle Bin



**Measure Comparisons**



(END OF REPORT)