

Cooper Lighting Solutions Photometric Lab
1121 Highway 74 South
Peachtree City, GA 30269



Scaled data based on original data using
LM-79-2019 Approved Method: Electrical and Photometric Measurements of Solid-
State Lighting Products

Test Report Prepared for
Cooper Lighting Solutions

Brand: PrentaLux

Report Number: P1057400

Luminaire Tested: PRLX-CYL2W-DR-X-927-10L-SP-U-S-X-X-BLAK

Issue Date: 8/6/2025

Test Information

Test Method: LM-79-2019
Report Number: P1057400
REPORT IS SCALED FROM IESNA LM-79-08 TEST DATA (G2-2504-407-5)
Test Lab: INNOVATION CENTER
Issue Date: 8/6/2025
Manufacturer: COOPER LIGHTING SOLUTIONS
Product Line: PrentaLux
Catalog Number: PRLX-CYL2W-DR-X-927-10L-SP-U-S-X-X-BLAK
Description: PrentaLux 2-INCH CYLINDER
DOWNLIGHT 1000 LUMENS, SPOT OPTIC (19-DEGREES)
Light Source: 2700K CCT, 90 CRI LEDS
Ballast/Driver: -

Summary


Lumens per Lamp: N/A
Luminaire Lumens: 1115.9 lumens
Efficiency: N/A
Efficacy: 124.0 lumens/watt
Spacing Criteria (0/90/45): 0.33 / 0.33 / 0.34
Luminous Opening: Circular (Dia: 0.15' x H: 0')
CIE Type: Direct

Input Watts (W): 9
Input Voltage (V): 120
Input Current (Ain): NR
Voltage Rise (V): NR
Power Factor: NR
Total Harmonic Distortion (THDi): NR
Frequency (hertz): 60
Stabilization Time: NR
Operation Time: NR
Ambient Temperature (°C): NR
Test Distance: 24 FT

TEST NUMBER: P1057400

CATALOG NUMBER: PRLX-CYL2W-DR-X-927-10L-SP-U-S-X-X-BLAK

Luminous Intensity Polar Plot

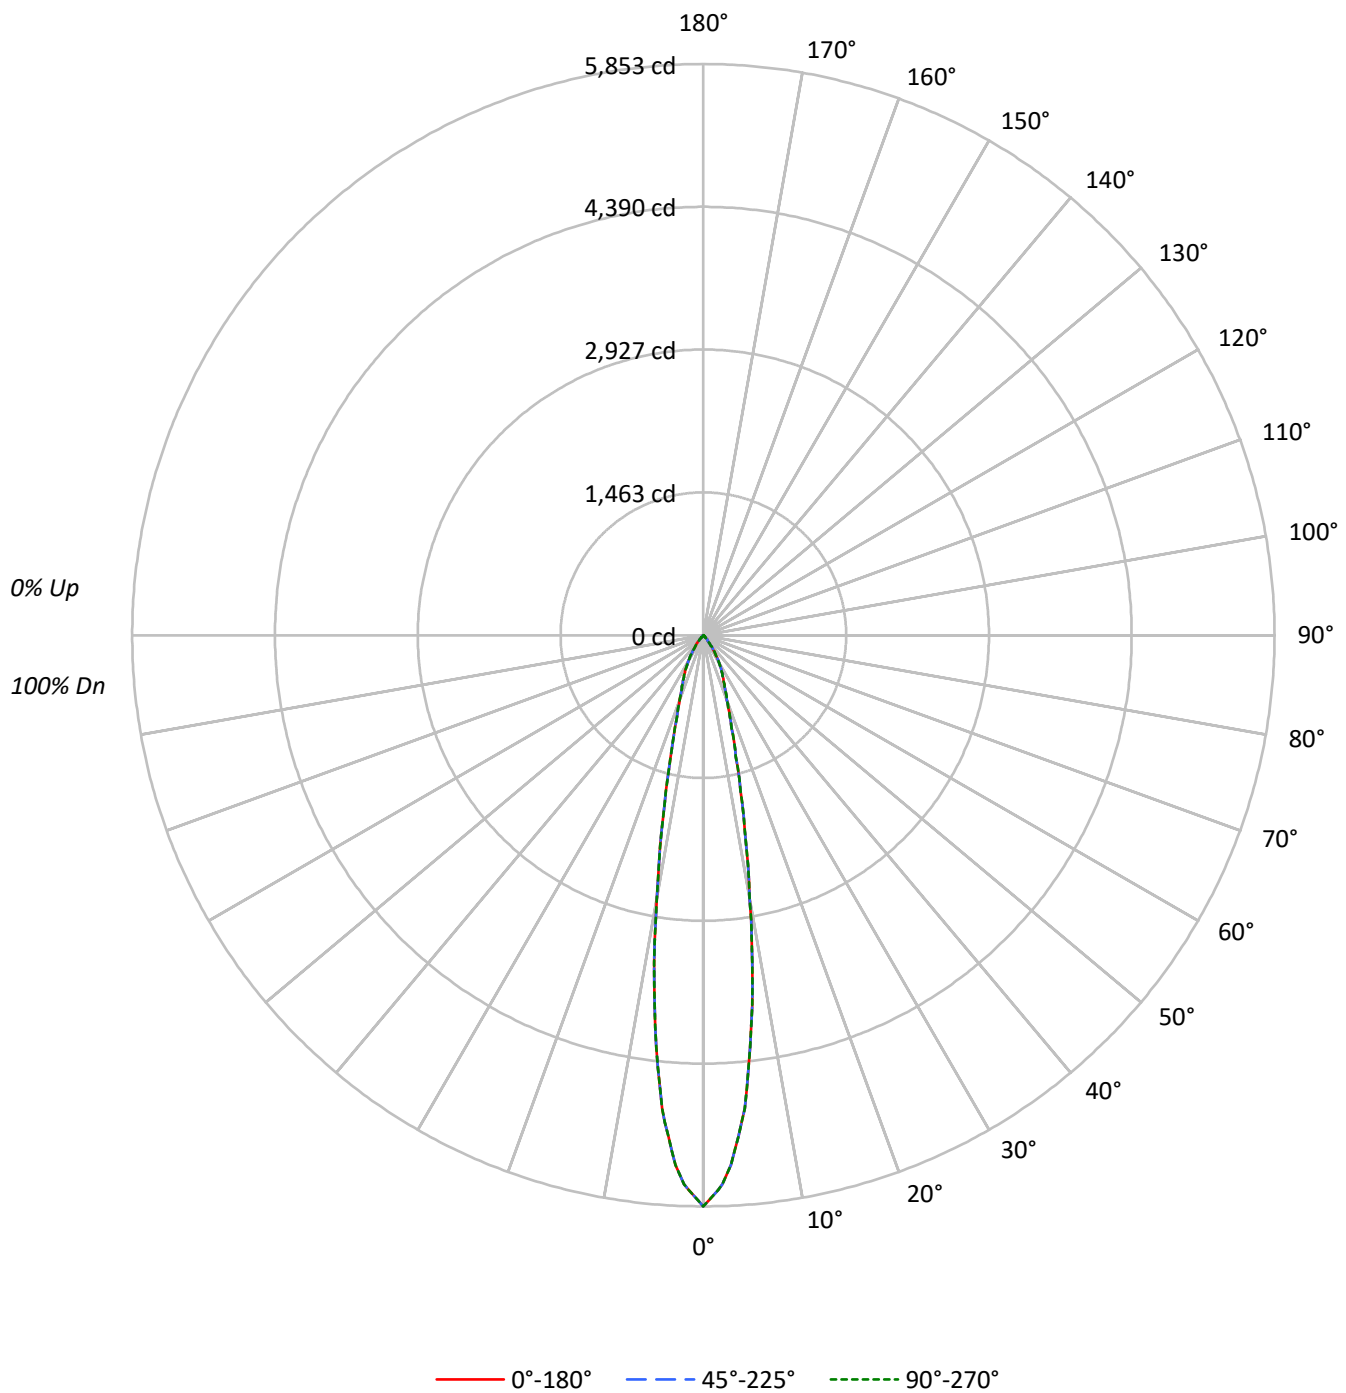

TEST NUMBER: P1057400

CATALOG NUMBER: PRLX-CYL2W-DR-X-927-10L-SP-U-S-X-X-BLAK

COEFFICIENT OF UTILIZATION - ZONAL CAVITY METHOD:

RF	20				20				20				20				20
RC	80				70				50				30				10
RW	70	50	30	10	70	50	30	10	50	30	10	50	30	10	50	30	10
RCR																	
0	119	119	119	119	116	116	116	116	111	111	111	106	106	106	102	102	102
1	115	113	111	109	112	110	109	107	106	105	104	103	102	101	99	99	98
2	111	107	104	101	109	105	102	100	102	100	98	99	97	96	97	95	94
3	107	102	98	95	105	101	97	94	98	95	93	96	93	91	94	92	90
4	103	97	93	90	102	96	93	90	94	91	89	93	90	88	91	89	87
5	100	94	89	86	98	93	89	86	91	88	85	90	86	84	88	86	83
6	97	90	85	82	95	89	85	82	88	84	82	87	83	81	85	83	81
7	94	87	82	79	92	86	82	79	85	81	79	84	81	78	83	80	78
8	91	84	79	76	90	83	79	76	82	79	76	81	78	76	81	78	75
9	88	81	77	74	87	81	76	74	80	76	73	79	76	73	78	75	73
10	86	79	74	71	85	78	74	71	77	74	71	77	73	71	76	73	71

AVERAGE LUMINANCE (cd/sqm):

	0°	45°	90°
0°	3772046	3772046	3772046
5°	3148694	3148694	3148694
10°	1795501	1795501	1795501
15°	859426	859426	859426
20°	481073	481073	481073
25°	337032	337032	337032
30°	233577	233577	233577
35°	122645	122645	122645
40°	45174	45174	45174
45°	13397	13397	13397
50°	6316	6316	6316
55°	4719	4719	4719
60°	4124	4124	4124
65°	3202	3202	3202
70°	2073	2073	2073
75°	0	0	0
80°	0	0	0
85°	0	0	0

MAXIMUM LUMINANCE 45°-90°:

Horizontal Angle: 0°

Vertical Angle: 45°

Luminance: 13397 cd/sqm

TEST NUMBER: P1057400

CATALOG NUMBER: PRLX-CYL2W-DR-X-927-10L-SP-U-S-X-X-BLAK

ZONAL LUMENS:

Zone	Lumens	% Fixture
0°-10°	392.0	35.1
10°-20°	381.6	34.2
20°-30°	219.6	19.7
30°-40°	101.3	9.1
40°-50°	15.4	1.4
50°-60°	3.7	0.3
60°-70°	1.8	0.2
70°-80°	0.4	0.0
80°-90°	0.0	0.0
90°-100°	0.0	0.0
100°-110°	0.0	0.0
110°-120°	0.0	0.0
120°-130°	0.0	0.0
130°-140°	0.0	0.0
140°-150°	0.0	0.0
150°-160°	0.0	0.0
160°-170°	0.0	0.0
170°-180°	0.0	0.0
0°-30°	993.3	89.0
0°-40°	1094.6	98.1
0°-60°	1113.6	99.8
0°-90°	1115.9	100.0
90°-120°	0.0	0.0
90°-150°	0.0	0.0
90°-180°	0.0	0.0
0°-180°	1115.9	100.0

CANDELA DISTRIBUTION:

	0°	22.5°	45°	67.5°	90°	Flux
0°	5853	5853	5853	5853	5853	
5°	4868	4868	4868	4868	4868	392
15°	1288	1288	1288	1288	1288	382
25°	474	474	474	474	474	220
35°	156	156	156	156	156	101
45°	15	15	15	15	15	15
55°	4	4	4	4	4	4
65°	2	2	2	2	2	2
75°	0	0	0	0	0	0
85°	0	0	0	0	0	0
90°	0	0	0	0	0	

TEST NUMBER: P1057400

CATALOG NUMBER: PRLX-CYL2W-DR-X-927-10L-SP-U-S-X-X-BLAK

CANDELA DISTRIBUTION (FULL):

	0°	22.5°	45°	67.5°	90°
0°	5853.4	5853.4	5853.4	5853.4	5853.4
1°	5742.6	5742.6	5742.6	5742.6	5742.6
2°	5631.8	5631.8	5631.8	5631.8	5631.8
3°	5434.6	5434.6	5434.6	5434.6	5434.6
4°	5151.0	5151.0	5151.0	5151.0	5151.0
5°	4867.5	4867.5	4867.5	4867.5	4867.5
6°	4453.3	4453.3	4453.3	4453.3	4453.3
7°	4039.1	4039.1	4039.1	4039.1	4039.1
8°	3614.4	3614.4	3614.4	3614.4	3614.4
9°	3179.2	3179.2	3179.2	3179.2	3179.2
10°	2743.9	2743.9	2743.9	2743.9	2743.9
11°	2396.8	2396.8	2396.8	2396.8	2396.8
12°	2049.6	2049.6	2049.6	2049.6	2049.6
13°	1758.4	1758.4	1758.4	1758.4	1758.4
14°	1523.3	1523.3	1523.3	1523.3	1523.3
15°	1288.2	1288.2	1288.2	1288.2	1288.2
16°	1140.8	1140.8	1140.8	1140.8	1140.8
17°	993.3	993.3	993.3	993.3	993.3
18°	876.0	876.0	876.0	876.0	876.0
19°	788.7	788.7	788.7	788.7	788.7
20°	701.5	701.5	701.5	701.5	701.5
21°	648.0	648.0	648.0	648.0	648.0
22°	594.5	594.5	594.5	594.5	594.5
23°	549.0	549.0	549.0	549.0	549.0
24°	511.5	511.5	511.5	511.5	511.5
25°	474.0	474.0	474.0	474.0	474.0
26°	442.0	442.0	442.0	442.0	442.0
27°	410.0	410.0	410.0	410.0	410.0
28°	377.9	377.9	377.9	377.9	377.9
29°	345.9	345.9	345.9	345.9	345.9
30°	313.9	313.9	313.9	313.9	313.9
31°	280.6	280.6	280.6	280.6	280.6
32°	247.3	247.3	247.3	247.3	247.3
33°	215.7	215.7	215.7	215.7	215.7
34°	185.8	185.8	185.8	185.8	185.8
35°	155.9	155.9	155.9	155.9	155.9
36°	131.9	131.9	131.9	131.9	131.9
37°	107.9	107.9	107.9	107.9	107.9
38°	87.4	87.4	87.4	87.4	87.4
39°	70.6	70.6	70.6	70.6	70.6
40°	53.7	53.7	53.7	53.7	53.7
41°	43.6	43.6	43.6	43.6	43.6
42°	33.5	33.5	33.5	33.5	33.5
43°	25.7	25.7	25.7	25.7	25.7
44°	20.2	20.2	20.2	20.2	20.2

TEST NUMBER: P1057400

CATALOG NUMBER: PRLX-CYL2W-DR-X-927-10L-SP-U-S-X-X-BLAK

CANDELA DISTRIBUTION (continued):

	0°	22.5°	45°	67.5°	90°
45°	14.7	14.7	14.7	14.7	14.7
46°	12.2	12.2	12.2	12.2	12.2
47°	9.7	9.7	9.7	9.7	9.7
48°	8.0	8.0	8.0	8.0	8.0
49°	7.2	7.2	7.2	7.2	7.2
50°	6.3	6.3	6.3	6.3	6.3
51°	5.5	5.5	5.5	5.5	5.5
52°	4.6	4.6	4.6	4.6	4.6
53°	4.2	4.2	4.2	4.2	4.2
54°	4.2	4.2	4.2	4.2	4.2
55°	4.2	4.2	4.2	4.2	4.2
56°	3.8	3.8	3.8	3.8	3.8
57°	3.4	3.4	3.4	3.4	3.4
58°	3.2	3.2	3.2	3.2	3.2
59°	3.2	3.2	3.2	3.2	3.2
60°	3.2	3.2	3.2	3.2	3.2
61°	2.7	2.7	2.7	2.7	2.7
62°	2.3	2.3	2.3	2.3	2.3
63°	2.1	2.1	2.1	2.1	2.1
64°	2.1	2.1	2.1	2.1	2.1
65°	2.1	2.1	2.1	2.1	2.1
66°	1.7	1.7	1.7	1.7	1.7
67°	1.3	1.3	1.3	1.3	1.3
68°	1.1	1.1	1.1	1.1	1.1
69°	1.1	1.1	1.1	1.1	1.1
70°	1.1	1.1	1.1	1.1	1.1
71°	1.1	1.1	1.1	1.1	1.1
72°	1.1	1.1	1.1	1.1	1.1
73°	0.8	0.8	0.8	0.8	0.8
74°	0.4	0.4	0.4	0.4	0.4
75°	0.0	0.0	0.0	0.0	0.0
76°	0.0	0.0	0.0	0.0	0.0
77°	0.0	0.0	0.0	0.0	0.0
78°	0.0	0.0	0.0	0.0	0.0
79°	0.0	0.0	0.0	0.0	0.0
80°	0.0	0.0	0.0	0.0	0.0
81°	0.0	0.0	0.0	0.0	0.0
82°	0.0	0.0	0.0	0.0	0.0
83°	0.0	0.0	0.0	0.0	0.0
84°	0.0	0.0	0.0	0.0	0.0
85°	0.0	0.0	0.0	0.0	0.0
86°	0.0	0.0	0.0	0.0	0.0
87°	0.0	0.0	0.0	0.0	0.0
88°	0.0	0.0	0.0	0.0	0.0
89°	0.0	0.0	0.0	0.0	0.0



TEST NUMBER: P1057400
CATALOG NUMBER: PRLX-CYL2W-DR-X-927-10L-SP-U-S-X-X-BLAK

CANDELA DISTRIBUTION (continued):

	0°	22.5°	45°	67.5°	90°
90°	0.0	0.0	0.0	0.0	0.0

TEST NUMBER: P1057400

CATALOG NUMBER: PRLX-CYL2W-DR-X-927-10L-SP-U-S-X-BLAK

CIE UGR TABLE:

Reflectances:											
Ceiling		0.7	0.7	0.5	0.5	0.3	0.7	0.7	0.5	0.5	0.3
Wall		0.5	0.3	0.5	0.3	0.3	0.5	0.3	0.5	0.3	0.3
Reference plane		0.2	0.2	0.2	0.2	0.2	0.2	0.2	0.2	0.2	0.2
Room dimensions		Viewed crosswise					Viewed endwise				
X=2H	Y=2H	3.87	4.77	4.23	5.08	5.39	3.87	4.77	4.23	5.08	5.39
	3H	4.34	5.13	4.72	5.46	5.83	4.34	5.13	4.72	5.46	5.83
	4H	4.29	5.02	4.70	5.37	5.76	4.29	5.02	4.70	5.37	5.76
	6H	4.17	4.84	4.59	5.21	5.61	4.17	4.84	4.59	5.21	5.61
	8H	4.11	4.73	4.55	5.13	5.54	4.11	4.73	4.55	5.13	5.54
	12H	4.05	4.64	4.48	5.03	5.46	4.05	4.64	4.48	5.03	5.46
4H	2H	4.16	4.89	4.57	5.25	5.64	4.16	4.89	4.57	5.25	5.64
	3H	4.83	5.43	5.25	5.84	6.24	4.83	5.43	5.25	5.84	6.24
	4H	4.75	5.28	5.19	5.70	6.15	4.75	5.28	5.19	5.70	6.15
	6H	4.63	5.08	5.10	5.53	6.01	4.63	5.08	5.10	5.53	6.01
	8H	4.55	4.97	5.03	5.42	5.90	4.55	4.97	5.03	5.42	5.90
	12H	4.48	4.84	4.98	5.33	5.81	4.48	4.84	4.98	5.33	5.81
8H	4H	4.62	5.04	5.10	5.49	5.96	4.62	5.04	5.10	5.49	5.96
	6H	4.49	4.81	5.00	5.32	5.81	4.49	4.81	5.00	5.32	5.81
	8H	4.41	4.70	4.95	5.22	5.72	4.41	4.70	4.95	5.22	5.72
	12H	4.35	4.60	4.88	5.10	5.68	4.35	4.60	4.88	5.10	5.68
12H	4H	4.55	4.91	5.04	5.40	5.87	4.55	4.91	5.04	5.40	5.87
	6H	4.41	4.70	4.95	5.22	5.72	4.41	4.70	4.95	5.22	5.72
	8H	4.35	4.60	4.88	5.10	5.68	4.35	4.60	4.88	5.10	5.68

LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-State Lighting Products

Report Prepared for

Cooper Lighting Solutions

PrentaLux 3D Printing

Report Number: SP1-2504-407-1

Test Date: 07/16/2025

Luminaire Tested: PRLX-CYL2-X-927-10L-FL-U-S-X-X-BLAK

Data in this report applies to families of products including PRLX-CYL2-X-927-10L-FL-U-S-X-X-BLAK


Test Information

Test Method: LM-79-2019
 Report Number: SP1-2504-407-1
 Test Lab: COOPER LIGHTING SOLUTIONS
 Photometer: SP1 - 76IN SPHERE
 Measurement Geometry: 4π
 Issue Date: 07/30/2025
 Manufacturer: COOPER LIGHTING SOLUTIONS
 Product Line: PentaLux 3D Printing
 Catalog Number: **PRLX-CYL2-X-927-10L-FL-U-S-X-X-BLAK**
 Description: PentaLux 2-INCH CYLINDER, BLACK TRIM, FLOOD OPTIC, 1000 LUMENS, 2700K

Spectral Parameters

CCT (K): 2742
 CIE u' : 0.2602
 CIE v' : 0.5287
 Duv: 0.0015
 CIE x: 0.4591
 CIE y: 0.4146
 CIE z: 0.1264
 Peak Wavelength (nm): 630
 Dominant Wavelength (nm): 583
 Purity: 62.24215
 R_f: 91.5
 R_g: 100.2

CRI (Ra): 93.2
 R1: 94.5
 R2: 95.6
 R3: 95.5
 R4: 95.6
 R5: 93.8
 R6: 96.5
 R7: 92.3
 R8: 81.6
 R9: 55.9
 R10: 87.9
 R11: 97.0
 R12: 84.0
 R13: 94.5
 R14: 96.0
 R15: 88.9

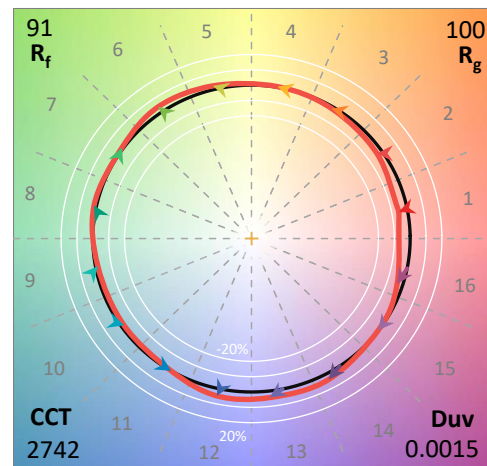

Test Conditions


Stabilization Time: 41M
 Operation Time: 1H 41M
 Sphere Temperature (°C): 24.0

REPORT NUMBER: SP1-2504-407-1


Measurement and Test Equipment			
Instrument	Identification Number	Calibration Date	Calibration Due Date
Photometer	76INCH SPHERE IN0058	6/16/2025	12/16/2025
Power Meter	XITRON INXT2011004	1/21/2025	1/21/2026
AC Power Source	CHROMA 61603 IN0063	10/22/2024	10/22/2025
DC Power Source	AGILENT E3634A IN0208	10/22/2024	10/22/2025
Sphere Thermometer	ONSET IN0085	10/22/2024	10/22/2025
Room Thermometer	ONSET IN0046	10/22/2024	10/22/2025

REPORT NUMBER: SP1-2504-407-1

CIE 1931 Chromaticity Diagram

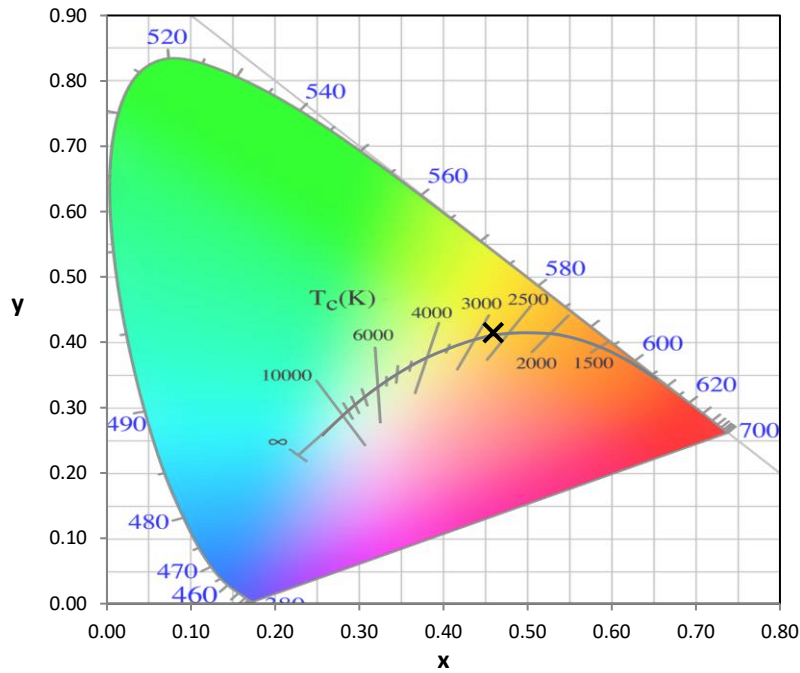


CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles

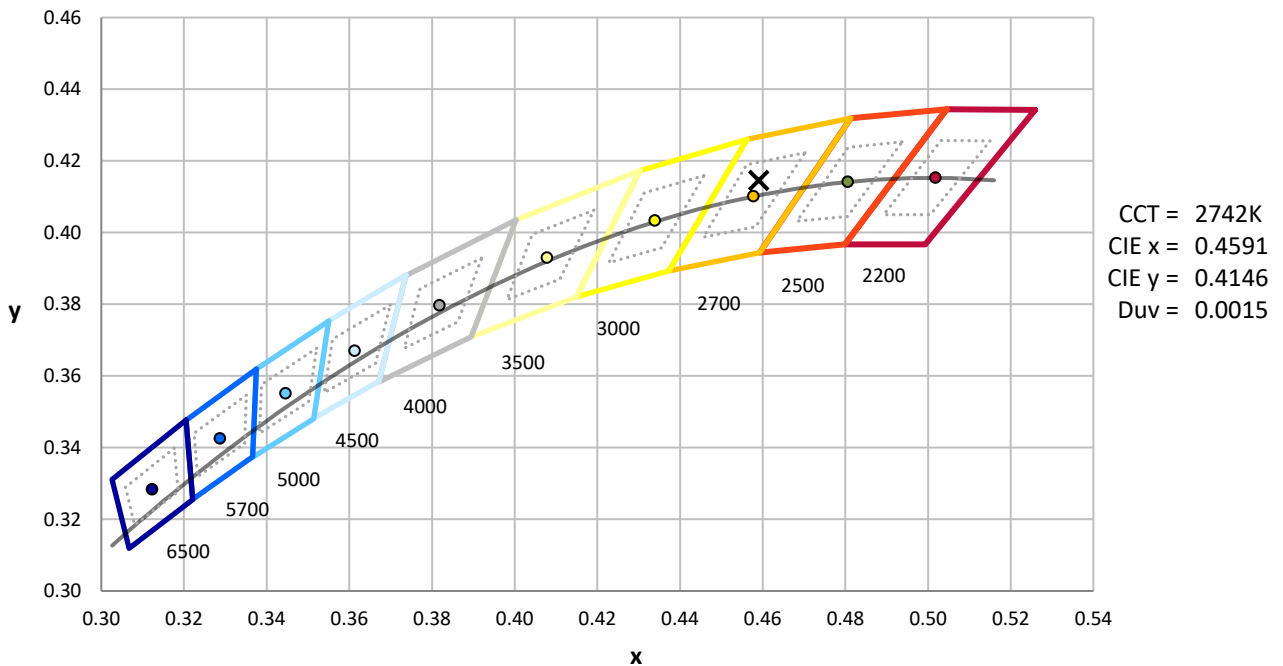

Point lies inside the ANSI 2700K 4-step quadrangle

REPORT NUMBER: SP1-2504-407-1

Photopic Flux vs. Wavelength

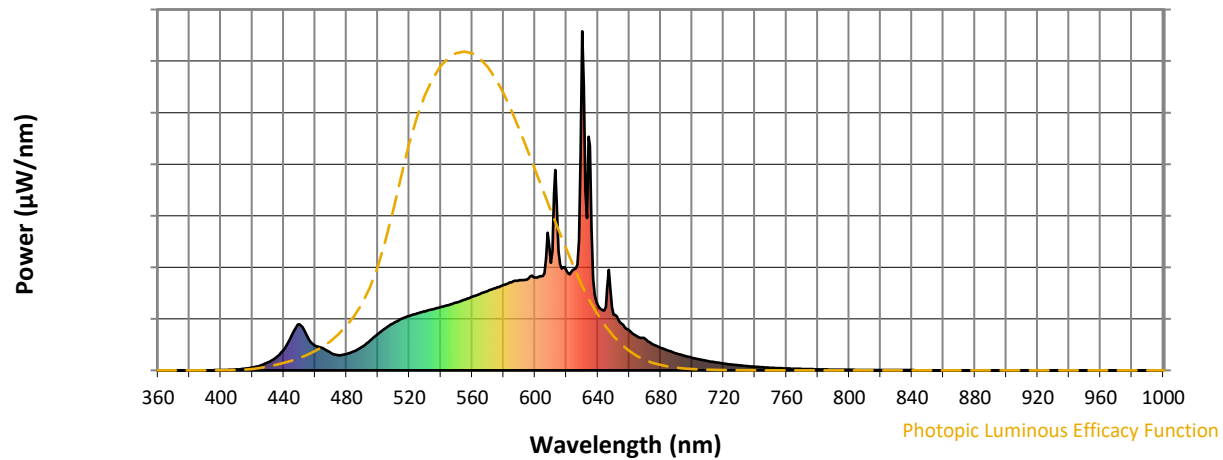


Photopic Lumens: NR

λ (nm)	Power $\text{W}^\wedge/\text{nm}$	Lumens (ϕ/nm)	λ (nm)	Power $\text{W}^\wedge/\text{nm}$	Lumens (ϕ/nm)	λ (nm)	Power $\text{W}^\wedge/\text{nm}$	Lumens (ϕ/nm)	λ (nm)	Power $\text{W}^\wedge/\text{nm}$	Lumens (ϕ/nm)	λ (nm)	Power $\text{W}^\wedge/\text{nm}$	Lumens (ϕ/nm)
360	0	NR	490	70	NR	620	293	NR	750	8	NR	880	0	NR
365	0	NR	495	88	NR	625	299	NR	755	7	NR	885	0	NR
370	0	NR	500	108	NR	630	1000	NR	760	6	NR	890	0	NR
375	0	NR	505	125	NR	635	661	NR	765	5	NR	895	0	NR
380	0	NR	510	140	NR	640	192	NR	770	4	NR	900	0	NR
385	0	NR	515	152	NR	645	187	NR	775	4	NR	905	0	NR
390	0	NR	520	160	NR	650	164	NR	780	3	NR	910	0	NR
395	0	NR	525	168	NR	655	138	NR	785	3	NR	915	0	NR
400	1	NR	530	174	NR	660	118	NR	790	2	NR	920	0	NR
405	2	NR	535	180	NR	665	100	NR	795	2	NR	925	0	NR
410	3	NR	540	187	NR	670	94	NR	800	2	NR	930	0	NR
415	5	NR	545	193	NR	675	77	NR	805	1	NR	935	0	NR
420	9	NR	550	200	NR	680	67	NR	810	1	NR	940	0	NR
425	14	NR	555	208	NR	685	58	NR	815	1	NR	945	0	NR
430	23	NR	560	217	NR	690	50	NR	820	1	NR	950	0	NR
435	38	NR	565	226	NR	695	43	NR	825	1	NR	955	0	NR
440	61	NR	570	234	NR	700	37	NR	830	1	NR	960	0	NR
445	103	NR	575	243	NR	705	32	NR	835	1	NR	965	0	NR
450	135	NR	580	252	NR	710	28	NR	840	1	NR	970	0	NR
455	100	NR	585	260	NR	715	23	NR	845	0	NR	975	0	NR
460	72	NR	590	266	NR	720	20	NR	850	0	NR	980	0	NR
465	65	NR	595	268	NR	725	17	NR	855	0	NR	985	0	NR
470	51	NR	600	274	NR	730	15	NR	860	0	NR	990	0	NR
475	45	NR	605	278	NR	735	13	NR	865	0	NR	995	0	NR
480	48	NR	610	317	NR	740	11	NR	870	0	NR	1000	0	NR
485	57	NR	615	350	NR	745	9	NR	875	0	NR			

REPORT NUMBER: SP1-2504-407-1

Scotopic Flux vs. Wavelength

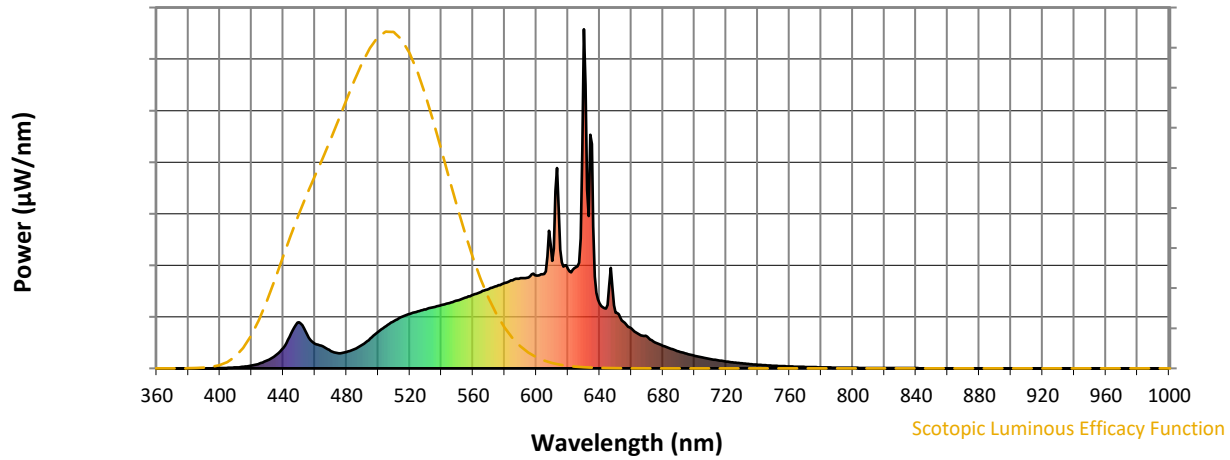


Scotopic Lumens: NR

S/P: 1.28

λ (nm)	Power W [^] /nm	Lumens (Φ/nm)	λ (nm)	Power W [^] /nm	Lumens (Φ/nm)	λ (nm)	Power W [^] /nm	Lumens (Φ/nm)	λ (nm)	Power W [^] /nm	Lumens (Φ/nm)	λ (nm)	Power W [^] /nm	Lumens (Φ/nm)
360	0	NR	490	70	NR	620	293	NR	750	8	NR	880	0	NR
365	0	NR	495	88	NR	625	299	NR	755	7	NR	885	0	NR
370	0	NR	500	108	NR	630	1000	NR	760	6	NR	890	0	NR
375	0	NR	505	125	NR	635	661	NR	765	5	NR	895	0	NR
380	0	NR	510	140	NR	640	192	NR	770	4	NR	900	0	NR
385	0	NR	515	152	NR	645	187	NR	775	4	NR	905	0	NR
390	0	NR	520	160	NR	650	164	NR	780	3	NR	910	0	NR
395	0	NR	525	168	NR	655	138	NR	785	3	NR	915	0	NR
400	1	NR	530	174	NR	660	118	NR	790	2	NR	920	0	NR
405	2	NR	535	180	NR	665	100	NR	795	2	NR	925	0	NR
410	3	NR	540	187	NR	670	94	NR	800	2	NR	930	0	NR
415	5	NR	545	193	NR	675	77	NR	805	1	NR	935	0	NR
420	9	NR	550	200	NR	680	67	NR	810	1	NR	940	0	NR
425	14	NR	555	208	NR	685	58	NR	815	1	NR	945	0	NR
430	23	NR	560	217	NR	690	50	NR	820	1	NR	950	0	NR
435	38	NR	565	226	NR	695	43	NR	825	1	NR	955	0	NR
440	61	NR	570	234	NR	700	37	NR	830	1	NR	960	0	NR
445	103	NR	575	243	NR	705	32	NR	835	1	NR	965	0	NR
450	135	NR	580	252	NR	710	28	NR	840	1	NR	970	0	NR
455	100	NR	585	260	NR	715	23	NR	845	0	NR	975	0	NR
460	72	NR	590	266	NR	720	20	NR	850	0	NR	980	0	NR
465	65	NR	595	268	NR	725	17	NR	855	0	NR	985	0	NR
470	51	NR	600	274	NR	730	15	NR	860	0	NR	990	0	NR
475	45	NR	605	278	NR	735	13	NR	865	0	NR	995	0	NR
480	48	NR	610	317	NR	740	11	NR	870	0	NR	1000	0	NR
485	57	NR	615	350	NR	745	9	NR	875	0	NR			

REPORT NUMBER: SP1-2504-407-1

Melanopic Flux vs. Wavelength

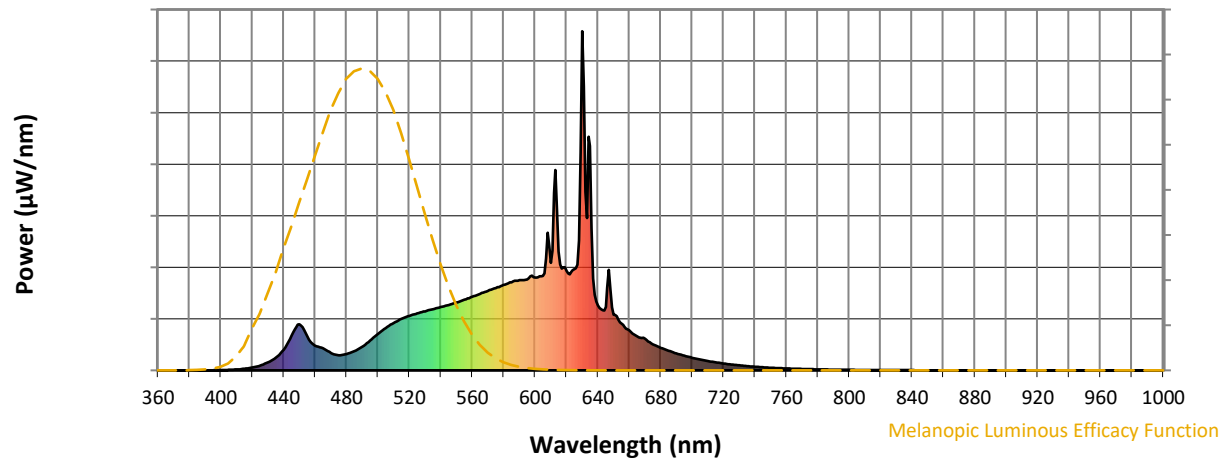
Melanopic Lumens: NR
M/P: 2.38


λ (nm)	Power $\text{W}^{\wedge}/\text{nm}$	Lumens (ϕ/nm)	λ (nm)	Power $\text{W}^{\wedge}/\text{nm}$	Lumens (ϕ/nm)	λ (nm)	Power $\text{W}^{\wedge}/\text{nm}$	Lumens (ϕ/nm)	λ (nm)	Power $\text{W}^{\wedge}/\text{nm}$	Lumens (ϕ/nm)	λ (nm)	Power $\text{W}^{\wedge}/\text{nm}$	Lumens (ϕ/nm)
360	0	NR	490	70	NR	620	293	NR	750	8	NR	880	0	NR
365	0	NR	495	88	NR	625	299	NR	755	7	NR	885	0	NR
370	0	NR	500	108	NR	630	1000	NR	760	6	NR	890	0	NR
375	0	NR	505	125	NR	635	661	NR	765	5	NR	895	0	NR
380	0	NR	510	140	NR	640	192	NR	770	4	NR	900	0	NR
385	0	NR	515	152	NR	645	187	NR	775	4	NR	905	0	NR
390	0	NR	520	160	NR	650	164	NR	780	3	NR	910	0	NR
395	0	NR	525	168	NR	655	138	NR	785	3	NR	915	0	NR
400	1	NR	530	174	NR	660	118	NR	790	2	NR	920	0	NR
405	2	NR	535	180	NR	665	100	NR	795	2	NR	925	0	NR
410	3	NR	540	187	NR	670	94	NR	800	2	NR	930	0	NR
415	5	NR	545	193	NR	675	77	NR	805	1	NR	935	0	NR
420	9	NR	550	200	NR	680	67	NR	810	1	NR	940	0	NR
425	14	NR	555	208	NR	685	58	NR	815	1	NR	945	0	NR
430	23	NR	560	217	NR	690	50	NR	820	1	NR	950	0	NR
435	38	NR	565	226	NR	695	43	NR	825	1	NR	955	0	NR
440	61	NR	570	234	NR	700	37	NR	830	1	NR	960	0	NR
445	103	NR	575	243	NR	705	32	NR	835	1	NR	965	0	NR
450	135	NR	580	252	NR	710	28	NR	840	1	NR	970	0	NR
455	100	NR	585	260	NR	715	23	NR	845	0	NR	975	0	NR
460	72	NR	590	266	NR	720	20	NR	850	0	NR	980	0	NR
465	65	NR	595	268	NR	725	17	NR	855	0	NR	985	0	NR
470	51	NR	600	274	NR	730	15	NR	860	0	NR	990	0	NR
475	45	NR	605	278	NR	735	13	NR	865	0	NR	995	0	NR
480	48	NR	610	317	NR	740	11	NR	870	0	NR	1000	0	NR
485	57	NR	615	350	NR	745	9	NR	875	0	NR			

REPORT NUMBER: SP1-2504-407-1





TM-30-18

Summary

$R_f = 91.5$
 $R_g = 100.2$
 $CIE R_a = 93.2$
 $R_9 = 55.9$

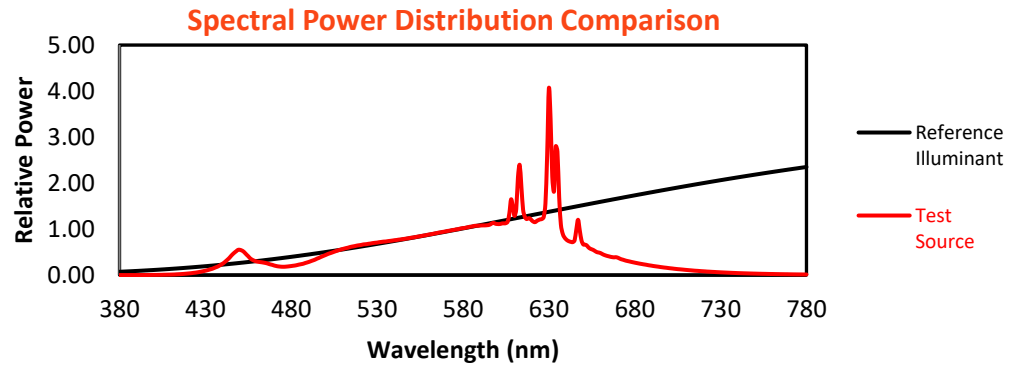


Color Vector Graphics

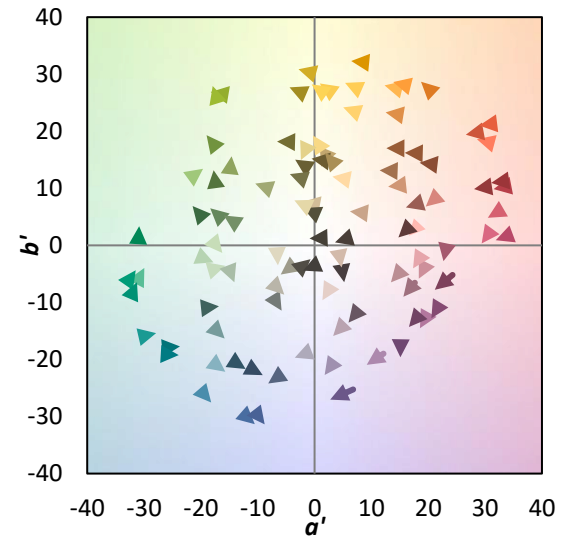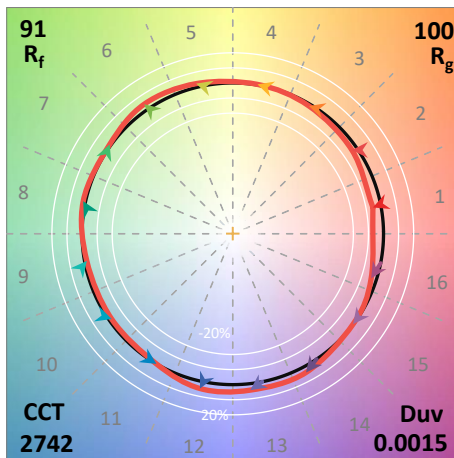
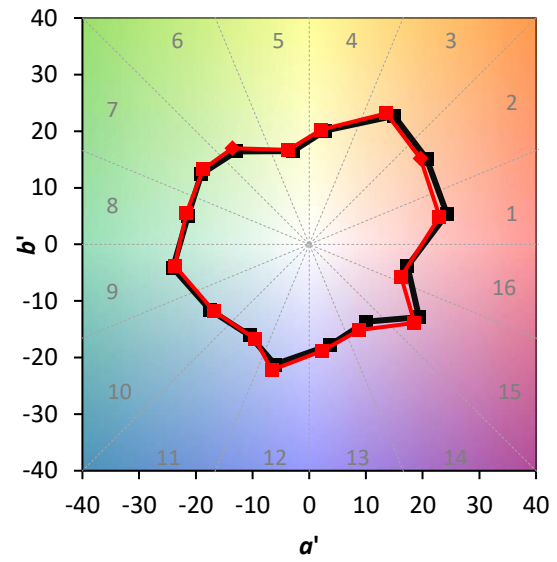
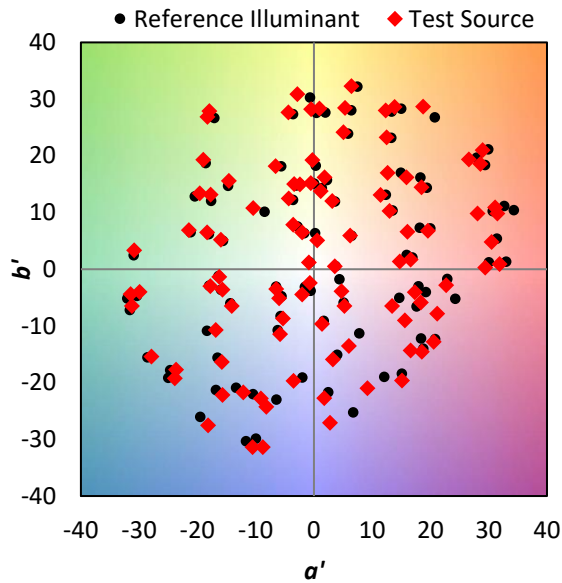


Individual Sample Fidelity Index ($R_{f,i}$)



CES01 = 86	CES26 = 92	CES51 = 97	CES76 = 89
CES02 = 64	CES27 = 96	CES52 = 97	CES77 = 85
CES03 = 32	CES28 = 96	CES53 = 94	CES78 = 87
CES04 = 70	CES29 = 91	CES54 = 99	CES79 = 88
CES05 = 51	CES30 = 96	CES55 = 99	CES80 = 91
CES06 = 51	CES31 = 92	CES56 = 94	CES81 = 69
CES07 = 44	CES32 = 85	CES57 = 93	CES82 = 96
CES08 = 43	CES33 = 92	CES58 = 94	CES83 = 93
CES09 = 29	CES34 = 94	CES59 = 98	CES84 = 96
CES10 = 77	CES35 = 97	CES60 = 97	CES85 = 80
CES11 = 59	CES36 = 91	CES61 = 97	CES86 = 76
CES12 = 66	CES37 = 93	CES62 = 96	CES87 = 92
CES13 = 44	CES38 = 100	CES63 = 93	CES88 = 96
CES14 = 74	CES39 = 97	CES64 = 95	CES89 = 81
CES15 = 72	CES40 = 94	CES65 = 90	CES90 = 97
CES16 = 48	CES41 = 94	CES66 = 93	CES91 = 86
CES17 = 50	CES42 = 92	CES67 = 92	CES92 = 78
CES18 = 57	CES43 = 92	CES68 = 93	CES93 = 87
CES19 = 72	CES44 = 99	CES69 = 95	CES94 = 71
CES20 = 68	CES45 = 95	CES70 = 90	CES95 = 86
CES21 = 87	CES46 = 94	CES71 = 90	CES96 = 92
CES22 = 79	CES47 = 86	CES72 = 96	CES97 = 93
CES23 = 92	CES48 = 93	CES73 = 86	CES98 = 92
CES24 = 91	CES49 = 93	CES74 = 89	CES99 = 91
CES25 = 72	CES50 = 97	CES75 = 90	

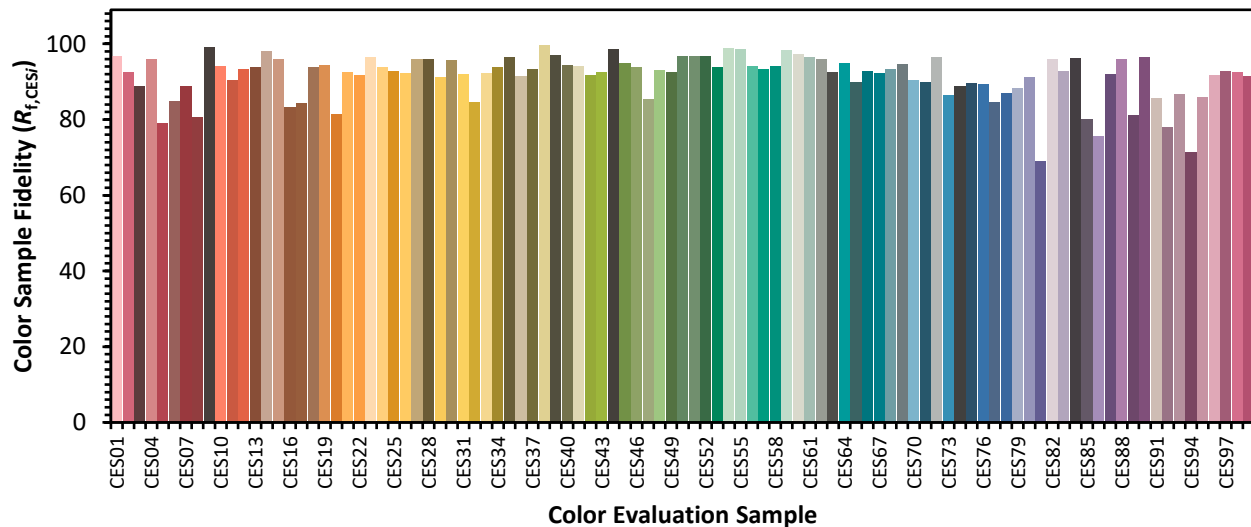

Color Rendition by Hue-Angle Bin

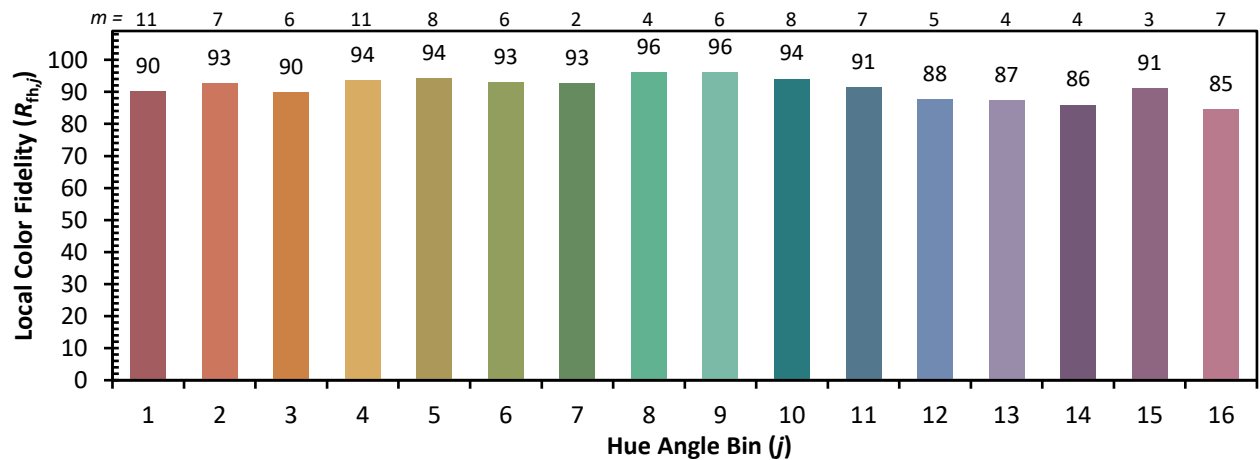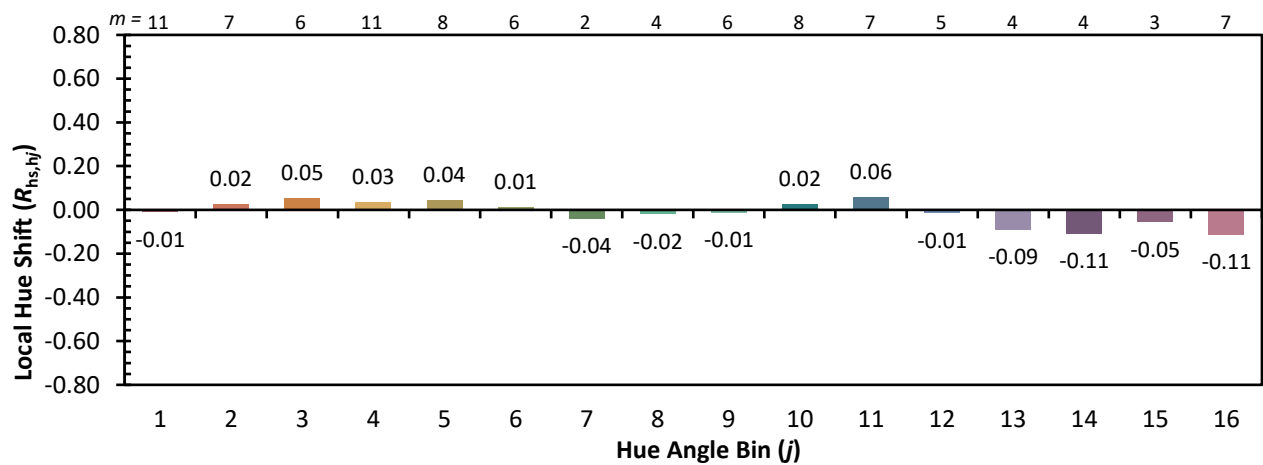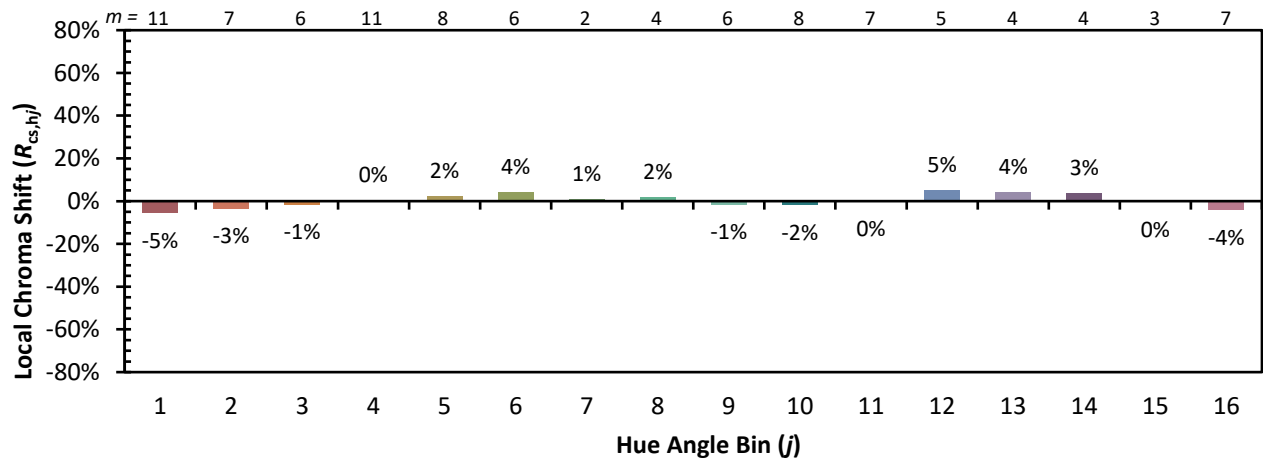

Measure Comparisons

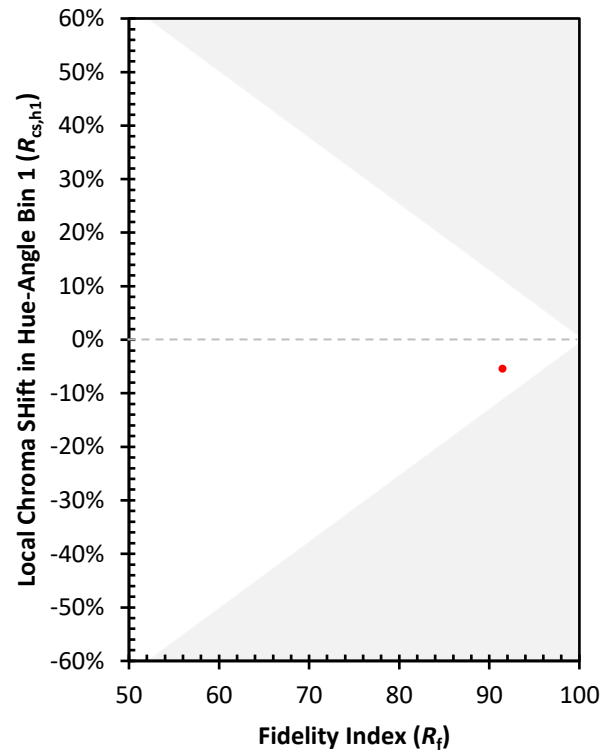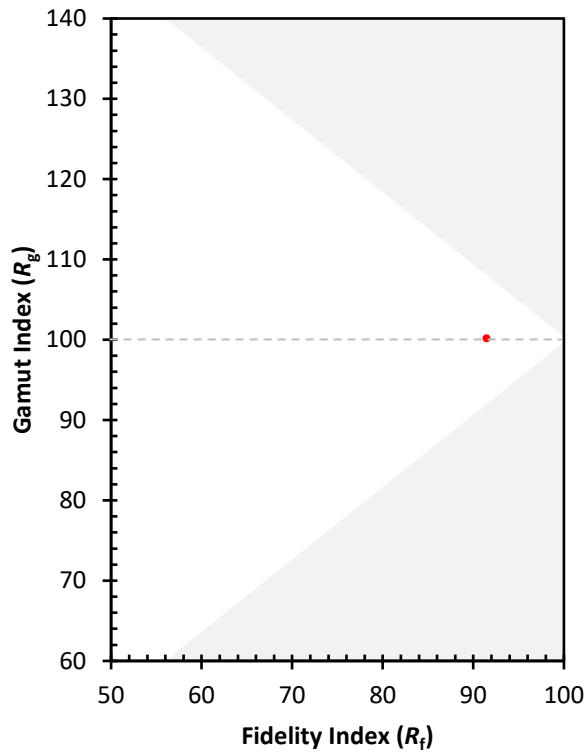

(END OF REPORT)