

Scaled data based on original data using  
LM-79-2019 Approved Method: Electrical and Photometric Measurements of Solid-  
State Lighting Products

Test Report Prepared for  
Cooper Lighting Solutions

Brand: STREETWORKS

Report Number: P360305

Luminaire Tested: NVN-SA1C-750-U-5WQ

Issue Date: 3/3/2020

**Test Information**

Test Method: LM-79-2019  
Report Number: P360305  
TEST IS SCALED FROM IESNA LM-79-08 TEST DATA (G2-1903-205-2)  
Test Lab: INNOVATION CENTER  
Issue Date: 3/3/2020  
Manufacturer: COOPER LIGHTING SOLUTIONS  
Product Line: STREETWORKS  
Catalog Number: NVN-SA1C-750-U-5WQ  
Description: NAVION ROADWAY AND AREA LUMINAIRE  
(1) 70 CRI, 5000K, 1050mA LIGHTSQUARE WITH 16 LEDS AND TYPE V WIDE OPTICS  
Light Source: -  
Ballast/Driver: ELECTRONIC DRIVER

**Summary**

Lumens per Lamp: N/A  
Luminaire Lumens: 7553 lumens  
Efficiency: N/A  
Efficacy: 128.0 lumens/watt  
Luminous Opening: Rectangular (W 0.5' x L: 0.5' x H: 0')  
IES Classification: Type V - Short  
BUG Rating: B3 - U0 - G2


Input Watts (W): 59  
Input Voltage (V): NR  
Input Current (Ain): NR  
Voltage Rise (V): NR  
Power Factor: NR  
Total Harmonic Distortion (THDi): NR  
Frequency (hertz): 60  
Stabilization Time: NR  
Operation Time: NR  
Ambient Temperature (°C): NR  
Test Distance: 28.75 FT



REPORT NUMBER: P360305  
 CATALOG NUMBER: NVN-SA1C-750-U-5WQ

## Iso-Footcandle Lines of Horizontal Illumination


✕ Max cd  
 - - - 1/2 Max cd

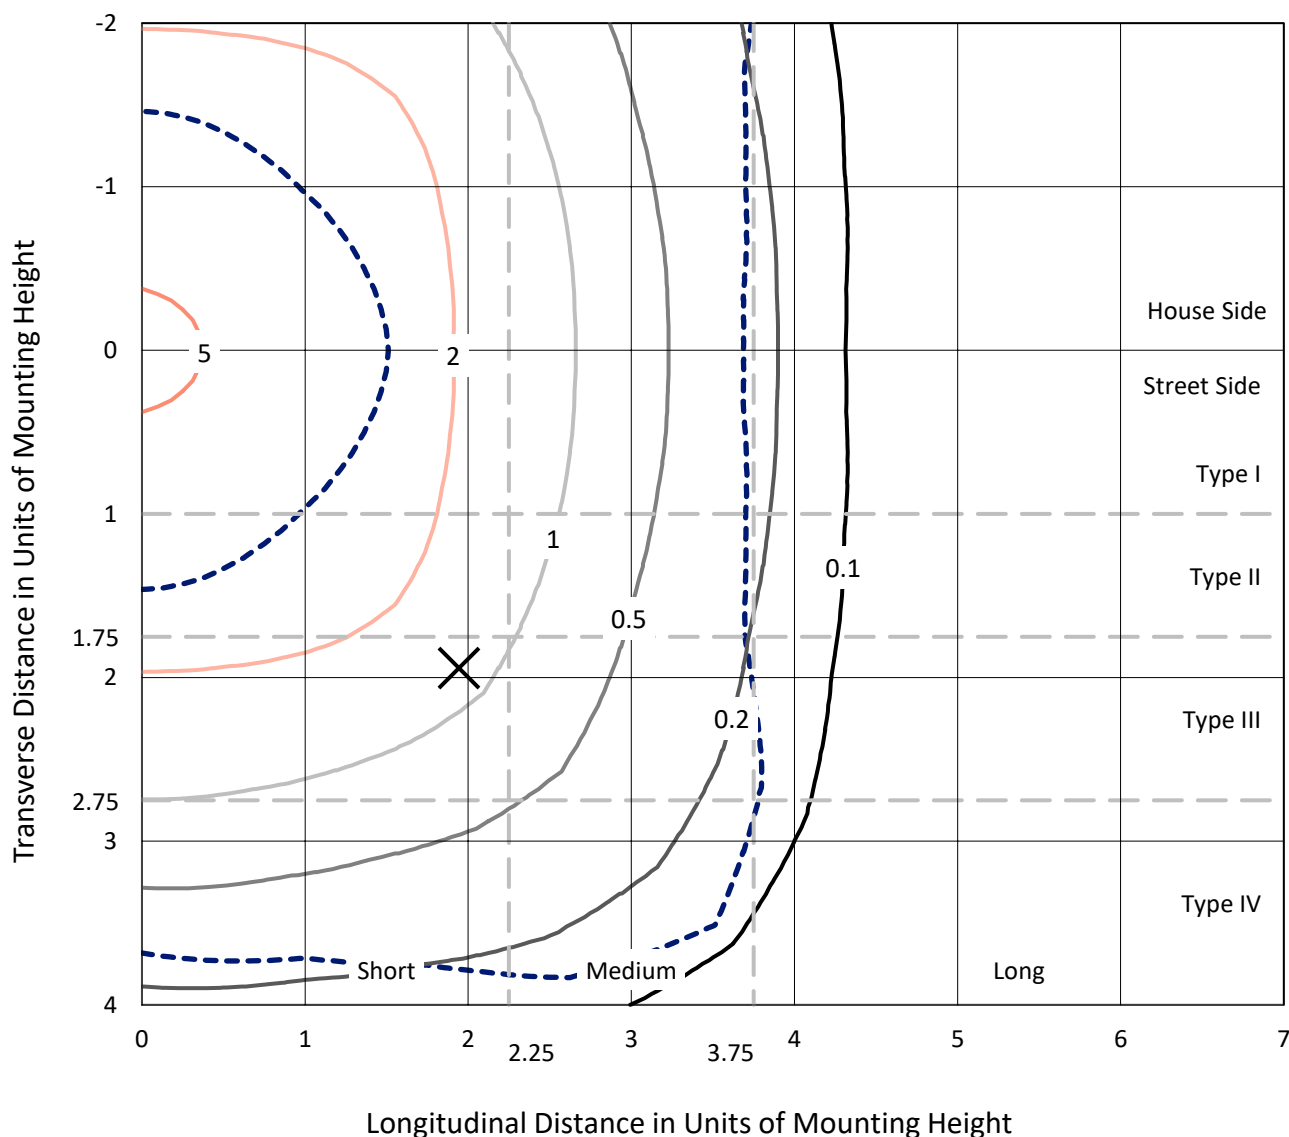

Based on 10 foot mounting height. Maximum calculated value = 6.2 fc  
 Type V - Short - N/A

REPORT NUMBER: P360305  
CATALOG NUMBER: NVN-SA1C-750-U-5WQ

## Luminous Intensity Polar Plot

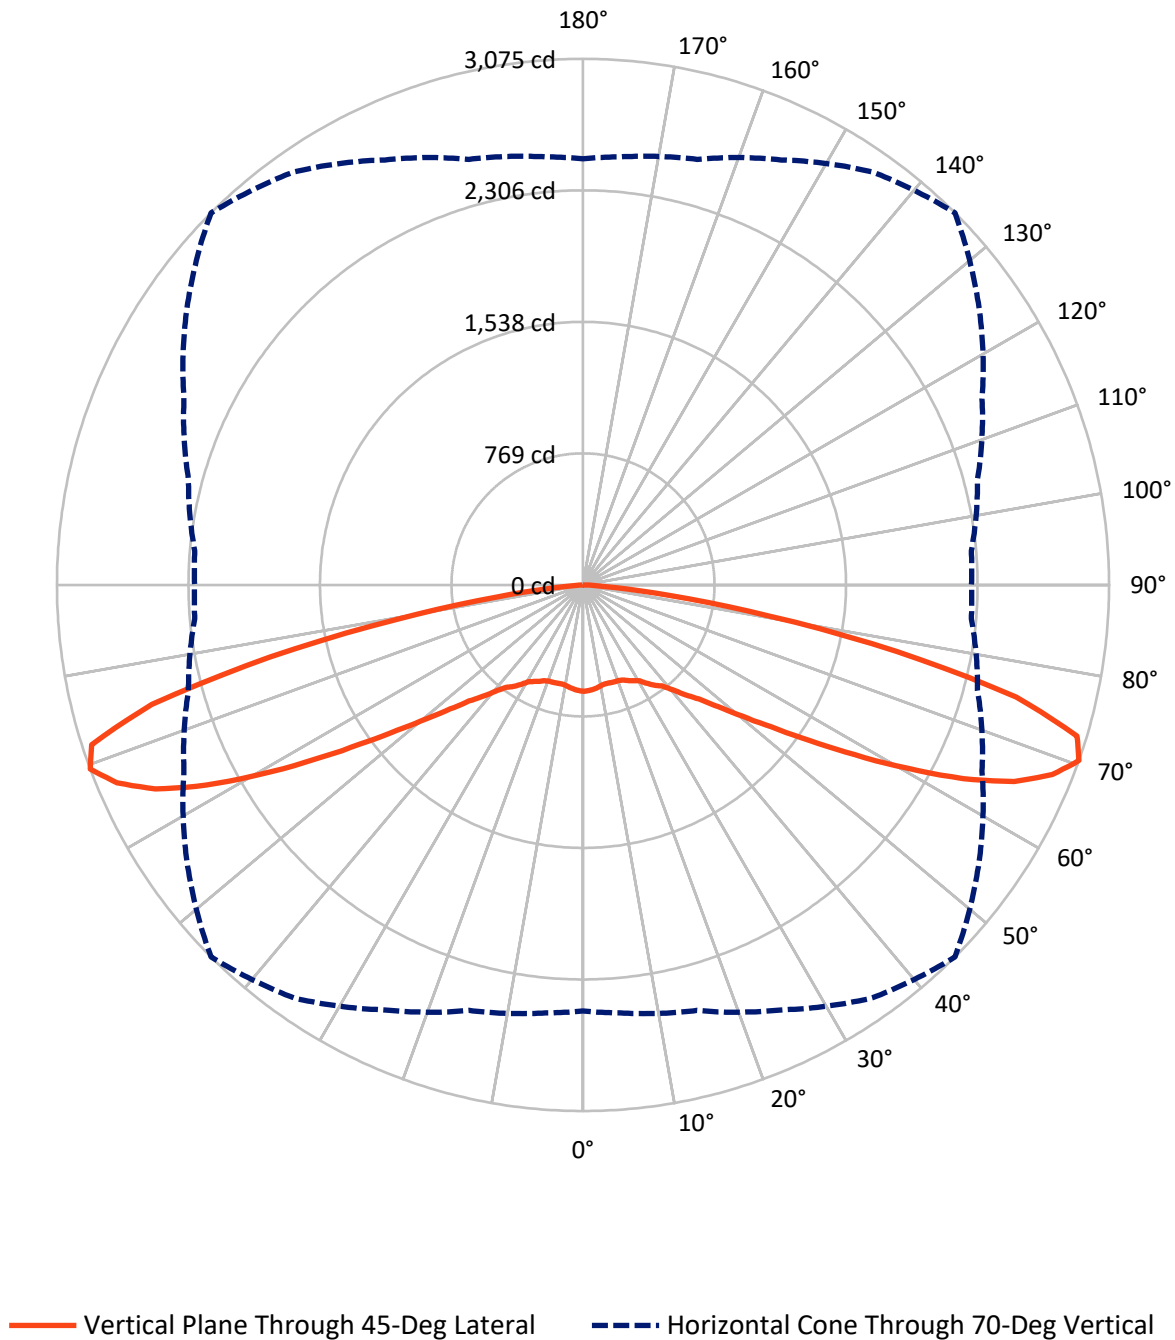

REPORT NUMBER: P360305

CATALOG NUMBER: NVN-SA1C-750-U-5WQ


**FLUX DISTRIBUTION:**

|                    |           | Downward | Upward | Total  |
|--------------------|-----------|----------|--------|--------|
| <b>House Side</b>  | Lumens    | 3776.5   | 0.0    | 3776.5 |
|                    | % Fixture | 50.0     | 0.0    | 50.0   |
| <b>Street Side</b> | Lumens    | 3776.5   | 0.0    | 3776.5 |
|                    | % Fixture | 50.0     | 0.0    | 50.0   |
| <b>Total</b>       | Lumens    | 7553.0   | 0.0    | 7553.0 |
|                    | % Fixture | 100.0    | 0.0    | 100.0  |

**ZONAL LUMENS:**

| Zone      | Lumens | % Fixture |
|-----------|--------|-----------|
| 0°-10°    | 58.0   | 0.8       |
| 10°-20°   | 169.5  | 2.2       |
| 20°-30°   | 288.9  | 3.8       |
| 30°-40°   | 451.5  | 6.0       |
| 40°-50°   | 765.1  | 10.1      |
| 50°-60°   | 1395.3 | 18.5      |
| 60°-70°   | 2402.1 | 31.8      |
| 70°-80°   | 1882.9 | 24.9      |
| 80°-90°   | 139.6  | 1.8       |
| 90°-100°  | 0.0    | 0.0       |
| 100°-110° | 0.0    | 0.0       |
| 110°-120° | 0.0    | 0.0       |
| 120°-130° | 0.0    | 0.0       |
| 130°-140° | 0.0    | 0.0       |
| 140°-150° | 0.0    | 0.0       |
| 150°-160° | 0.0    | 0.0       |
| 160°-170° | 0.0    | 0.0       |
| 170°-180° | 0.0    | 0.0       |
| 0°-90°    | 7553.0 | 100.0     |
| 0°-180°   | 7553.0 | 100.0     |

**Coefficient of Utilization**

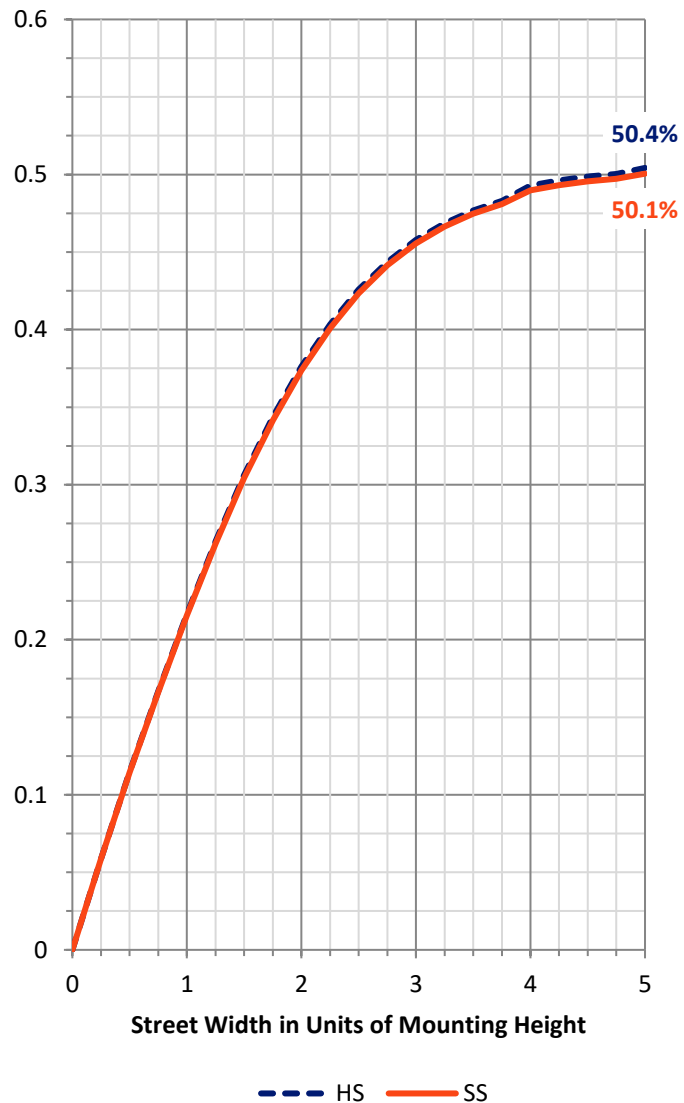

REPORT NUMBER: P360305


CATALOG NUMBER: NVN-SA1C-750-U-5WQ

**LUMINAIRE CLASSIFICATION SYSTEM LUMEN TABLE AND BUG RATING:**

| Zone |             | Lumens | % Fixture | Zone Rating/Lumen Limit |      |         |
|------|-------------|--------|-----------|-------------------------|------|---------|
|      |             |        |           | B                       | U    | G       |
| FL   | (0°-30°)    | 258.2  | 3.4       |                         |      |         |
| FM   | (30°-60°)   | 1306.0 | 17.3      |                         |      |         |
| FH   | (60°-80°)   | 2142.5 | 28.4      |                         |      | G2/5000 |
| FVH  | (80°-90°)   | 69.8   | 0.9       |                         |      | G1/100  |
| BL   | (0°-30°)    | 258.2  | 3.4       | B1/500                  |      |         |
| BM   | (30°-60°)   | 1306.0 | 17.3      | B2/2500                 |      |         |
| BH   | (60°-80°)   | 2142.5 | 28.4      | B3/2500                 |      | G2/5000 |
| BVH  | (80°-90°)   | 69.8   | 0.9       |                         |      | G1/100  |
| UL   | (90°-100°)  | 0.0    | 0.0       |                         | U0/0 |         |
| UH   | (100°-180°) | 0.0    | 0.0       |                         | U0/0 |         |

**BUG Rating: B3-U0-G2**

Type V Short

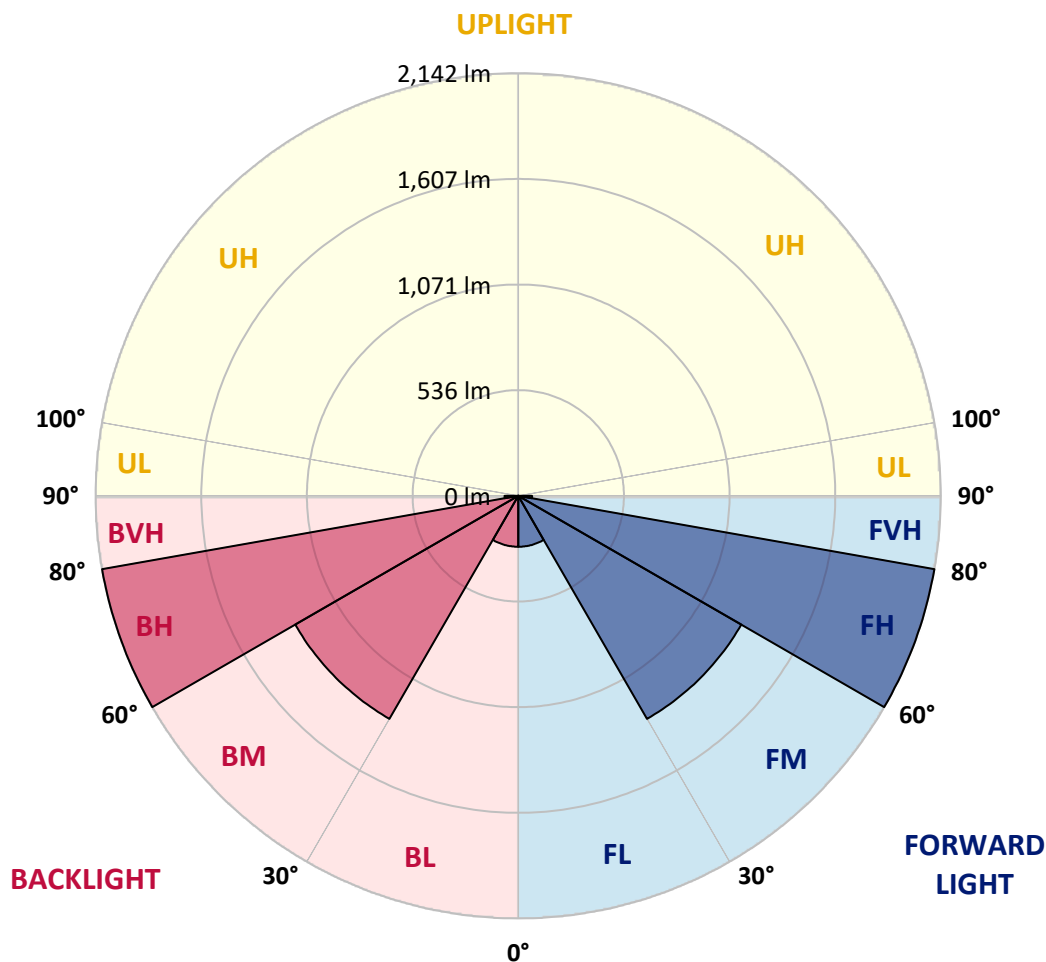



REPORT NUMBER: P360305

CATALOG NUMBER: NVN-SA1C-750-U-5WQ

**CANDELA DISTRIBUTION (FULL):**

|       | 0°     | 5°     | 15°    | 25°    | 35°    | 45°    | 55°    | 65°    | 75°    | 85°    | 90°    |
|-------|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|
| 0°    | 621.6  | 621.6  | 621.6  | 621.6  | 621.6  | 621.6  | 621.6  | 621.6  | 621.6  | 621.6  | 621.6  |
| 2.5°  | 618.9  | 619.6  | 618.9  | 619.4  | 618.1  | 618.6  | 618.6  | 618.6  | 618.4  | 618.6  | 618.1  |
| 5°    | 613.4  | 613.9  | 612.9  | 613.4  | 612.6  | 613.4  | 613.6  | 613.4  | 612.9  | 613.1  | 612.1  |
| 7.5°  | 605.1  | 605.6  | 604.9  | 605.6  | 604.6  | 605.9  | 605.6  | 604.9  | 604.1  | 604.1  | 603.1  |
| 10°   | 600.6  | 600.9  | 598.9  | 598.1  | 595.9  | 596.4  | 597.1  | 597.9  | 598.6  | 600.1  | 599.9  |
| 12.5° | 600.9  | 600.9  | 597.9  | 594.6  | 591.4  | 592.1  | 593.4  | 596.1  | 599.1  | 601.9  | 602.1  |
| 15°   | 603.4  | 603.1  | 598.6  | 593.4  | 591.1  | 593.4  | 594.1  | 595.9  | 600.6  | 605.4  | 605.6  |
| 17.5° | 605.1  | 605.1  | 598.1  | 592.1  | 591.9  | 595.4  | 595.1  | 595.9  | 601.1  | 608.1  | 608.4  |
| 20°   | 608.4  | 608.4  | 599.4  | 592.9  | 592.9  | 596.6  | 596.9  | 598.1  | 603.4  | 611.1  | 612.4  |
| 22.5° | 615.6  | 615.9  | 606.4  | 601.1  | 601.6  | 603.9  | 604.6  | 606.6  | 611.4  | 619.9  | 621.4  |
| 25°   | 625.9  | 626.4  | 616.6  | 613.6  | 615.4  | 619.6  | 619.1  | 620.6  | 625.9  | 634.1  | 635.6  |
| 27.5° | 640.1  | 638.9  | 629.9  | 628.6  | 630.4  | 633.4  | 633.1  | 633.4  | 637.6  | 645.1  | 646.8  |
| 30°   | 658.6  | 658.1  | 651.6  | 652.3  | 651.6  | 650.6  | 650.8  | 652.8  | 655.1  | 661.1  | 662.8  |
| 32.5° | 676.6  | 677.1  | 673.1  | 676.8  | 682.3  | 686.1  | 680.3  | 674.8  | 672.3  | 675.6  | 677.1  |
| 35°   | 709.1  | 710.3  | 704.1  | 701.6  | 709.1  | 720.1  | 703.8  | 694.8  | 699.8  | 704.1  | 705.3  |
| 37.5° | 764.3  | 765.0  | 754.5  | 744.5  | 739.0  | 749.5  | 733.3  | 734.0  | 751.5  | 759.5  | 759.3  |
| 40°   | 827.2  | 827.5  | 820.5  | 811.7  | 802.3  | 804.7  | 798.3  | 800.3  | 811.7  | 819.0  | 821.0  |
| 42.5° | 902.2  | 901.4  | 890.4  | 878.0  | 875.2  | 877.7  | 866.7  | 865.2  | 878.5  | 891.4  | 891.7  |
| 45°   | 999.4  | 997.6  | 983.4  | 969.6  | 956.4  | 950.9  | 948.2  | 955.4  | 973.6  | 985.6  | 985.9  |
| 47.5° | 1104.1 | 1099.3 | 1091.8 | 1080.8 | 1069.3 | 1063.8 | 1059.3 | 1062.8 | 1076.1 | 1080.8 | 1081.3 |
| 50°   | 1211.7 | 1212.7 | 1214.2 | 1210.0 | 1205.7 | 1204.0 | 1192.3 | 1185.5 | 1189.5 | 1180.8 | 1179.5 |
| 52.5° | 1339.4 | 1341.4 | 1355.9 | 1368.1 | 1375.4 | 1379.1 | 1356.9 | 1333.7 | 1320.7 | 1303.7 | 1298.7 |
| 55°   | 1490.1 | 1493.3 | 1514.6 | 1548.5 | 1583.5 | 1602.0 | 1561.8 | 1518.3 | 1478.1 | 1446.3 | 1436.1 |
| 57.5° | 1658.0 | 1663.7 | 1692.9 | 1758.2 | 1829.9 | 1873.6 | 1805.6 | 1726.7 | 1649.0 | 1603.3 | 1595.3 |
| 60°   | 1854.8 | 1860.3 | 1900.8 | 1994.3 | 2110.4 | 2176.1 | 2073.2 | 1944.0 | 1847.3 | 1803.6 | 1788.9 |
| 62.5° | 2089.2 | 2089.7 | 2139.4 | 2248.6 | 2402.0 | 2493.4 | 2354.0 | 2181.4 | 2081.7 | 2029.0 | 2014.7 |
| 65°   | 2341.3 | 2342.5 | 2394.0 | 2511.9 | 2670.6 | 2770.0 | 2612.6 | 2432.7 | 2310.8 | 2233.1 | 2222.1 |
| 67.5° | 2519.4 | 2524.7 | 2578.9 | 2720.8 | 2869.2 | 2958.9 | 2796.0 | 2592.6 | 2451.7 | 2359.0 | 2349.8 |
| 70°   | 2490.9 | 2511.4 | 2575.1 | 2740.8 | 2947.2 | 3075.1 | 2825.7 | 2573.6 | 2387.8 | 2278.3 | 2270.6 |
| 72.5° | 2172.4 | 2211.6 | 2296.6 | 2513.9 | 2844.0 | 3020.1 | 2663.6 | 2305.1 | 2094.7 | 2001.5 | 1987.5 |
| 75°   | 1479.3 | 1543.0 | 1671.2 | 1984.8 | 2429.7 | 2614.9 | 2242.4 | 1837.9 | 1640.0 | 1511.1 | 1501.6 |
| 77.5° | 659.6  | 674.1  | 836.5  | 1197.5 | 1676.7 | 1877.8 | 1629.2 | 1202.3 | 902.4  | 719.8  | 681.3  |
| 80°   | 183.9  | 186.1  | 248.3  | 446.0  | 839.2  | 1103.3 | 900.9  | 468.5  | 263.3  | 185.6  | 174.9  |
| 82.5° | 58.5   | 63.5   | 77.5   | 115.7  | 282.1  | 503.4  | 289.6  | 124.9  | 88.9   | 71.0   | 64.0   |
| 85°   | 28.5   | 28.2   | 39.2   | 47.0   | 72.0   | 111.4  | 76.7   | 58.0   | 50.7   | 33.7   | 30.5   |
| 87.5° | 12.0   | 12.2   | 18.2   | 16.5   | 21.0   | 18.0   | 24.7   | 26.0   | 27.2   | 15.0   | 13.0   |
| 90°   | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    |

LM-79-2008: Approved Method: Electrical and Photometric Measurements of Solid-State Lighting Products

Report Prepared for

Cooper Lighting Solutions

McGRAW-EDISON

Report Number: SP1-1908-441-4-R4

Test Date: 10/02/2019

Luminaire Tested: SA1C-750-U-5WQ

Data in this report applies to families of products SA1C-760-U-5WQ .




### Test Information

Test Method: LM-79-2008  
 Report Number: SP1-1908-441-4-R4  
 Test Lab: COOPER LIGHTING SOLUTIONS  
 Photometer: SP1 - 76IN SPHERE  
 Measurement Geometry:  $4\pi$   
 Issue Date: 10/28/2024  
 Manufacturer: COOPER LIGHTING SOLUTIONS  
 Product Line: MCGRAW-EDISON  
 Catalog Number: **SA1C-750-U-5WQ**  
 Description: MCGRAW EDISON ROADWAY AND AREA LUMINAIRE

\*\*\*THIS IS A REVISION OF SP1-1908-441-4-R3. TO UPDATE THE CATALOG INFORMATION.\*\*\*TESTED IN SITU. ROADWAY AND AREA LUMINAIRE. (1) 70 CRI, 5000K, 1050MA LIGHTSQUARE WITH 16 LEDS AND TYPE V WIDE OPTICS.

### Spectral Parameters

|                           |        |           |      |      |       |
|---------------------------|--------|-----------|------|------|-------|
| CCT (K):                  | 4884   | CRI (Ra): | 73.5 |      |       |
| CIE u':                   | 0.2101 | R1:       | 70.5 | R9:  | -28.4 |
| CIE v':                   | 0.4904 | R2:       | 77.7 | R10: | 48.6  |
| Duv:                      | 0.0037 | R3:       | 84.6 | R11: | 73.2  |
| CIE x:                    | 0.3493 | R4:       | 74.7 | R12: | 50.7  |
| CIE y:                    | 0.3624 | R5:       | 71.9 | R13: | 71.2  |
| CIE z:                    | 0.2884 | R6:       | 70.7 | R14: | 91.4  |
| Peak Wavelength (nm):     | 444    | R7:       | 81.2 |      |       |
| Dominant Wavelength (nm): | 571    | R8:       | 56.9 |      |       |
| Purity:                   | 13.7   |           |      |      |       |
| Rf:                       | 74.9   |           |      |      |       |
| Rg:                       | 96.3   |           |      |      |       |

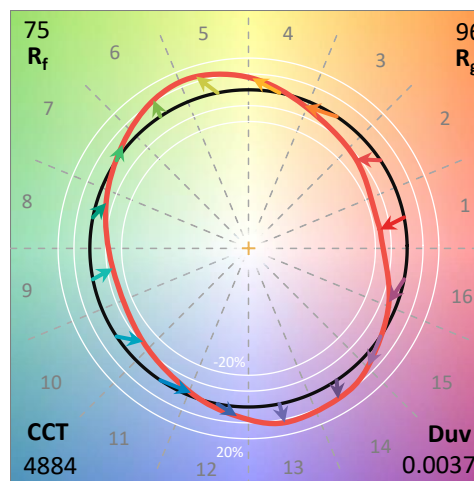

### Test Conditions


Stabilization Time: 240M  
 Operation Time: 12H  
 Room Temperature (°C) / RH%: 25.0./44%  
 Sphere Temperature (°C): 25.7

REPORT NUMBER: SP1-1908-441-4-R4


| Measurement and Test Equipment |                       |                  |                      |
|--------------------------------|-----------------------|------------------|----------------------|
| Instrument                     | Identification Number | Calibration Date | Calibration Due Date |
| Photometer                     | IN0058                | 6/28/2019        | 12/28/2019           |
| Power Meter                    | IN0071                | 12/5/2018        | 12/5/2019            |
| AC Power Source                | IN0063                | 12/5/2018        | 12/5/2019            |
| DC Power Source                | IN0208                | 12/5/2018        | 12/5/2019            |
| Sphere Thermometer             | IN0085                | 12/5/2018        | 12/5/2019            |
| Room Thermometer               | IN0046                | 12/5/2018        | 12/5/2019            |

REPORT NUMBER: SP1-1908-441-4-R4

CIE 1931 Chromaticity Diagram

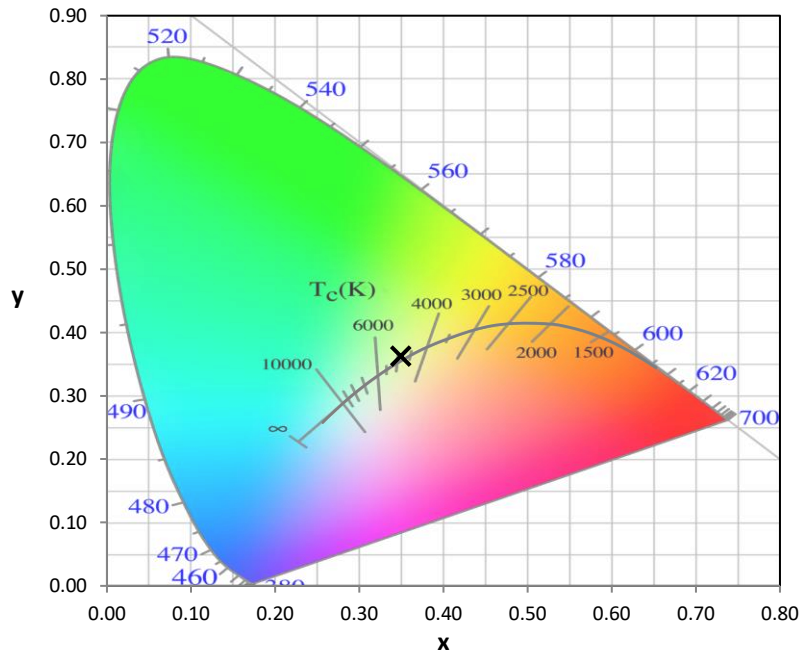


CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles

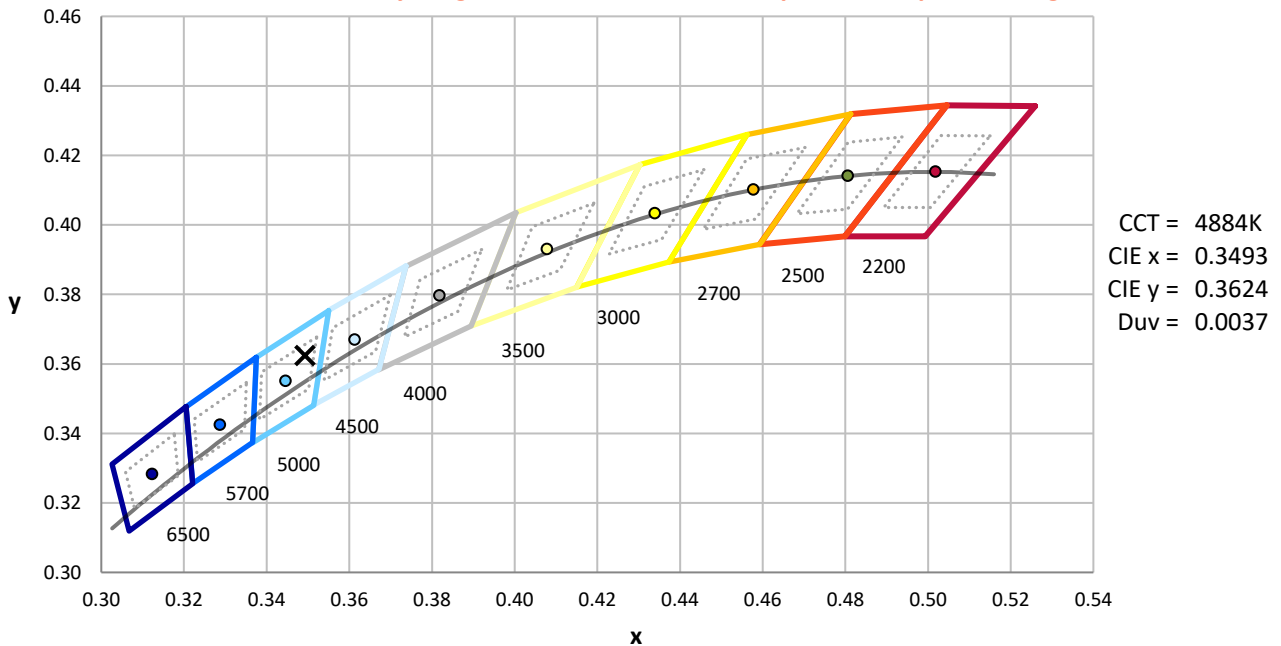

Point lies inside the ANSI 5000K 4-step quadrangle

REPORT NUMBER: SP1-1908-441-4-R4

**Photopic Flux vs. Wavelength**

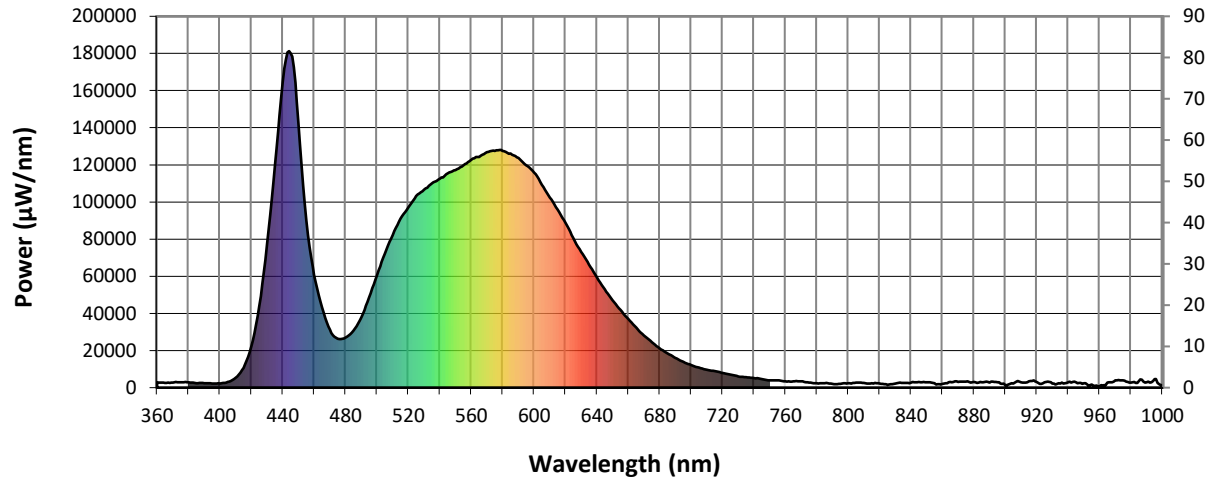


#####

| λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) |
|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|
| 360       | 2945             | NR               | 490       | 37941            | NR               | 620       | 88803            | NR               | 750       | 3908             | NR               | 880       | 2997             | NR               |
| 365       | 2596             | NR               | 495       | 48525            | NR               | 625       | 80578            | NR               | 755       | 3988             | NR               | 885       | 2927             | NR               |
| 370       | 2732             | NR               | 500       | 60609            | NR               | 630       | 73127            | NR               | 760       | 3335             | NR               | 890       | 2649             | NR               |
| 375       | 2894             | NR               | 505       | 72036            | NR               | 635       | 66244            | NR               | 765       | 3438             | NR               | 895       | 2828             | NR               |
| 380       | 2822             | NR               | 510       | 82168            | NR               | 640       | 59440            | NR               | 770       | 3427             | NR               | 900       | 1407             | NR               |
| 385       | 2394             | NR               | 515       | 90898            | NR               | 645       | 52864            | NR               | 775       | 2759             | NR               | 905       | 2224             | NR               |
| 390       | 2370             | NR               | 520       | 97142            | NR               | 650       | 47085            | NR               | 780       | 2340             | NR               | 910       | 2905             | NR               |
| 395       | 2267             | NR               | 525       | 103255           | NR               | 655       | 41789            | NR               | 785       | 2412             | NR               | 915       | 3350             | NR               |
| 400       | 2262             | NR               | 530       | 106697           | NR               | 660       | 37064            | NR               | 790       | 1999             | NR               | 920       | 3114             | NR               |
| 405       | 3000             | NR               | 535       | 110081           | NR               | 665       | 32299            | NR               | 795       | 2054             | NR               | 925       | 2834             | NR               |
| 410       | 5324             | NR               | 540       | 112494           | NR               | 670       | 28142            | NR               | 800       | 2331             | NR               | 930       | 2271             | NR               |
| 415       | 10725            | NR               | 545       | 115513           | NR               | 675       | 24505            | NR               | 805       | 2648             | NR               | 935       | 2228             | NR               |
| 420       | 22128            | NR               | 550       | 117203           | NR               | 680       | 21162            | NR               | 810       | 2485             | NR               | 940       | 2833             | NR               |
| 425       | 44095            | NR               | 555       | 119753           | NR               | 685       | 18400            | NR               | 815       | 2409             | NR               | 945       | 2941             | NR               |
| 430       | 77002            | NR               | 560       | 122602           | NR               | 690       | 16065            | NR               | 820       | 2221             | NR               | 950       | 2323             | NR               |
| 435       | 119881           | NR               | 565       | 124314           | NR               | 695       | 13860            | NR               | 825       | 1562             | NR               | 955       | 1667             | NR               |
| 440       | 164454           | NR               | 570       | 126775           | NR               | 700       | 12177            | NR               | 830       | 2249             | NR               | 960       | 749              | NR               |
| 445       | 179997           | NR               | 575       | 127511           | NR               | 705       | 10757            | NR               | 835       | 2573             | NR               | 965       | 2669             | NR               |
| 450       | 142822           | NR               | 580       | 127577           | NR               | 710       | 9601             | NR               | 840       | 2764             | NR               | 970       | 3968             | NR               |
| 455       | 90008            | NR               | 585       | 126153           | NR               | 715       | 8944             | NR               | 845       | 3109             | NR               | 975       | 3886             | NR               |
| 460       | 60557            | NR               | 590       | 123678           | NR               | 720       | 7947             | NR               | 850       | 2963             | NR               | 980       | 2788             | NR               |
| 465       | 43305            | NR               | 595       | 119774           | NR               | 725       | 7062             | NR               | 855       | 2336             | NR               | 985       | 3496             | NR               |
| 470       | 31089            | NR               | 600       | 115733           | NR               | 730       | 6004             | NR               | 860       | 2118             | NR               | 990       | 2913             | NR               |
| 475       | 26278            | NR               | 605       | 109231           | NR               | 735       | 5594             | NR               | 865       | 3144             | NR               | 995       | 4659             | NR               |
| 480       | 27060            | NR               | 610       | 102408           | NR               | 740       | 5165             | NR               | 870       | 3069             | NR               | 1000      | 1308             | NR               |
| 485       | 30698            | NR               | 615       | 96015            | NR               | 745       | 4687             | NR               | 875       | 3311             | NR               |           |                  |                  |

REPORT NUMBER: SP1-1908-441-4-R4

Scotopic Flux vs. Wavelength

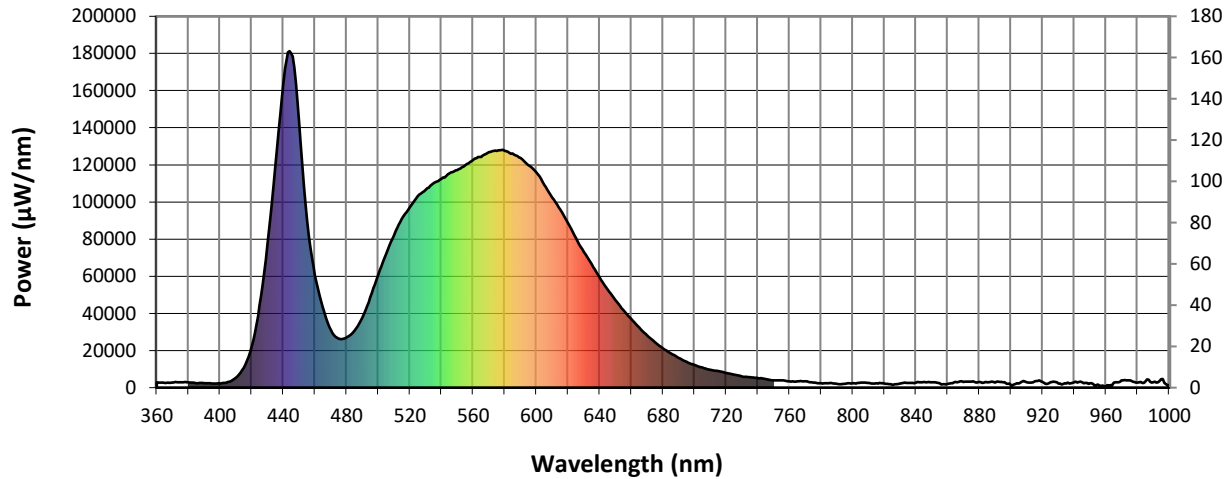


Scotopic Lumens: 13493.5

S/P: 1.77

| λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(Φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(Φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(Φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(Φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(Φ/nm) |
|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|
| 360       | 2945             | NR               | 490       | 37941            | NR               | 620       | 88803            | NR               | 750       | 3908             | NR               | 880       | 2997             | NR               |
| 365       | 2596             | NR               | 495       | 48525            | NR               | 625       | 80578            | NR               | 755       | 3988             | NR               | 885       | 2927             | NR               |
| 370       | 2732             | NR               | 500       | 60609            | NR               | 630       | 73127            | NR               | 760       | 3335             | NR               | 890       | 2649             | NR               |
| 375       | 2894             | NR               | 505       | 72036            | NR               | 635       | 66244            | NR               | 765       | 3438             | NR               | 895       | 2828             | NR               |
| 380       | 2822             | NR               | 510       | 82168            | NR               | 640       | 59440            | NR               | 770       | 3427             | NR               | 900       | 1407             | NR               |
| 385       | 2394             | NR               | 515       | 90898            | NR               | 645       | 52864            | NR               | 775       | 2759             | NR               | 905       | 2224             | NR               |
| 390       | 2370             | NR               | 520       | 97142            | NR               | 650       | 47085            | NR               | 780       | 2340             | NR               | 910       | 2905             | NR               |
| 395       | 2267             | NR               | 525       | 103255           | NR               | 655       | 41789            | NR               | 785       | 2412             | NR               | 915       | 3350             | NR               |
| 400       | 2262             | NR               | 530       | 106697           | NR               | 660       | 37064            | NR               | 790       | 1999             | NR               | 920       | 3114             | NR               |
| 405       | 3000             | NR               | 535       | 110081           | NR               | 665       | 32299            | NR               | 795       | 2054             | NR               | 925       | 2834             | NR               |
| 410       | 5324             | NR               | 540       | 112494           | NR               | 670       | 28142            | NR               | 800       | 2331             | NR               | 930       | 2271             | NR               |
| 415       | 10725            | NR               | 545       | 115513           | NR               | 675       | 24505            | NR               | 805       | 2648             | NR               | 935       | 2228             | NR               |
| 420       | 22128            | NR               | 550       | 117203           | NR               | 680       | 21162            | NR               | 810       | 2485             | NR               | 940       | 2833             | NR               |
| 425       | 44095            | NR               | 555       | 119753           | NR               | 685       | 18400            | NR               | 815       | 2409             | NR               | 945       | 2941             | NR               |
| 430       | 77002            | NR               | 560       | 122602           | NR               | 690       | 16065            | NR               | 820       | 2221             | NR               | 950       | 2323             | NR               |
| 435       | 119881           | NR               | 565       | 124314           | NR               | 695       | 13860            | NR               | 825       | 1562             | NR               | 955       | 1667             | NR               |
| 440       | 164454           | NR               | 570       | 126775           | NR               | 700       | 12177            | NR               | 830       | 2249             | NR               | 960       | 749              | NR               |
| 445       | 179997           | NR               | 575       | 127511           | NR               | 705       | 10757            | NR               | 835       | 2573             | NR               | 965       | 2669             | NR               |
| 450       | 142822           | NR               | 580       | 127577           | NR               | 710       | 9601             | NR               | 840       | 2764             | NR               | 970       | 3968             | NR               |
| 455       | 90008            | NR               | 585       | 126153           | NR               | 715       | 8944             | NR               | 845       | 3109             | NR               | 975       | 3886             | NR               |
| 460       | 60557            | NR               | 590       | 123678           | NR               | 720       | 7947             | NR               | 850       | 2963             | NR               | 980       | 2788             | NR               |
| 465       | 43305            | NR               | 595       | 119774           | NR               | 725       | 7062             | NR               | 855       | 2336             | NR               | 985       | 3496             | NR               |
| 470       | 31089            | NR               | 600       | 115733           | NR               | 730       | 6004             | NR               | 860       | 2118             | NR               | 990       | 2913             | NR               |
| 475       | 26278            | NR               | 605       | 109231           | NR               | 735       | 5594             | NR               | 865       | 3144             | NR               | 995       | 4659             | NR               |
| 480       | 27060            | NR               | 610       | 102408           | NR               | 740       | 5165             | NR               | 870       | 3069             | NR               | 1000      | 1308             | NR               |
| 485       | 30698            | NR               | 615       | 96015            | NR               | 745       | 4687             | NR               | 875       | 3311             | NR               |           |                  |                  |

REPORT NUMBER: SP1-1908-441-4-R4

**Melanopic Flux vs. Wavelength**

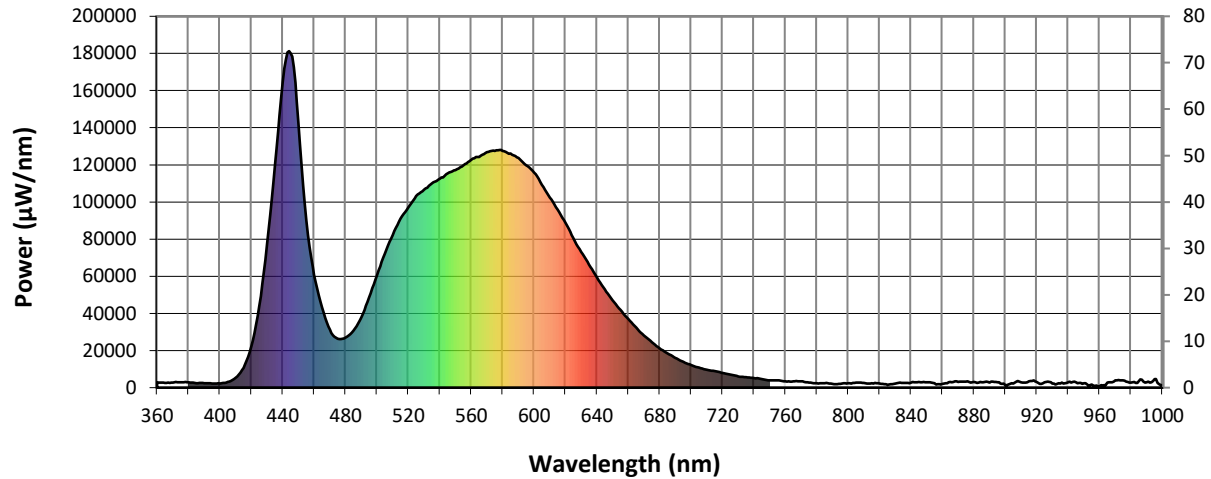

**Melanopic Lumens: 5378.9**

**M/P: 0.71**

| λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) |
|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|
| 360       | 2945             | NR               | 490       | 37941            | NR               | 620       | 88803            | NR               | 750       | 3908             | NR               | 880       | 2997             | NR               |
| 365       | 2596             | NR               | 495       | 48525            | NR               | 625       | 80578            | NR               | 755       | 3988             | NR               | 885       | 2927             | NR               |
| 370       | 2732             | NR               | 500       | 60609            | NR               | 630       | 73127            | NR               | 760       | 3335             | NR               | 890       | 2649             | NR               |
| 375       | 2894             | NR               | 505       | 72036            | NR               | 635       | 66244            | NR               | 765       | 3438             | NR               | 895       | 2828             | NR               |
| 380       | 2822             | NR               | 510       | 82168            | NR               | 640       | 59440            | NR               | 770       | 3427             | NR               | 900       | 1407             | NR               |
| 385       | 2394             | NR               | 515       | 90898            | NR               | 645       | 52864            | NR               | 775       | 2759             | NR               | 905       | 2224             | NR               |
| 390       | 2370             | NR               | 520       | 97142            | NR               | 650       | 47085            | NR               | 780       | 2340             | NR               | 910       | 2905             | NR               |
| 395       | 2267             | NR               | 525       | 103255           | NR               | 655       | 41789            | NR               | 785       | 2412             | NR               | 915       | 3350             | NR               |
| 400       | 2262             | NR               | 530       | 106697           | NR               | 660       | 37064            | NR               | 790       | 1999             | NR               | 920       | 3114             | NR               |
| 405       | 3000             | NR               | 535       | 110081           | NR               | 665       | 32299            | NR               | 795       | 2054             | NR               | 925       | 2834             | NR               |
| 410       | 5324             | NR               | 540       | 112494           | NR               | 670       | 28142            | NR               | 800       | 2331             | NR               | 930       | 2271             | NR               |
| 415       | 10725            | NR               | 545       | 115513           | NR               | 675       | 24505            | NR               | 805       | 2648             | NR               | 935       | 2228             | NR               |
| 420       | 22128            | NR               | 550       | 117203           | NR               | 680       | 21162            | NR               | 810       | 2485             | NR               | 940       | 2833             | NR               |
| 425       | 44095            | NR               | 555       | 119753           | NR               | 685       | 18400            | NR               | 815       | 2409             | NR               | 945       | 2941             | NR               |
| 430       | 77002            | NR               | 560       | 122602           | NR               | 690       | 16065            | NR               | 820       | 2221             | NR               | 950       | 2323             | NR               |
| 435       | 119881           | NR               | 565       | 124314           | NR               | 695       | 13860            | NR               | 825       | 1562             | NR               | 955       | 1667             | NR               |
| 440       | 164454           | NR               | 570       | 126775           | NR               | 700       | 12177            | NR               | 830       | 2249             | NR               | 960       | 749              | NR               |
| 445       | 179997           | NR               | 575       | 127511           | NR               | 705       | 10757            | NR               | 835       | 2573             | NR               | 965       | 2669             | NR               |
| 450       | 142822           | NR               | 580       | 127577           | NR               | 710       | 9601             | NR               | 840       | 2764             | NR               | 970       | 3968             | NR               |
| 455       | 90008            | NR               | 585       | 126153           | NR               | 715       | 8944             | NR               | 845       | 3109             | NR               | 975       | 3886             | NR               |
| 460       | 60557            | NR               | 590       | 123678           | NR               | 720       | 7947             | NR               | 850       | 2963             | NR               | 980       | 2788             | NR               |
| 465       | 43305            | NR               | 595       | 119774           | NR               | 725       | 7062             | NR               | 855       | 2336             | NR               | 985       | 3496             | NR               |
| 470       | 31089            | NR               | 600       | 115733           | NR               | 730       | 6004             | NR               | 860       | 2118             | NR               | 990       | 2913             | NR               |
| 475       | 26278            | NR               | 605       | 109231           | NR               | 735       | 5594             | NR               | 865       | 3144             | NR               | 995       | 4659             | NR               |
| 480       | 27060            | NR               | 610       | 102408           | NR               | 740       | 5165             | NR               | 870       | 3069             | NR               | 1000      | 1308             | NR               |
| 485       | 30698            | NR               | 615       | 96015            | NR               | 745       | 4687             | NR               | 875       | 3311             | NR               |           |                  |                  |


REPORT NUMBER: SP1-1908-441-4-R4

**TM-30-18**





### Summary

$R_f = 74.9$   
 $R_g = 96.3$   
 CIE  $R_a = 73.5$   
 $R_g = -28.4$

### Spectral Power Distribution Comparison

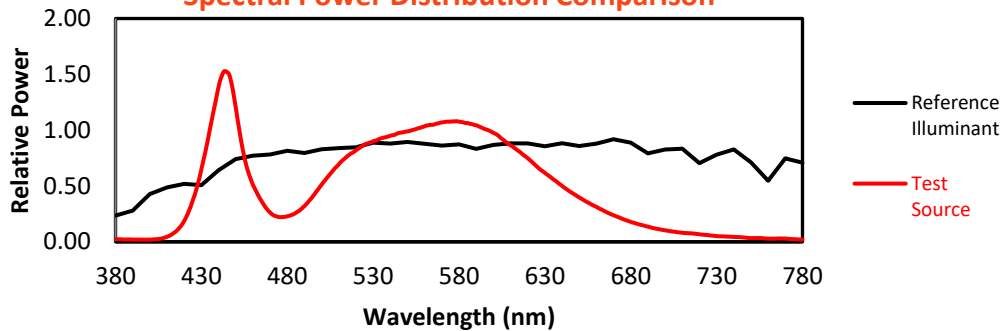

### Color Vector Graphics

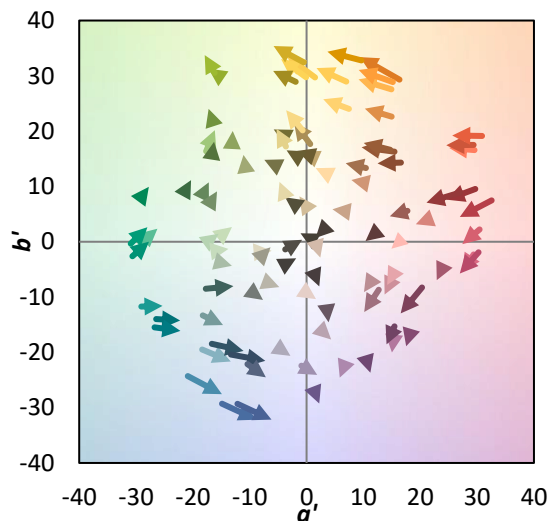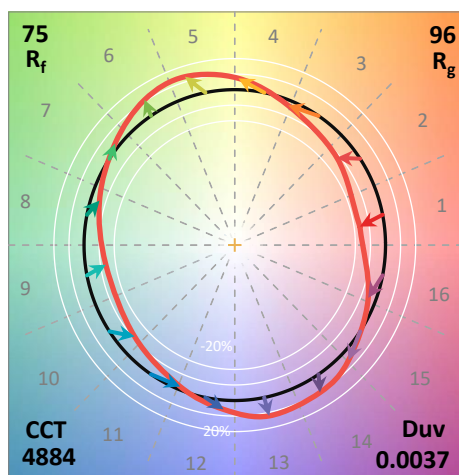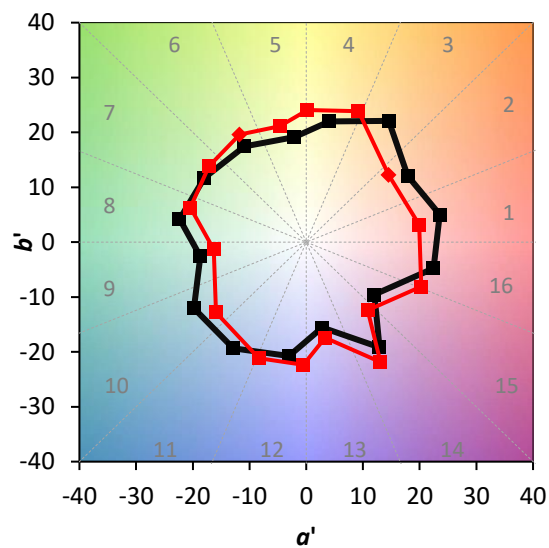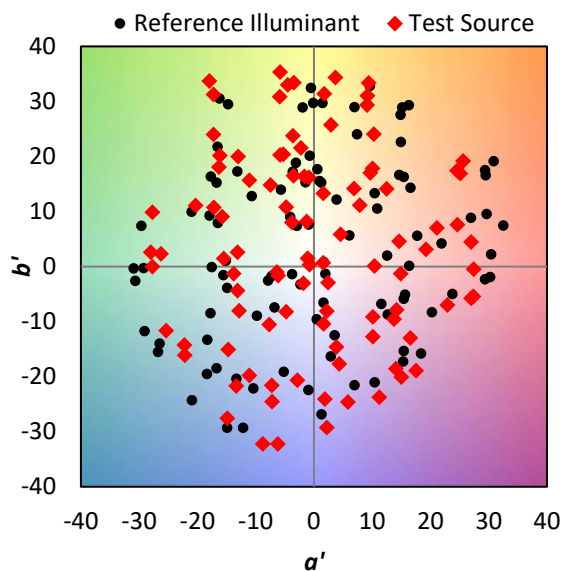


REPORT NUMBER: SP1-1908-441-4-R4

**TM-30-18**

**Individual Sample Fidelity Index ( $R_{f,i}$ )**

|            |            |            |            |
|------------|------------|------------|------------|
| CES01 = 85 | CES26 = 61 | CES51 = 90 | CES76 = 52 |
| CES02 = 60 | CES27 = 84 | CES52 = 91 | CES77 = 71 |
| CES03 = 30 | CES28 = 81 | CES53 = 79 | CES78 = 54 |
| CES04 = 69 | CES29 = 58 | CES54 = 83 | CES79 = 80 |
| CES05 = 46 | CES30 = 67 | CES55 = 83 | CES80 = 77 |
| CES06 = 50 | CES31 = 63 | CES56 = 73 | CES81 = 77 |
| CES07 = 39 | CES32 = 59 | CES57 = 72 | CES82 = 90 |
| CES08 = 38 | CES33 = 69 | CES58 = 73 | CES83 = 86 |
| CES09 = 29 | CES34 = 69 | CES59 = 88 | CES84 = 88 |
| CES10 = 73 | CES35 = 83 | CES60 = 93 | CES85 = 84 |
| CES11 = 56 | CES36 = 95 | CES61 = 88 | CES86 = 75 |
| CES12 = 61 | CES37 = 78 | CES62 = 85 | CES87 = 78 |
| CES13 = 41 | CES38 = 76 | CES63 = 77 | CES88 = 79 |
| CES14 = 74 | CES39 = 93 | CES64 = 74 | CES89 = 75 |
| CES15 = 70 | CES40 = 86 | CES65 = 67 | CES90 = 77 |
| CES16 = 46 | CES41 = 87 | CES66 = 69 | CES91 = 89 |
| CES17 = 49 | CES42 = 78 | CES67 = 67 | CES92 = 66 |
| CES18 = 55 | CES43 = 75 | CES68 = 73 | CES93 = 80 |
| CES19 = 71 | CES44 = 99 | CES69 = 81 | CES94 = 57 |
| CES20 = 64 | CES45 = 83 | CES70 = 63 | CES95 = 71 |
| CES21 = 85 | CES46 = 81 | CES71 = 60 | CES96 = 78 |
| CES22 = 77 | CES47 = 80 | CES72 = 86 | CES97 = 85 |
| CES23 = 91 | CES48 = 72 | CES73 = 53 | CES98 = 75 |
| CES24 = 90 | CES49 = 81 | CES74 = 96 | CES99 = 62 |
| CES25 = 71 | CES50 = 89 | CES75 = 58 |            |



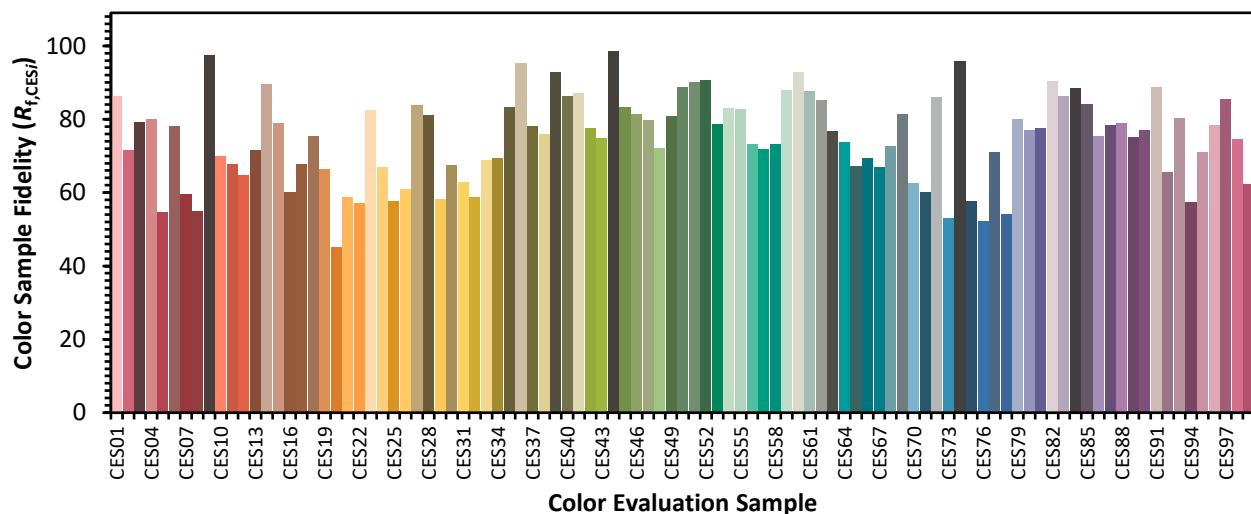




REPORT NUMBER: SP1-1908-441-4-R4

**TM-30-18**



Color Rendition by Hue-Angle Bin

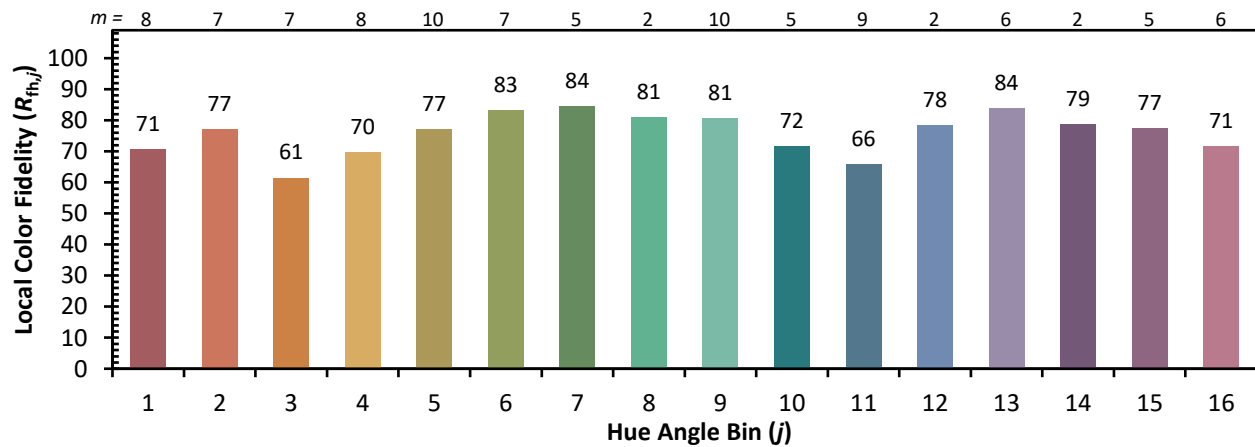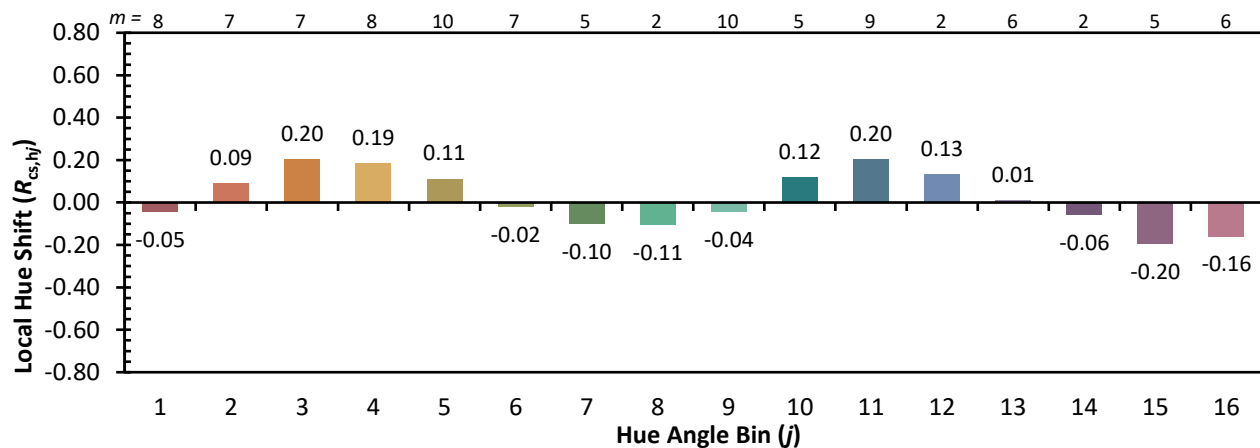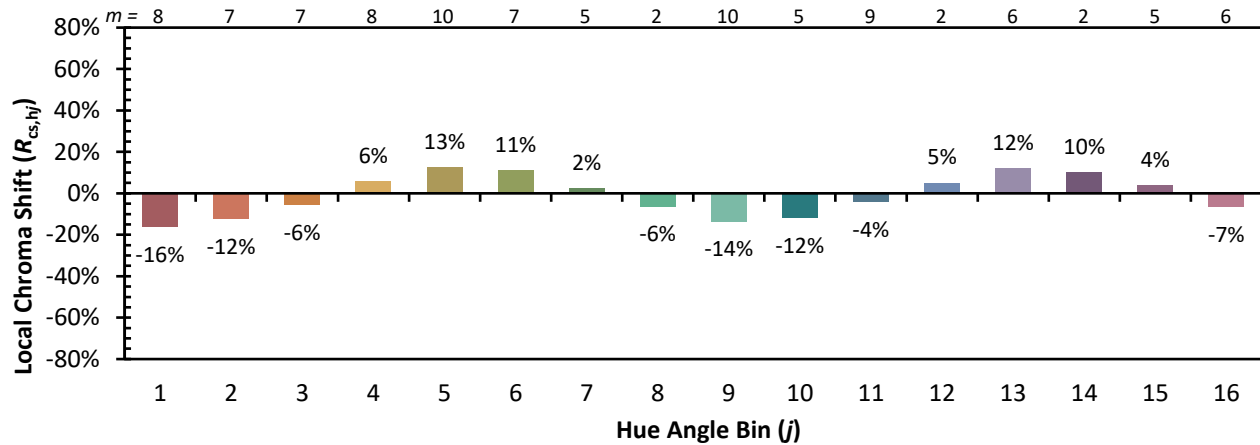

REPORT NUMBER: SP1-1908-441-4-R4

**TM-30-18**

**Measure Comparisons**

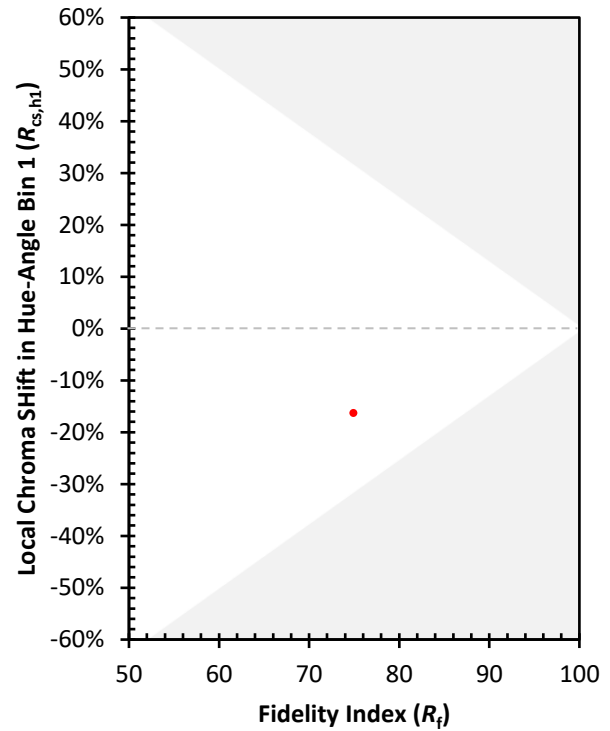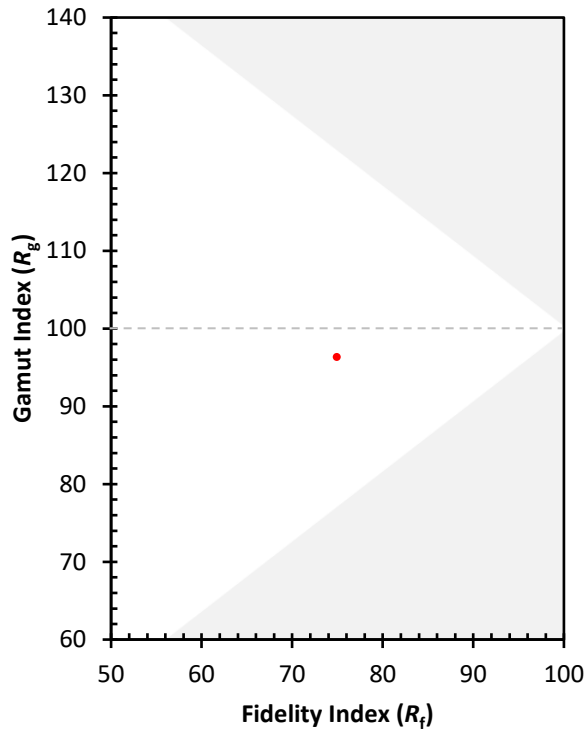

(END OF REPORT)