

Scaled data based on original data using  
LM-79-2019 Approved Method: Electrical and Photometric Measurements of Solid-  
State Lighting Products

Test Report Prepared for

Cooper Lighting Solutions

Brand: STREETWORKS

Report Number: P360331

Luminaire Tested: NVN-SA3C-760-U-5WQ

Issue Date: 3/3/2020

**Test Information**

Test Method: LM-79-2019  
Report Number: P360331  
TEST IS SCALED FROM IESNA LM-79-08 TEST DATA (G2-1903-205-2)  
Test Lab: INNOVATION CENTER  
Issue Date: 3/3/2020  
Manufacturer: COOPER LIGHTING SOLUTIONS  
Product Line: STREETWORKS  
Catalog Number: NVN-SA3C-760-U-5WQ  
Description: NAVION ROADWAY AND AREA LUMINAIRE  
(3) 70 CRI, 5700K, 1050mA LIGHTSQUARES WITH 16 LEDS EACH AND TYPE V WIDE OPTICS  
Light Source: -  
Ballast/Driver: ELECTRONIC DRIVER

**Summary**

Lumens per Lamp: N/A  
Luminaire Lumens: 22393 lumens  
Efficiency: N/A  
Efficacy: 134.9 lumens/watt  
Luminous Opening: Rectangular (W 0.5' x L: 1.5' x H: 0')  
IES Classification: Type V - Short  
BUG Rating: B5 - U0 - G3


Input Watts (W): 166  
Input Voltage (V): NR  
Input Current (Ain): NR  
Voltage Rise (V): NR  
Power Factor: NR  
Total Harmonic Distortion (THDi): NR  
Frequency (hertz): 60  
Stabilization Time: NR  
Operation Time: NR  
Ambient Temperature (°C): NR  
Test Distance: 28.75 FT



REPORT NUMBER: P360331  
 CATALOG NUMBER: NVN-SA3C-760-U-5WQ

## Iso-Footcandle Lines of Horizontal Illumination


✕ Max cd  
 - - - 1/2 Max cd

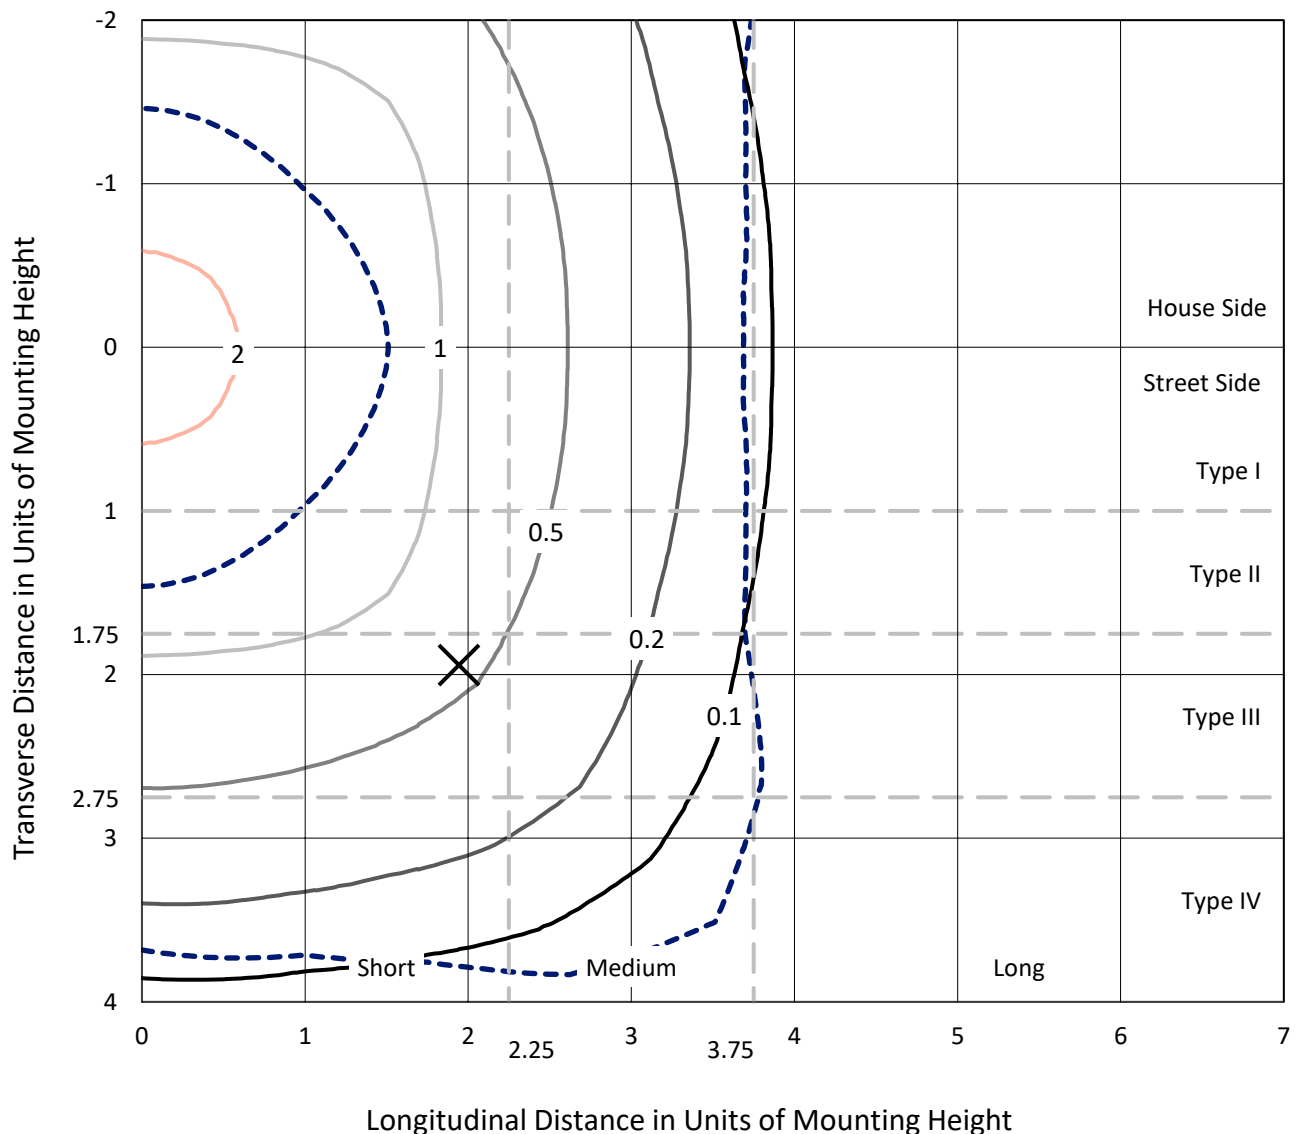

Based on 25 foot mounting height. Maximum calculated value = 2.9 fc  
 Type V - Short - N/A

REPORT NUMBER: P360331  
CATALOG NUMBER: NVN-SA3C-760-U-5WQ

## Luminous Intensity Polar Plot

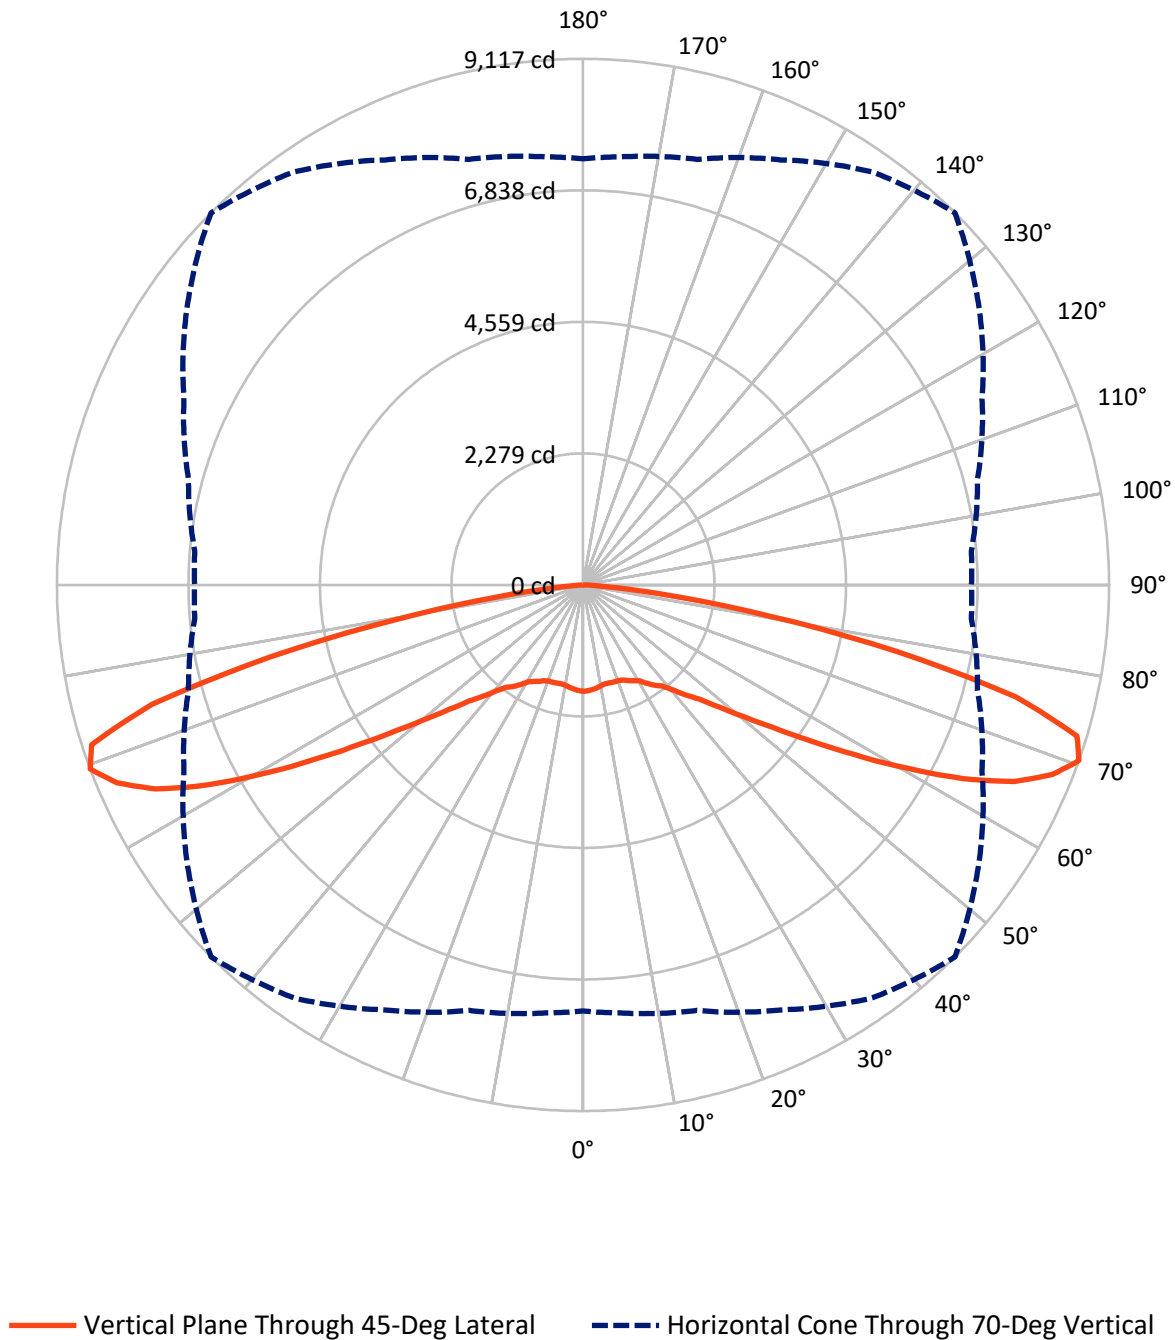

REPORT NUMBER: P360331

CATALOG NUMBER: NVN-SA3C-760-U-5WQ


**FLUX DISTRIBUTION:**

|                    |           | Downward | Upward | Total   |
|--------------------|-----------|----------|--------|---------|
| <b>House Side</b>  | Lumens    | 11196.5  | 0.0    | 11196.5 |
|                    | % Fixture | 50.0     | 0.0    | 50.0    |
| <b>Street Side</b> | Lumens    | 11196.5  | 0.0    | 11196.5 |
|                    | % Fixture | 50.0     | 0.0    | 50.0    |
| <b>Total</b>       | Lumens    | 22393.0  | 0.0    | 22393.0 |
|                    | % Fixture | 100.0    | 0.0    | 100.0   |

**ZONAL LUMENS:**

| Zone      | Lumens  | % Fixture |
|-----------|---------|-----------|
| 0°-10°    | 172.0   | 0.8       |
| 10°-20°   | 502.4   | 2.2       |
| 20°-30°   | 856.6   | 3.8       |
| 30°-40°   | 1338.5  | 6.0       |
| 40°-50°   | 2268.5  | 10.1      |
| 50°-60°   | 4136.8  | 18.5      |
| 60°-70°   | 7121.8  | 31.8      |
| 70°-80°   | 5582.3  | 24.9      |
| 80°-90°   | 413.9   | 1.8       |
| 90°-100°  | 0.0     | 0.0       |
| 100°-110° | 0.0     | 0.0       |
| 110°-120° | 0.0     | 0.0       |
| 120°-130° | 0.0     | 0.0       |
| 130°-140° | 0.0     | 0.0       |
| 140°-150° | 0.0     | 0.0       |
| 150°-160° | 0.0     | 0.0       |
| 160°-170° | 0.0     | 0.0       |
| 170°-180° | 0.0     | 0.0       |
| 0°-90°    | 22393.0 | 100.0     |
| 0°-180°   | 22393.0 | 100.0     |

**Coefficient of Utilization**

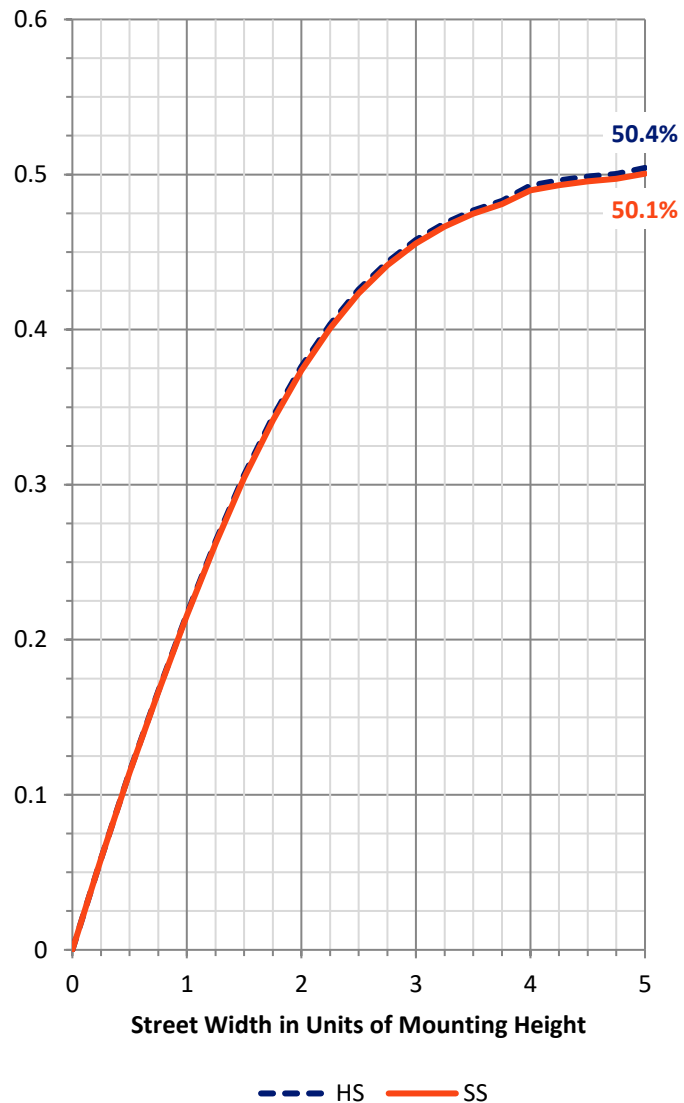

REPORT NUMBER: P360331


CATALOG NUMBER: NVN-SA3C-760-U-5WQ

**LUMINAIRE CLASSIFICATION SYSTEM LUMEN TABLE AND BUG RATING:**

| Zone |             | Lumens | % Fixture | Zone Rating/Lumen Limit |      |         |
|------|-------------|--------|-----------|-------------------------|------|---------|
|      |             |        |           | B                       | U    | G       |
| FL   | (0°-30°)    | 765.6  | 3.4       |                         |      |         |
| FM   | (30°-60°)   | 3871.9 | 17.3      |                         |      |         |
| FH   | (60°-80°)   | 6352.1 | 28.4      |                         |      | G3/7500 |
| FVH  | (80°-90°)   | 207.0  | 0.9       |                         |      | G2/225  |
| BL   | (0°-30°)    | 765.6  | 3.4       | B2/1000                 |      |         |
| BM   | (30°-60°)   | 3871.9 | 17.3      | B3/5000                 |      |         |
| BH   | (60°-80°)   | 6352.1 | 28.4      | B5                      |      | G3/7500 |
| BVH  | (80°-90°)   | 207.0  | 0.9       |                         |      | G2/225  |
| UL   | (90°-100°)  | 0.0    | 0.0       |                         | U0/0 |         |
| UH   | (100°-180°) | 0.0    | 0.0       |                         | U0/0 |         |

**BUG Rating: B5-U0-G3**

Type V Short

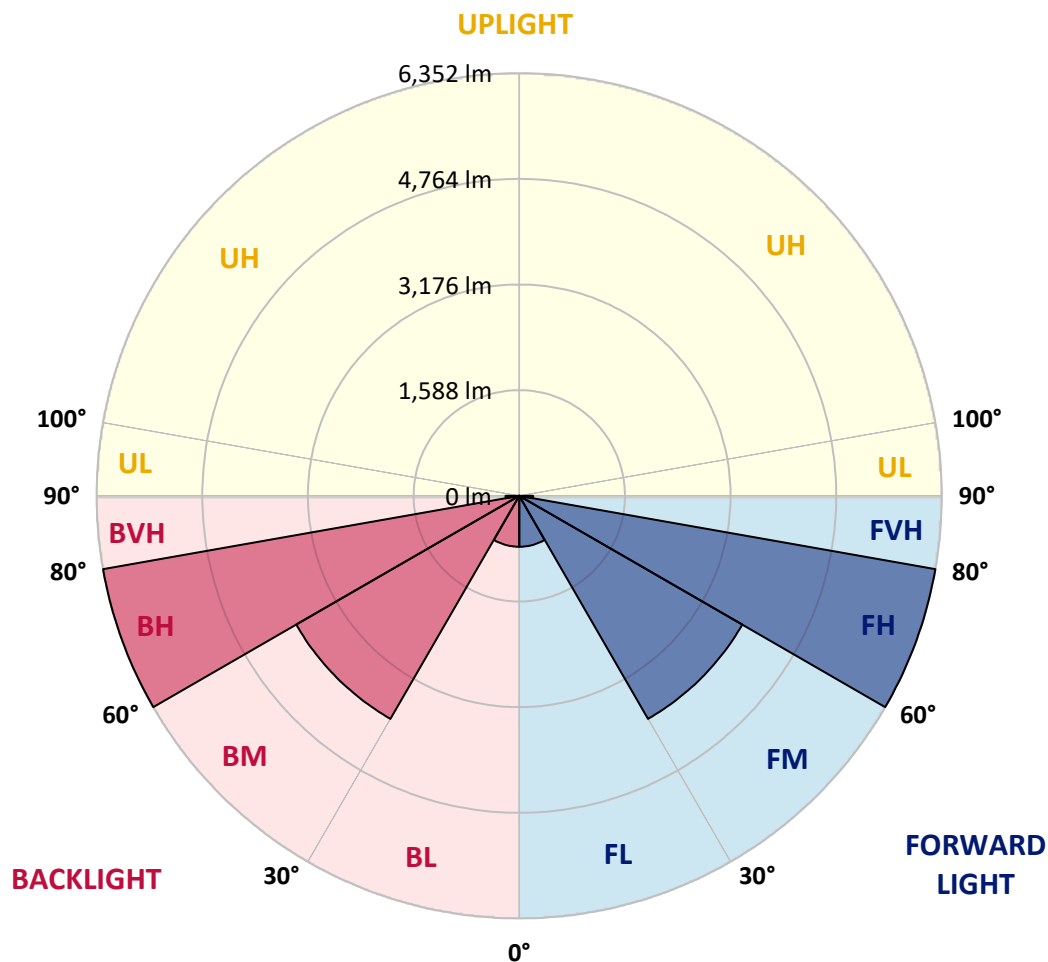



REPORT NUMBER: P360331

CATALOG NUMBER: NVN-SA3C-760-U-5WQ

**CANDELA DISTRIBUTION (FULL):**

|       | 0°     | 5°     | 15°    | 25°    | 35°    | 45°    | 55°    | 65°    | 75°    | 85°    | 90°    |
|-------|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|
| 0°    | 1842.9 | 1842.9 | 1842.9 | 1842.9 | 1842.9 | 1842.9 | 1842.9 | 1842.9 | 1842.9 | 1842.9 | 1842.9 |
| 2.5°  | 1834.8 | 1837.0 | 1834.8 | 1836.3 | 1832.6 | 1834.1 | 1834.1 | 1834.1 | 1833.3 | 1834.1 | 1832.6 |
| 5°    | 1818.5 | 1820.0 | 1817.0 | 1818.5 | 1816.3 | 1818.5 | 1819.2 | 1818.5 | 1817.0 | 1817.8 | 1814.8 |
| 7.5°  | 1794.1 | 1795.5 | 1793.3 | 1795.5 | 1792.6 | 1796.3 | 1795.5 | 1793.3 | 1791.1 | 1791.1 | 1788.1 |
| 10°   | 1780.7 | 1781.5 | 1775.5 | 1773.3 | 1766.7 | 1768.1 | 1770.4 | 1772.6 | 1774.8 | 1779.2 | 1778.5 |
| 12.5° | 1781.5 | 1781.5 | 1772.6 | 1762.9 | 1753.3 | 1755.5 | 1759.2 | 1767.4 | 1776.3 | 1784.4 | 1785.2 |
| 15°   | 1788.9 | 1788.1 | 1774.8 | 1759.2 | 1752.6 | 1759.2 | 1761.5 | 1766.7 | 1780.7 | 1794.8 | 1795.5 |
| 17.5° | 1794.1 | 1794.1 | 1773.3 | 1755.5 | 1754.8 | 1765.2 | 1764.4 | 1766.7 | 1782.2 | 1802.9 | 1803.7 |
| 20°   | 1803.7 | 1803.7 | 1777.0 | 1757.8 | 1757.8 | 1768.9 | 1769.6 | 1773.3 | 1788.9 | 1811.8 | 1815.5 |
| 22.5° | 1825.2 | 1825.9 | 1797.8 | 1782.2 | 1783.7 | 1790.4 | 1792.6 | 1798.5 | 1812.6 | 1837.8 | 1842.2 |
| 25°   | 1855.5 | 1857.0 | 1828.1 | 1819.2 | 1824.4 | 1837.0 | 1835.5 | 1840.0 | 1855.5 | 1880.0 | 1884.4 |
| 27.5° | 1897.8 | 1894.1 | 1867.4 | 1863.7 | 1868.9 | 1877.8 | 1877.0 | 1877.8 | 1890.4 | 1912.6 | 1917.8 |
| 30°   | 1952.6 | 1951.1 | 1931.8 | 1934.1 | 1931.8 | 1928.9 | 1929.6 | 1935.5 | 1942.2 | 1960.0 | 1965.2 |
| 32.5° | 2005.9 | 2007.4 | 1995.5 | 2006.6 | 2022.9 | 2034.1 | 2017.0 | 2000.7 | 1993.3 | 2002.9 | 2007.4 |
| 35°   | 2102.2 | 2105.9 | 2087.4 | 2080.0 | 2102.2 | 2134.8 | 2086.6 | 2060.0 | 2074.8 | 2087.4 | 2091.1 |
| 37.5° | 2265.9 | 2268.1 | 2237.0 | 2207.4 | 2191.1 | 2222.2 | 2174.1 | 2176.3 | 2228.1 | 2251.8 | 2251.1 |
| 40°   | 2452.6 | 2453.3 | 2432.6 | 2406.6 | 2378.5 | 2385.9 | 2366.6 | 2372.6 | 2406.6 | 2428.1 | 2434.1 |
| 42.5° | 2674.8 | 2672.6 | 2640.0 | 2602.9 | 2594.8 | 2602.2 | 2569.6 | 2565.2 | 2604.4 | 2642.9 | 2643.7 |
| 45°   | 2962.9 | 2957.8 | 2915.5 | 2874.8 | 2835.5 | 2819.2 | 2811.1 | 2832.6 | 2886.6 | 2922.2 | 2922.9 |
| 47.5° | 3273.3 | 3259.2 | 3237.0 | 3204.4 | 3170.3 | 3154.0 | 3140.7 | 3151.1 | 3190.3 | 3204.4 | 3205.9 |
| 50°   | 3592.6 | 3595.5 | 3600.0 | 3587.4 | 3574.8 | 3569.6 | 3534.8 | 3514.8 | 3526.6 | 3500.7 | 3497.0 |
| 52.5° | 3971.1 | 3977.0 | 4020.0 | 4056.3 | 4077.7 | 4088.9 | 4022.9 | 3954.0 | 3915.5 | 3865.2 | 3850.3 |
| 55°   | 4417.7 | 4427.4 | 4490.3 | 4591.1 | 4694.8 | 4749.6 | 4630.3 | 4501.4 | 4382.2 | 4288.1 | 4257.7 |
| 57.5° | 4915.5 | 4932.5 | 5019.2 | 5212.5 | 5425.1 | 5554.8 | 5353.3 | 5119.2 | 4888.8 | 4753.3 | 4729.6 |
| 60°   | 5499.2 | 5515.5 | 5635.5 | 5912.5 | 6257.0 | 6451.8 | 6146.6 | 5763.7 | 5477.0 | 5347.4 | 5303.7 |
| 62.5° | 6194.0 | 6195.5 | 6342.9 | 6666.6 | 7121.4 | 7392.5 | 6979.2 | 6467.4 | 6171.8 | 6015.5 | 5973.3 |
| 65°   | 6941.4 | 6945.1 | 7097.7 | 7447.3 | 7917.7 | 8212.5 | 7745.9 | 7212.5 | 6851.1 | 6620.7 | 6588.1 |
| 67.5° | 7469.6 | 7485.1 | 7645.9 | 8066.6 | 8506.6 | 8772.5 | 8289.6 | 7686.6 | 7268.8 | 6994.0 | 6966.6 |
| 70°   | 7385.1 | 7445.9 | 7634.7 | 8125.9 | 8737.7 | 9117.0 | 8377.7 | 7630.3 | 7079.2 | 6754.8 | 6731.8 |
| 72.5° | 6440.7 | 6557.0 | 6808.8 | 7453.3 | 8431.8 | 8954.0 | 7897.0 | 6834.0 | 6210.3 | 5934.0 | 5892.5 |
| 75°   | 4385.9 | 4574.8 | 4954.8 | 5884.4 | 7203.6 | 7752.5 | 6648.1 | 5448.8 | 4862.2 | 4480.0 | 4451.8 |
| 77.5° | 1955.5 | 1998.5 | 2480.0 | 3550.3 | 4971.1 | 5567.4 | 4830.3 | 3564.4 | 2675.5 | 2134.1 | 2020.0 |
| 80°   | 545.2  | 551.8  | 736.3  | 1322.2 | 2488.1 | 3271.1 | 2671.1 | 1388.9 | 780.7  | 550.4  | 518.5  |
| 82.5° | 173.3  | 188.1  | 229.6  | 343.0  | 836.3  | 1492.6 | 858.5  | 370.4  | 263.7  | 210.4  | 189.6  |
| 85°   | 84.4   | 83.7   | 116.3  | 139.3  | 213.3  | 330.4  | 227.4  | 171.9  | 150.4  | 100.0  | 90.4   |
| 87.5° | 35.6   | 36.3   | 54.1   | 48.9   | 62.2   | 53.3   | 73.3   | 77.0   | 80.7   | 44.4   | 38.5   |
| 90°   | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    |

LM-79-2008: Approved Method: Electrical and Photometric Measurements of Solid-State Lighting Products

Report Prepared for

Cooper Lighting Solutions

McGRAW-EDISON

Report Number: SP1-1908-441-9-R4

Test Date: 10/23/2019

Luminaire Tested: SA1C-760-U-5WQ

Data in this report applies to families of products SA1C-760-U-5WQ .


### Test Information

Test Method: LM-79-2008  
 Report Number: SP1-1908-441-9-R4  
 Test Lab: COOPER LIGHTING SOLUTIONS  
 Photometer: SP1 - 76IN SPHERE  
 Measurement Geometry:  $4\pi$   
 Issue Date: 10/28/2024  
 Manufacturer: COOPER LIGHTING SOLUTIONS  
 Product Line: MCGRAW-EDISON  
 Catalog Number: **SA1C-760-U-5WQ**  
 Description: MCGRAW EDISON ROADWAY AND AREA LUMINAIRE

\*\*\*THIS IS A REVISION OF SP1-1908-441-4-R3. TO UPDATE THE CATALOG INFORMATION.\*\*\*TESTED IN SITU. ROADWAY AND AREA LUMINAIRE. (1) 70 CRI, 5000K, 1050MA LIGHTSQUARE WITH 16 LEDS AND TYPE V WIDE OPTICS.

### Spectral Parameters

|                           |        |           |      |      |       |
|---------------------------|--------|-----------|------|------|-------|
| CCT (K):                  | 5474   | CRI (Ra): | 71.7 |      |       |
| CIE u':                   | 0.2052 | R1:       | 70.6 | R9:  | -27.1 |
| CIE v':                   | 0.4804 | R2:       | 74.6 | R10: | 40.8  |
| Duv:                      | 0.0025 | R3:       | 78.3 | R11: | 74.6  |
| CIE x:                    | 0.3330 | R4:       | 73.8 | R12: | 50.4  |
| CIE y:                    | 0.3466 | R5:       | 72.4 | R13: | 70.0  |
| CIE z:                    | 0.3204 | R6:       | 67.5 | R14: | 87.8  |
| Peak Wavelength (nm):     | 442    | R7:       | 77.5 |      |       |
| Dominant Wavelength (nm): | 554    | R8:       | 58.9 |      |       |
| Purity:                   | 4.1    |           |      |      |       |
| Rf:                       | 72.1   |           |      |      |       |
| Rg:                       | 97.2   |           |      |      |       |

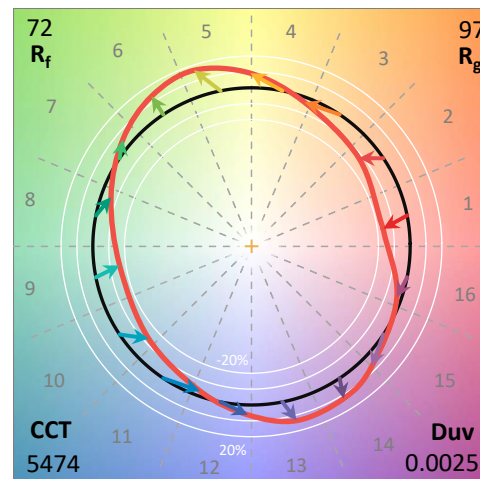

### Test Conditions


Stabilization Time: 240M  
 Operation Time: 12H  
 Room Temperature (°C) / RH%: 24.6/31%  
 Sphere Temperature (°C): 25.9

REPORT NUMBER: SP1-1908-441-9-R4


| Measurement and Test Equipment |                       |                  |                      |
|--------------------------------|-----------------------|------------------|----------------------|
| Instrument                     | Identification Number | Calibration Date | Calibration Due Date |
| Photometer                     | IN0058                | 6/28/2019        | 12/28/2019           |
| Power Meter                    | IN0071                | 12/5/2018        | 12/5/2019            |
| AC Power Source                | IN0063                | 12/5/2018        | 12/5/2019            |
| DC Power Source                | IN0208                | 12/5/2018        | 12/5/2019            |
| Sphere Thermometer             | IN0085                | 12/5/2018        | 12/5/2019            |
| Room Thermometer               | IN0046                | 12/5/2018        | 12/5/2019            |

REPORT NUMBER: SP1-1908-441-9-R4

CIE 1931 Chromaticity Diagram

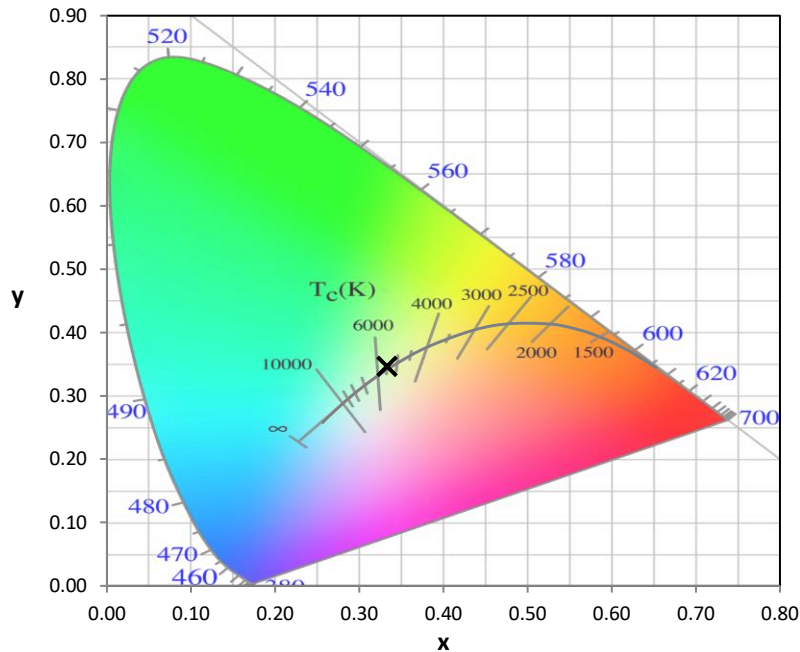


CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles

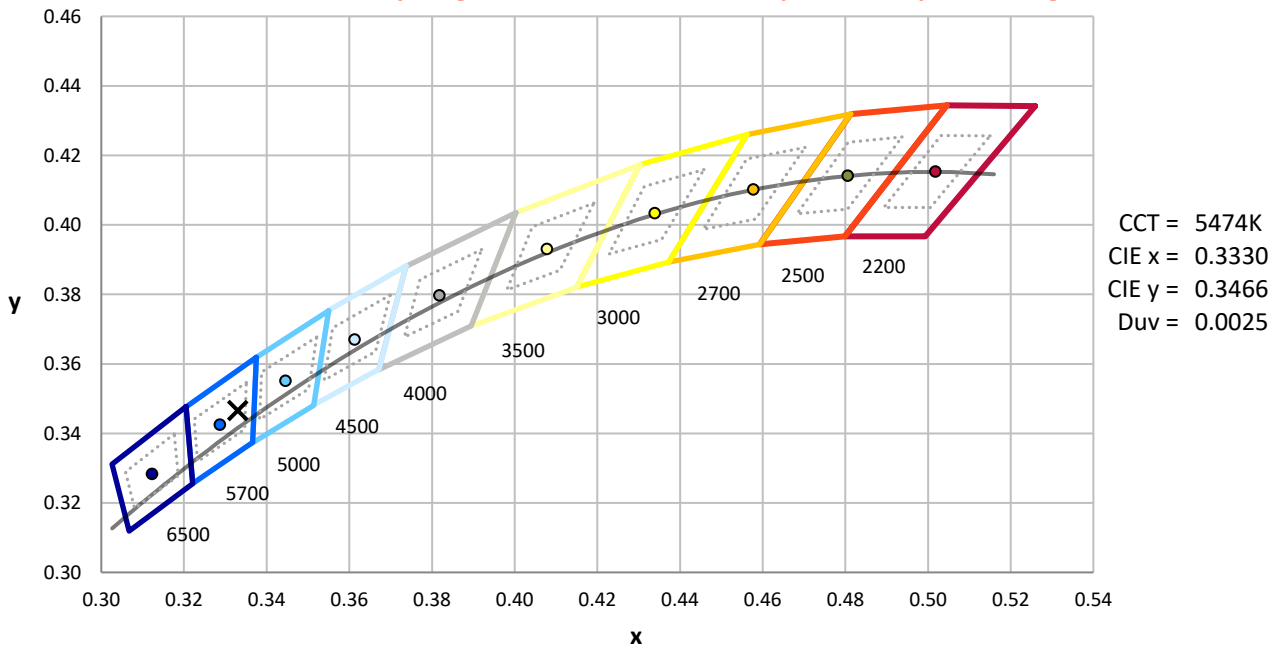

Point lies inside the ANSI 5700K 4-step quadrangle

REPORT NUMBER: SP1-1908-441-9-R4

**Photopic Flux vs. Wavelength**

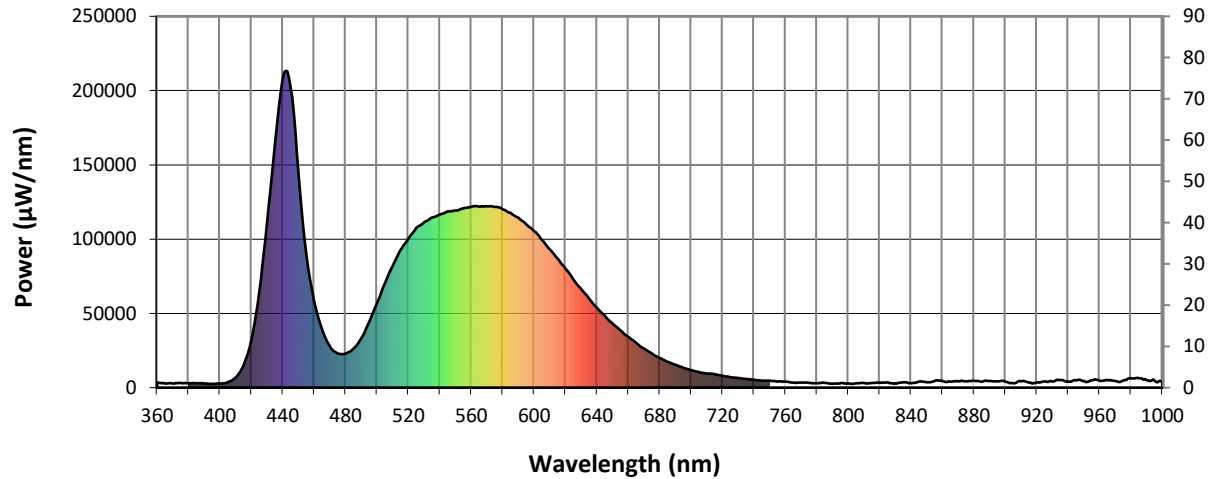


#####

| λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) |
|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|
| 360       | 3540             | NR               | 490       | 33363            | NR               | 620       | 80193            | NR               | 750       | 4663             | NR               | 880       | 4678             | NR               |
| 365       | 2862             | NR               | 495       | 44177            | NR               | 625       | 73091            | NR               | 755       | 4147             | NR               | 885       | 4128             | NR               |
| 370       | 2865             | NR               | 500       | 57019            | NR               | 630       | 66269            | NR               | 760       | 4040             | NR               | 890       | 4504             | NR               |
| 375       | 3254             | NR               | 505       | 70030            | NR               | 635       | 60012            | NR               | 765       | 3474             | NR               | 895       | 4371             | NR               |
| 380       | 3076             | NR               | 510       | 81972            | NR               | 640       | 53914            | NR               | 770       | 3469             | NR               | 900       | 4082             | NR               |
| 385       | 2904             | NR               | 515       | 92590            | NR               | 645       | 48385            | NR               | 775       | 3181             | NR               | 905       | 2982             | NR               |
| 390       | 2689             | NR               | 520       | 100305           | NR               | 650       | 43219            | NR               | 780       | 2969             | NR               | 910       | 4351             | NR               |
| 395       | 2619             | NR               | 525       | 107452           | NR               | 655       | 38562            | NR               | 785       | 3132             | NR               | 915       | 3365             | NR               |
| 400       | 2679             | NR               | 530       | 111373           | NR               | 660       | 34110            | NR               | 790       | 2507             | NR               | 920       | 3430             | NR               |
| 405       | 3515             | NR               | 535       | 114505           | NR               | 665       | 30085            | NR               | 795       | 2968             | NR               | 925       | 4264             | NR               |
| 410       | 6934             | NR               | 540       | 116408           | NR               | 670       | 26205            | NR               | 800       | 2758             | NR               | 930       | 4095             | NR               |
| 415       | 14943            | NR               | 545       | 118700           | NR               | 675       | 22906            | NR               | 805       | 2872             | NR               | 935       | 5048             | NR               |
| 420       | 31939            | NR               | 550       | 119209           | NR               | 680       | 20058            | NR               | 810       | 3094             | NR               | 940       | 4074             | NR               |
| 425       | 64701            | NR               | 555       | 120742           | NR               | 685       | 17413            | NR               | 815       | 3222             | NR               | 945       | 4949             | NR               |
| 430       | 110939           | NR               | 560       | 121594           | NR               | 690       | 15447            | NR               | 820       | 3238             | NR               | 950       | 4387             | NR               |
| 435       | 164597           | NR               | 565       | 121913           | NR               | 695       | 13398            | NR               | 825       | 3524             | NR               | 955       | 4978             | NR               |
| 440       | 207696           | NR               | 570       | 122147           | NR               | 700       | 11777            | NR               | 830       | 2921             | NR               | 960       | 4706             | NR               |
| 445       | 201830           | NR               | 575       | 121605           | NR               | 705       | 10412            | NR               | 835       | 3595             | NR               | 965       | 5083             | NR               |
| 450       | 145410           | NR               | 580       | 120248           | NR               | 710       | 9544             | NR               | 840       | 3016             | NR               | 970       | 4522             | NR               |
| 455       | 89594            | NR               | 585       | 117717           | NR               | 715       | 8940             | NR               | 845       | 4032             | NR               | 975       | 4740             | NR               |
| 460       | 58321            | NR               | 590       | 114359           | NR               | 720       | 7897             | NR               | 850       | 3579             | NR               | 980       | 6122             | NR               |
| 465       | 39318            | NR               | 595       | 109974           | NR               | 725       | 7045             | NR               | 855       | 4571             | NR               | 985       | 6450             | NR               |
| 470       | 27693            | NR               | 600       | 105269           | NR               | 730       | 6483             | NR               | 860       | 4485             | NR               | 990       | 4875             | NR               |
| 475       | 23081            | NR               | 605       | 99453            | NR               | 735       | 5838             | NR               | 865       | 3978             | NR               | 995       | 4764             | NR               |
| 480       | 23002            | NR               | 610       | 92921            | NR               | 740       | 5261             | NR               | 870       | 4298             | NR               | 1000      | 3640             | NR               |
| 485       | 26201            | NR               | 615       | 86989            | NR               | 745       | 4760             | NR               | 875       | 4356             | NR               |           |                  |                  |

REPORT NUMBER: SP1-1908-441-9-R4

Scotopic Flux vs. Wavelength

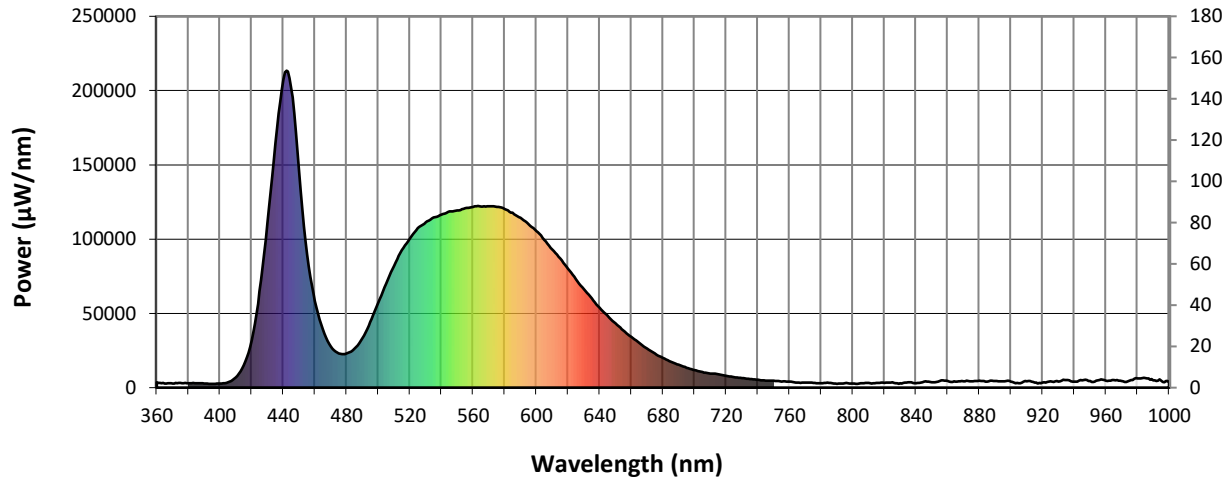


Scotopic Lumens: 13759.3

S/P: 1.85

| λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(Φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(Φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(Φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(Φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(Φ/nm) |
|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|
| 360       | 3540             | NR               | 490       | 33363            | NR               | 620       | 80193            | NR               | 750       | 4663             | NR               | 880       | 4678             | NR               |
| 365       | 2862             | NR               | 495       | 44177            | NR               | 625       | 73091            | NR               | 755       | 4147             | NR               | 885       | 4128             | NR               |
| 370       | 2865             | NR               | 500       | 57019            | NR               | 630       | 66269            | NR               | 760       | 4040             | NR               | 890       | 4504             | NR               |
| 375       | 3254             | NR               | 505       | 70030            | NR               | 635       | 60012            | NR               | 765       | 3474             | NR               | 895       | 4371             | NR               |
| 380       | 3076             | NR               | 510       | 81972            | NR               | 640       | 53914            | NR               | 770       | 3469             | NR               | 900       | 4082             | NR               |
| 385       | 2904             | NR               | 515       | 92590            | NR               | 645       | 48385            | NR               | 775       | 3181             | NR               | 905       | 2982             | NR               |
| 390       | 2689             | NR               | 520       | 100305           | NR               | 650       | 43219            | NR               | 780       | 2969             | NR               | 910       | 4351             | NR               |
| 395       | 2619             | NR               | 525       | 107452           | NR               | 655       | 38562            | NR               | 785       | 3132             | NR               | 915       | 3365             | NR               |
| 400       | 2679             | NR               | 530       | 111373           | NR               | 660       | 34110            | NR               | 790       | 2507             | NR               | 920       | 3430             | NR               |
| 405       | 3515             | NR               | 535       | 114505           | NR               | 665       | 30085            | NR               | 795       | 2968             | NR               | 925       | 4264             | NR               |
| 410       | 6934             | NR               | 540       | 116408           | NR               | 670       | 26205            | NR               | 800       | 2758             | NR               | 930       | 4095             | NR               |
| 415       | 14943            | NR               | 545       | 118700           | NR               | 675       | 22906            | NR               | 805       | 2872             | NR               | 935       | 5048             | NR               |
| 420       | 31939            | NR               | 550       | 119209           | NR               | 680       | 20058            | NR               | 810       | 3094             | NR               | 940       | 4074             | NR               |
| 425       | 64701            | NR               | 555       | 120742           | NR               | 685       | 17413            | NR               | 815       | 3222             | NR               | 945       | 4949             | NR               |
| 430       | 110939           | NR               | 560       | 121594           | NR               | 690       | 15447            | NR               | 820       | 3238             | NR               | 950       | 4387             | NR               |
| 435       | 164597           | NR               | 565       | 121913           | NR               | 695       | 13398            | NR               | 825       | 3524             | NR               | 955       | 4978             | NR               |
| 440       | 207696           | NR               | 570       | 122147           | NR               | 700       | 11777            | NR               | 830       | 2921             | NR               | 960       | 4706             | NR               |
| 445       | 201830           | NR               | 575       | 121605           | NR               | 705       | 10412            | NR               | 835       | 3595             | NR               | 965       | 5083             | NR               |
| 450       | 145410           | NR               | 580       | 120248           | NR               | 710       | 9544             | NR               | 840       | 3016             | NR               | 970       | 4522             | NR               |
| 455       | 89594            | NR               | 585       | 117717           | NR               | 715       | 8940             | NR               | 845       | 4032             | NR               | 975       | 4740             | NR               |
| 460       | 58321            | NR               | 590       | 114359           | NR               | 720       | 7897             | NR               | 850       | 3579             | NR               | 980       | 6122             | NR               |
| 465       | 39318            | NR               | 595       | 109974           | NR               | 725       | 7045             | NR               | 855       | 4571             | NR               | 985       | 6450             | NR               |
| 470       | 27693            | NR               | 600       | 105269           | NR               | 730       | 6483             | NR               | 860       | 4485             | NR               | 990       | 4875             | NR               |
| 475       | 23081            | NR               | 605       | 99453            | NR               | 735       | 5838             | NR               | 865       | 3978             | NR               | 995       | 4764             | NR               |
| 480       | 23002            | NR               | 610       | 92921            | NR               | 740       | 5261             | NR               | 870       | 4298             | NR               | 1000      | 3640             | NR               |
| 485       | 26201            | NR               | 615       | 86989            | NR               | 745       | 4760             | NR               | 875       | 4356             | NR               |           |                  |                  |

REPORT NUMBER: SP1-1908-441-9-R4

**Melanopic Flux vs. Wavelength**

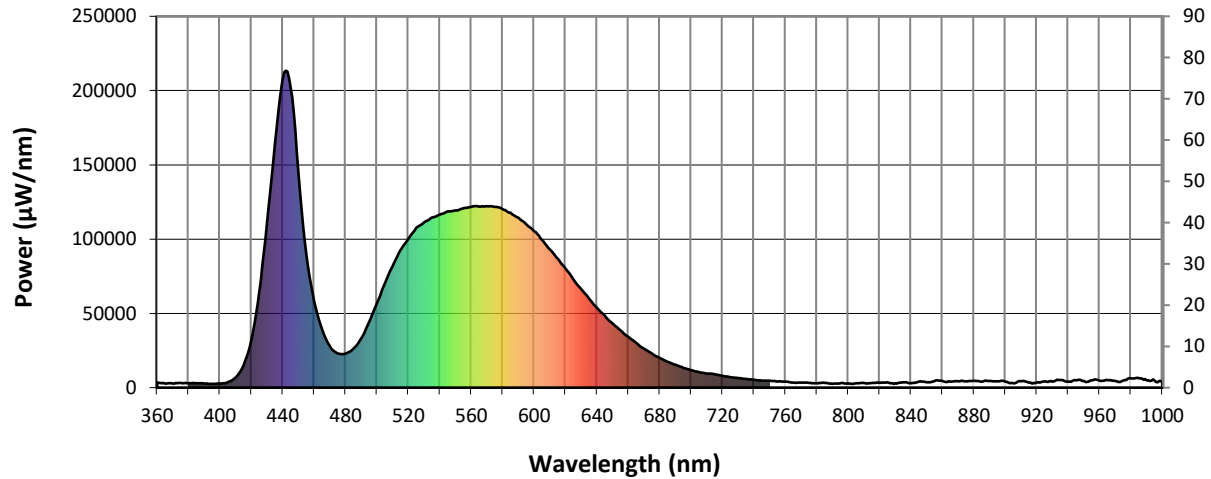

**Melanopic Lumens: 5527.6 M/P: 0.74**


| λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>(μW/nm) | Lumens<br>(φ/nm) |
|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|-----------|------------------|------------------|
| 360       | 3540             | NR               | 490       | 33363            | NR               | 620       | 80193            | NR               | 750       | 4663             | NR               | 880       | 4678             | NR               |
| 365       | 2862             | NR               | 495       | 44177            | NR               | 625       | 73091            | NR               | 755       | 4147             | NR               | 885       | 4128             | NR               |
| 370       | 2865             | NR               | 500       | 57019            | NR               | 630       | 66269            | NR               | 760       | 4040             | NR               | 890       | 4504             | NR               |
| 375       | 3254             | NR               | 505       | 70030            | NR               | 635       | 60012            | NR               | 765       | 3474             | NR               | 895       | 4371             | NR               |
| 380       | 3076             | NR               | 510       | 81972            | NR               | 640       | 53914            | NR               | 770       | 3469             | NR               | 900       | 4082             | NR               |
| 385       | 2904             | NR               | 515       | 92590            | NR               | 645       | 48385            | NR               | 775       | 3181             | NR               | 905       | 2982             | NR               |
| 390       | 2689             | NR               | 520       | 100305           | NR               | 650       | 43219            | NR               | 780       | 2969             | NR               | 910       | 4351             | NR               |
| 395       | 2619             | NR               | 525       | 107452           | NR               | 655       | 38562            | NR               | 785       | 3132             | NR               | 915       | 3365             | NR               |
| 400       | 2679             | NR               | 530       | 111373           | NR               | 660       | 34110            | NR               | 790       | 2507             | NR               | 920       | 3430             | NR               |
| 405       | 3515             | NR               | 535       | 114505           | NR               | 665       | 30085            | NR               | 795       | 2968             | NR               | 925       | 4264             | NR               |
| 410       | 6934             | NR               | 540       | 116408           | NR               | 670       | 26205            | NR               | 800       | 2758             | NR               | 930       | 4095             | NR               |
| 415       | 14943            | NR               | 545       | 118700           | NR               | 675       | 22906            | NR               | 805       | 2872             | NR               | 935       | 5048             | NR               |
| 420       | 31939            | NR               | 550       | 119209           | NR               | 680       | 20058            | NR               | 810       | 3094             | NR               | 940       | 4074             | NR               |
| 425       | 64701            | NR               | 555       | 120742           | NR               | 685       | 17413            | NR               | 815       | 3222             | NR               | 945       | 4949             | NR               |
| 430       | 110939           | NR               | 560       | 121594           | NR               | 690       | 15447            | NR               | 820       | 3238             | NR               | 950       | 4387             | NR               |
| 435       | 164597           | NR               | 565       | 121913           | NR               | 695       | 13398            | NR               | 825       | 3524             | NR               | 955       | 4978             | NR               |
| 440       | 207696           | NR               | 570       | 122147           | NR               | 700       | 11777            | NR               | 830       | 2921             | NR               | 960       | 4706             | NR               |
| 445       | 201830           | NR               | 575       | 121605           | NR               | 705       | 10412            | NR               | 835       | 3595             | NR               | 965       | 5083             | NR               |
| 450       | 145410           | NR               | 580       | 120248           | NR               | 710       | 9544             | NR               | 840       | 3016             | NR               | 970       | 4522             | NR               |
| 455       | 89594            | NR               | 585       | 117717           | NR               | 715       | 8940             | NR               | 845       | 4032             | NR               | 975       | 4740             | NR               |
| 460       | 58321            | NR               | 590       | 114359           | NR               | 720       | 7897             | NR               | 850       | 3579             | NR               | 980       | 6122             | NR               |
| 465       | 39318            | NR               | 595       | 109974           | NR               | 725       | 7045             | NR               | 855       | 4571             | NR               | 985       | 6450             | NR               |
| 470       | 27693            | NR               | 600       | 105269           | NR               | 730       | 6483             | NR               | 860       | 4485             | NR               | 990       | 4875             | NR               |
| 475       | 23081            | NR               | 605       | 99453            | NR               | 735       | 5838             | NR               | 865       | 3978             | NR               | 995       | 4764             | NR               |
| 480       | 23002            | NR               | 610       | 92921            | NR               | 740       | 5261             | NR               | 870       | 4298             | NR               | 1000      | 3640             | NR               |
| 485       | 26201            | NR               | 615       | 86989            | NR               | 745       | 4760             | NR               | 875       | 4356             | NR               |           |                  |                  |

REPORT NUMBER: SP1-1908-441-9-R4





**TM-30-18**

### Summary

$R_f = 72.1$   
 $R_g = 97.2$   
 CIE  $R_a = 71.7$   
 $R_g = -27.1$

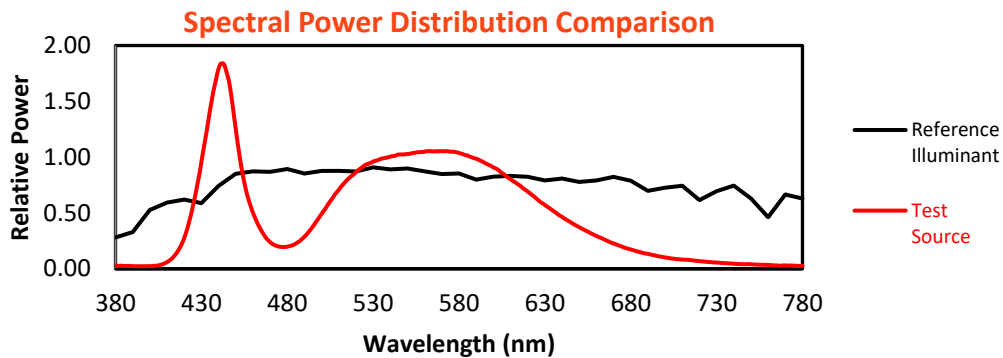

### Color Vector Graphics

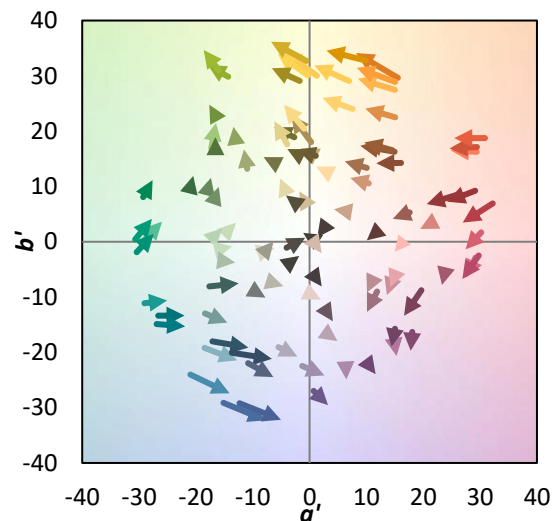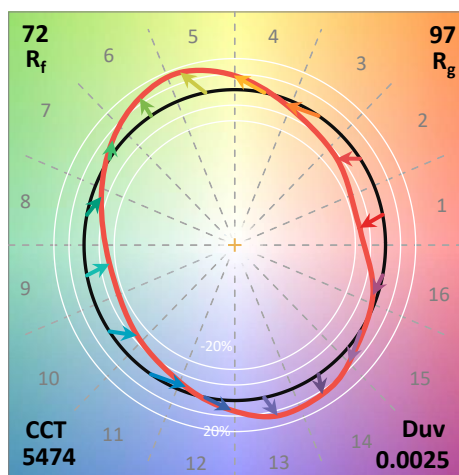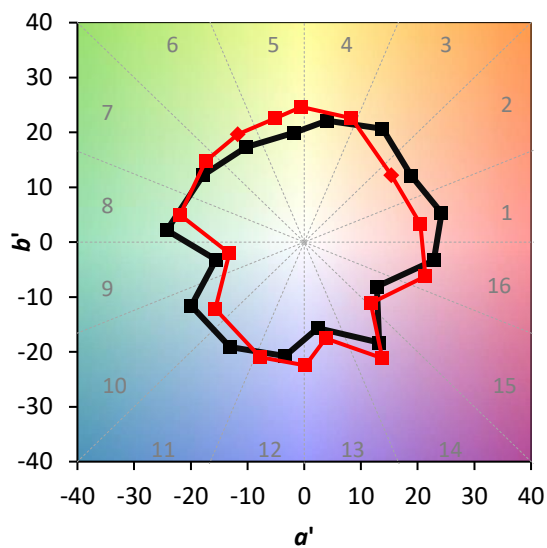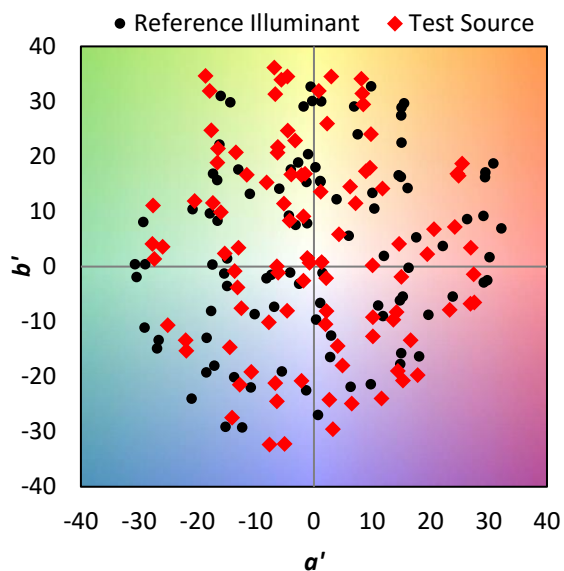


REPORT NUMBER: SP1-1908-441-9-R4

**TM-30-18**

**Individual Sample Fidelity Index ( $R_{f,i}$ )**




|            |            |            |            |
|------------|------------|------------|------------|
| CES01 = 85 | CES26 = 54 | CES51 = 88 | CES76 = 43 |
| CES02 = 59 | CES27 = 79 | CES52 = 90 | CES77 = 64 |
| CES03 = 30 | CES28 = 77 | CES53 = 77 | CES78 = 46 |
| CES04 = 69 | CES29 = 50 | CES54 = 81 | CES79 = 74 |
| CES05 = 46 | CES30 = 59 | CES55 = 80 | CES80 = 70 |
| CES06 = 50 | CES31 = 55 | CES56 = 70 | CES81 = 71 |
| CES07 = 38 | CES32 = 52 | CES57 = 68 | CES82 = 88 |
| CES08 = 38 | CES33 = 63 | CES58 = 70 | CES83 = 82 |
| CES09 = 29 | CES34 = 63 | CES59 = 88 | CES84 = 87 |
| CES10 = 72 | CES35 = 79 | CES60 = 92 | CES85 = 84 |
| CES11 = 55 | CES36 = 90 | CES61 = 88 | CES86 = 76 |
| CES12 = 61 | CES37 = 72 | CES62 = 81 | CES87 = 75 |
| CES13 = 41 | CES38 = 68 | CES63 = 75 | CES88 = 77 |
| CES14 = 74 | CES39 = 91 | CES64 = 72 | CES89 = 76 |
| CES15 = 70 | CES40 = 83 | CES65 = 65 | CES90 = 76 |
| CES16 = 46 | CES41 = 84 | CES66 = 66 | CES91 = 92 |
| CES17 = 48 | CES42 = 70 | CES67 = 64 | CES92 = 70 |
| CES18 = 55 | CES43 = 69 | CES68 = 71 | CES93 = 83 |
| CES19 = 70 | CES44 = 98 | CES69 = 80 | CES94 = 60 |
| CES20 = 64 | CES45 = 79 | CES70 = 58 | CES95 = 73 |
| CES21 = 85 | CES46 = 78 | CES71 = 55 | CES96 = 79 |
| CES22 = 77 | CES47 = 76 | CES72 = 84 | CES97 = 84 |
| CES23 = 91 | CES48 = 68 | CES73 = 47 | CES98 = 73 |
| CES24 = 90 | CES49 = 78 | CES74 = 94 | CES99 = 62 |
| CES25 = 71 | CES50 = 87 | CES75 = 51 |            |

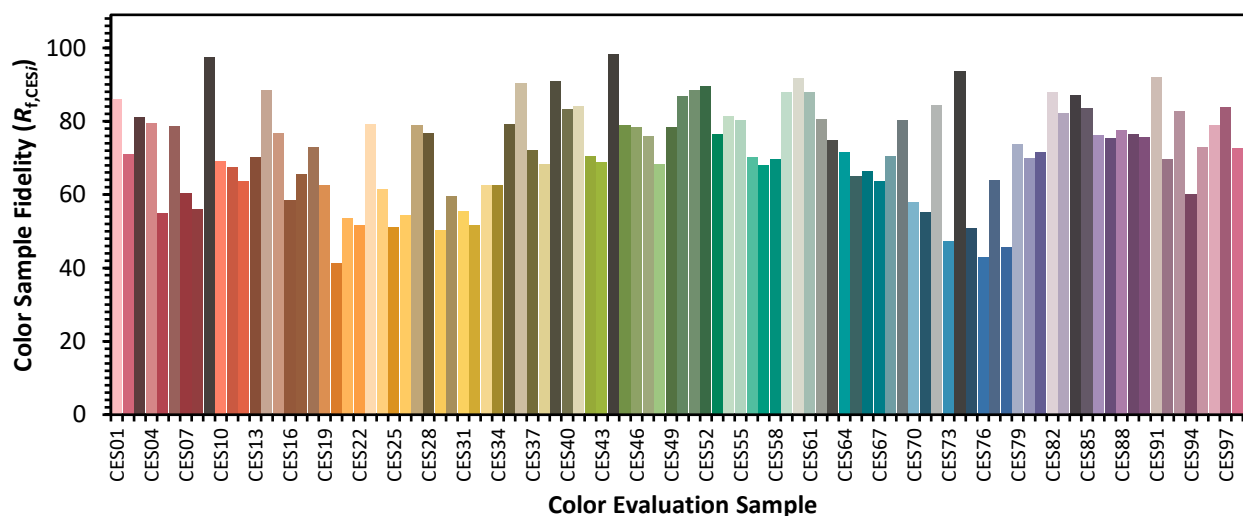

REPORT NUMBER: SP1-1908-441-9-R4

**TM-30-18**



Color Rendition by Hue-Angle Bin

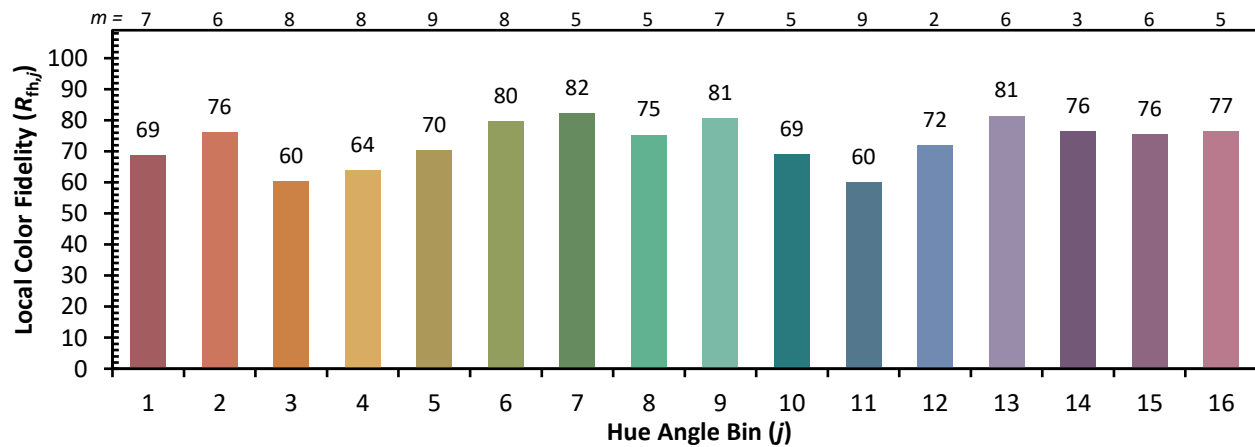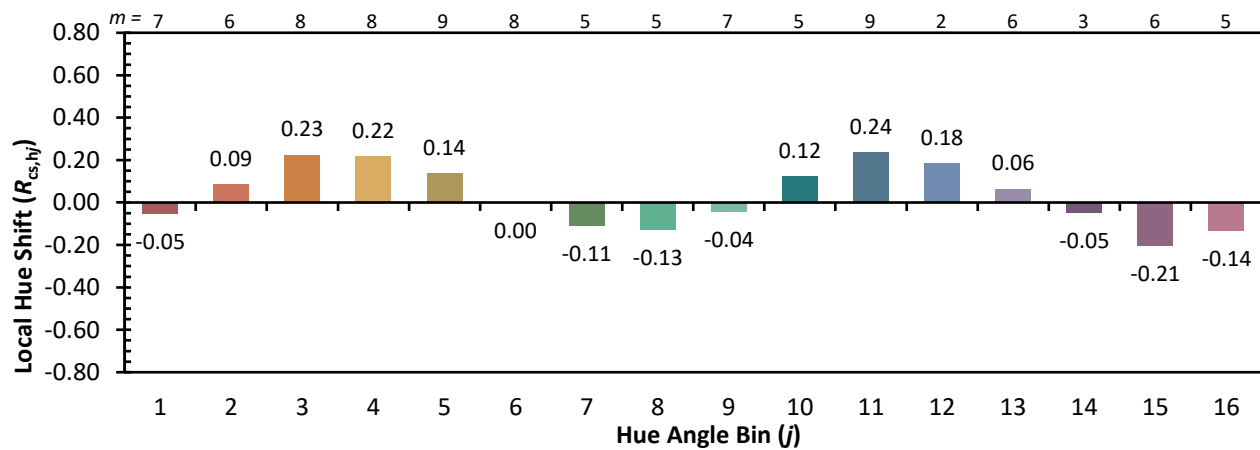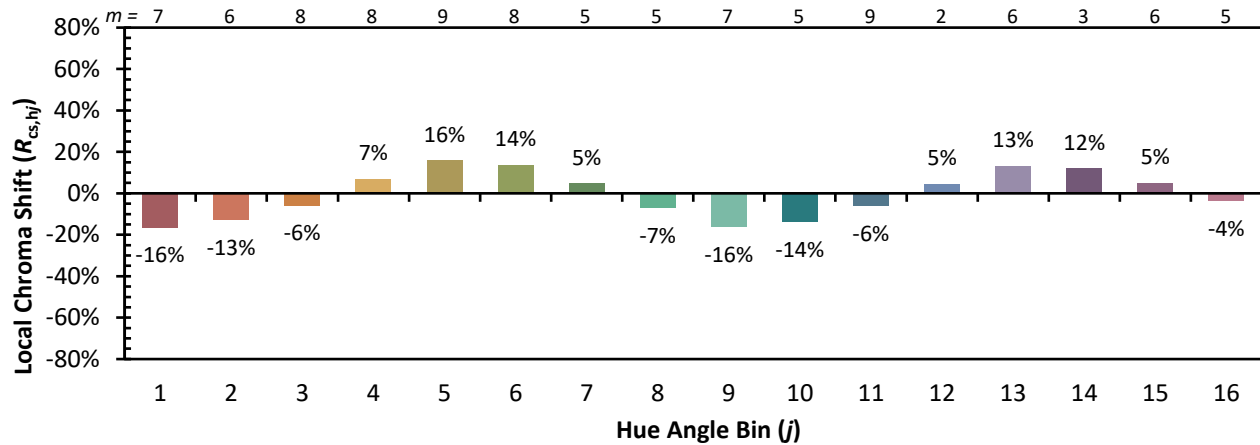

REPORT NUMBER: SP1-1908-441-9-R4

**TM-30-18**

**Measure Comparisons**

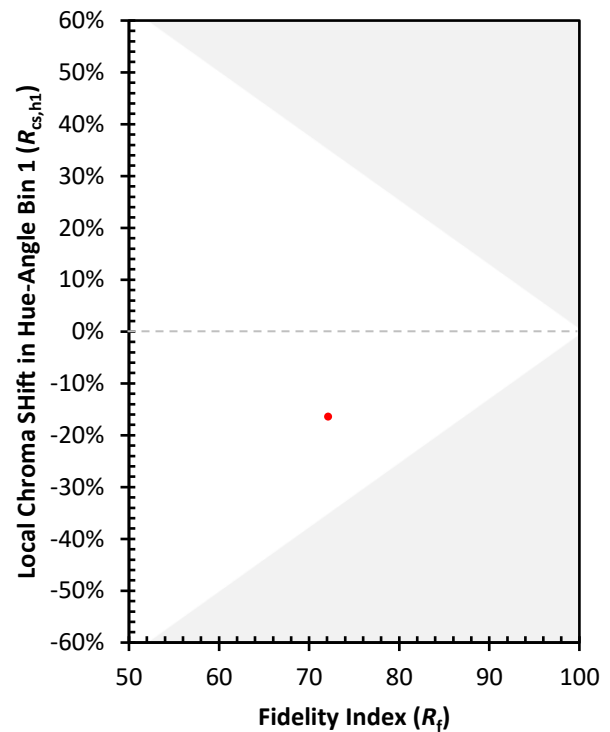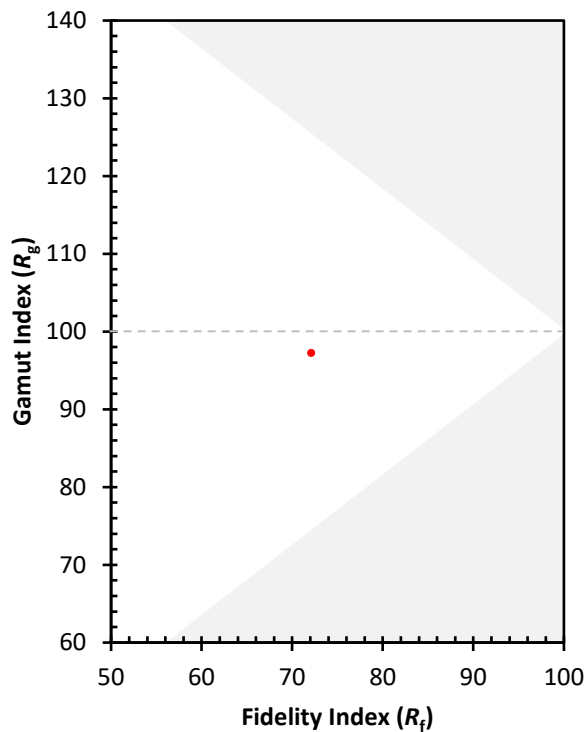

(END OF REPORT)