

Scaled data based on original data using  
LM-79-08 Approved Method: Electrical and Photometric Measurements of Solid-  
State Lighting Products

Test Report Prepared for  
Cooper Lighting Solutions  
(formerly Eaton)

Brand: STREETWORKS

Report Number: P1382191

Luminaire Tested: **VAL-T-SB1A-722-U-5MQ**

Issue Date: 02/18/2026

This test was performed under the Supervised Manufacturer's Testing Program. The results of this test have not been  
influenced by sources from within Cooper Lighting Solutions or from external interests.

**Test Information**

Test Method: LM-79-08  
 Report Number: P1382191  
 Test Lab: INNOVATION CENTER(G1)  
 Issue Date: 02/18/2026  
 Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)  
 Product Line: STREETWORKS  
 Catalog Number: VAL-T-SB1A-722-U-5MQ  
 Description: GALLEON II WALL SLIM HIGH DENSITY LED ARRAYS 1SQUARE 31W 70CRI  
 2200K FIXTURE w/ TYPE V SQUARE MEDIUM DISTRIBUTION OPTIC  
 Light Source: (26) 2200K CCT, 70 CRI LEDS  
 Ballast/Driver: ELECTRONIC DRIVER  
 Luminaire Equipment:

| <u>Sample No.</u> | <u>Condition</u> | <u>Description</u> |
|-------------------|------------------|--------------------|
| a                 | good             | reflector          |
| b                 | good             | lens               |
| c                 | good             | housing            |
| d                 | good             | cord               |

**Summary**

Lumens per Lamp: N/A  
 Luminaire Lumens: 3402 lumens  
 Efficiency: N/A  
 Efficacy: 109.7 lumens/watt  
 Luminous Opening: Rectangular (W 0.5' x L: 0.5' x H: 0')  
 IES Classification: Type V - Short  
 BUG Rating: B2 - U0 - G1  
  
 Input Watts (W): 31  
 Input Voltage (V): 120  
 Input Current (Ain): NR  
 Voltage Rise (V): NR  
 Power Factor: 0.98  
 Total Harmonic Distortion (THDi): 6.4%  
 Frequency (hertz): 60  
 Stabilization Time: NR  
 Operation Time: NR  
 Ambient Temperature (°C): NR  
 Test Distance: 28.75 FT


REPORT NUMBER: P1382191

CATALOG NUMBER: VAL-T-SB1A-722-U-5MQ

## Iso-Footcandle Lines of Horizontal Illumination

× Max cd

--- 1/2 Max cd

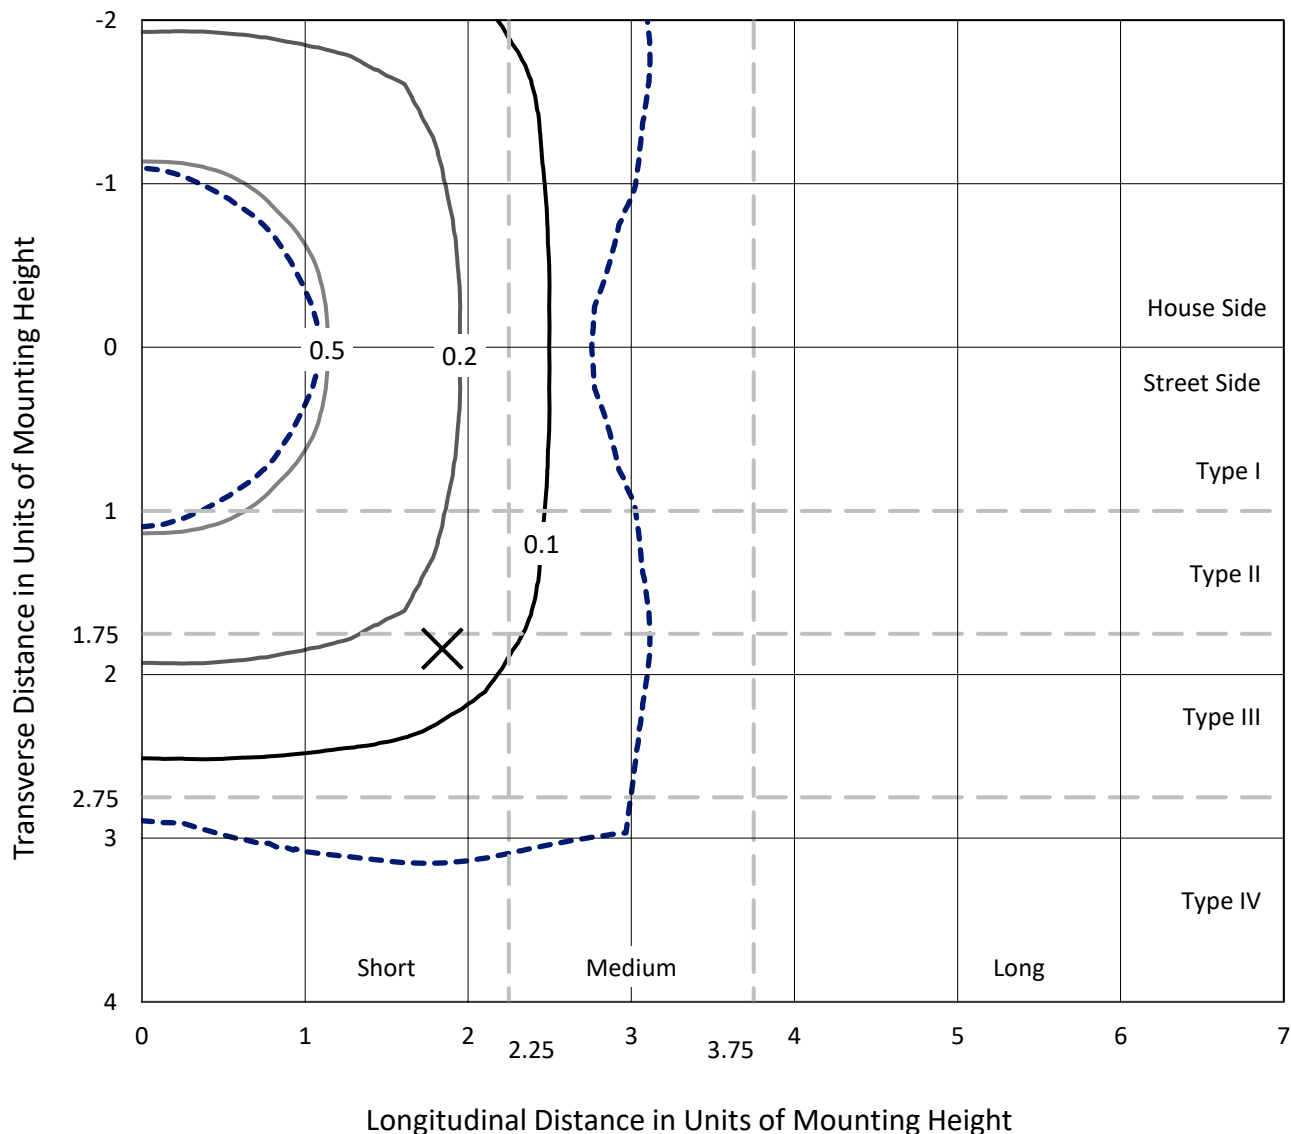


Based on 20 foot mounting height. Maximum calculated value = 0.9 fc

Type V - Short - N/A

REPORT NUMBER: P1382191  
CATALOG NUMBER: VAL-T-SB1A-722-U-5MQ

## Luminous Intensity Polar Plot

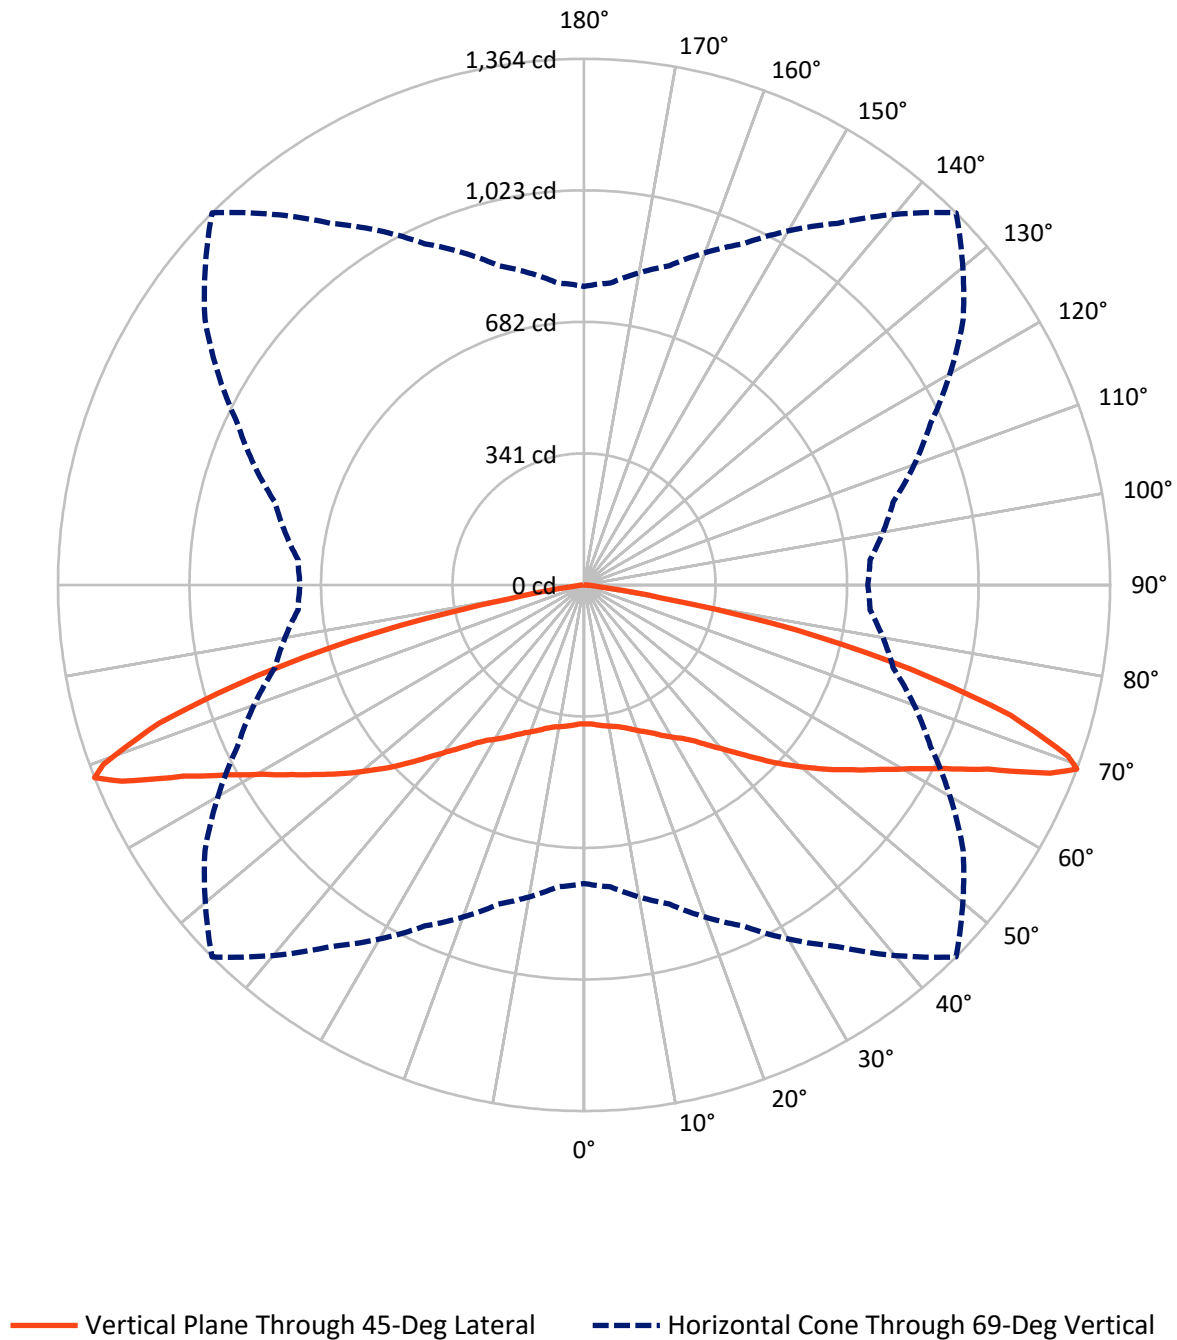

REPORT NUMBER: P1382191

CATALOG NUMBER: VAL-T-SB1A-722-U-5MQ


**FLUX DISTRIBUTION:**

|                    |           | Downward | Upward | Total  |
|--------------------|-----------|----------|--------|--------|
| <b>House Side</b>  | Lumens    | 1701.0   | 0.0    | 1701.0 |
|                    | % Fixture | 50.0     | 0.0    | 50.0   |
| <b>Street Side</b> | Lumens    | 1701.0   | 0.0    | 1701.0 |
|                    | % Fixture | 50.0     | 0.0    | 50.0   |
| <b>Total</b>       | Lumens    | 3402.0   | 0.0    | 3402.0 |
|                    | % Fixture | 100.0    | 0.0    | 100.0  |

**Coefficient of Utilization**

**ZONAL LUMENS:**

| Zone      | Lumens | % Fixture |
|-----------|--------|-----------|
| 0°-10°    | 35.1   | 1.0       |
| 10°-20°   | 108.9  | 3.2       |
| 20°-30°   | 195.4  | 5.7       |
| 30°-40°   | 314.5  | 9.2       |
| 40°-50°   | 502.0  | 14.8      |
| 50°-60°   | 743.9  | 21.9      |
| 60°-70°   | 955.3  | 28.1      |
| 70°-80°   | 529.1  | 15.6      |
| 80°-90°   | 17.9   | 0.5       |
| 90°-100°  | 0.0    | 0.0       |
| 100°-110° | 0.0    | 0.0       |
| 110°-120° | 0.0    | 0.0       |
| 120°-130° | 0.0    | 0.0       |
| 130°-140° | 0.0    | 0.0       |
| 140°-150° | 0.0    | 0.0       |
| 150°-160° | 0.0    | 0.0       |
| 160°-170° | 0.0    | 0.0       |
| 170°-180° | 0.0    | 0.0       |
| 0°-90°    | 3402.0 | 100.0     |
| 0°-180°   | 3402.0 | 100.0     |

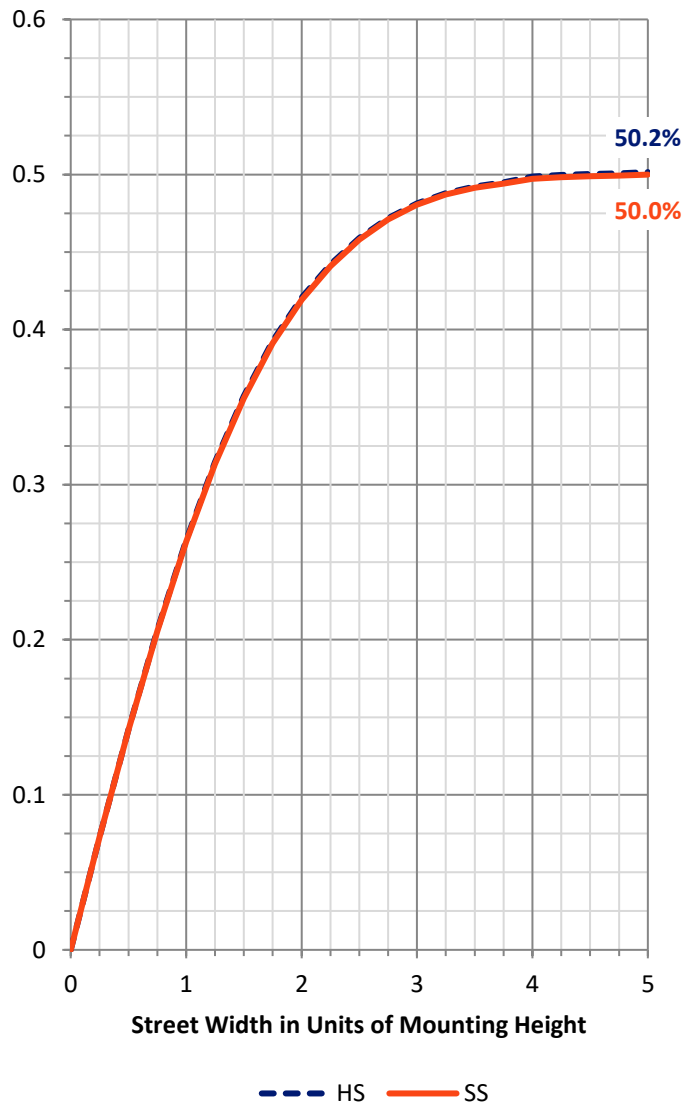

REPORT NUMBER: P1382191


CATALOG NUMBER: VAL-T-SB1A-722-U-5MQ

**LUMINAIRE CLASSIFICATION SYSTEM LUMEN TABLE AND BUG RATING:**

| Zone |             | Lumens | % Fixture | Zone Rating/Lumen Limit |      |         |
|------|-------------|--------|-----------|-------------------------|------|---------|
|      |             |        |           | B                       | U    | G       |
| FL   | (0°-30°)    | 169.7  | 5.0       |                         |      |         |
| FM   | (30°-60°)   | 780.2  | 22.9      |                         |      |         |
| FH   | (60°-80°)   | 742.2  | 21.8      |                         |      | G1/1800 |
| FVH  | (80°-90°)   | 8.9    | 0.3       |                         |      | G0/10   |
| BL   | (0°-30°)    | 169.7  | 5.0       | B1/500                  |      |         |
| BM   | (30°-60°)   | 780.2  | 22.9      | B1/1000                 |      |         |
| BH   | (60°-80°)   | 742.2  | 21.8      | B2/1000                 |      | G1/1800 |
| BVH  | (80°-90°)   | 8.9    | 0.3       |                         |      | G0/10   |
| UL   | (90°-100°)  | 0.0    | 0.0       |                         | U0/0 |         |
| UH   | (100°-180°) | 0.0    | 0.0       |                         | U0/0 |         |

**BUG Rating: B2-U0-G1**

Type V Short

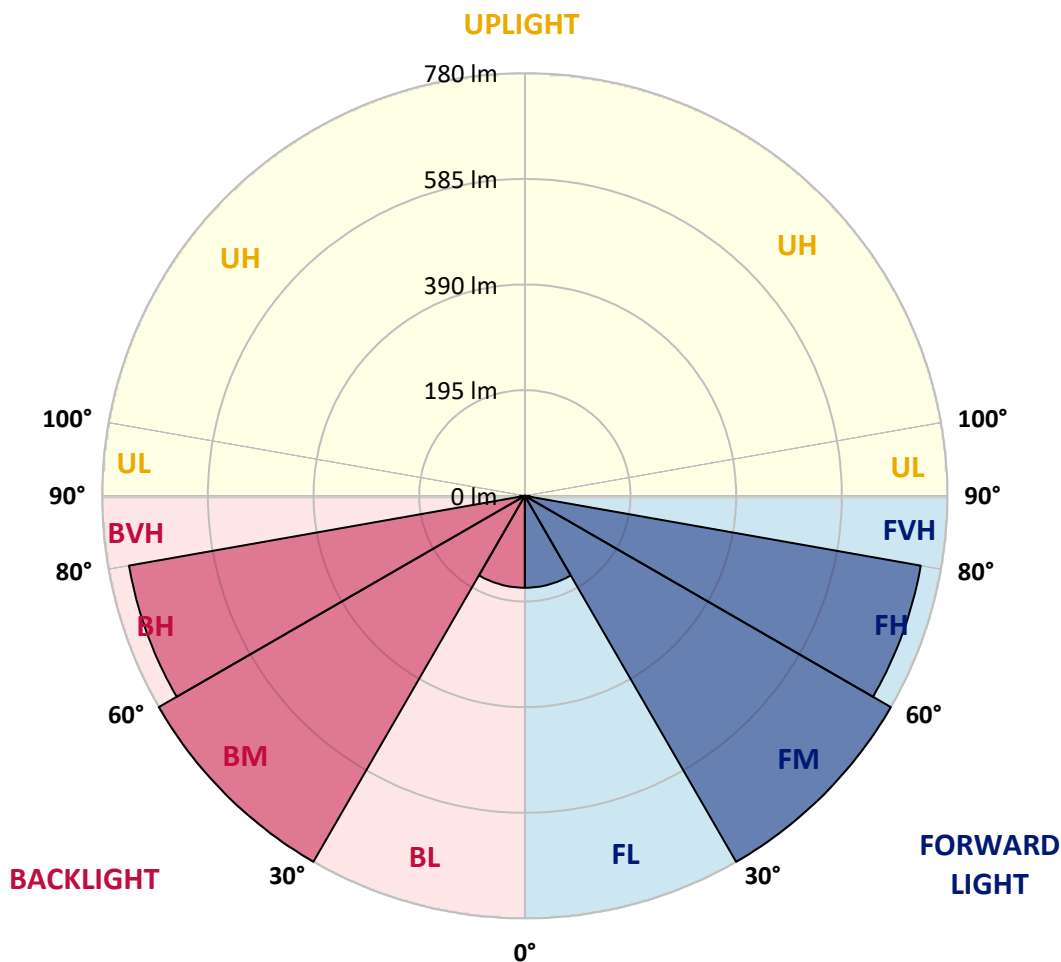

REPORT NUMBER: P1382191

CATALOG NUMBER: VAL-T-SB1A-722-U-5MQ

**CANDELA DISTRIBUTION (FULL):**

|       | 0°    | 5°    | 15°   | 25°   | 35°    | 45°    | 55°    | 65°   | 75°   | 85°   | 90°   |
|-------|-------|-------|-------|-------|--------|--------|--------|-------|-------|-------|-------|
| 0°    | 360.1 | 360.1 | 360.1 | 360.1 | 360.1  | 360.1  | 360.1  | 360.1 | 360.1 | 360.1 | 360.1 |
| 2.5°  | 364.0 | 362.4 | 362.4 | 361.6 | 360.8  | 360.8  | 361.6  | 360.8 | 362.4 | 361.6 | 361.6 |
| 5°    | 366.3 | 364.8 | 364.8 | 365.5 | 364.0  | 364.8  | 365.5  | 364.0 | 366.3 | 364.8 | 364.8 |
| 7.5°  | 369.4 | 368.7 | 367.9 | 369.4 | 368.7  | 368.7  | 370.2  | 368.7 | 370.2 | 367.9 | 367.1 |
| 10°   | 374.1 | 371.8 | 371.8 | 372.6 | 371.8  | 372.6  | 374.1  | 372.6 | 372.6 | 371.0 | 371.0 |
| 12.5° | 377.3 | 376.5 | 375.7 | 376.5 | 376.5  | 376.5  | 377.3  | 375.7 | 376.5 | 375.7 | 374.9 |
| 15°   | 381.9 | 381.2 | 381.2 | 381.2 | 381.9  | 383.5  | 382.7  | 380.4 | 381.2 | 379.6 | 379.6 |
| 17.5° | 389.0 | 387.4 | 388.2 | 389.0 | 390.5  | 392.9  | 390.5  | 387.4 | 387.4 | 385.8 | 385.1 |
| 20°   | 396.8 | 396.0 | 396.8 | 398.3 | 399.9  | 403.0  | 399.9  | 396.8 | 395.2 | 393.7 | 392.1 |
| 22.5° | 405.4 | 404.6 | 406.9 | 408.5 | 410.1  | 414.0  | 410.8  | 407.7 | 403.8 | 402.2 | 401.5 |
| 25°   | 414.7 | 414.0 | 416.3 | 421.0 | 424.9  | 427.2  | 424.1  | 418.6 | 415.5 | 412.4 | 410.8 |
| 27.5° | 424.9 | 424.9 | 428.8 | 433.5 | 439.0  | 442.9  | 439.7  | 432.7 | 426.5 | 423.3 | 422.6 |
| 30°   | 440.5 | 440.5 | 444.4 | 450.7 | 455.4  | 458.5  | 455.4  | 449.9 | 443.6 | 440.5 | 439.7 |
| 32.5° | 461.6 | 461.6 | 466.3 | 471.0 | 473.3  | 474.9  | 474.1  | 471.8 | 466.3 | 461.6 | 460.0 |
| 35°   | 486.6 | 487.4 | 492.8 | 496.8 | 499.1  | 497.5  | 499.1  | 497.5 | 492.8 | 488.9 | 488.2 |
| 37.5° | 518.6 | 518.6 | 524.1 | 528.0 | 526.4  | 528.0  | 528.0  | 528.8 | 526.4 | 521.0 | 518.6 |
| 40°   | 553.8 | 554.6 | 560.8 | 563.1 | 562.4  | 560.8  | 563.1  | 565.5 | 562.4 | 556.9 | 555.3 |
| 42.5° | 592.8 | 594.4 | 599.1 | 603.8 | 602.2  | 599.9  | 604.5  | 606.1 | 600.6 | 595.9 | 595.9 |
| 45°   | 633.4 | 633.4 | 640.5 | 649.1 | 649.8  | 645.9  | 649.1  | 649.8 | 642.8 | 636.6 | 634.2 |
| 47.5° | 674.8 | 676.4 | 685.8 | 695.1 | 698.3  | 694.4  | 696.7  | 697.5 | 685.8 | 679.5 | 675.6 |
| 50°   | 716.2 | 718.6 | 731.1 | 745.9 | 749.0  | 742.8  | 747.5  | 744.3 | 731.9 | 718.6 | 715.4 |
| 52.5° | 749.8 | 755.3 | 774.0 | 794.3 | 802.9  | 794.3  | 800.6  | 795.1 | 774.0 | 756.8 | 751.4 |
| 55°   | 787.3 | 791.2 | 815.4 | 842.0 | 853.7  | 845.9  | 852.1  | 842.8 | 813.1 | 792.0 | 786.5 |
| 57.5° | 824.0 | 825.6 | 852.9 | 890.4 | 909.2  | 902.9  | 903.7  | 885.7 | 853.7 | 826.4 | 818.5 |
| 60°   | 852.9 | 857.6 | 892.7 | 936.5 | 966.2  | 966.9  | 959.9  | 932.6 | 895.1 | 863.9 | 857.6 |
| 62.5° | 815.4 | 825.6 | 888.8 | 981.8 | 1030.2 | 1048.2 | 1027.1 | 984.9 | 903.7 | 847.4 | 838.1 |
| 65°   | 790.4 | 796.7 | 844.3 | 957.6 | 1106.8 | 1151.3 | 1109.1 | 978.7 | 874.0 | 829.5 | 820.9 |
| 67.5° | 806.8 | 814.6 | 867.8 | 955.2 | 1124.7 | 1302.0 | 1158.3 | 999.0 | 892.0 | 822.5 | 813.9 |
| 69°   | 774.0 | 785.7 | 856.8 | 975.5 | 1144.2 | 1363.7 | 1199.7 | 991.2 | 829.5 | 744.3 | 735.8 |
| 70°   | 736.5 | 746.7 | 823.2 | 964.6 | 1172.4 | 1330.9 | 1216.1 | 943.5 | 768.6 | 687.3 | 679.5 |
| 72.5° | 574.1 | 585.0 | 674.8 | 852.1 | 1112.2 | 1156.7 | 1061.5 | 788.1 | 637.3 | 564.7 | 556.1 |
| 75°   | 189.8 | 209.3 | 294.5 | 531.9 | 715.4  | 877.1  | 685.8  | 529.6 | 342.1 | 258.5 | 232.8 |
| 77.5° | 40.6  | 43.7  | 76.5  | 136.7 | 296.8  | 561.6  | 333.5  | 130.4 | 70.3  | 49.2  | 44.5  |
| 80°   | 21.9  | 23.4  | 32.0  | 39.8  | 73.4   | 200.7  | 64.0   | 35.1  | 33.6  | 24.2  | 22.7  |
| 82.5° | 14.1  | 14.1  | 18.0  | 21.9  | 28.1   | 37.5   | 25.0   | 21.1  | 18.7  | 13.3  | 13.3  |
| 85°   | 7.8   | 7.8   | 8.6   | 10.9  | 10.9   | 11.7   | 10.9   | 10.2  | 8.6   | 7.8   | 7.0   |
| 87.5° | 4.7   | 5.5   | 5.5   | 4.7   | 4.7    | 4.7    | 4.7    | 4.7   | 4.7   | 5.5   | 4.7   |
| 90°   | 0.0   | 0.0   | 0.0   | 0.0   | 0.0    | 0.0    | 0.0    | 0.0   | 0.0   | 0.0   | 0.0   |

Cooper Lighting Solutions Photometric Lab  
1121 Highway 74 South  
Peachtree City, GA 30269



LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-State Lighting Products

Report Prepared for

Cooper Lighting Solutions

McGraw-Edison

Report Number: SP1-2407-184-2

Test Date: 10/09/2024

Luminaire Tested: GSS-SB1A-722-U-5WQ

Data in this report applies to families of products including GSS-SB1A-722-U-5WQ

### Test Information

Test Method: LM-79-2019  
 Report Number: SP1-2407-184-2  
 Test Lab: COOPER LIGHTING SOLUTIONS  
 Photometer: SP1 - 76IN SPHERE  
 Measurement Geometry:  $4\pi$   
 Issue Date: 10/15/2024  
 Manufacturer: COOPER LIGHTING SOLUTIONS  
 Product Line: McGraw-Edison  
 Catalog Number: **GSS-SB1A-722-U-5WQ**  
 Description: GALLEON II SITE SLIM 1SQ 350MA 5WQ HIGH DENSITY LIGHTSQUARE WITH 70 CRI  
 2200K CCT 26 LEDS

### Spectral Parameters

|                           |          |           |      |      |       |
|---------------------------|----------|-----------|------|------|-------|
| CCT (K):                  | 2160     | CRI (Ra): | 71.9 |      |       |
| CIE u':                   | 0.2927   | R1:       | 68.7 | R9:  | -17.8 |
| CIE v':                   | 0.5388   | R2:       | 82.6 | R10: | 60.5  |
| Duv:                      | 0.0015   | R3:       | 95.5 | R11: | 60.2  |
| CIE x:                    | 0.5130   | R4:       | 66.4 | R12: | 48.2  |
| CIE y:                    | 0.4197   | R5:       | 65.4 | R13: | 70.7  |
| CIE z:                    | 0.0674   | R6:       | 75.9 | R14: | 96.8  |
| Peak Wavelength (nm):     | 609      | R7:       | 77.2 | R15: | 61.8  |
| Dominant Wavelength (nm): | 587      | R8:       | 43.5 |      |       |
| Purity:                   | 79.96089 |           |      |      |       |
| Rf:                       | 70.6     |           |      |      |       |
| Rg:                       | 97.6     |           |      |      |       |



### Test Conditions


Stabilization Time: 21M  
 Operation Time: 1H 21M  
 Sphere Temperature (°C): 25.2

REPORT NUMBER: SP1-2407-184-2

| Measurement and Test Equipment |                       |                  |                      |
|--------------------------------|-----------------------|------------------|----------------------|
| Instrument                     | Identification Number | Calibration Date | Calibration Due Date |
| Photometer                     | IN0058                | 6/18/2024        | 12/18/2024           |
| Power Meter                    | INXT2011004           | 2/8/2024         | 2/8/2025             |
| AC Power Source                | IN0063                | 10/24/2023       | 10/24/2024           |
| DC Power Source                | IN0208                | 10/24/2023       | 10/24/2024           |
| Sphere Thermometer             | IN0085                | 10/24/2023       | 10/24/2024           |
| Room Thermometer               | IN0046                | 10/24/2023       | 10/24/2024           |

REPORT NUMBER: SP1-2407-184-2

**CIE 1931 Chromaticity Diagram**

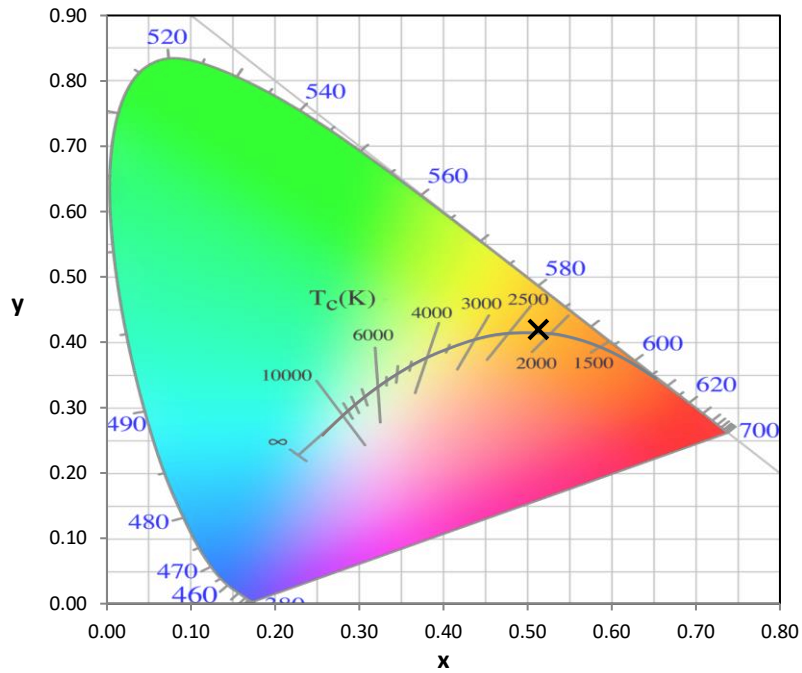

**CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles**



Point lies inside the ANSI 2200K 7-step quadrangle

REPORT NUMBER: SP1-2407-184-2

### Photopic Flux vs. Wavelength



### Photopic Lumens: NR

| $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) |
|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|
| 360               | 0                                    | NR                             | 490               | 27                                   | NR                             | 620               | 966                                  | NR                             | 750               | 46                                   | NR                             | 880               | 1                                    | NR                             |
| 365               | 0                                    | NR                             | 495               | 42                                   | NR                             | 625               | 930                                  | NR                             | 755               | 39                                   | NR                             | 885               | 1                                    | NR                             |
| 370               | 0                                    | NR                             | 500               | 67                                   | NR                             | 630               | 888                                  | NR                             | 760               | 34                                   | NR                             | 890               | 1                                    | NR                             |
| 375               | 0                                    | NR                             | 505               | 101                                  | NR                             | 635               | 835                                  | NR                             | 765               | 30                                   | NR                             | 895               | 1                                    | NR                             |
| 380               | 0                                    | NR                             | 510               | 139                                  | NR                             | 640               | 778                                  | NR                             | 770               | 26                                   | NR                             | 900               | 1                                    | NR                             |
| 385               | 0                                    | NR                             | 515               | 183                                  | NR                             | 645               | 717                                  | NR                             | 775               | 22                                   | NR                             | 905               | 1                                    | NR                             |
| 390               | 0                                    | NR                             | 520               | 224                                  | NR                             | 650               | 656                                  | NR                             | 780               | 19                                   | NR                             | 910               | 1                                    | NR                             |
| 395               | 0                                    | NR                             | 525               | 262                                  | NR                             | 655               | 595                                  | NR                             | 785               | 17                                   | NR                             | 915               | 1                                    | NR                             |
| 400               | 1                                    | NR                             | 530               | 299                                  | NR                             | 660               | 536                                  | NR                             | 790               | 15                                   | NR                             | 920               | 1                                    | NR                             |
| 405               | 3                                    | NR                             | 535               | 332                                  | NR                             | 665               | 480                                  | NR                             | 795               | 13                                   | NR                             | 925               | 1                                    | NR                             |
| 410               | 7                                    | NR                             | 540               | 365                                  | NR                             | 670               | 425                                  | NR                             | 800               | 11                                   | NR                             | 930               | 1                                    | NR                             |
| 415               | 17                                   | NR                             | 545               | 400                                  | NR                             | 675               | 376                                  | NR                             | 805               | 10                                   | NR                             | 935               | 0                                    | NR                             |
| 420               | 36                                   | NR                             | 550               | 437                                  | NR                             | 680               | 332                                  | NR                             | 810               | 8                                    | NR                             | 940               | 0                                    | NR                             |
| 425               | 67                                   | NR                             | 555               | 479                                  | NR                             | 685               | 291                                  | NR                             | 815               | 8                                    | NR                             | 945               | 0                                    | NR                             |
| 430               | 105                                  | NR                             | 560               | 525                                  | NR                             | 690               | 255                                  | NR                             | 820               | 7                                    | NR                             | 950               | 0                                    | NR                             |
| 435               | 141                                  | NR                             | 565               | 579                                  | NR                             | 695               | 221                                  | NR                             | 825               | 6                                    | NR                             | 955               | 0                                    | NR                             |
| 440               | 169                                  | NR                             | 570               | 639                                  | NR                             | 700               | 192                                  | NR                             | 830               | 5                                    | NR                             | 960               | 0                                    | NR                             |
| 445               | 173                                  | NR                             | 575               | 703                                  | NR                             | 705               | 167                                  | NR                             | 835               | 4                                    | NR                             | 965               | 0                                    | NR                             |
| 450               | 136                                  | NR                             | 580               | 769                                  | NR                             | 710               | 144                                  | NR                             | 840               | 4                                    | NR                             | 970               | 0                                    | NR                             |
| 455               | 80                                   | NR                             | 585               | 832                                  | NR                             | 715               | 125                                  | NR                             | 845               | 3                                    | NR                             | 975               | 0                                    | NR                             |
| 460               | 45                                   | NR                             | 590               | 890                                  | NR                             | 720               | 109                                  | NR                             | 850               | 3                                    | NR                             | 980               | 0                                    | NR                             |
| 465               | 32                                   | NR                             | 595               | 937                                  | NR                             | 725               | 94                                   | NR                             | 855               | 3                                    | NR                             | 985               | 0                                    | NR                             |
| 470               | 23                                   | NR                             | 600               | 972                                  | NR                             | 730               | 81                                   | NR                             | 860               | 2                                    | NR                             | 990               | 0                                    | NR                             |
| 475               | 18                                   | NR                             | 605               | 992                                  | NR                             | 735               | 70                                   | NR                             | 865               | 2                                    | NR                             | 995               | 0                                    | NR                             |
| 480               | 18                                   | NR                             | 610               | 998                                  | NR                             | 740               | 61                                   | NR                             | 870               | 2                                    | NR                             | 1000              | 0                                    | NR                             |
| 485               | 20                                   | NR                             | 615               | 990                                  | NR                             | 745               | 53                                   | NR                             | 875               | 2                                    | NR                             |                   |                                      |                                |

REPORT NUMBER: SP1-2407-184-2

### Scotopic Flux vs. Wavelength



Scotopic Lumens: NR

S/P: 0.8

| λ<br>(nm) | Power<br>W <sup>^</sup> /nm | Lumens<br>(Φ/nm) | λ<br>(nm) | Power<br>W <sup>^</sup> /nm | Lumens<br>(Φ/nm) | λ<br>(nm) | Power<br>W <sup>^</sup> /nm | Lumens<br>(Φ/nm) | λ<br>(nm) | Power<br>W <sup>^</sup> /nm | Lumens<br>(Φ/nm) | λ<br>(nm) | Power<br>W <sup>^</sup> /nm | Lumens<br>(Φ/nm) |
|-----------|-----------------------------|------------------|-----------|-----------------------------|------------------|-----------|-----------------------------|------------------|-----------|-----------------------------|------------------|-----------|-----------------------------|------------------|
| 360       | 0                           | NR               | 490       | 27                          | NR               | 620       | 966                         | NR               | 750       | 46                          | NR               | 880       | 1                           | NR               |
| 365       | 0                           | NR               | 495       | 42                          | NR               | 625       | 930                         | NR               | 755       | 39                          | NR               | 885       | 1                           | NR               |
| 370       | 0                           | NR               | 500       | 67                          | NR               | 630       | 888                         | NR               | 760       | 34                          | NR               | 890       | 1                           | NR               |
| 375       | 0                           | NR               | 505       | 101                         | NR               | 635       | 835                         | NR               | 765       | 30                          | NR               | 895       | 1                           | NR               |
| 380       | 0                           | NR               | 510       | 139                         | NR               | 640       | 778                         | NR               | 770       | 26                          | NR               | 900       | 1                           | NR               |
| 385       | 0                           | NR               | 515       | 183                         | NR               | 645       | 717                         | NR               | 775       | 22                          | NR               | 905       | 1                           | NR               |
| 390       | 0                           | NR               | 520       | 224                         | NR               | 650       | 656                         | NR               | 780       | 19                          | NR               | 910       | 1                           | NR               |
| 395       | 0                           | NR               | 525       | 262                         | NR               | 655       | 595                         | NR               | 785       | 17                          | NR               | 915       | 1                           | NR               |
| 400       | 1                           | NR               | 530       | 299                         | NR               | 660       | 536                         | NR               | 790       | 15                          | NR               | 920       | 1                           | NR               |
| 405       | 3                           | NR               | 535       | 332                         | NR               | 665       | 480                         | NR               | 795       | 13                          | NR               | 925       | 1                           | NR               |
| 410       | 7                           | NR               | 540       | 365                         | NR               | 670       | 425                         | NR               | 800       | 11                          | NR               | 930       | 1                           | NR               |
| 415       | 17                          | NR               | 545       | 400                         | NR               | 675       | 376                         | NR               | 805       | 10                          | NR               | 935       | 0                           | NR               |
| 420       | 36                          | NR               | 550       | 437                         | NR               | 680       | 332                         | NR               | 810       | 8                           | NR               | 940       | 0                           | NR               |
| 425       | 67                          | NR               | 555       | 479                         | NR               | 685       | 291                         | NR               | 815       | 8                           | NR               | 945       | 0                           | NR               |
| 430       | 105                         | NR               | 560       | 525                         | NR               | 690       | 255                         | NR               | 820       | 7                           | NR               | 950       | 0                           | NR               |
| 435       | 141                         | NR               | 565       | 579                         | NR               | 695       | 221                         | NR               | 825       | 6                           | NR               | 955       | 0                           | NR               |
| 440       | 169                         | NR               | 570       | 639                         | NR               | 700       | 192                         | NR               | 830       | 5                           | NR               | 960       | 0                           | NR               |
| 445       | 173                         | NR               | 575       | 703                         | NR               | 705       | 167                         | NR               | 835       | 4                           | NR               | 965       | 0                           | NR               |
| 450       | 136                         | NR               | 580       | 769                         | NR               | 710       | 144                         | NR               | 840       | 4                           | NR               | 970       | 0                           | NR               |
| 455       | 80                          | NR               | 585       | 832                         | NR               | 715       | 125                         | NR               | 845       | 3                           | NR               | 975       | 0                           | NR               |
| 460       | 45                          | NR               | 590       | 890                         | NR               | 720       | 109                         | NR               | 850       | 3                           | NR               | 980       | 0                           | NR               |
| 465       | 32                          | NR               | 595       | 937                         | NR               | 725       | 94                          | NR               | 855       | 3                           | NR               | 985       | 0                           | NR               |
| 470       | 23                          | NR               | 600       | 972                         | NR               | 730       | 81                          | NR               | 860       | 2                           | NR               | 990       | 0                           | NR               |
| 475       | 18                          | NR               | 605       | 992                         | NR               | 735       | 70                          | NR               | 865       | 2                           | NR               | 995       | 0                           | NR               |
| 480       | 18                          | NR               | 610       | 998                         | NR               | 740       | 61                          | NR               | 870       | 2                           | NR               | 1000      | 0                           | NR               |
| 485       | 20                          | NR               | 615       | 990                         | NR               | 745       | 53                          | NR               | 875       | 2                           | NR               |           |                             |                  |

REPORT NUMBER: SP1-2407-184-2

### Melanopic Flux vs. Wavelength


**Melanopic Lumens: NR**
**M/P: 1.21**


| $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) |
|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|
| 360               | 0                                    | NR                             | 490               | 27                                   | NR                             | 620               | 966                                  | NR                             | 750               | 46                                   | NR                             | 880               | 1                                    | NR                             |
| 365               | 0                                    | NR                             | 495               | 42                                   | NR                             | 625               | 930                                  | NR                             | 755               | 39                                   | NR                             | 885               | 1                                    | NR                             |
| 370               | 0                                    | NR                             | 500               | 67                                   | NR                             | 630               | 888                                  | NR                             | 760               | 34                                   | NR                             | 890               | 1                                    | NR                             |
| 375               | 0                                    | NR                             | 505               | 101                                  | NR                             | 635               | 835                                  | NR                             | 765               | 30                                   | NR                             | 895               | 1                                    | NR                             |
| 380               | 0                                    | NR                             | 510               | 139                                  | NR                             | 640               | 778                                  | NR                             | 770               | 26                                   | NR                             | 900               | 1                                    | NR                             |
| 385               | 0                                    | NR                             | 515               | 183                                  | NR                             | 645               | 717                                  | NR                             | 775               | 22                                   | NR                             | 905               | 1                                    | NR                             |
| 390               | 0                                    | NR                             | 520               | 224                                  | NR                             | 650               | 656                                  | NR                             | 780               | 19                                   | NR                             | 910               | 1                                    | NR                             |
| 395               | 0                                    | NR                             | 525               | 262                                  | NR                             | 655               | 595                                  | NR                             | 785               | 17                                   | NR                             | 915               | 1                                    | NR                             |
| 400               | 1                                    | NR                             | 530               | 299                                  | NR                             | 660               | 536                                  | NR                             | 790               | 15                                   | NR                             | 920               | 1                                    | NR                             |
| 405               | 3                                    | NR                             | 535               | 332                                  | NR                             | 665               | 480                                  | NR                             | 795               | 13                                   | NR                             | 925               | 1                                    | NR                             |
| 410               | 7                                    | NR                             | 540               | 365                                  | NR                             | 670               | 425                                  | NR                             | 800               | 11                                   | NR                             | 930               | 1                                    | NR                             |
| 415               | 17                                   | NR                             | 545               | 400                                  | NR                             | 675               | 376                                  | NR                             | 805               | 10                                   | NR                             | 935               | 0                                    | NR                             |
| 420               | 36                                   | NR                             | 550               | 437                                  | NR                             | 680               | 332                                  | NR                             | 810               | 8                                    | NR                             | 940               | 0                                    | NR                             |
| 425               | 67                                   | NR                             | 555               | 479                                  | NR                             | 685               | 291                                  | NR                             | 815               | 8                                    | NR                             | 945               | 0                                    | NR                             |
| 430               | 105                                  | NR                             | 560               | 525                                  | NR                             | 690               | 255                                  | NR                             | 820               | 7                                    | NR                             | 950               | 0                                    | NR                             |
| 435               | 141                                  | NR                             | 565               | 579                                  | NR                             | 695               | 221                                  | NR                             | 825               | 6                                    | NR                             | 955               | 0                                    | NR                             |
| 440               | 169                                  | NR                             | 570               | 639                                  | NR                             | 700               | 192                                  | NR                             | 830               | 5                                    | NR                             | 960               | 0                                    | NR                             |
| 445               | 173                                  | NR                             | 575               | 703                                  | NR                             | 705               | 167                                  | NR                             | 835               | 4                                    | NR                             | 965               | 0                                    | NR                             |
| 450               | 136                                  | NR                             | 580               | 769                                  | NR                             | 710               | 144                                  | NR                             | 840               | 4                                    | NR                             | 970               | 0                                    | NR                             |
| 455               | 80                                   | NR                             | 585               | 832                                  | NR                             | 715               | 125                                  | NR                             | 845               | 3                                    | NR                             | 975               | 0                                    | NR                             |
| 460               | 45                                   | NR                             | 590               | 890                                  | NR                             | 720               | 109                                  | NR                             | 850               | 3                                    | NR                             | 980               | 0                                    | NR                             |
| 465               | 32                                   | NR                             | 595               | 937                                  | NR                             | 725               | 94                                   | NR                             | 855               | 3                                    | NR                             | 985               | 0                                    | NR                             |
| 470               | 23                                   | NR                             | 600               | 972                                  | NR                             | 730               | 81                                   | NR                             | 860               | 2                                    | NR                             | 990               | 0                                    | NR                             |
| 475               | 18                                   | NR                             | 605               | 992                                  | NR                             | 735               | 70                                   | NR                             | 865               | 2                                    | NR                             | 995               | 0                                    | NR                             |
| 480               | 18                                   | NR                             | 610               | 998                                  | NR                             | 740               | 61                                   | NR                             | 870               | 2                                    | NR                             | 1000              | 0                                    | NR                             |
| 485               | 20                                   | NR                             | 615               | 990                                  | NR                             | 745               | 53                                   | NR                             | 875               | 2                                    | NR                             |                   |                                      |                                |

REPORT NUMBER: SP1-2407-184-2

TM-30-18

### Summary

$R_f = 70.6$   
 $R_g = 97.6$   
 $CIE R_a = 71.9$   
 $R_g = -17.8$

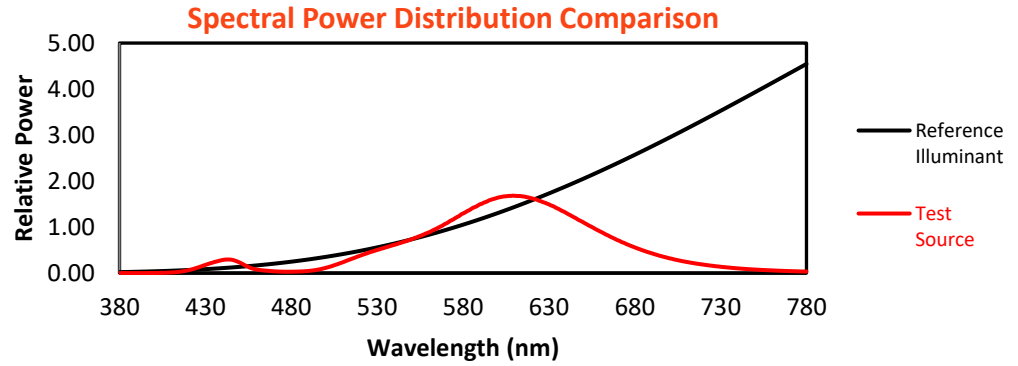


### Color Vector Graphics



**Individual Sample Fidelity Index ( $R_{f,i}$ )**

|            |            |            |            |
|------------|------------|------------|------------|
| CES01 = 87 | CES26 = 60 | CES51 = 74 | CES76 = 58 |
| CES02 = 65 | CES27 = 77 | CES52 = 77 | CES77 = 82 |
| CES03 = 32 | CES28 = 85 | CES53 = 65 | CES78 = 65 |
| CES04 = 72 | CES29 = 50 | CES54 = 77 | CES79 = 86 |
| CES05 = 52 | CES30 = 49 | CES55 = 74 | CES80 = 85 |
| CES06 = 53 | CES31 = 55 | CES56 = 64 | CES81 = 61 |
| CES07 = 44 | CES32 = 55 | CES57 = 60 | CES82 = 93 |
| CES08 = 43 | CES33 = 55 | CES58 = 64 | CES83 = 83 |
| CES09 = 29 | CES34 = 75 | CES59 = 84 | CES84 = 93 |
| CES10 = 79 | CES35 = 88 | CES60 = 89 | CES85 = 81 |
| CES11 = 62 | CES36 = 78 | CES61 = 84 | CES86 = 55 |
| CES12 = 68 | CES37 = 82 | CES62 = 68 | CES87 = 79 |
| CES13 = 45 | CES38 = 54 | CES63 = 68 | CES88 = 72 |
| CES14 = 75 | CES39 = 90 | CES64 = 69 | CES89 = 62 |
| CES15 = 72 | CES40 = 86 | CES65 = 66 | CES90 = 67 |
| CES16 = 49 | CES41 = 75 | CES66 = 64 | CES91 = 89 |
| CES17 = 51 | CES42 = 83 | CES67 = 63 | CES92 = 67 |
| CES18 = 57 | CES43 = 68 | CES68 = 71 | CES93 = 78 |
| CES19 = 74 | CES44 = 98 | CES69 = 81 | CES94 = 52 |
| CES20 = 68 | CES45 = 76 | CES70 = 65 | CES95 = 76 |
| CES21 = 89 | CES46 = 68 | CES71 = 64 | CES96 = 78 |
| CES22 = 81 | CES47 = 60 | CES72 = 88 | CES97 = 76 |
| CES23 = 92 | CES48 = 47 | CES73 = 59 | CES98 = 71 |
| CES24 = 92 | CES49 = 65 | CES74 = 85 | CES99 = 65 |
| CES25 = 74 | CES50 = 74 | CES75 = 66 |            |

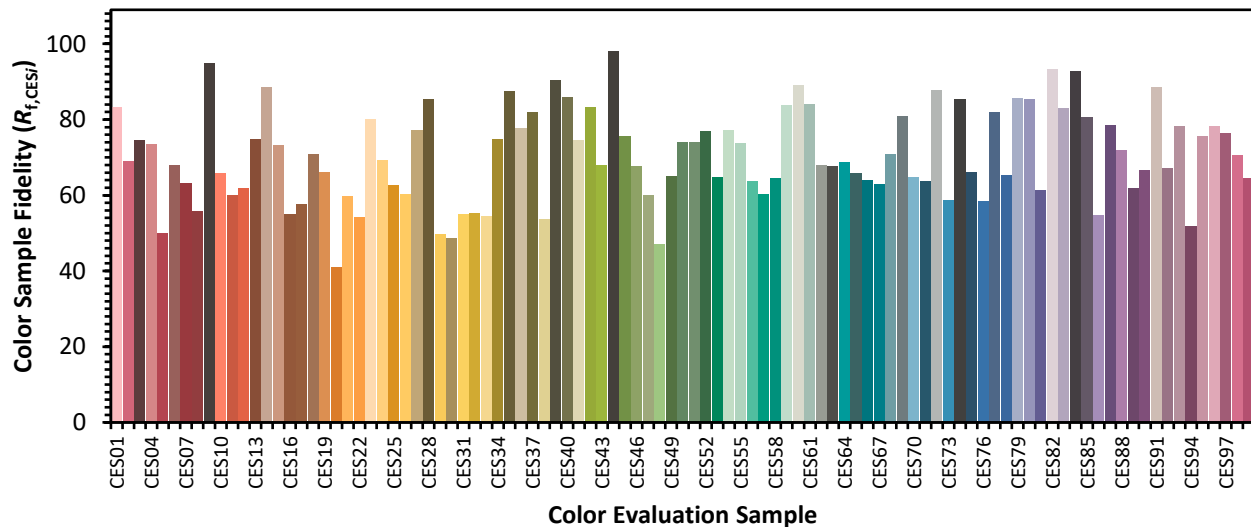

Color Rendition by Hue-Angle Bin



**Measure Comparisons**



(END OF REPORT)