

Scaled data based on original data using  
LM-79-08 Approved Method: Electrical and Photometric Measurements of Solid-  
State Lighting Products

Test Report Prepared for  
Cooper Lighting Solutions  
(formerly Eaton)

Brand: STREETWORKS

Report Number: P1382962

Luminaire Tested: **VAL-T-SB1D-722-U-RW**

Issue Date: 02/18/2026

This test was performed under the Supervised Manufacturer's Testing Program. The results of this test have not been  
influenced by sources from within Cooper Lighting Solutions or from external interests.

**Test Information**

Test Method: LM-79-08  
 Report Number: P1382962  
 Test Lab: INNOVATION CENTER(G1)  
 Issue Date: 02/18/2026  
 Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)  
 Product Line: STREETWORKS  
 Catalog Number: VAL-T-SB1D-722-U-RW  
 Description: GALLEON II WALL SLIM HIGH DENSITY LED ARRAYS 15 SQUARE 76W 70CRI  
 2200K FIXTURE w/ RECTANGULAR WIDE DISTRIBUTION OPTIC  
 Light Source: (26) 2200K CCT, 70 CRI LEDS  
 Ballast/Driver: ELECTRONIC DRIVER  
 Luminaire Equipment:

| <u>Sample No.</u> | <u>Condition</u> | <u>Description</u> |
|-------------------|------------------|--------------------|
| a                 | good             | reflector          |
| b                 | good             | lens               |
| c                 | good             | housing            |
| d                 | good             | cord               |


**Summary**

Lumens per Lamp: N/A  
 Luminaire Lumens: 7790.6 lumens  
 Efficiency: N/A  
 Efficacy: 102.5 lumens/watt  
 Luminous Opening: Rectangular (W 0.5' x L: 0.5' x H: 0')  
 IES Classification: Type III - Short  
 BUG Rating: B3 - U0 - G3  
  
 Input Watts (W): 76  
 Input Voltage (V): 120  
 Input Current (A<sub>in</sub>): NR  
 Voltage Rise (V): NR  
 Power Factor: 0.98  
 Total Harmonic Distortion (THDi): 6.7%  
 Frequency (hertz): 60  
 Stabilization Time: NR  
 Operation Time: NR  
 Ambient Temperature (°C): NR  
 Test Distance: 28.75 FT

REPORT NUMBER: P1382962  
 CATALOG NUMBER: VAL-T-SB1D-722-U-RW

## Iso-Footcandle Lines of Horizontal Illumination


✕ Max cd  
 - - - 1/2 Max cd

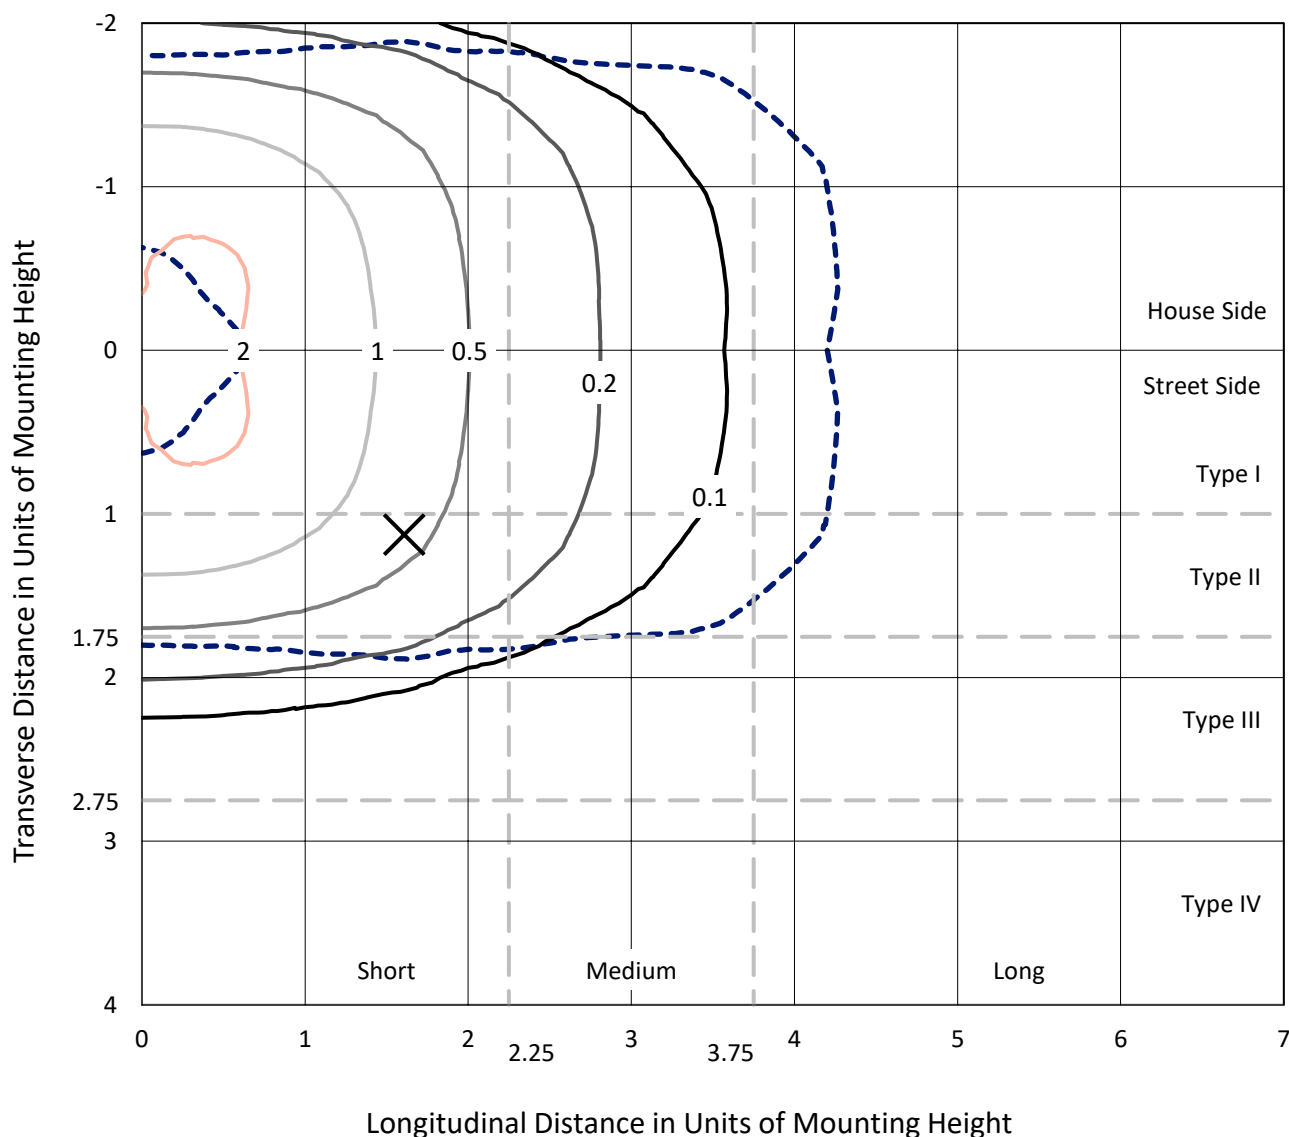

Based on 20 foot mounting height. Maximum calculated value = 2.4 fc  
 Type III - Short - N/A

REPORT NUMBER: P1382962  
CATALOG NUMBER: VAL-T-SB1D-722-U-RW

## Luminous Intensity Polar Plot

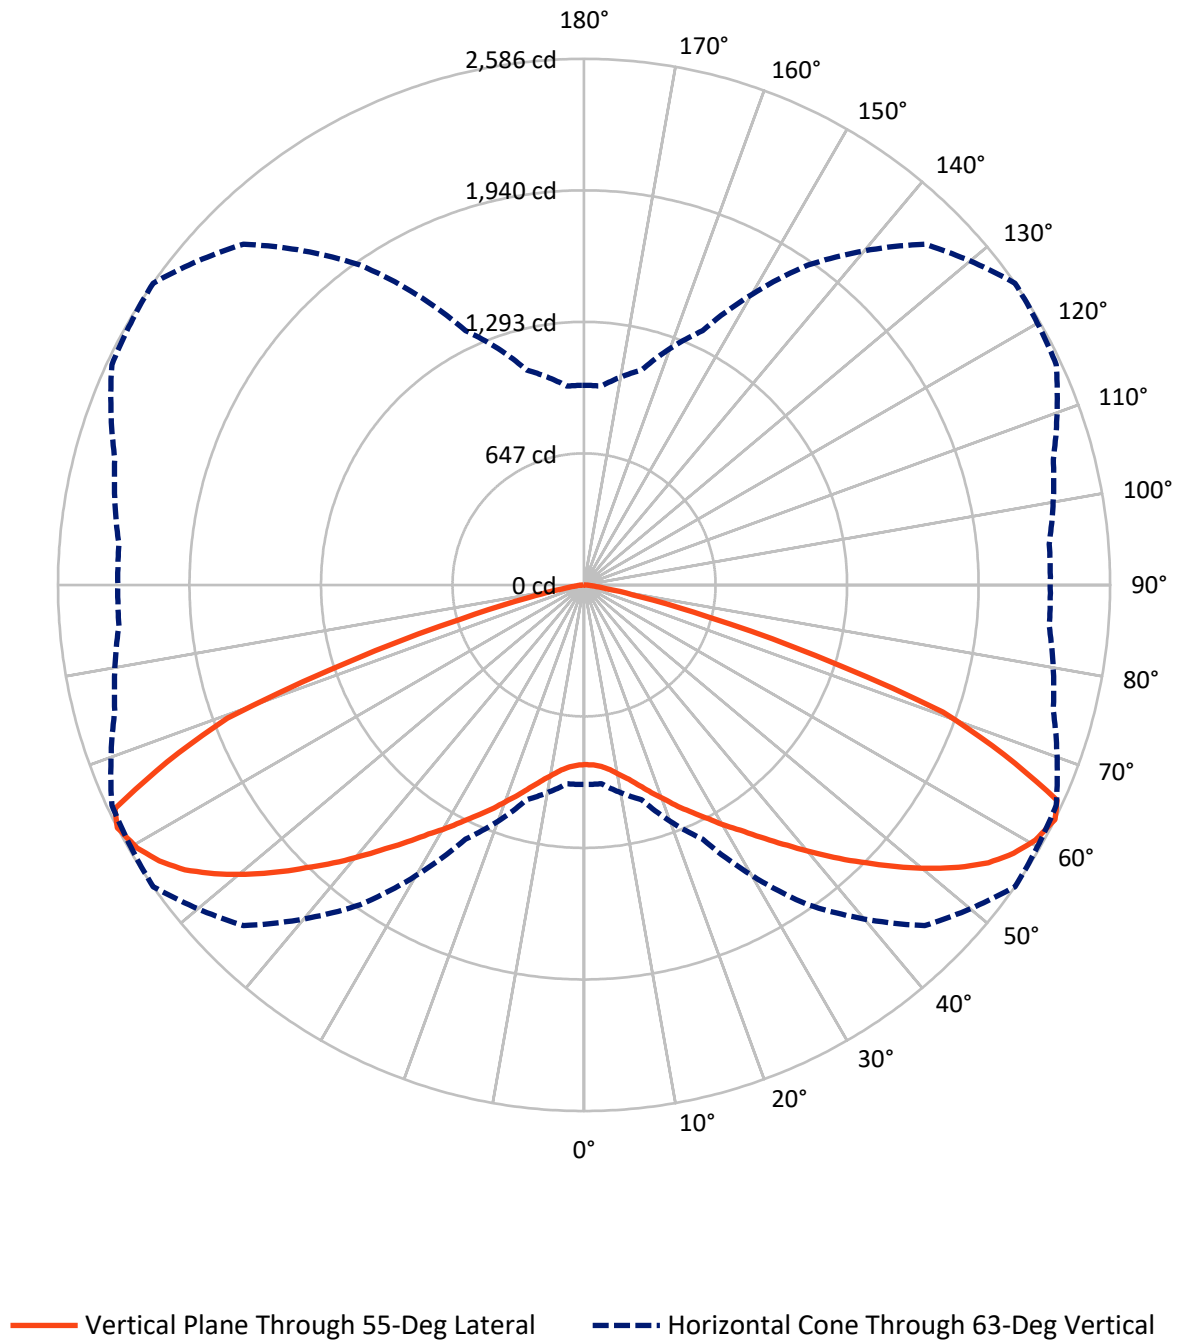

REPORT NUMBER: P1382962

CATALOG NUMBER: VAL-T-SB1D-722-U-RW


**FLUX DISTRIBUTION:**

|                    |           | Downward | Upward | Total  |
|--------------------|-----------|----------|--------|--------|
| <b>House Side</b>  | Lumens    | 3895.3   | 0.0    | 3895.3 |
|                    | % Fixture | 50.0     | 0.0    | 50.0   |
| <b>Street Side</b> | Lumens    | 3895.3   | 0.0    | 3895.3 |
|                    | % Fixture | 50.0     | 0.0    | 50.0   |
| <b>Total</b>       | Lumens    | 7790.6   | 0.0    | 7790.6 |
|                    | % Fixture | 100.0    | 0.0    | 100.0  |

**ZONAL LUMENS:**

| Zone      | Lumens | % Fixture |
|-----------|--------|-----------|
| 0°-10°    | 86.1   | 1.1       |
| 10°-20°   | 284.5  | 3.7       |
| 20°-30°   | 550.4  | 7.1       |
| 30°-40°   | 931.9  | 12.0      |
| 40°-50°   | 1470.0 | 18.9      |
| 50°-60°   | 1955.0 | 25.1      |
| 60°-70°   | 1710.4 | 22.0      |
| 70°-80°   | 759.5  | 9.7       |
| 80°-90°   | 42.9   | 0.6       |
| 90°-100°  | 0.0    | 0.0       |
| 100°-110° | 0.0    | 0.0       |
| 110°-120° | 0.0    | 0.0       |
| 120°-130° | 0.0    | 0.0       |
| 130°-140° | 0.0    | 0.0       |
| 140°-150° | 0.0    | 0.0       |
| 150°-160° | 0.0    | 0.0       |
| 160°-170° | 0.0    | 0.0       |
| 170°-180° | 0.0    | 0.0       |
| 0°-90°    | 7790.6 | 100.0     |
| 0°-180°   | 7790.6 | 100.0     |

**Coefficient of Utilization**

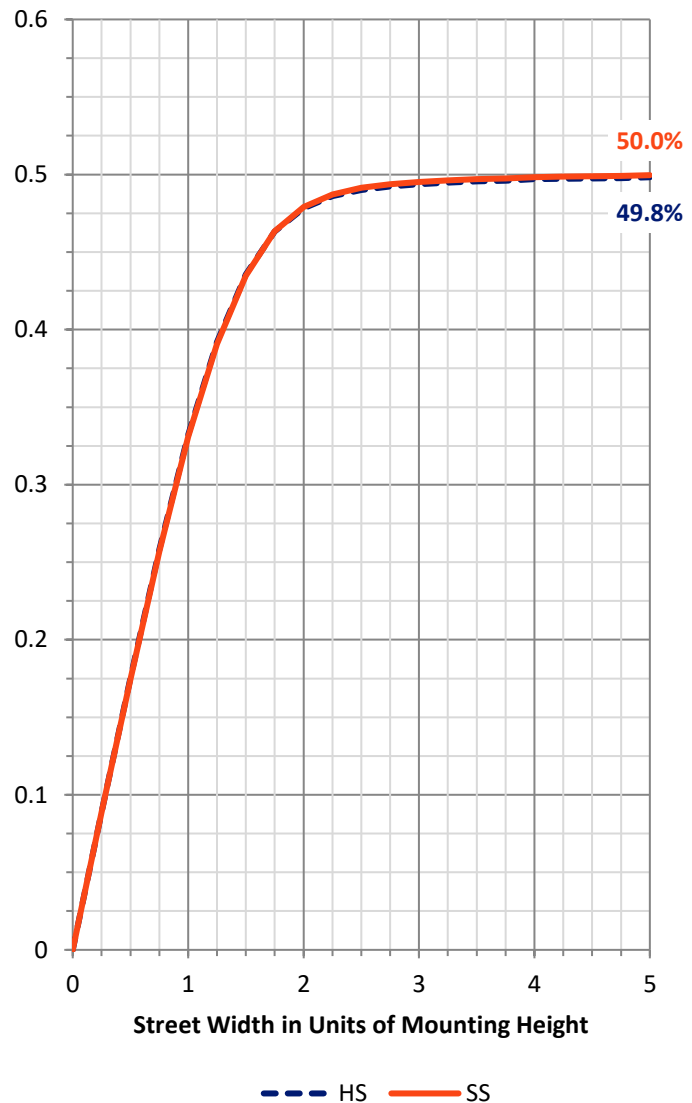

REPORT NUMBER: P1382962


CATALOG NUMBER: VAL-T-SB1D-722-U-RW

**LUMINAIRE CLASSIFICATION SYSTEM LUMEN TABLE AND BUG RATING:**

| Zone |             | Lumens | % Fixture | Zone Rating/Lumen Limit |      |         |
|------|-------------|--------|-----------|-------------------------|------|---------|
|      |             |        |           | B                       | U    | G       |
| FL   | (0°-30°)    | 460.5  | 5.9       |                         |      |         |
| FM   | (30°-60°)   | 2178.5 | 28.0      |                         |      |         |
| FH   | (60°-80°)   | 1234.9 | 15.9      |                         |      | G1/1800 |
| FVH  | (80°-90°)   | 21.4   | 0.3       |                         |      | G1/100  |
| BL   | (0°-30°)    | 460.5  | 5.9       | B1/500                  |      |         |
| BM   | (30°-60°)   | 2178.5 | 28.0      | B2/2500                 |      |         |
| BH   | (60°-80°)   | 1234.9 | 15.9      | B3/2500                 |      | G3/2500 |
| BVH  | (80°-90°)   | 21.4   | 0.3       |                         |      | G1/100  |
| UL   | (90°-100°)  | 0.0    | 0.0       |                         | U0/0 |         |
| UH   | (100°-180°) | 0.0    | 0.0       |                         | U0/0 |         |

**BUG Rating: B3-U0-G3**

Type III Short

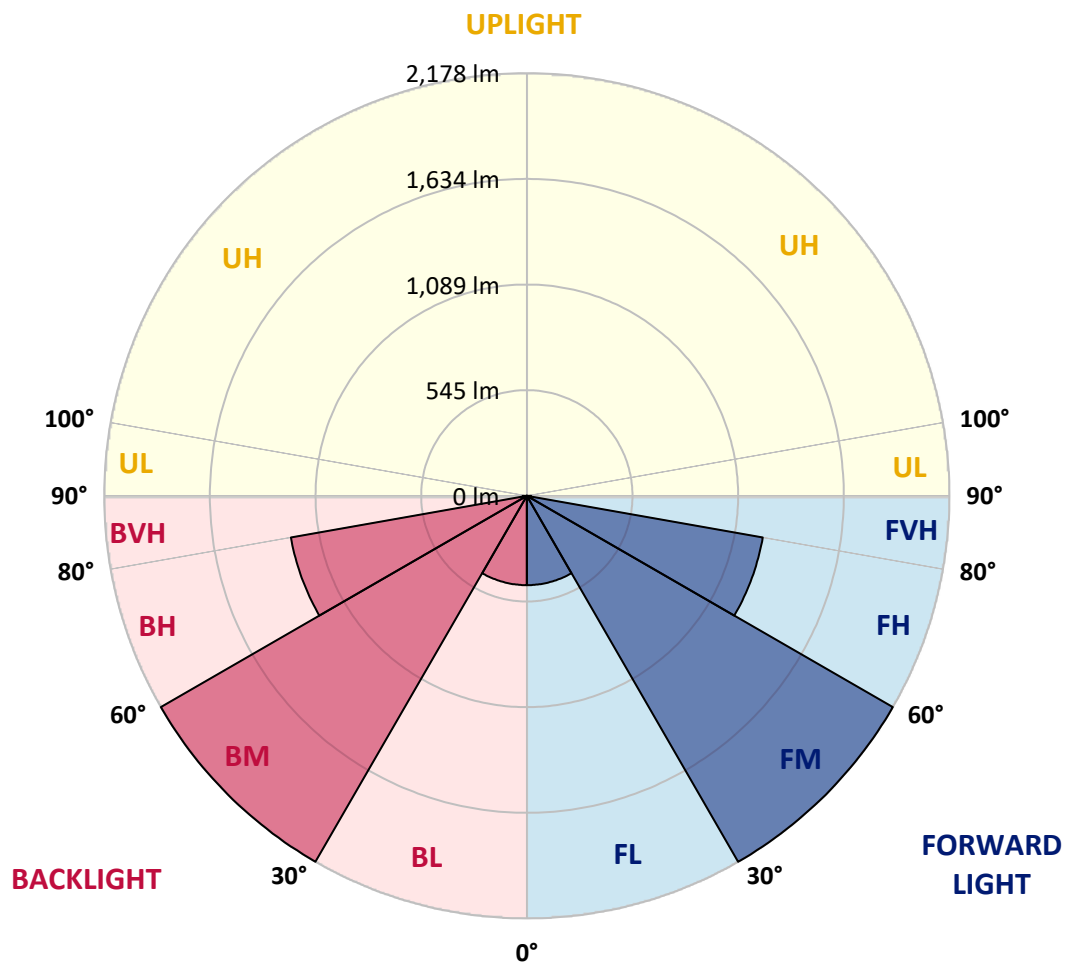



REPORT NUMBER: P1382962

CATALOG NUMBER: VAL-T-SB1D-722-U-RW

**CANDELA DISTRIBUTION (FULL):**

|       | 0°     | 5°     | 15°    | 25°    | 35°    | 45°    | 55°    | 65°    | 75°    | 85°    | 90°    |
|-------|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|
| 0°    | 882.8  | 882.8  | 882.8  | 882.8  | 882.8  | 882.8  | 882.8  | 882.8  | 882.8  | 882.8  | 882.8  |
| 2.5°  | 882.8  | 877.5  | 875.7  | 879.2  | 879.2  | 882.8  | 886.4  | 884.6  | 889.9  | 889.9  | 886.4  |
| 5°    | 873.9  | 870.3  | 870.3  | 875.7  | 881.0  | 889.9  | 897.1  | 898.9  | 907.8  | 907.8  | 909.6  |
| 7.5°  | 868.5  | 866.8  | 868.5  | 875.7  | 888.2  | 902.4  | 916.7  | 925.6  | 939.9  | 943.4  | 947.0  |
| 10°   | 877.5  | 872.1  | 879.2  | 889.9  | 906.0  | 925.6  | 947.0  | 961.3  | 977.3  | 986.3  | 988.0  |
| 12.5° | 893.5  | 889.9  | 898.9  | 916.7  | 938.1  | 961.3  | 980.9  | 998.7  | 1016.6 | 1029.1 | 1030.8 |
| 15°   | 902.4  | 900.6  | 920.3  | 947.0  | 979.1  | 1004.1 | 1023.7 | 1038.0 | 1055.8 | 1070.1 | 1075.4 |
| 17.5° | 922.0  | 922.0  | 948.8  | 984.5  | 1025.5 | 1054.0 | 1073.6 | 1080.8 | 1089.7 | 1102.2 | 1112.9 |
| 20°   | 955.9  | 957.7  | 986.3  | 1030.8 | 1077.2 | 1111.1 | 1123.6 | 1123.6 | 1121.8 | 1132.5 | 1137.8 |
| 22.5° | 1004.1 | 1004.1 | 1041.5 | 1086.1 | 1134.3 | 1173.5 | 1182.4 | 1166.4 | 1155.7 | 1162.8 | 1166.4 |
| 25°   | 1066.5 | 1064.7 | 1104.0 | 1152.1 | 1200.3 | 1239.5 | 1239.5 | 1214.5 | 1191.4 | 1194.9 | 1200.3 |
| 27.5° | 1132.5 | 1136.1 | 1177.1 | 1223.5 | 1273.4 | 1309.1 | 1301.9 | 1268.0 | 1232.4 | 1227.0 | 1232.4 |
| 30°   | 1211.0 | 1212.8 | 1253.8 | 1305.5 | 1350.1 | 1380.4 | 1373.3 | 1326.9 | 1278.7 | 1264.5 | 1269.8 |
| 32.5° | 1303.7 | 1303.7 | 1344.7 | 1391.1 | 1435.7 | 1464.2 | 1444.6 | 1392.9 | 1330.5 | 1316.2 | 1319.8 |
| 35°   | 1407.1 | 1412.5 | 1451.7 | 1492.8 | 1532.0 | 1555.2 | 1532.0 | 1467.8 | 1394.7 | 1378.6 | 1380.4 |
| 37.5° | 1524.9 | 1530.2 | 1567.7 | 1606.9 | 1639.0 | 1656.8 | 1624.7 | 1551.6 | 1467.8 | 1448.2 | 1451.7 |
| 40°   | 1647.9 | 1653.3 | 1696.1 | 1730.0 | 1760.3 | 1771.0 | 1728.2 | 1647.9 | 1555.2 | 1537.3 | 1537.3 |
| 42.5° | 1765.6 | 1771.0 | 1812.0 | 1860.1 | 1886.9 | 1890.5 | 1838.7 | 1747.8 | 1651.5 | 1630.1 | 1637.2 |
| 45°   | 1863.7 | 1863.7 | 1919.0 | 1976.1 | 2018.9 | 2020.7 | 1949.3 | 1851.2 | 1747.8 | 1726.4 | 1733.5 |
| 47.5° | 1931.5 | 1935.1 | 1999.3 | 2074.2 | 2131.2 | 2147.3 | 2070.6 | 1968.9 | 1853.0 | 1826.3 | 1837.0 |
| 50°   | 1974.3 | 1979.6 | 2049.2 | 2141.9 | 2227.5 | 2265.0 | 2190.1 | 2077.7 | 1963.6 | 1935.1 | 1944.0 |
| 52.5° | 1988.6 | 1988.6 | 2067.0 | 2175.8 | 2290.0 | 2361.3 | 2306.0 | 2186.5 | 2070.6 | 2036.7 | 2047.4 |
| 55°   | 1931.5 | 1940.4 | 2031.4 | 2168.7 | 2314.9 | 2427.3 | 2411.2 | 2288.2 | 2170.5 | 2134.8 | 2156.2 |
| 57.5° | 1783.5 | 1801.3 | 1910.1 | 2093.8 | 2302.4 | 2470.1 | 2489.7 | 2384.5 | 2265.0 | 2232.9 | 2245.4 |
| 60°   | 1448.2 | 1455.3 | 1610.5 | 1910.1 | 2207.9 | 2470.1 | 2548.6 | 2477.2 | 2357.7 | 2325.6 | 2336.3 |
| 62.5° | 1036.2 | 1050.5 | 1161.0 | 1480.3 | 2004.6 | 2400.5 | 2578.9 | 2553.9 | 2402.3 | 2327.4 | 2327.4 |
| 63°   | 980.9  | 980.9  | 1093.3 | 1378.6 | 1919.0 | 2368.4 | 2586.0 | 2561.0 | 2388.1 | 2295.3 | 2291.7 |
| 65°   | 708.0  | 713.4  | 818.6  | 1046.9 | 1510.6 | 2202.6 | 2555.7 | 2471.9 | 2259.6 | 2165.1 | 2165.1 |
| 67.5° | 412.0  | 415.5  | 478.0  | 672.4  | 1020.1 | 1751.4 | 2227.5 | 2345.2 | 2248.9 | 2172.3 | 2175.8 |
| 70°   | 265.7  | 269.3  | 299.6  | 378.1  | 608.2  | 997.0  | 1870.8 | 2273.9 | 2222.2 | 2111.6 | 2108.0 |
| 72.5° | 183.7  | 183.7  | 198.0  | 240.8  | 313.9  | 544.0  | 1187.8 | 2008.2 | 2243.6 | 2181.2 | 2175.8 |
| 75°   | 119.5  | 132.0  | 142.7  | 162.3  | 180.1  | 260.4  | 626.0  | 1526.6 | 2042.1 | 2063.5 | 1983.2 |
| 77.5° | 83.8   | 83.8   | 108.8  | 114.1  | 114.1  | 155.2  | 278.2  | 713.4  | 1093.3 | 1021.9 | 907.8  |
| 80°   | 66.0   | 62.4   | 66.0   | 80.3   | 82.0   | 87.4   | 114.1  | 187.3  | 372.7  | 181.9  | 133.8  |
| 82.5° | 42.8   | 41.0   | 42.8   | 51.7   | 48.2   | 44.6   | 48.2   | 82.0   | 103.4  | 58.9   | 53.5   |
| 85°   | 12.5   | 14.3   | 17.8   | 19.6   | 19.6   | 19.6   | 23.2   | 32.1   | 35.7   | 26.8   | 25.0   |
| 87.5° | 3.6    | 5.4    | 5.4    | 5.4    | 7.1    | 7.1    | 10.7   | 12.5   | 14.3   | 14.3   | 14.3   |
| 90°   | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    |

LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-State Lighting Products

Report Prepared for

Cooper Lighting Solutions

McGraw-Edison

Report Number: SP1-2407-184-2

Test Date: 10/09/2024

Luminaire Tested: GSS-SB1A-722-U-5WQ

Data in this report applies to families of products including GSS-SB1A-722-U-5WQ




### Test Information

Test Method: LM-79-2019  
 Report Number: SP1-2407-184-2  
 Test Lab: COOPER LIGHTING SOLUTIONS  
 Photometer: SP1 - 76IN SPHERE  
 Measurement Geometry:  $4\pi$   
 Issue Date: 10/15/2024  
 Manufacturer: COOPER LIGHTING SOLUTIONS  
 Product Line: McGraw-Edison  
 Catalog Number: **GSS-SB1A-722-U-5WQ**  
 Description: GALLEON II SITE SLIM 1SQ 350MA 5WQ HIGH DENSITY LIGHTSQUARE WITH 70 CRI  
 2200K CCT 26 LEDS

### Spectral Parameters

|                           |          |           |      |      |       |
|---------------------------|----------|-----------|------|------|-------|
| CCT (K):                  | 2160     | CRI (Ra): | 71.9 |      |       |
| CIE u':                   | 0.2927   | R1:       | 68.7 | R9:  | -17.8 |
| CIE v':                   | 0.5388   | R2:       | 82.6 | R10: | 60.5  |
| Duv:                      | 0.0015   | R3:       | 95.5 | R11: | 60.2  |
| CIE x:                    | 0.5130   | R4:       | 66.4 | R12: | 48.2  |
| CIE y:                    | 0.4197   | R5:       | 65.4 | R13: | 70.7  |
| CIE z:                    | 0.0674   | R6:       | 75.9 | R14: | 96.8  |
| Peak Wavelength (nm):     | 609      | R7:       | 77.2 | R15: | 61.8  |
| Dominant Wavelength (nm): | 587      | R8:       | 43.5 |      |       |
| Purity:                   | 79.96089 |           |      |      |       |
| Rf:                       | 70.6     |           |      |      |       |
| Rg:                       | 97.6     |           |      |      |       |

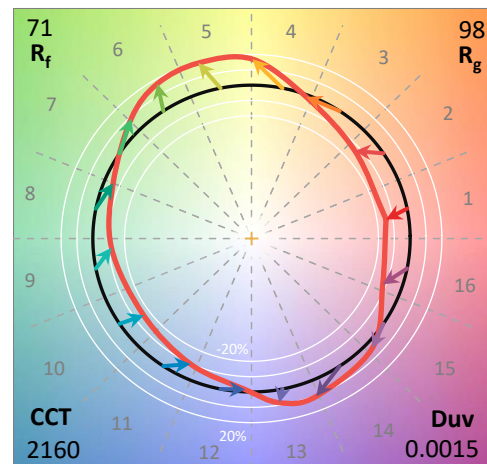

### Test Conditions


Stabilization Time: 21M  
 Operation Time: 1H 21M  
 Sphere Temperature (°C): 25.2

REPORT NUMBER: SP1-2407-184-2


| Measurement and Test Equipment |                       |                  |                      |
|--------------------------------|-----------------------|------------------|----------------------|
| Instrument                     | Identification Number | Calibration Date | Calibration Due Date |
| Photometer                     | IN0058                | 6/18/2024        | 12/18/2024           |
| Power Meter                    | INXT2011004           | 2/8/2024         | 2/8/2025             |
| AC Power Source                | IN0063                | 10/24/2023       | 10/24/2024           |
| DC Power Source                | IN0208                | 10/24/2023       | 10/24/2024           |
| Sphere Thermometer             | IN0085                | 10/24/2023       | 10/24/2024           |
| Room Thermometer               | IN0046                | 10/24/2023       | 10/24/2024           |

REPORT NUMBER: SP1-2407-184-2

**CIE 1931 Chromaticity Diagram**

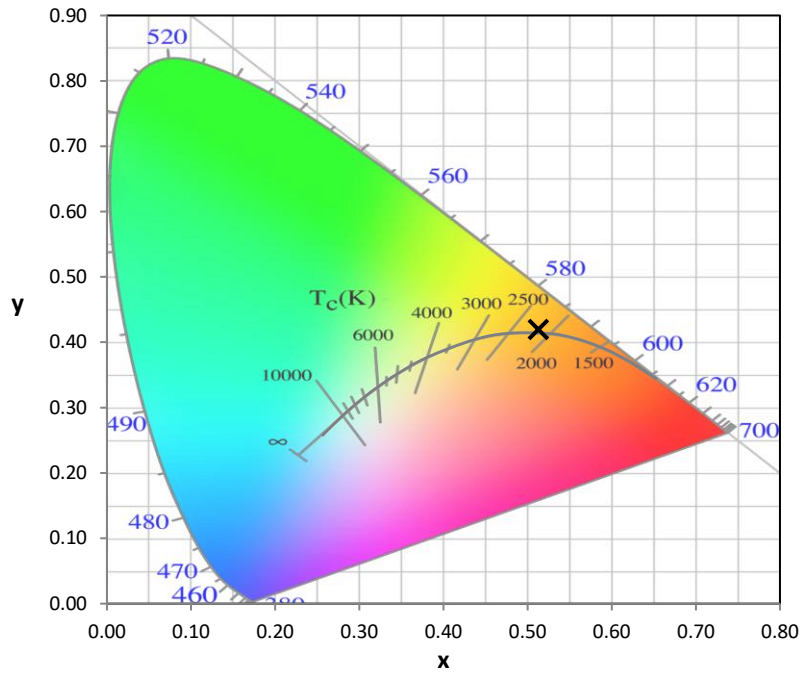


**CIE 1931 Chromaticity Diagram with 2017 ANSI 7-Step and 4-Step Quadrangles**

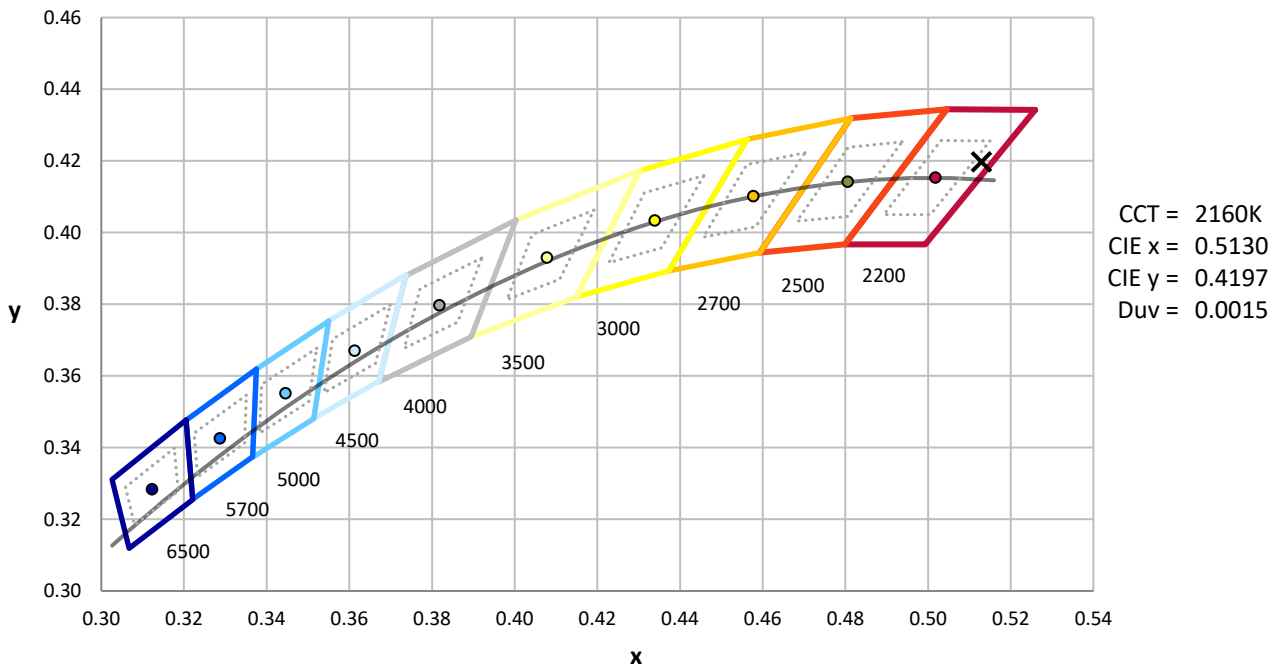

Point lies inside the ANSI 2200K 7-step quadrangle

REPORT NUMBER: SP1-2407-184-2

### Photopic Flux vs. Wavelength

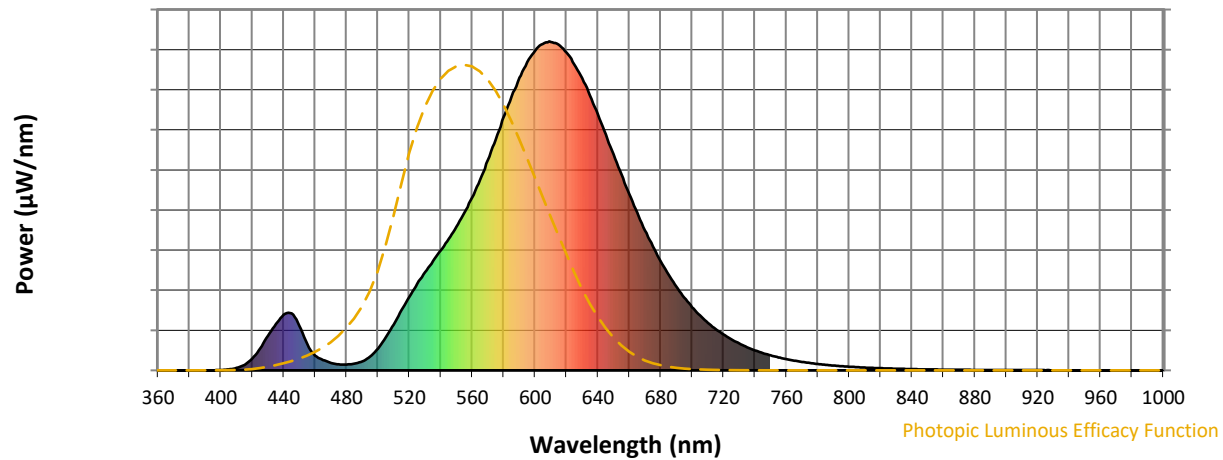


### Photopic Lumens: NR

| $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) |
|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|
| 360               | 0                                    | NR                             | 490               | 27                                   | NR                             | 620               | 966                                  | NR                             | 750               | 46                                   | NR                             | 880               | 1                                    | NR                             |
| 365               | 0                                    | NR                             | 495               | 42                                   | NR                             | 625               | 930                                  | NR                             | 755               | 39                                   | NR                             | 885               | 1                                    | NR                             |
| 370               | 0                                    | NR                             | 500               | 67                                   | NR                             | 630               | 888                                  | NR                             | 760               | 34                                   | NR                             | 890               | 1                                    | NR                             |
| 375               | 0                                    | NR                             | 505               | 101                                  | NR                             | 635               | 835                                  | NR                             | 765               | 30                                   | NR                             | 895               | 1                                    | NR                             |
| 380               | 0                                    | NR                             | 510               | 139                                  | NR                             | 640               | 778                                  | NR                             | 770               | 26                                   | NR                             | 900               | 1                                    | NR                             |
| 385               | 0                                    | NR                             | 515               | 183                                  | NR                             | 645               | 717                                  | NR                             | 775               | 22                                   | NR                             | 905               | 1                                    | NR                             |
| 390               | 0                                    | NR                             | 520               | 224                                  | NR                             | 650               | 656                                  | NR                             | 780               | 19                                   | NR                             | 910               | 1                                    | NR                             |
| 395               | 0                                    | NR                             | 525               | 262                                  | NR                             | 655               | 595                                  | NR                             | 785               | 17                                   | NR                             | 915               | 1                                    | NR                             |
| 400               | 1                                    | NR                             | 530               | 299                                  | NR                             | 660               | 536                                  | NR                             | 790               | 15                                   | NR                             | 920               | 1                                    | NR                             |
| 405               | 3                                    | NR                             | 535               | 332                                  | NR                             | 665               | 480                                  | NR                             | 795               | 13                                   | NR                             | 925               | 1                                    | NR                             |
| 410               | 7                                    | NR                             | 540               | 365                                  | NR                             | 670               | 425                                  | NR                             | 800               | 11                                   | NR                             | 930               | 1                                    | NR                             |
| 415               | 17                                   | NR                             | 545               | 400                                  | NR                             | 675               | 376                                  | NR                             | 805               | 10                                   | NR                             | 935               | 0                                    | NR                             |
| 420               | 36                                   | NR                             | 550               | 437                                  | NR                             | 680               | 332                                  | NR                             | 810               | 8                                    | NR                             | 940               | 0                                    | NR                             |
| 425               | 67                                   | NR                             | 555               | 479                                  | NR                             | 685               | 291                                  | NR                             | 815               | 8                                    | NR                             | 945               | 0                                    | NR                             |
| 430               | 105                                  | NR                             | 560               | 525                                  | NR                             | 690               | 255                                  | NR                             | 820               | 7                                    | NR                             | 950               | 0                                    | NR                             |
| 435               | 141                                  | NR                             | 565               | 579                                  | NR                             | 695               | 221                                  | NR                             | 825               | 6                                    | NR                             | 955               | 0                                    | NR                             |
| 440               | 169                                  | NR                             | 570               | 639                                  | NR                             | 700               | 192                                  | NR                             | 830               | 5                                    | NR                             | 960               | 0                                    | NR                             |
| 445               | 173                                  | NR                             | 575               | 703                                  | NR                             | 705               | 167                                  | NR                             | 835               | 4                                    | NR                             | 965               | 0                                    | NR                             |
| 450               | 136                                  | NR                             | 580               | 769                                  | NR                             | 710               | 144                                  | NR                             | 840               | 4                                    | NR                             | 970               | 0                                    | NR                             |
| 455               | 80                                   | NR                             | 585               | 832                                  | NR                             | 715               | 125                                  | NR                             | 845               | 3                                    | NR                             | 975               | 0                                    | NR                             |
| 460               | 45                                   | NR                             | 590               | 890                                  | NR                             | 720               | 109                                  | NR                             | 850               | 3                                    | NR                             | 980               | 0                                    | NR                             |
| 465               | 32                                   | NR                             | 595               | 937                                  | NR                             | 725               | 94                                   | NR                             | 855               | 3                                    | NR                             | 985               | 0                                    | NR                             |
| 470               | 23                                   | NR                             | 600               | 972                                  | NR                             | 730               | 81                                   | NR                             | 860               | 2                                    | NR                             | 990               | 0                                    | NR                             |
| 475               | 18                                   | NR                             | 605               | 992                                  | NR                             | 735               | 70                                   | NR                             | 865               | 2                                    | NR                             | 995               | 0                                    | NR                             |
| 480               | 18                                   | NR                             | 610               | 998                                  | NR                             | 740               | 61                                   | NR                             | 870               | 2                                    | NR                             | 1000              | 0                                    | NR                             |
| 485               | 20                                   | NR                             | 615               | 990                                  | NR                             | 745               | 53                                   | NR                             | 875               | 2                                    | NR                             |                   |                                      |                                |

REPORT NUMBER: SP1-2407-184-2

### Scotopic Flux vs. Wavelength

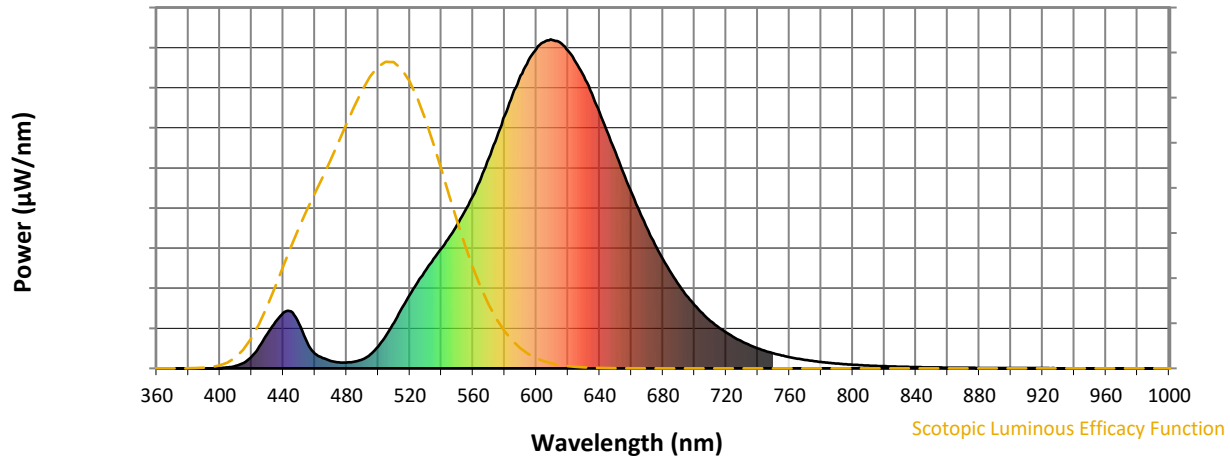


Scotopic Lumens: NR

S/P: 0.8

| $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) |
|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|
| 360               | 0                                    | NR                             | 490               | 27                                   | NR                             | 620               | 966                                  | NR                             | 750               | 46                                   | NR                             | 880               | 1                                    | NR                             |
| 365               | 0                                    | NR                             | 495               | 42                                   | NR                             | 625               | 930                                  | NR                             | 755               | 39                                   | NR                             | 885               | 1                                    | NR                             |
| 370               | 0                                    | NR                             | 500               | 67                                   | NR                             | 630               | 888                                  | NR                             | 760               | 34                                   | NR                             | 890               | 1                                    | NR                             |
| 375               | 0                                    | NR                             | 505               | 101                                  | NR                             | 635               | 835                                  | NR                             | 765               | 30                                   | NR                             | 895               | 1                                    | NR                             |
| 380               | 0                                    | NR                             | 510               | 139                                  | NR                             | 640               | 778                                  | NR                             | 770               | 26                                   | NR                             | 900               | 1                                    | NR                             |
| 385               | 0                                    | NR                             | 515               | 183                                  | NR                             | 645               | 717                                  | NR                             | 775               | 22                                   | NR                             | 905               | 1                                    | NR                             |
| 390               | 0                                    | NR                             | 520               | 224                                  | NR                             | 650               | 656                                  | NR                             | 780               | 19                                   | NR                             | 910               | 1                                    | NR                             |
| 395               | 0                                    | NR                             | 525               | 262                                  | NR                             | 655               | 595                                  | NR                             | 785               | 17                                   | NR                             | 915               | 1                                    | NR                             |
| 400               | 1                                    | NR                             | 530               | 299                                  | NR                             | 660               | 536                                  | NR                             | 790               | 15                                   | NR                             | 920               | 1                                    | NR                             |
| 405               | 3                                    | NR                             | 535               | 332                                  | NR                             | 665               | 480                                  | NR                             | 795               | 13                                   | NR                             | 925               | 1                                    | NR                             |
| 410               | 7                                    | NR                             | 540               | 365                                  | NR                             | 670               | 425                                  | NR                             | 800               | 11                                   | NR                             | 930               | 1                                    | NR                             |
| 415               | 17                                   | NR                             | 545               | 400                                  | NR                             | 675               | 376                                  | NR                             | 805               | 10                                   | NR                             | 935               | 0                                    | NR                             |
| 420               | 36                                   | NR                             | 550               | 437                                  | NR                             | 680               | 332                                  | NR                             | 810               | 8                                    | NR                             | 940               | 0                                    | NR                             |
| 425               | 67                                   | NR                             | 555               | 479                                  | NR                             | 685               | 291                                  | NR                             | 815               | 8                                    | NR                             | 945               | 0                                    | NR                             |
| 430               | 105                                  | NR                             | 560               | 525                                  | NR                             | 690               | 255                                  | NR                             | 820               | 7                                    | NR                             | 950               | 0                                    | NR                             |
| 435               | 141                                  | NR                             | 565               | 579                                  | NR                             | 695               | 221                                  | NR                             | 825               | 6                                    | NR                             | 955               | 0                                    | NR                             |
| 440               | 169                                  | NR                             | 570               | 639                                  | NR                             | 700               | 192                                  | NR                             | 830               | 5                                    | NR                             | 960               | 0                                    | NR                             |
| 445               | 173                                  | NR                             | 575               | 703                                  | NR                             | 705               | 167                                  | NR                             | 835               | 4                                    | NR                             | 965               | 0                                    | NR                             |
| 450               | 136                                  | NR                             | 580               | 769                                  | NR                             | 710               | 144                                  | NR                             | 840               | 4                                    | NR                             | 970               | 0                                    | NR                             |
| 455               | 80                                   | NR                             | 585               | 832                                  | NR                             | 715               | 125                                  | NR                             | 845               | 3                                    | NR                             | 975               | 0                                    | NR                             |
| 460               | 45                                   | NR                             | 590               | 890                                  | NR                             | 720               | 109                                  | NR                             | 850               | 3                                    | NR                             | 980               | 0                                    | NR                             |
| 465               | 32                                   | NR                             | 595               | 937                                  | NR                             | 725               | 94                                   | NR                             | 855               | 3                                    | NR                             | 985               | 0                                    | NR                             |
| 470               | 23                                   | NR                             | 600               | 972                                  | NR                             | 730               | 81                                   | NR                             | 860               | 2                                    | NR                             | 990               | 0                                    | NR                             |
| 475               | 18                                   | NR                             | 605               | 992                                  | NR                             | 735               | 70                                   | NR                             | 865               | 2                                    | NR                             | 995               | 0                                    | NR                             |
| 480               | 18                                   | NR                             | 610               | 998                                  | NR                             | 740               | 61                                   | NR                             | 870               | 2                                    | NR                             | 1000              | 0                                    | NR                             |
| 485               | 20                                   | NR                             | 615               | 990                                  | NR                             | 745               | 53                                   | NR                             | 875               | 2                                    | NR                             |                   |                                      |                                |

REPORT NUMBER: SP1-2407-184-2

### Melanopic Flux vs. Wavelength

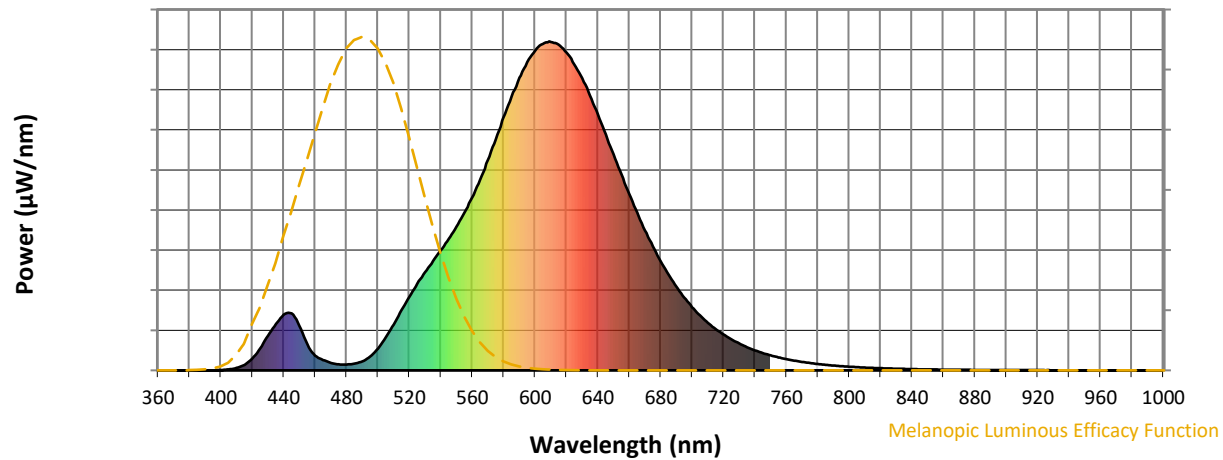

Melanopic Lumens: NR

M/P: 1.21


| $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) |
|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|
| 360               | 0                                    | NR                             | 490               | 27                                   | NR                             | 620               | 966                                  | NR                             | 750               | 46                                   | NR                             | 880               | 1                                    | NR                             |
| 365               | 0                                    | NR                             | 495               | 42                                   | NR                             | 625               | 930                                  | NR                             | 755               | 39                                   | NR                             | 885               | 1                                    | NR                             |
| 370               | 0                                    | NR                             | 500               | 67                                   | NR                             | 630               | 888                                  | NR                             | 760               | 34                                   | NR                             | 890               | 1                                    | NR                             |
| 375               | 0                                    | NR                             | 505               | 101                                  | NR                             | 635               | 835                                  | NR                             | 765               | 30                                   | NR                             | 895               | 1                                    | NR                             |
| 380               | 0                                    | NR                             | 510               | 139                                  | NR                             | 640               | 778                                  | NR                             | 770               | 26                                   | NR                             | 900               | 1                                    | NR                             |
| 385               | 0                                    | NR                             | 515               | 183                                  | NR                             | 645               | 717                                  | NR                             | 775               | 22                                   | NR                             | 905               | 1                                    | NR                             |
| 390               | 0                                    | NR                             | 520               | 224                                  | NR                             | 650               | 656                                  | NR                             | 780               | 19                                   | NR                             | 910               | 1                                    | NR                             |
| 395               | 0                                    | NR                             | 525               | 262                                  | NR                             | 655               | 595                                  | NR                             | 785               | 17                                   | NR                             | 915               | 1                                    | NR                             |
| 400               | 1                                    | NR                             | 530               | 299                                  | NR                             | 660               | 536                                  | NR                             | 790               | 15                                   | NR                             | 920               | 1                                    | NR                             |
| 405               | 3                                    | NR                             | 535               | 332                                  | NR                             | 665               | 480                                  | NR                             | 795               | 13                                   | NR                             | 925               | 1                                    | NR                             |
| 410               | 7                                    | NR                             | 540               | 365                                  | NR                             | 670               | 425                                  | NR                             | 800               | 11                                   | NR                             | 930               | 1                                    | NR                             |
| 415               | 17                                   | NR                             | 545               | 400                                  | NR                             | 675               | 376                                  | NR                             | 805               | 10                                   | NR                             | 935               | 0                                    | NR                             |
| 420               | 36                                   | NR                             | 550               | 437                                  | NR                             | 680               | 332                                  | NR                             | 810               | 8                                    | NR                             | 940               | 0                                    | NR                             |
| 425               | 67                                   | NR                             | 555               | 479                                  | NR                             | 685               | 291                                  | NR                             | 815               | 8                                    | NR                             | 945               | 0                                    | NR                             |
| 430               | 105                                  | NR                             | 560               | 525                                  | NR                             | 690               | 255                                  | NR                             | 820               | 7                                    | NR                             | 950               | 0                                    | NR                             |
| 435               | 141                                  | NR                             | 565               | 579                                  | NR                             | 695               | 221                                  | NR                             | 825               | 6                                    | NR                             | 955               | 0                                    | NR                             |
| 440               | 169                                  | NR                             | 570               | 639                                  | NR                             | 700               | 192                                  | NR                             | 830               | 5                                    | NR                             | 960               | 0                                    | NR                             |
| 445               | 173                                  | NR                             | 575               | 703                                  | NR                             | 705               | 167                                  | NR                             | 835               | 4                                    | NR                             | 965               | 0                                    | NR                             |
| 450               | 136                                  | NR                             | 580               | 769                                  | NR                             | 710               | 144                                  | NR                             | 840               | 4                                    | NR                             | 970               | 0                                    | NR                             |
| 455               | 80                                   | NR                             | 585               | 832                                  | NR                             | 715               | 125                                  | NR                             | 845               | 3                                    | NR                             | 975               | 0                                    | NR                             |
| 460               | 45                                   | NR                             | 590               | 890                                  | NR                             | 720               | 109                                  | NR                             | 850               | 3                                    | NR                             | 980               | 0                                    | NR                             |
| 465               | 32                                   | NR                             | 595               | 937                                  | NR                             | 725               | 94                                   | NR                             | 855               | 3                                    | NR                             | 985               | 0                                    | NR                             |
| 470               | 23                                   | NR                             | 600               | 972                                  | NR                             | 730               | 81                                   | NR                             | 860               | 2                                    | NR                             | 990               | 0                                    | NR                             |
| 475               | 18                                   | NR                             | 605               | 992                                  | NR                             | 735               | 70                                   | NR                             | 865               | 2                                    | NR                             | 995               | 0                                    | NR                             |
| 480               | 18                                   | NR                             | 610               | 998                                  | NR                             | 740               | 61                                   | NR                             | 870               | 2                                    | NR                             | 1000              | 0                                    | NR                             |
| 485               | 20                                   | NR                             | 615               | 990                                  | NR                             | 745               | 53                                   | NR                             | 875               | 2                                    | NR                             |                   |                                      |                                |

REPORT NUMBER: SP1-2407-184-2





TM-30-18

### Summary

$R_f = 70.6$   
 $R_g = 97.6$   
 $CIE R_a = 71.9$   
 $R_g = -17.8$

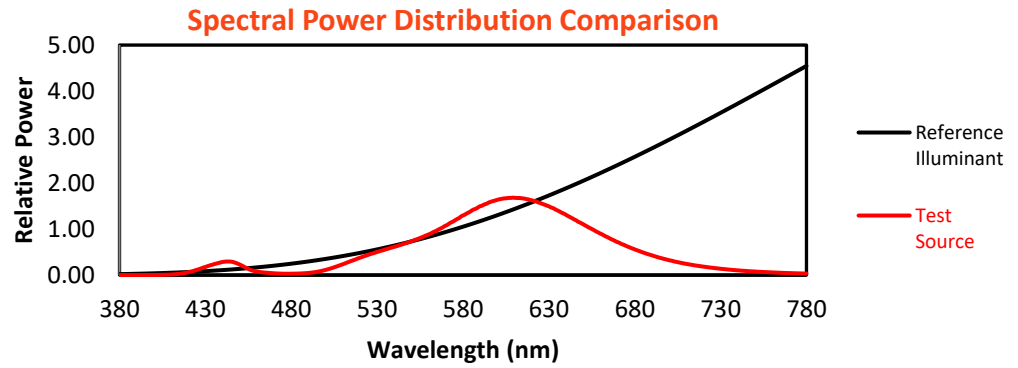


### Color Vector Graphics

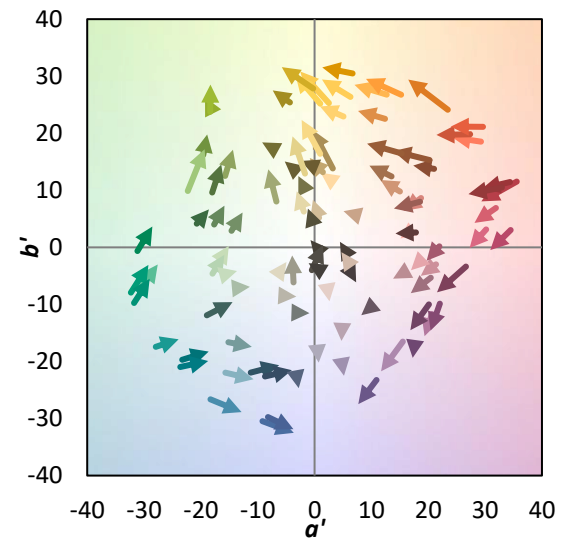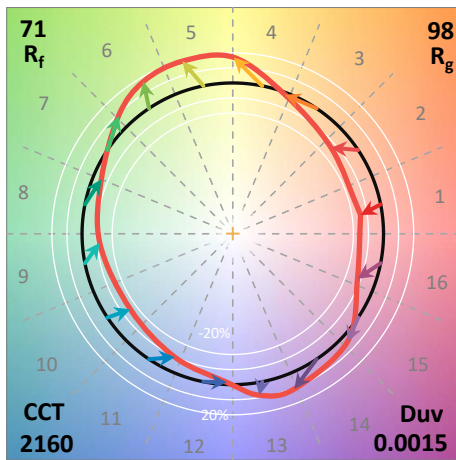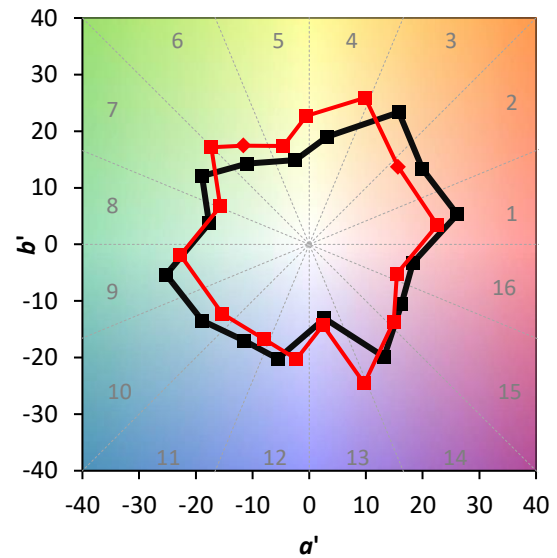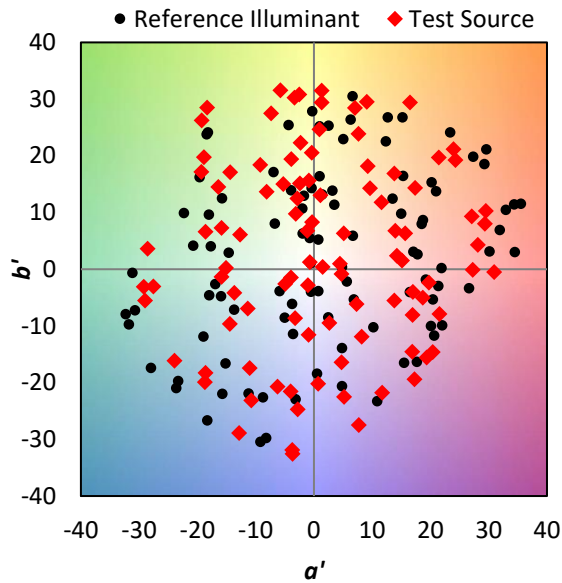




**Individual Sample Fidelity Index ( $R_{f,i}$ )**

|            |            |            |            |
|------------|------------|------------|------------|
| CES01 = 87 | CES26 = 60 | CES51 = 74 | CES76 = 58 |
| CES02 = 65 | CES27 = 77 | CES52 = 77 | CES77 = 82 |
| CES03 = 32 | CES28 = 85 | CES53 = 65 | CES78 = 65 |
| CES04 = 72 | CES29 = 50 | CES54 = 77 | CES79 = 86 |
| CES05 = 52 | CES30 = 49 | CES55 = 74 | CES80 = 85 |
| CES06 = 53 | CES31 = 55 | CES56 = 64 | CES81 = 61 |
| CES07 = 44 | CES32 = 55 | CES57 = 60 | CES82 = 93 |
| CES08 = 43 | CES33 = 55 | CES58 = 64 | CES83 = 83 |
| CES09 = 29 | CES34 = 75 | CES59 = 84 | CES84 = 93 |
| CES10 = 79 | CES35 = 88 | CES60 = 89 | CES85 = 81 |
| CES11 = 62 | CES36 = 78 | CES61 = 84 | CES86 = 55 |
| CES12 = 68 | CES37 = 82 | CES62 = 68 | CES87 = 79 |
| CES13 = 45 | CES38 = 54 | CES63 = 68 | CES88 = 72 |
| CES14 = 75 | CES39 = 90 | CES64 = 69 | CES89 = 62 |
| CES15 = 72 | CES40 = 86 | CES65 = 66 | CES90 = 67 |
| CES16 = 49 | CES41 = 75 | CES66 = 64 | CES91 = 89 |
| CES17 = 51 | CES42 = 83 | CES67 = 63 | CES92 = 67 |
| CES18 = 57 | CES43 = 68 | CES68 = 71 | CES93 = 78 |
| CES19 = 74 | CES44 = 98 | CES69 = 81 | CES94 = 52 |
| CES20 = 68 | CES45 = 76 | CES70 = 65 | CES95 = 76 |
| CES21 = 89 | CES46 = 68 | CES71 = 64 | CES96 = 78 |
| CES22 = 81 | CES47 = 60 | CES72 = 88 | CES97 = 76 |
| CES23 = 92 | CES48 = 47 | CES73 = 59 | CES98 = 71 |
| CES24 = 92 | CES49 = 65 | CES74 = 85 | CES99 = 65 |
| CES25 = 74 | CES50 = 74 | CES75 = 66 |            |

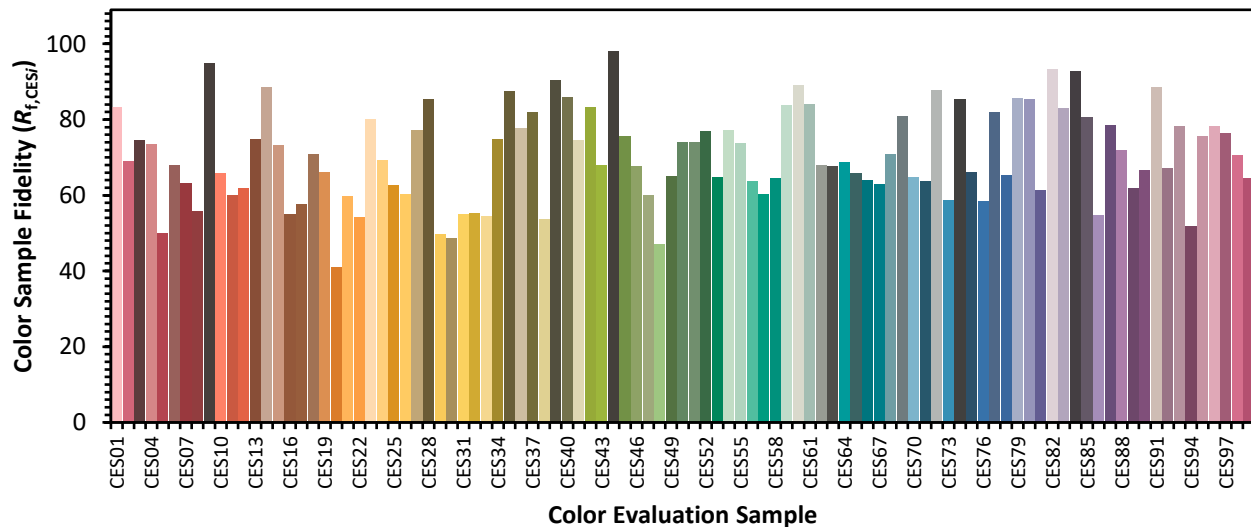




Color Rendition by Hue-Angle Bin

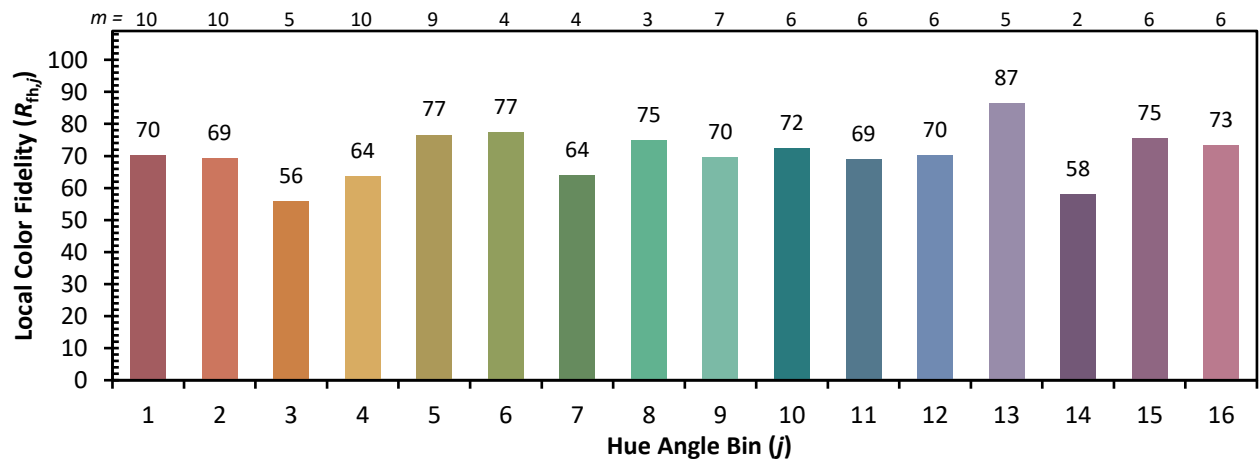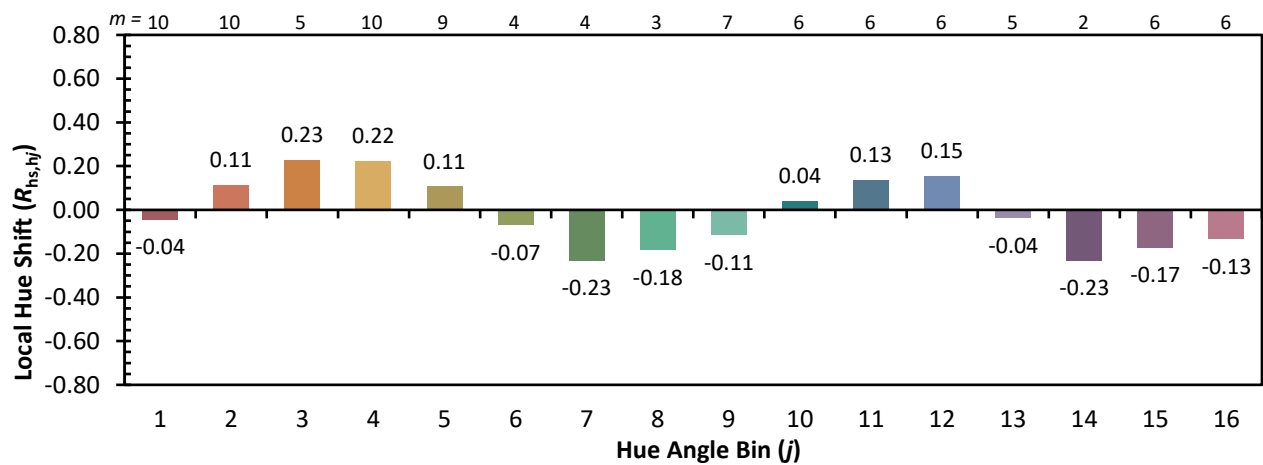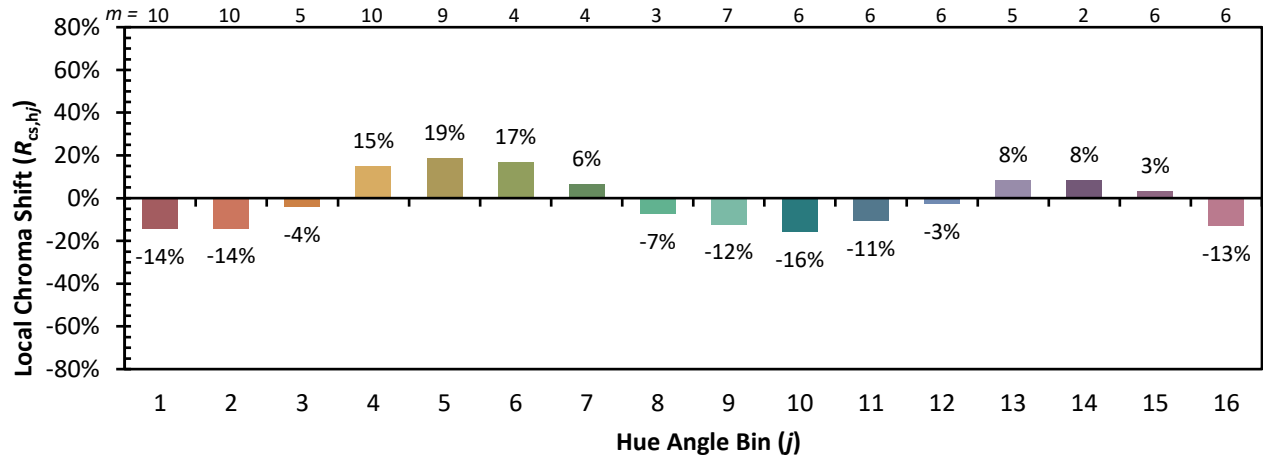

**Measure Comparisons**

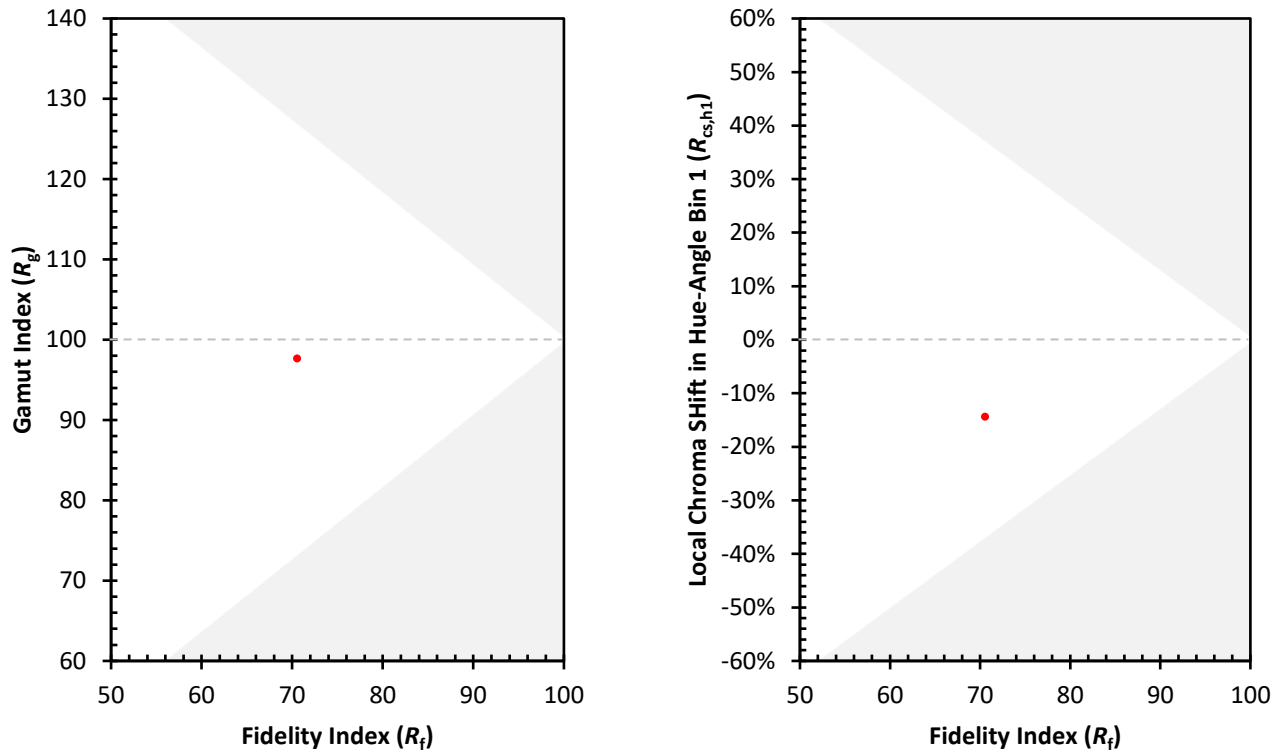

(END OF REPORT)