

Scaled data based on original data using  
LM-79-08 Approved Method: Electrical and Photometric Measurements of Solid-  
State Lighting Products

Test Report Prepared for  
Cooper Lighting Solutions  
(formerly Eaton)

Brand: STREETWORKS

Report Number: P1382214

Luminaire Tested: **VAL-T-SB6D-722-U-5MQ**

Issue Date: 02/18/2026

This test was performed under the Supervised Manufacturer's Testing Program. The results of this test have not been  
influenced by sources from within Cooper Lighting Solutions or from external interests.

**Test Information**

Test Method: LM-79-08  
Report Number: P1382214  
Test Lab: INNOVATION CENTER(G1)  
Issue Date: 02/18/2026  
Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)  
Product Line: STREETWORKS  
Catalog Number: VAL-T-SB6D-722-U-5MQ  
Description: GALLEON II WALL SLIM HIGH DENSITY LED ARRAYS 65 SQUARE 350W 70CRI  
2200K FIXTURE w/ TYPE V SQUARE MEDIUM DISTRIBUTION OPTIC  
Light Source: (156) 2200K CCT, 70 CRI LEDS  
Ballast/Driver: ELECTRONIC DRIVER  
Luminaire Equipment: 

| <u>Sample No.</u> | <u>Condition</u> | <u>Description</u> |
|-------------------|------------------|--------------------|
| a                 | good             | reflector          |
| b                 | good             | lens               |
| c                 | good             | housing            |
| d                 | good             | cord               |

**Summary**

Lumens per Lamp: N/A  
Luminaire Lumens: 40122.1 lumens  
Efficiency: N/A  
Efficacy: 114.6 lumens/watt  
Luminous Opening: Rectangular (W 1.5' x L: 1' x H: 0')  
IES Classification: Type V - Short  
BUG Rating: B5 - U0 - G4  
  
Input Watts (W): 350  
Input Voltage (V): 120  
Input Current (Ain): NR  
Voltage Rise (V): NR  
Power Factor: 0.98  
Total Harmonic Distortion (THDi): --  
Frequency (hertz): 60  
Stabilization Time: NR  
Operation Time: NR  
Ambient Temperature (°C): NR  
Test Distance: 28.75 FT


REPORT NUMBER: P1382214

CATALOG NUMBER: VAL-T-SB6D-722-U-5MQ

## Iso-Footcandle Lines of Horizontal Illumination

× Max cd

--- 1/2 Max cd

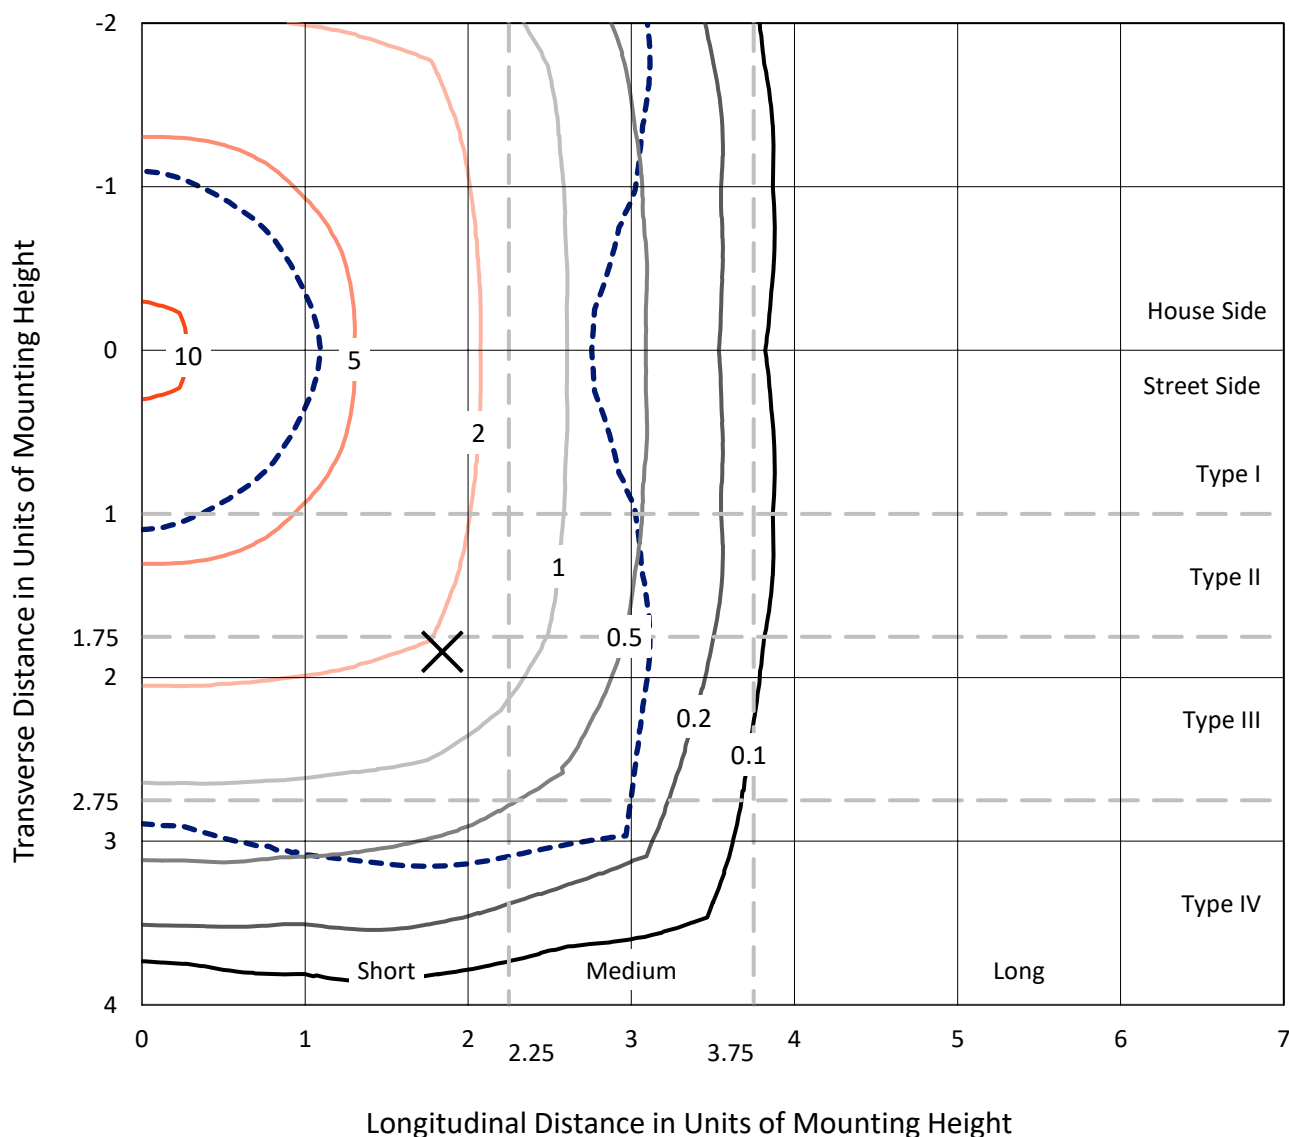


Based on 20 foot mounting height. Maximum calculated value = 10.6 fc

Type V - Short - N/A

REPORT NUMBER: P1382214  
CATALOG NUMBER: VAL-T-SB6D-722-U-5MQ

## Luminous Intensity Polar Plot

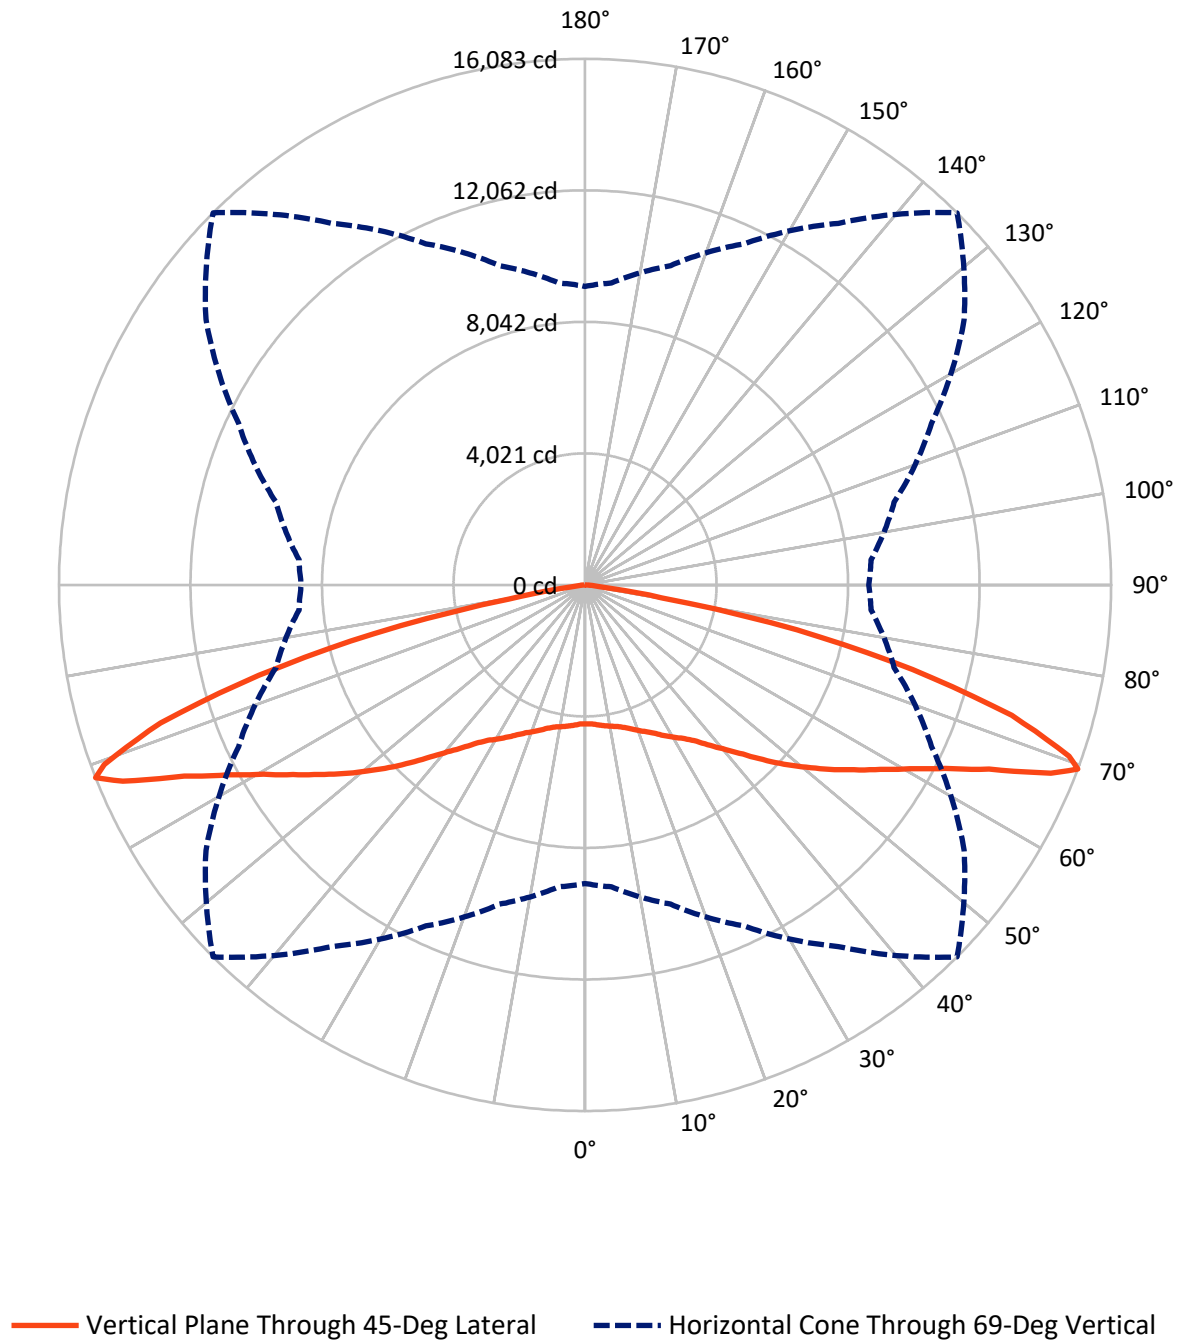

REPORT NUMBER: P1382214

CATALOG NUMBER: VAL-T-SB6D-722-U-5MQ


**FLUX DISTRIBUTION:**

|                    |           | Downward | Upward | Total   |
|--------------------|-----------|----------|--------|---------|
| <b>House Side</b>  | Lumens    | 20061.0  | 0.0    | 20061.0 |
|                    | % Fixture | 50.0     | 0.0    | 50.0    |
| <b>Street Side</b> | Lumens    | 20061.0  | 0.0    | 20061.0 |
|                    | % Fixture | 50.0     | 0.0    | 50.0    |
| <b>Total</b>       | Lumens    | 40122.1  | 0.0    | 40122.1 |
|                    | % Fixture | 100.0    | 0.0    | 100.0   |

**Coefficient of Utilization**

**ZONAL LUMENS:**

| Zone      | Lumens  | % Fixture |
|-----------|---------|-----------|
| 0°-10°    | 413.7   | 1.0       |
| 10°-20°   | 1284.3  | 3.2       |
| 20°-30°   | 2304.2  | 5.7       |
| 30°-40°   | 3709.2  | 9.2       |
| 40°-50°   | 5920.5  | 14.8      |
| 50°-60°   | 8773.0  | 21.9      |
| 60°-70°   | 11266.0 | 28.1      |
| 70°-80°   | 6240.4  | 15.6      |
| 80°-90°   | 210.7   | 0.5       |
| 90°-100°  | 0.0     | 0.0       |
| 100°-110° | 0.0     | 0.0       |
| 110°-120° | 0.0     | 0.0       |
| 120°-130° | 0.0     | 0.0       |
| 130°-140° | 0.0     | 0.0       |
| 140°-150° | 0.0     | 0.0       |
| 150°-160° | 0.0     | 0.0       |
| 160°-170° | 0.0     | 0.0       |
| 170°-180° | 0.0     | 0.0       |
| 0°-90°    | 40122.1 | 100.0     |
| 0°-180°   | 40122.1 | 100.0     |

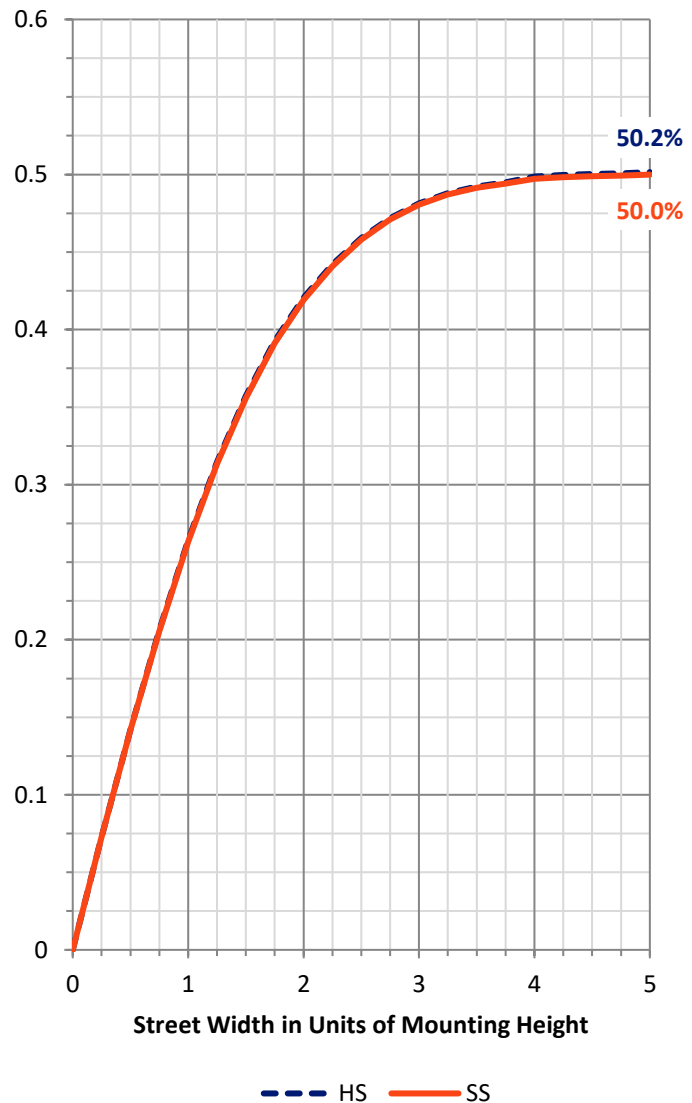

REPORT NUMBER: P1382214


CATALOG NUMBER: VAL-T-SB6D-722-U-5MQ

**LUMINAIRE CLASSIFICATION SYSTEM LUMEN TABLE AND BUG RATING:**

| Zone |             | Lumens | % Fixture | Zone Rating/Lumen Limit |      |          |
|------|-------------|--------|-----------|-------------------------|------|----------|
|      |             |        |           | B                       | U    | G        |
| FL   | (0°-30°)    | 2001.1 | 5.0       |                         |      |          |
| FM   | (30°-60°)   | 9201.3 | 22.9      |                         |      |          |
| FH   | (60°-80°)   | 8753.2 | 21.8      |                         |      | G4/12000 |
| FVH  | (80°-90°)   | 105.4  | 0.3       |                         |      | G2/225   |
| BL   | (0°-30°)    | 2001.1 | 5.0       | B3/2500                 |      |          |
| BM   | (30°-60°)   | 9201.3 | 22.9      | B5                      |      |          |
| BH   | (60°-80°)   | 8753.2 | 21.8      | B5                      |      | G4/12000 |
| BVH  | (80°-90°)   | 105.4  | 0.3       |                         |      | G2/225   |
| UL   | (90°-100°)  | 0.0    | 0.0       |                         | U0/0 |          |
| UH   | (100°-180°) | 0.0    | 0.0       |                         | U0/0 |          |

**BUG Rating: B5-U0-G4**

Type V Short

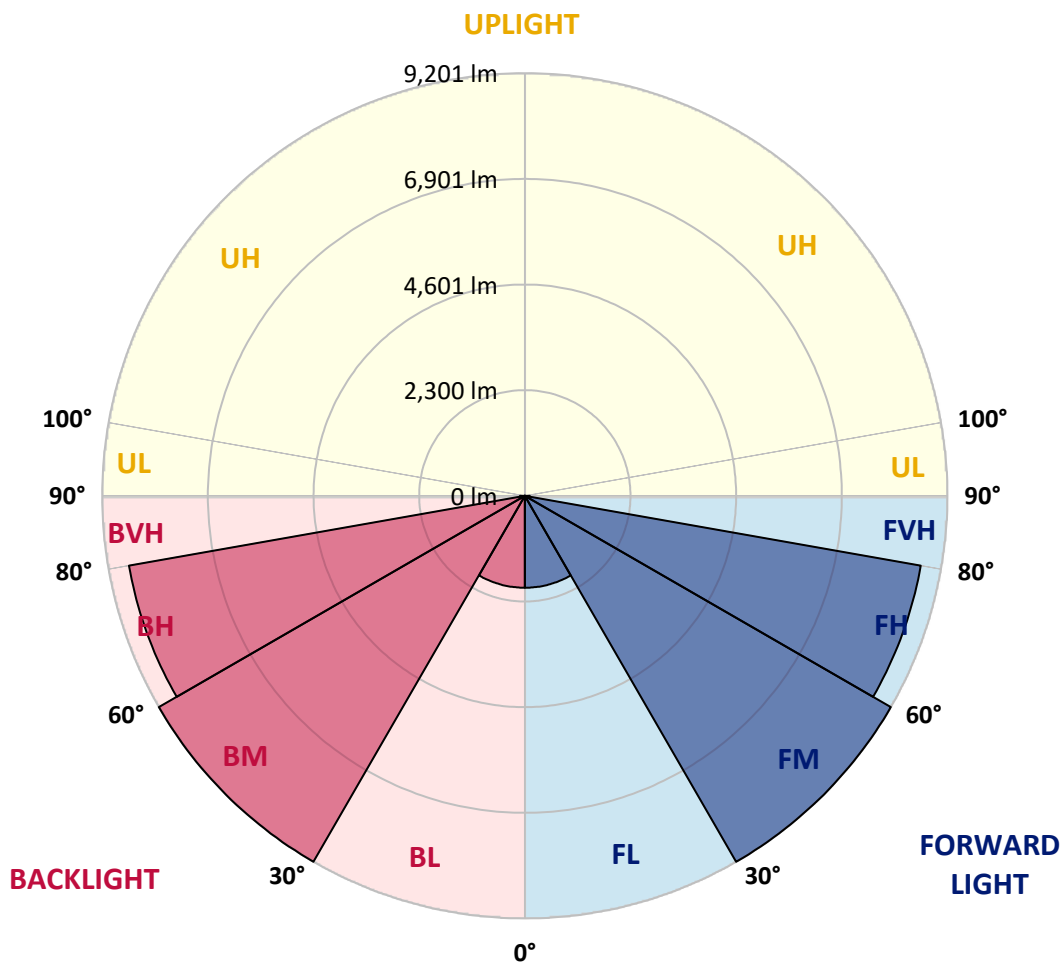

REPORT NUMBER: P1382214

CATALOG NUMBER: VAL-T-SB6D-722-U-5MQ

**CANDELA DISTRIBUTION (FULL):**

|       | 0°      | 5°      | 15°     | 25°     | 35°     | 45°     | 55°     | 65°     | 75°     | 85°     | 90°     |
|-------|---------|---------|---------|---------|---------|---------|---------|---------|---------|---------|---------|
| 0°    | 4246.5  | 4246.5  | 4246.5  | 4246.5  | 4246.5  | 4246.5  | 4246.5  | 4246.5  | 4246.5  | 4246.5  | 4246.5  |
| 2.5°  | 4292.5  | 4274.1  | 4274.1  | 4264.9  | 4255.7  | 4255.7  | 4264.9  | 4255.7  | 4274.1  | 4264.9  | 4264.9  |
| 5°    | 4320.2  | 4301.8  | 4301.8  | 4311.0  | 4292.5  | 4301.8  | 4311.0  | 4292.5  | 4320.2  | 4301.8  | 4301.8  |
| 7.5°  | 4357.0  | 4347.8  | 4338.6  | 4357.0  | 4347.8  | 4347.8  | 4366.2  | 4347.8  | 4366.2  | 4338.6  | 4329.4  |
| 10°   | 4412.3  | 4384.7  | 4384.7  | 4393.9  | 4384.7  | 4393.9  | 4412.3  | 4393.9  | 4393.9  | 4375.5  | 4375.5  |
| 12.5° | 4449.1  | 4439.9  | 4430.7  | 4439.9  | 4439.9  | 4439.9  | 4449.1  | 4430.7  | 4439.9  | 4430.7  | 4421.5  |
| 15°   | 4504.4  | 4495.2  | 4495.2  | 4495.2  | 4504.4  | 4522.8  | 4513.6  | 4486.0  | 4495.2  | 4476.8  | 4476.8  |
| 17.5° | 4587.3  | 4568.9  | 4578.1  | 4587.3  | 4605.7  | 4633.4  | 4605.7  | 4568.9  | 4568.9  | 4550.5  | 4541.3  |
| 20°   | 4679.4  | 4670.2  | 4679.4  | 4697.9  | 4716.3  | 4753.1  | 4716.3  | 4679.4  | 4661.0  | 4642.6  | 4624.2  |
| 22.5° | 4780.8  | 4771.5  | 4799.2  | 4817.6  | 4836.0  | 4882.1  | 4845.2  | 4808.4  | 4762.3  | 4743.9  | 4734.7  |
| 25°   | 4891.3  | 4882.1  | 4909.7  | 4965.0  | 5011.0  | 5038.7  | 5001.8  | 4937.4  | 4900.5  | 4863.7  | 4845.2  |
| 27.5° | 5011.0  | 5011.0  | 5057.1  | 5112.4  | 5176.8  | 5222.9  | 5186.1  | 5103.2  | 5029.5  | 4992.6  | 4983.4  |
| 30°   | 5195.3  | 5195.3  | 5241.3  | 5315.0  | 5370.3  | 5407.1  | 5370.3  | 5305.8  | 5232.1  | 5195.3  | 5186.1  |
| 32.5° | 5444.0  | 5444.0  | 5499.3  | 5554.5  | 5582.2  | 5600.6  | 5591.4  | 5563.7  | 5499.3  | 5444.0  | 5425.6  |
| 35°   | 5738.7  | 5748.0  | 5812.4  | 5858.5  | 5886.1  | 5867.7  | 5886.1  | 5867.7  | 5812.4  | 5766.4  | 5757.2  |
| 37.5° | 6116.4  | 6116.4  | 6180.9  | 6227.0  | 6208.5  | 6227.0  | 6227.0  | 6236.2  | 6208.5  | 6144.1  | 6116.4  |
| 40°   | 6530.9  | 6540.1  | 6613.8  | 6641.5  | 6632.3  | 6613.8  | 6641.5  | 6669.1  | 6632.3  | 6567.8  | 6549.4  |
| 42.5° | 6991.5  | 7009.9  | 7065.2  | 7120.5  | 7102.0  | 7074.4  | 7129.7  | 7148.1  | 7083.6  | 7028.4  | 7028.4  |
| 45°   | 7470.5  | 7470.5  | 7553.4  | 7654.7  | 7663.9  | 7617.9  | 7654.7  | 7663.9  | 7581.0  | 7507.4  | 7479.7  |
| 47.5° | 7958.7  | 7977.1  | 8087.7  | 8198.2  | 8235.1  | 8189.0  | 8216.6  | 8225.8  | 8087.7  | 8014.0  | 7967.9  |
| 50°   | 8446.9  | 8474.6  | 8621.9  | 8797.0  | 8833.8  | 8760.1  | 8815.4  | 8778.5  | 8631.2  | 8474.6  | 8437.7  |
| 52.5° | 8843.0  | 8907.5  | 9128.6  | 9368.1  | 9469.4  | 9368.1  | 9441.8  | 9377.3  | 9128.6  | 8925.9  | 8861.4  |
| 55°   | 9285.2  | 9331.2  | 9616.8  | 9930.0  | 10068.1 | 9976.0  | 10049.7 | 9939.2  | 9589.1  | 9340.4  | 9276.0  |
| 57.5° | 9718.1  | 9736.5  | 10058.9 | 10501.1 | 10722.2 | 10648.5 | 10657.7 | 10445.8 | 10068.1 | 9745.7  | 9653.6  |
| 60°   | 10058.9 | 10114.2 | 10528.7 | 11044.6 | 11394.6 | 11403.8 | 11320.9 | 10998.5 | 10556.4 | 10187.9 | 10114.2 |
| 62.5° | 9616.8  | 9736.5  | 10482.7 | 11578.8 | 12149.9 | 12361.8 | 12113.1 | 11615.7 | 10657.7 | 9994.5  | 9883.9  |
| 65°   | 9322.0  | 9395.7  | 9957.6  | 11293.3 | 13052.7 | 13577.7 | 13080.3 | 11542.0 | 10307.6 | 9782.6  | 9681.3  |
| 67.5° | 9515.5  | 9607.6  | 10233.9 | 11265.6 | 13264.5 | 15355.5 | 13660.6 | 11781.5 | 10519.5 | 9699.7  | 9598.4  |
| 69°   | 9128.6  | 9266.7  | 10105.0 | 11505.1 | 13494.8 | 16083.2 | 14148.8 | 11689.4 | 9782.6  | 8778.5  | 8677.2  |
| 70°   | 8686.4  | 8806.2  | 9708.9  | 11376.2 | 13826.4 | 15696.4 | 14342.3 | 11127.5 | 9064.1  | 8106.1  | 8014.0  |
| 72.5° | 6770.4  | 6899.4  | 7958.7  | 10049.7 | 13117.1 | 13642.2 | 12518.4 | 9294.4  | 7516.6  | 6659.9  | 6558.6  |
| 75°   | 2238.4  | 2468.7  | 3472.7  | 6273.0  | 8437.7  | 10344.5 | 8087.7  | 6245.4  | 4034.6  | 3049.0  | 2745.0  |
| 77.5° | 479.0   | 515.8   | 902.7   | 1612.0  | 3500.4  | 6623.1  | 3933.3  | 1538.3  | 829.0   | 580.3   | 525.1   |
| 80°   | 257.9   | 276.3   | 377.7   | 469.8   | 865.9   | 2367.3  | 755.3   | 414.5   | 396.1   | 285.6   | 267.1   |
| 82.5° | 165.8   | 165.8   | 211.9   | 257.9   | 331.6   | 442.2   | 294.8   | 248.7   | 221.1   | 156.6   | 156.6   |
| 85°   | 92.1    | 92.1    | 101.3   | 129.0   | 129.0   | 138.2   | 129.0   | 119.7   | 101.3   | 92.1    | 82.9    |
| 87.5° | 55.3    | 64.5    | 64.5    | 55.3    | 55.3    | 55.3    | 55.3    | 55.3    | 55.3    | 64.5    | 55.3    |
| 90°   | 0.0     | 0.0     | 0.0     | 0.0     | 0.0     | 0.0     | 0.0     | 0.0     | 0.0     | 0.0     | 0.0     |

LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-State Lighting Products

Report Prepared for

Cooper Lighting Solutions

McGraw-Edison

Report Number: SP1-2407-184-2

Test Date: 10/09/2024

Luminaire Tested: GSS-SB1A-722-U-5WQ


Data in this report applies to families of products including GSS-SB1A-722-U-5WQ

### Test Information

Test Method: LM-79-2019  
 Report Number: SP1-2407-184-2  
 Test Lab: COOPER LIGHTING SOLUTIONS  
 Photometer: SP1 - 76IN SPHERE  
 Measurement Geometry:  $4\pi$   
 Issue Date: 10/15/2024  
 Manufacturer: COOPER LIGHTING SOLUTIONS  
 Product Line: McGraw-Edison  
 Catalog Number: **GSS-SB1A-722-U-5WQ**  
 Description: GALLEON II SITE SLIM 1SQ 350MA 5WQ HIGH DENSITY LIGHTSQUARE WITH 70 CRI  
 2200K CCT 26 LEDS

### Spectral Parameters

|                           |          |           |      |      |       |
|---------------------------|----------|-----------|------|------|-------|
| CCT (K):                  | 2160     | CRI (Ra): | 71.9 |      |       |
| CIE u':                   | 0.2927   | R1:       | 68.7 | R9:  | -17.8 |
| CIE v':                   | 0.5388   | R2:       | 82.6 | R10: | 60.5  |
| Duv:                      | 0.0015   | R3:       | 95.5 | R11: | 60.2  |
| CIE x:                    | 0.5130   | R4:       | 66.4 | R12: | 48.2  |
| CIE y:                    | 0.4197   | R5:       | 65.4 | R13: | 70.7  |
| CIE z:                    | 0.0674   | R6:       | 75.9 | R14: | 96.8  |
| Peak Wavelength (nm):     | 609      | R7:       | 77.2 | R15: | 61.8  |
| Dominant Wavelength (nm): | 587      | R8:       | 43.5 |      |       |
| Purity:                   | 79.96089 |           |      |      |       |
| Rf:                       | 70.6     |           |      |      |       |
| Rg:                       | 97.6     |           |      |      |       |

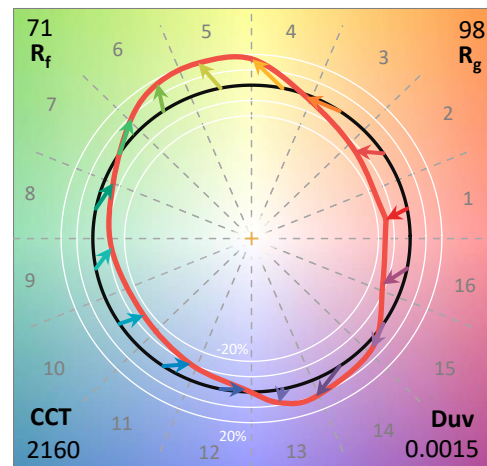

### Test Conditions

Stabilization Time: 21M  
 Operation Time: 1H 21M  
 Sphere Temperature (°C): 25.2


REPORT NUMBER: SP1-2407-184-2

| Measurement and Test Equipment |                       |                  |                      |
|--------------------------------|-----------------------|------------------|----------------------|
| Instrument                     | Identification Number | Calibration Date | Calibration Due Date |
| Photometer                     | IN0058                | 6/18/2024        | 12/18/2024           |
| Power Meter                    | INXT2011004           | 2/8/2024         | 2/8/2025             |
| AC Power Source                | IN0063                | 10/24/2023       | 10/24/2024           |
| DC Power Source                | IN0208                | 10/24/2023       | 10/24/2024           |
| Sphere Thermometer             | IN0085                | 10/24/2023       | 10/24/2024           |
| Room Thermometer               | IN0046                | 10/24/2023       | 10/24/2024           |



REPORT NUMBER: SP1-2407-184-2

### Photopic Flux vs. Wavelength

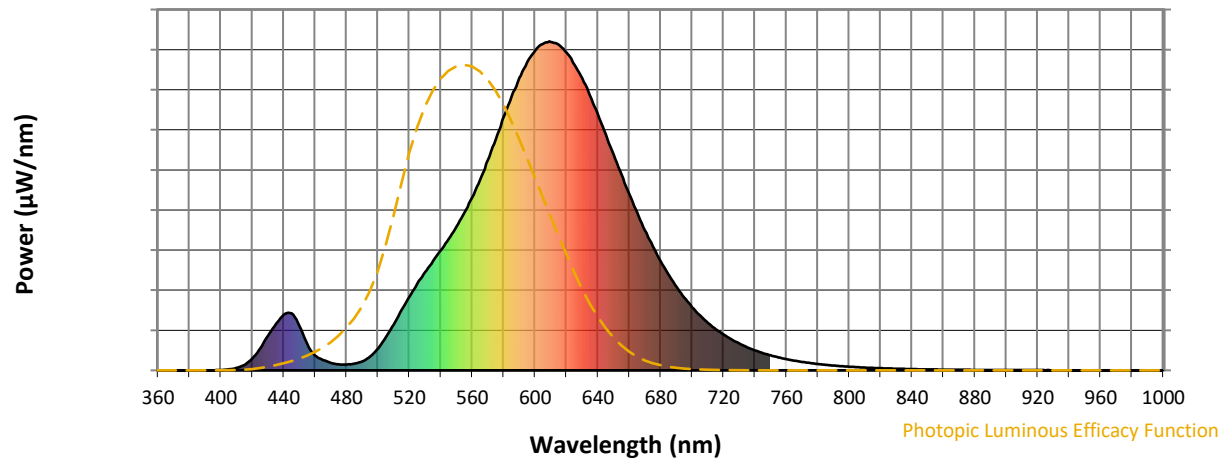


### Photopic Lumens: NR

| $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^{\wedge}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) |
|-------------------|----------------------------------------|--------------------------------|-------------------|----------------------------------------|--------------------------------|-------------------|----------------------------------------|--------------------------------|-------------------|----------------------------------------|--------------------------------|-------------------|----------------------------------------|--------------------------------|
| 360               | 0                                      | NR                             | 490               | 27                                     | NR                             | 620               | 966                                    | NR                             | 750               | 46                                     | NR                             | 880               | 1                                      | NR                             |
| 365               | 0                                      | NR                             | 495               | 42                                     | NR                             | 625               | 930                                    | NR                             | 755               | 39                                     | NR                             | 885               | 1                                      | NR                             |
| 370               | 0                                      | NR                             | 500               | 67                                     | NR                             | 630               | 888                                    | NR                             | 760               | 34                                     | NR                             | 890               | 1                                      | NR                             |
| 375               | 0                                      | NR                             | 505               | 101                                    | NR                             | 635               | 835                                    | NR                             | 765               | 30                                     | NR                             | 895               | 1                                      | NR                             |
| 380               | 0                                      | NR                             | 510               | 139                                    | NR                             | 640               | 778                                    | NR                             | 770               | 26                                     | NR                             | 900               | 1                                      | NR                             |
| 385               | 0                                      | NR                             | 515               | 183                                    | NR                             | 645               | 717                                    | NR                             | 775               | 22                                     | NR                             | 905               | 1                                      | NR                             |
| 390               | 0                                      | NR                             | 520               | 224                                    | NR                             | 650               | 656                                    | NR                             | 780               | 19                                     | NR                             | 910               | 1                                      | NR                             |
| 395               | 0                                      | NR                             | 525               | 262                                    | NR                             | 655               | 595                                    | NR                             | 785               | 17                                     | NR                             | 915               | 1                                      | NR                             |
| 400               | 1                                      | NR                             | 530               | 299                                    | NR                             | 660               | 536                                    | NR                             | 790               | 15                                     | NR                             | 920               | 1                                      | NR                             |
| 405               | 3                                      | NR                             | 535               | 332                                    | NR                             | 665               | 480                                    | NR                             | 795               | 13                                     | NR                             | 925               | 1                                      | NR                             |
| 410               | 7                                      | NR                             | 540               | 365                                    | NR                             | 670               | 425                                    | NR                             | 800               | 11                                     | NR                             | 930               | 1                                      | NR                             |
| 415               | 17                                     | NR                             | 545               | 400                                    | NR                             | 675               | 376                                    | NR                             | 805               | 10                                     | NR                             | 935               | 0                                      | NR                             |
| 420               | 36                                     | NR                             | 550               | 437                                    | NR                             | 680               | 332                                    | NR                             | 810               | 8                                      | NR                             | 940               | 0                                      | NR                             |
| 425               | 67                                     | NR                             | 555               | 479                                    | NR                             | 685               | 291                                    | NR                             | 815               | 8                                      | NR                             | 945               | 0                                      | NR                             |
| 430               | 105                                    | NR                             | 560               | 525                                    | NR                             | 690               | 255                                    | NR                             | 820               | 7                                      | NR                             | 950               | 0                                      | NR                             |
| 435               | 141                                    | NR                             | 565               | 579                                    | NR                             | 695               | 221                                    | NR                             | 825               | 6                                      | NR                             | 955               | 0                                      | NR                             |
| 440               | 169                                    | NR                             | 570               | 639                                    | NR                             | 700               | 192                                    | NR                             | 830               | 5                                      | NR                             | 960               | 0                                      | NR                             |
| 445               | 173                                    | NR                             | 575               | 703                                    | NR                             | 705               | 167                                    | NR                             | 835               | 4                                      | NR                             | 965               | 0                                      | NR                             |
| 450               | 136                                    | NR                             | 580               | 769                                    | NR                             | 710               | 144                                    | NR                             | 840               | 4                                      | NR                             | 970               | 0                                      | NR                             |
| 455               | 80                                     | NR                             | 585               | 832                                    | NR                             | 715               | 125                                    | NR                             | 845               | 3                                      | NR                             | 975               | 0                                      | NR                             |
| 460               | 45                                     | NR                             | 590               | 890                                    | NR                             | 720               | 109                                    | NR                             | 850               | 3                                      | NR                             | 980               | 0                                      | NR                             |
| 465               | 32                                     | NR                             | 595               | 937                                    | NR                             | 725               | 94                                     | NR                             | 855               | 3                                      | NR                             | 985               | 0                                      | NR                             |
| 470               | 23                                     | NR                             | 600               | 972                                    | NR                             | 730               | 81                                     | NR                             | 860               | 2                                      | NR                             | 990               | 0                                      | NR                             |
| 475               | 18                                     | NR                             | 605               | 992                                    | NR                             | 735               | 70                                     | NR                             | 865               | 2                                      | NR                             | 995               | 0                                      | NR                             |
| 480               | 18                                     | NR                             | 610               | 998                                    | NR                             | 740               | 61                                     | NR                             | 870               | 2                                      | NR                             | 1000              | 0                                      | NR                             |
| 485               | 20                                     | NR                             | 615               | 990                                    | NR                             | 745               | 53                                     | NR                             | 875               | 2                                      | NR                             |                   |                                        |                                |

REPORT NUMBER: SP1-2407-184-2

### Scotopic Flux vs. Wavelength

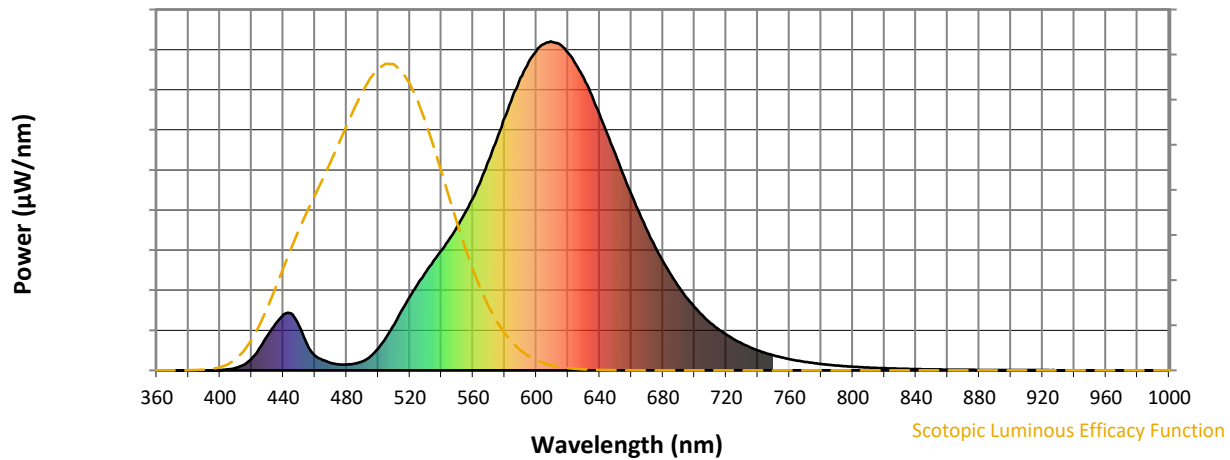


Scotopic Lumens: NR

S/P: 0.8

| $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) |
|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|
| 360               | 0                                    | NR                             | 490               | 27                                   | NR                             | 620               | 966                                  | NR                             | 750               | 46                                   | NR                             | 880               | 1                                    | NR                             |
| 365               | 0                                    | NR                             | 495               | 42                                   | NR                             | 625               | 930                                  | NR                             | 755               | 39                                   | NR                             | 885               | 1                                    | NR                             |
| 370               | 0                                    | NR                             | 500               | 67                                   | NR                             | 630               | 888                                  | NR                             | 760               | 34                                   | NR                             | 890               | 1                                    | NR                             |
| 375               | 0                                    | NR                             | 505               | 101                                  | NR                             | 635               | 835                                  | NR                             | 765               | 30                                   | NR                             | 895               | 1                                    | NR                             |
| 380               | 0                                    | NR                             | 510               | 139                                  | NR                             | 640               | 778                                  | NR                             | 770               | 26                                   | NR                             | 900               | 1                                    | NR                             |
| 385               | 0                                    | NR                             | 515               | 183                                  | NR                             | 645               | 717                                  | NR                             | 775               | 22                                   | NR                             | 905               | 1                                    | NR                             |
| 390               | 0                                    | NR                             | 520               | 224                                  | NR                             | 650               | 656                                  | NR                             | 780               | 19                                   | NR                             | 910               | 1                                    | NR                             |
| 395               | 0                                    | NR                             | 525               | 262                                  | NR                             | 655               | 595                                  | NR                             | 785               | 17                                   | NR                             | 915               | 1                                    | NR                             |
| 400               | 1                                    | NR                             | 530               | 299                                  | NR                             | 660               | 536                                  | NR                             | 790               | 15                                   | NR                             | 920               | 1                                    | NR                             |
| 405               | 3                                    | NR                             | 535               | 332                                  | NR                             | 665               | 480                                  | NR                             | 795               | 13                                   | NR                             | 925               | 1                                    | NR                             |
| 410               | 7                                    | NR                             | 540               | 365                                  | NR                             | 670               | 425                                  | NR                             | 800               | 11                                   | NR                             | 930               | 1                                    | NR                             |
| 415               | 17                                   | NR                             | 545               | 400                                  | NR                             | 675               | 376                                  | NR                             | 805               | 10                                   | NR                             | 935               | 0                                    | NR                             |
| 420               | 36                                   | NR                             | 550               | 437                                  | NR                             | 680               | 332                                  | NR                             | 810               | 8                                    | NR                             | 940               | 0                                    | NR                             |
| 425               | 67                                   | NR                             | 555               | 479                                  | NR                             | 685               | 291                                  | NR                             | 815               | 8                                    | NR                             | 945               | 0                                    | NR                             |
| 430               | 105                                  | NR                             | 560               | 525                                  | NR                             | 690               | 255                                  | NR                             | 820               | 7                                    | NR                             | 950               | 0                                    | NR                             |
| 435               | 141                                  | NR                             | 565               | 579                                  | NR                             | 695               | 221                                  | NR                             | 825               | 6                                    | NR                             | 955               | 0                                    | NR                             |
| 440               | 169                                  | NR                             | 570               | 639                                  | NR                             | 700               | 192                                  | NR                             | 830               | 5                                    | NR                             | 960               | 0                                    | NR                             |
| 445               | 173                                  | NR                             | 575               | 703                                  | NR                             | 705               | 167                                  | NR                             | 835               | 4                                    | NR                             | 965               | 0                                    | NR                             |
| 450               | 136                                  | NR                             | 580               | 769                                  | NR                             | 710               | 144                                  | NR                             | 840               | 4                                    | NR                             | 970               | 0                                    | NR                             |
| 455               | 80                                   | NR                             | 585               | 832                                  | NR                             | 715               | 125                                  | NR                             | 845               | 3                                    | NR                             | 975               | 0                                    | NR                             |
| 460               | 45                                   | NR                             | 590               | 890                                  | NR                             | 720               | 109                                  | NR                             | 850               | 3                                    | NR                             | 980               | 0                                    | NR                             |
| 465               | 32                                   | NR                             | 595               | 937                                  | NR                             | 725               | 94                                   | NR                             | 855               | 3                                    | NR                             | 985               | 0                                    | NR                             |
| 470               | 23                                   | NR                             | 600               | 972                                  | NR                             | 730               | 81                                   | NR                             | 860               | 2                                    | NR                             | 990               | 0                                    | NR                             |
| 475               | 18                                   | NR                             | 605               | 992                                  | NR                             | 735               | 70                                   | NR                             | 865               | 2                                    | NR                             | 995               | 0                                    | NR                             |
| 480               | 18                                   | NR                             | 610               | 998                                  | NR                             | 740               | 61                                   | NR                             | 870               | 2                                    | NR                             | 1000              | 0                                    | NR                             |
| 485               | 20                                   | NR                             | 615               | 990                                  | NR                             | 745               | 53                                   | NR                             | 875               | 2                                    | NR                             |                   |                                      |                                |

REPORT NUMBER: SP1-2407-184-2

### Melanopic Flux vs. Wavelength

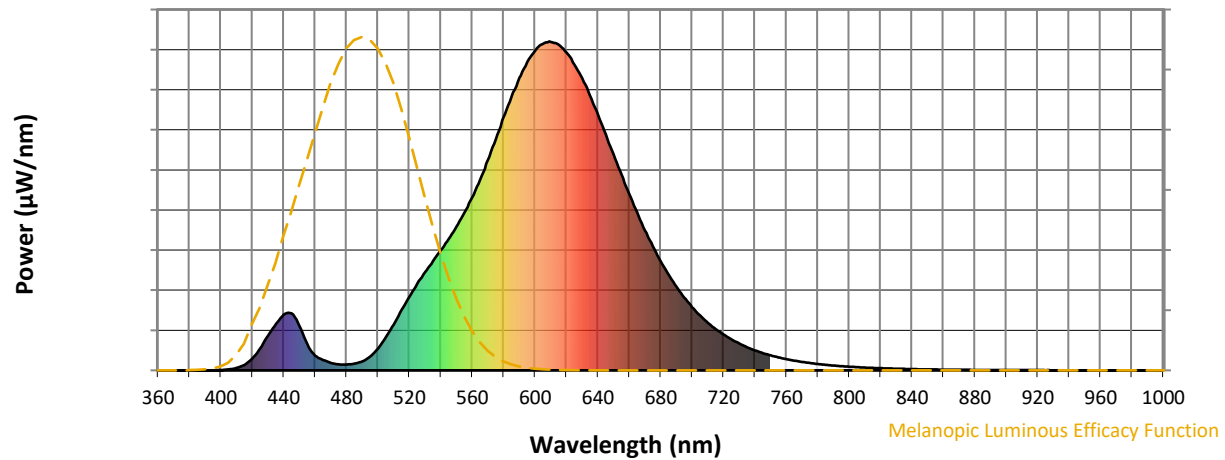

Melanopic Lumens: NR

M/P: 1.21


| λ<br>(nm) | Power<br>W <sup>λ</sup> /nm | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>W <sup>λ</sup> /nm | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>W <sup>λ</sup> /nm | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>W <sup>λ</sup> /nm | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>W <sup>λ</sup> /nm | Lumens<br>(φ/nm) |
|-----------|-----------------------------|------------------|-----------|-----------------------------|------------------|-----------|-----------------------------|------------------|-----------|-----------------------------|------------------|-----------|-----------------------------|------------------|
| 360       | 0                           | NR               | 490       | 27                          | NR               | 620       | 966                         | NR               | 750       | 46                          | NR               | 880       | 1                           | NR               |
| 365       | 0                           | NR               | 495       | 42                          | NR               | 625       | 930                         | NR               | 755       | 39                          | NR               | 885       | 1                           | NR               |
| 370       | 0                           | NR               | 500       | 67                          | NR               | 630       | 888                         | NR               | 760       | 34                          | NR               | 890       | 1                           | NR               |
| 375       | 0                           | NR               | 505       | 101                         | NR               | 635       | 835                         | NR               | 765       | 30                          | NR               | 895       | 1                           | NR               |
| 380       | 0                           | NR               | 510       | 139                         | NR               | 640       | 778                         | NR               | 770       | 26                          | NR               | 900       | 1                           | NR               |
| 385       | 0                           | NR               | 515       | 183                         | NR               | 645       | 717                         | NR               | 775       | 22                          | NR               | 905       | 1                           | NR               |
| 390       | 0                           | NR               | 520       | 224                         | NR               | 650       | 656                         | NR               | 780       | 19                          | NR               | 910       | 1                           | NR               |
| 395       | 0                           | NR               | 525       | 262                         | NR               | 655       | 595                         | NR               | 785       | 17                          | NR               | 915       | 1                           | NR               |
| 400       | 1                           | NR               | 530       | 299                         | NR               | 660       | 536                         | NR               | 790       | 15                          | NR               | 920       | 1                           | NR               |
| 405       | 3                           | NR               | 535       | 332                         | NR               | 665       | 480                         | NR               | 795       | 13                          | NR               | 925       | 1                           | NR               |
| 410       | 7                           | NR               | 540       | 365                         | NR               | 670       | 425                         | NR               | 800       | 11                          | NR               | 930       | 1                           | NR               |
| 415       | 17                          | NR               | 545       | 400                         | NR               | 675       | 376                         | NR               | 805       | 10                          | NR               | 935       | 0                           | NR               |
| 420       | 36                          | NR               | 550       | 437                         | NR               | 680       | 332                         | NR               | 810       | 8                           | NR               | 940       | 0                           | NR               |
| 425       | 67                          | NR               | 555       | 479                         | NR               | 685       | 291                         | NR               | 815       | 8                           | NR               | 945       | 0                           | NR               |
| 430       | 105                         | NR               | 560       | 525                         | NR               | 690       | 255                         | NR               | 820       | 7                           | NR               | 950       | 0                           | NR               |
| 435       | 141                         | NR               | 565       | 579                         | NR               | 695       | 221                         | NR               | 825       | 6                           | NR               | 955       | 0                           | NR               |
| 440       | 169                         | NR               | 570       | 639                         | NR               | 700       | 192                         | NR               | 830       | 5                           | NR               | 960       | 0                           | NR               |
| 445       | 173                         | NR               | 575       | 703                         | NR               | 705       | 167                         | NR               | 835       | 4                           | NR               | 965       | 0                           | NR               |
| 450       | 136                         | NR               | 580       | 769                         | NR               | 710       | 144                         | NR               | 840       | 4                           | NR               | 970       | 0                           | NR               |
| 455       | 80                          | NR               | 585       | 832                         | NR               | 715       | 125                         | NR               | 845       | 3                           | NR               | 975       | 0                           | NR               |
| 460       | 45                          | NR               | 590       | 890                         | NR               | 720       | 109                         | NR               | 850       | 3                           | NR               | 980       | 0                           | NR               |
| 465       | 32                          | NR               | 595       | 937                         | NR               | 725       | 94                          | NR               | 855       | 3                           | NR               | 985       | 0                           | NR               |
| 470       | 23                          | NR               | 600       | 972                         | NR               | 730       | 81                          | NR               | 860       | 2                           | NR               | 990       | 0                           | NR               |
| 475       | 18                          | NR               | 605       | 992                         | NR               | 735       | 70                          | NR               | 865       | 2                           | NR               | 995       | 0                           | NR               |
| 480       | 18                          | NR               | 610       | 998                         | NR               | 740       | 61                          | NR               | 870       | 2                           | NR               | 1000      | 0                           | NR               |
| 485       | 20                          | NR               | 615       | 990                         | NR               | 745       | 53                          | NR               | 875       | 2                           | NR               |           |                             |                  |

REPORT NUMBER: SP1-2407-184-2





TM-30-18

### Summary

$R_f = 70.6$   
 $R_g = 97.6$   
 $CIE\ R_a = 71.9$   
 $R_g = -17.8$

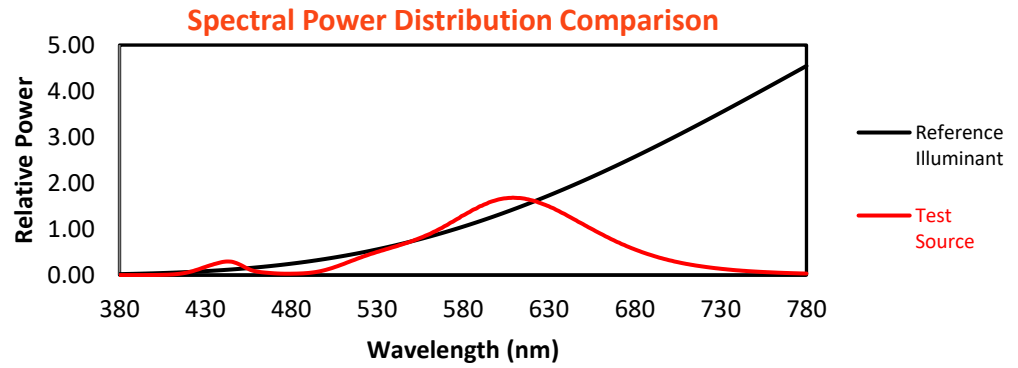


### Color Vector Graphics

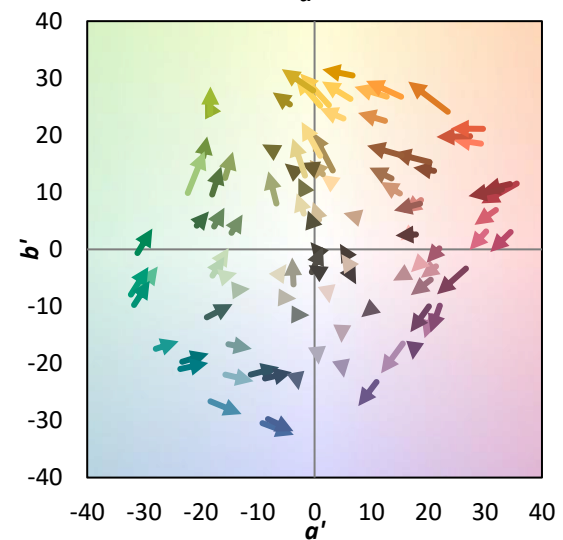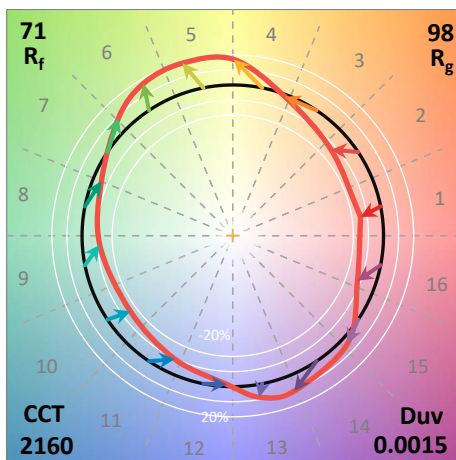
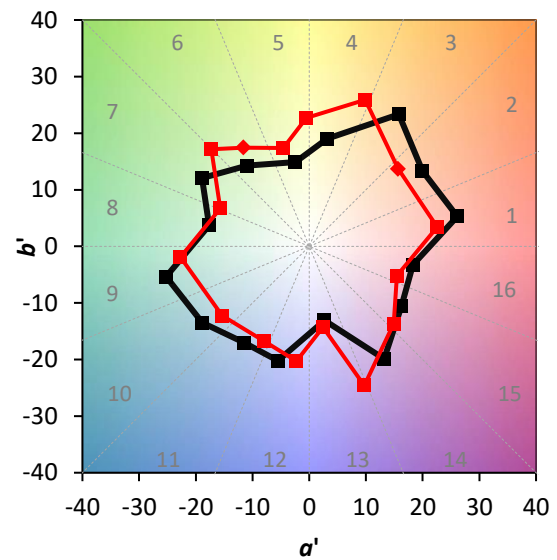
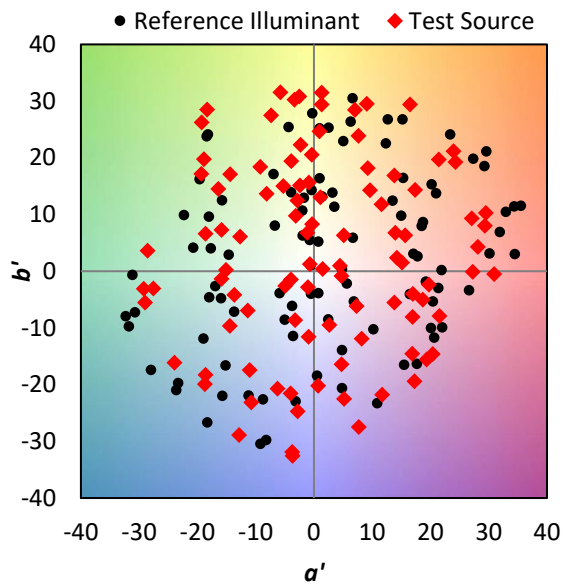


**Individual Sample Fidelity Index ( $R_{f,i}$ )**



|            |            |            |            |
|------------|------------|------------|------------|
| CES01 = 87 | CES26 = 60 | CES51 = 74 | CES76 = 58 |
| CES02 = 65 | CES27 = 77 | CES52 = 77 | CES77 = 82 |
| CES03 = 32 | CES28 = 85 | CES53 = 65 | CES78 = 65 |
| CES04 = 72 | CES29 = 50 | CES54 = 77 | CES79 = 86 |
| CES05 = 52 | CES30 = 49 | CES55 = 74 | CES80 = 85 |
| CES06 = 53 | CES31 = 55 | CES56 = 64 | CES81 = 61 |
| CES07 = 44 | CES32 = 55 | CES57 = 60 | CES82 = 93 |
| CES08 = 43 | CES33 = 55 | CES58 = 64 | CES83 = 83 |
| CES09 = 29 | CES34 = 75 | CES59 = 84 | CES84 = 93 |
| CES10 = 79 | CES35 = 88 | CES60 = 89 | CES85 = 81 |
| CES11 = 62 | CES36 = 78 | CES61 = 84 | CES86 = 55 |
| CES12 = 68 | CES37 = 82 | CES62 = 68 | CES87 = 79 |
| CES13 = 45 | CES38 = 54 | CES63 = 68 | CES88 = 72 |
| CES14 = 75 | CES39 = 90 | CES64 = 69 | CES89 = 62 |
| CES15 = 72 | CES40 = 86 | CES65 = 66 | CES90 = 67 |
| CES16 = 49 | CES41 = 75 | CES66 = 64 | CES91 = 89 |
| CES17 = 51 | CES42 = 83 | CES67 = 63 | CES92 = 67 |
| CES18 = 57 | CES43 = 68 | CES68 = 71 | CES93 = 78 |
| CES19 = 74 | CES44 = 98 | CES69 = 81 | CES94 = 52 |
| CES20 = 68 | CES45 = 76 | CES70 = 65 | CES95 = 76 |
| CES21 = 89 | CES46 = 68 | CES71 = 64 | CES96 = 78 |
| CES22 = 81 | CES47 = 60 | CES72 = 88 | CES97 = 76 |
| CES23 = 92 | CES48 = 47 | CES73 = 59 | CES98 = 71 |
| CES24 = 92 | CES49 = 65 | CES74 = 85 | CES99 = 65 |
| CES25 = 74 | CES50 = 74 | CES75 = 66 |            |

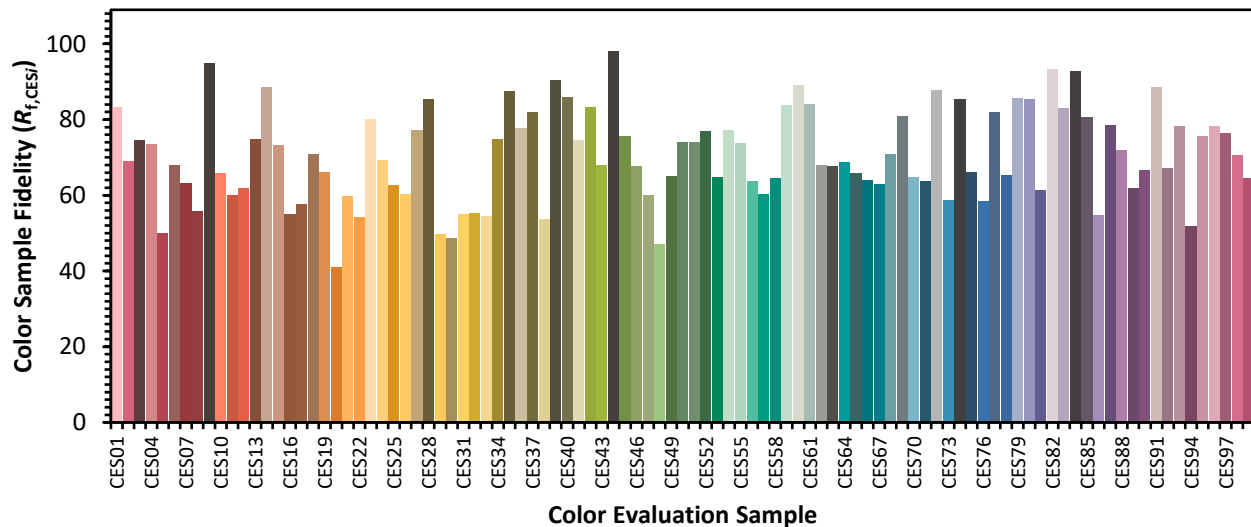

Color Rendition by Hue-Angle Bin

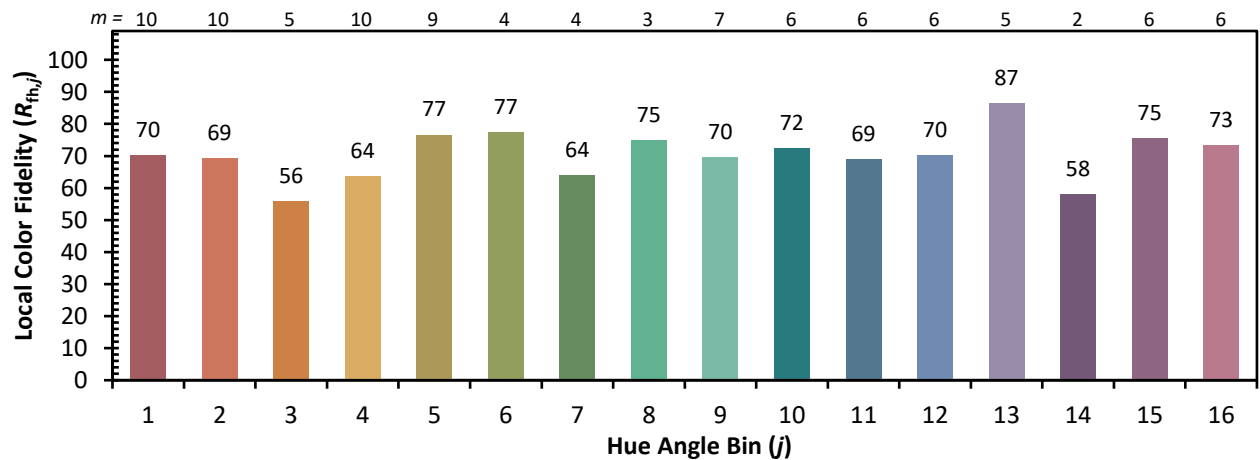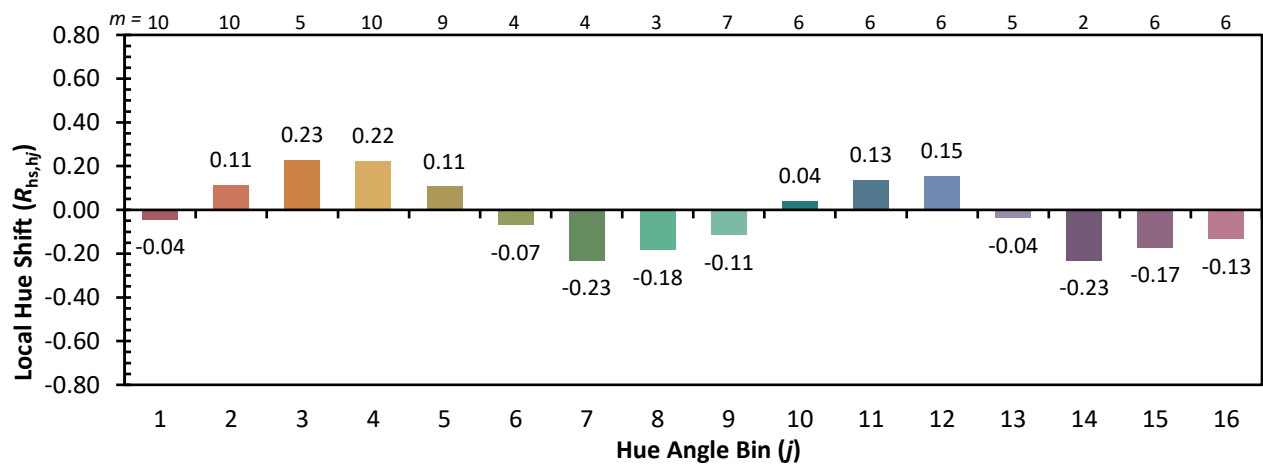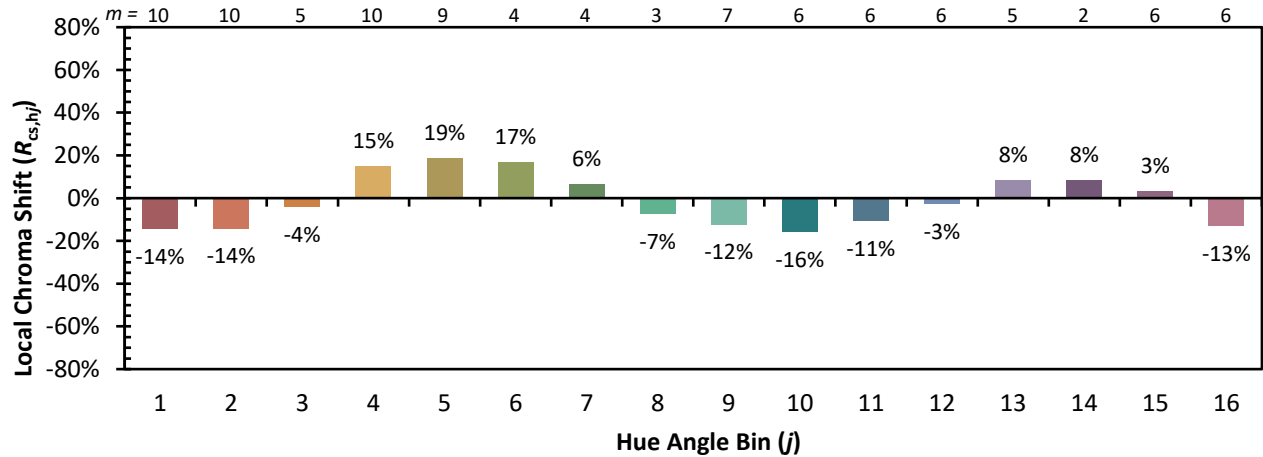

**Measure Comparisons**

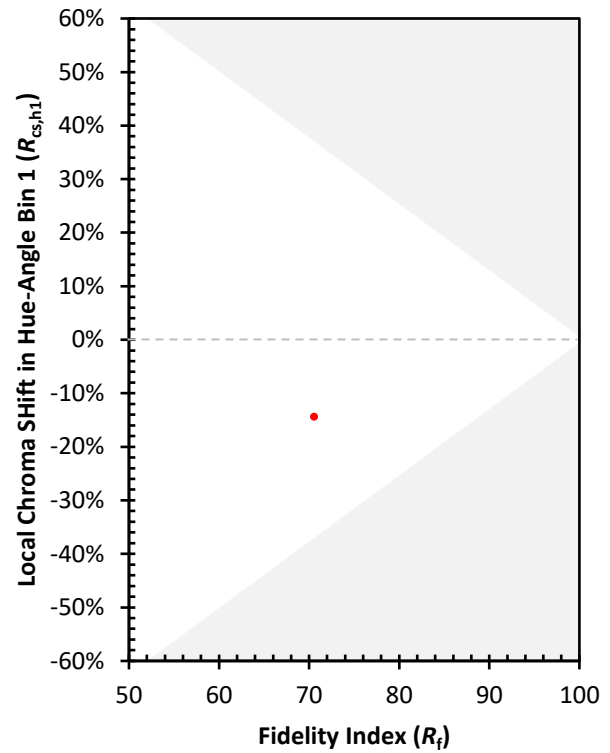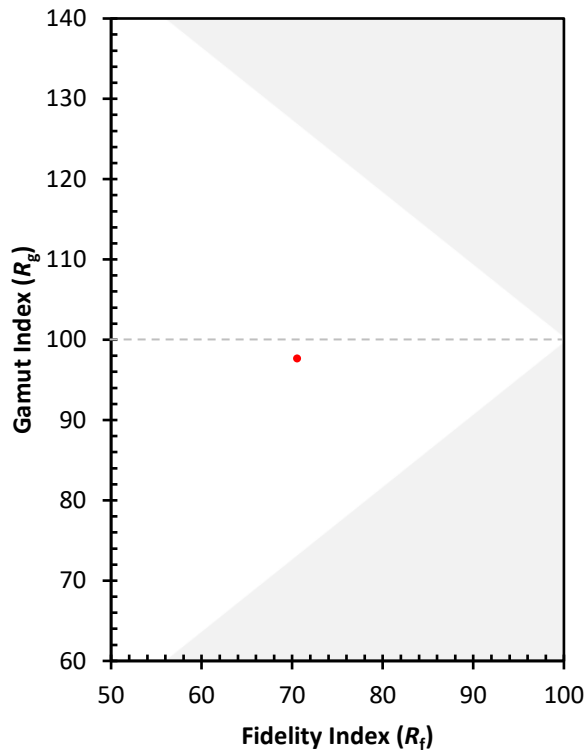

(END OF REPORT)