

Scaled data based on original data using  
LM-79-08 Approved Method: Electrical and Photometric Measurements of Solid-  
State Lighting Products

Test Report Prepared for  
Cooper Lighting Solutions  
(formerly Eaton)

Brand: STREETWORKS

Report Number: P1382601

Luminaire Tested: **VAL-T-SB1C-727-U-5NQ**

Issue Date: 02/18/2026

This test was performed under the Supervised Manufacturer's Testing Program. The results of this test have not been  
influenced by sources from within Cooper Lighting Solutions or from external interests.

**Test Information**

Test Method: LM-79-08  
 Report Number: P1382601  
 Test Lab: INNOVATION CENTER(G1)  
 Issue Date: 02/18/2026  
 Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)  
 Product Line: STREETWORKS  
 Catalog Number: VAL-T-SB1C-727-U-5NQ  
 Description: GALLEON II WALL SLIM HIGH DENSITY LED ARRAYS 1SQUARE 52W 70CRI  
 2700K FIXTURE w/ TYPE V SQUARE NARROW DISTRIBUTION OPTIC  
 Light Source: (26) 2700K CCT, 70 CRI LEDS  
 Ballast/Driver: ELECTRONIC DRIVER  
 Luminaire Equipment:

| <u>Sample No.</u> | <u>Condition</u> | <u>Description</u> |
|-------------------|------------------|--------------------|
| a                 | good             | reflector          |
| b                 | good             | lens               |
| c                 | good             | housing            |
| d                 | good             | cord               |


**Summary**

Lumens per Lamp: N/A  
 Luminaire Lumens: 6544.4 lumens  
 Efficiency: N/A  
 Efficacy: 125.9 lumens/watt  
 Luminous Opening: Rectangular (W 0.5' x L: 0.5' x H: 0')  
 IES Classification: Type V - Short  
 BUG Rating: B2 - U0 - G1  
  
 Input Watts (W): 52  
 Input Voltage (V): 120  
 Input Current (Ain): NR  
 Voltage Rise (V): NR  
 Power Factor: 0.98  
 Total Harmonic Distortion (THDi): 10.1%  
 Frequency (hertz): 60  
 Stabilization Time: NR  
 Operation Time: NR  
 Ambient Temperature (°C): NR  
 Test Distance: 28.75 FT

REPORT NUMBER: P1382601  
 CATALOG NUMBER: VAL-T-SB1C-727-U-5NQ

## Iso-Footcandle Lines of Horizontal Illumination


× Max cd  
 --- 1/2 Max cd

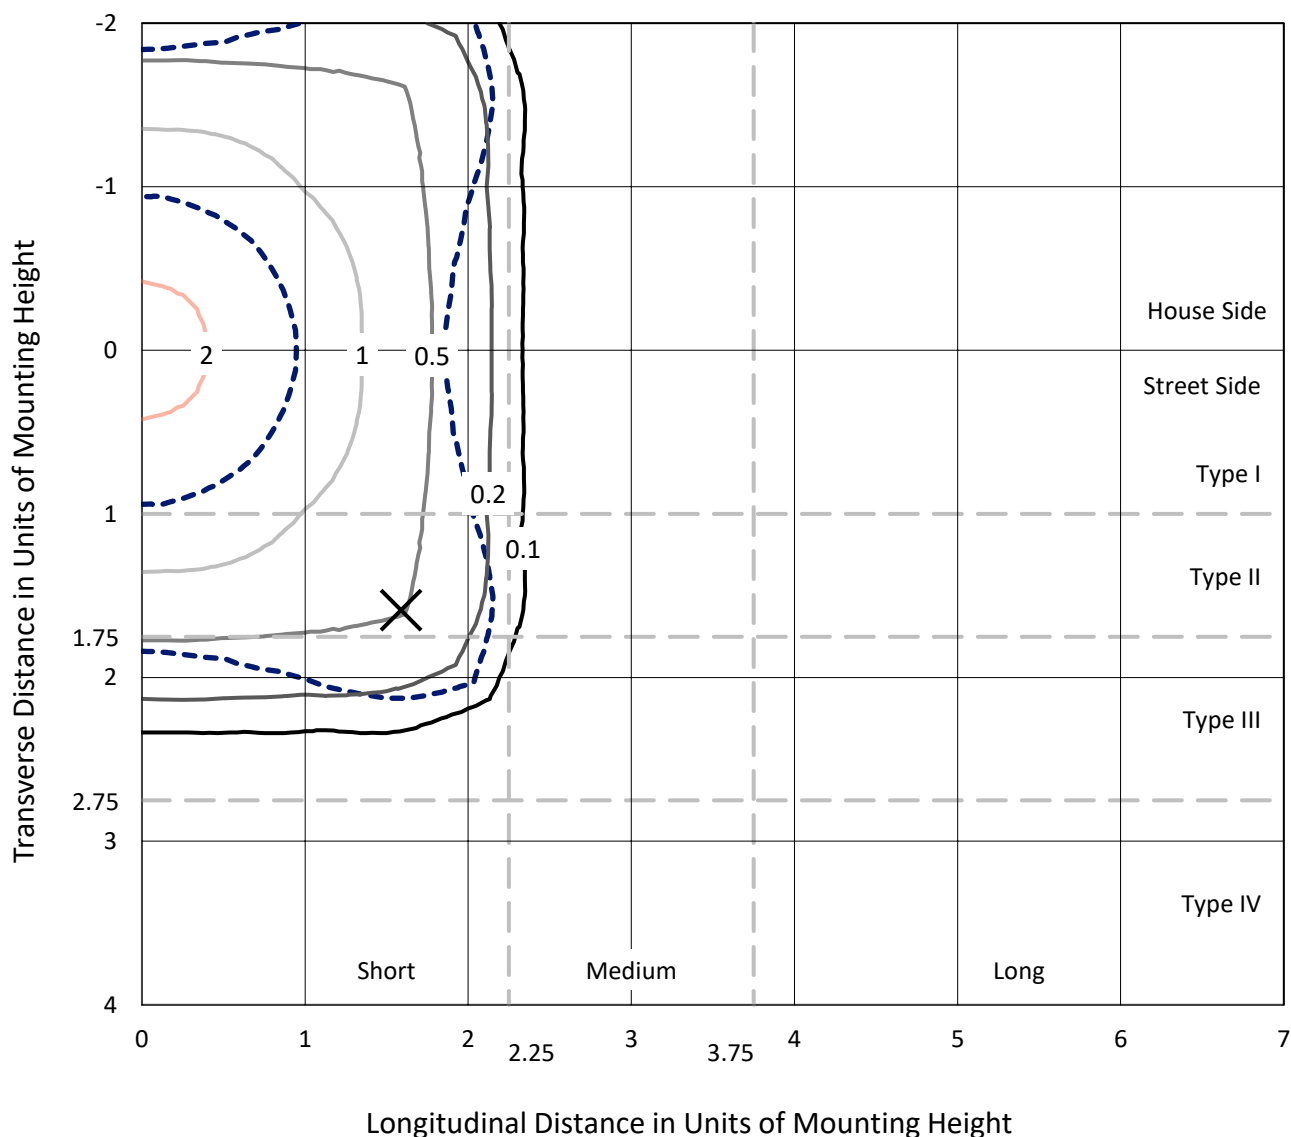

Based on 20 foot mounting height. Maximum calculated value = 2.1 fc  
 Type V - Short - N/A

REPORT NUMBER: P1382601  
CATALOG NUMBER: VAL-T-SB1C-727-U-5NQ

## Luminous Intensity Polar Plot

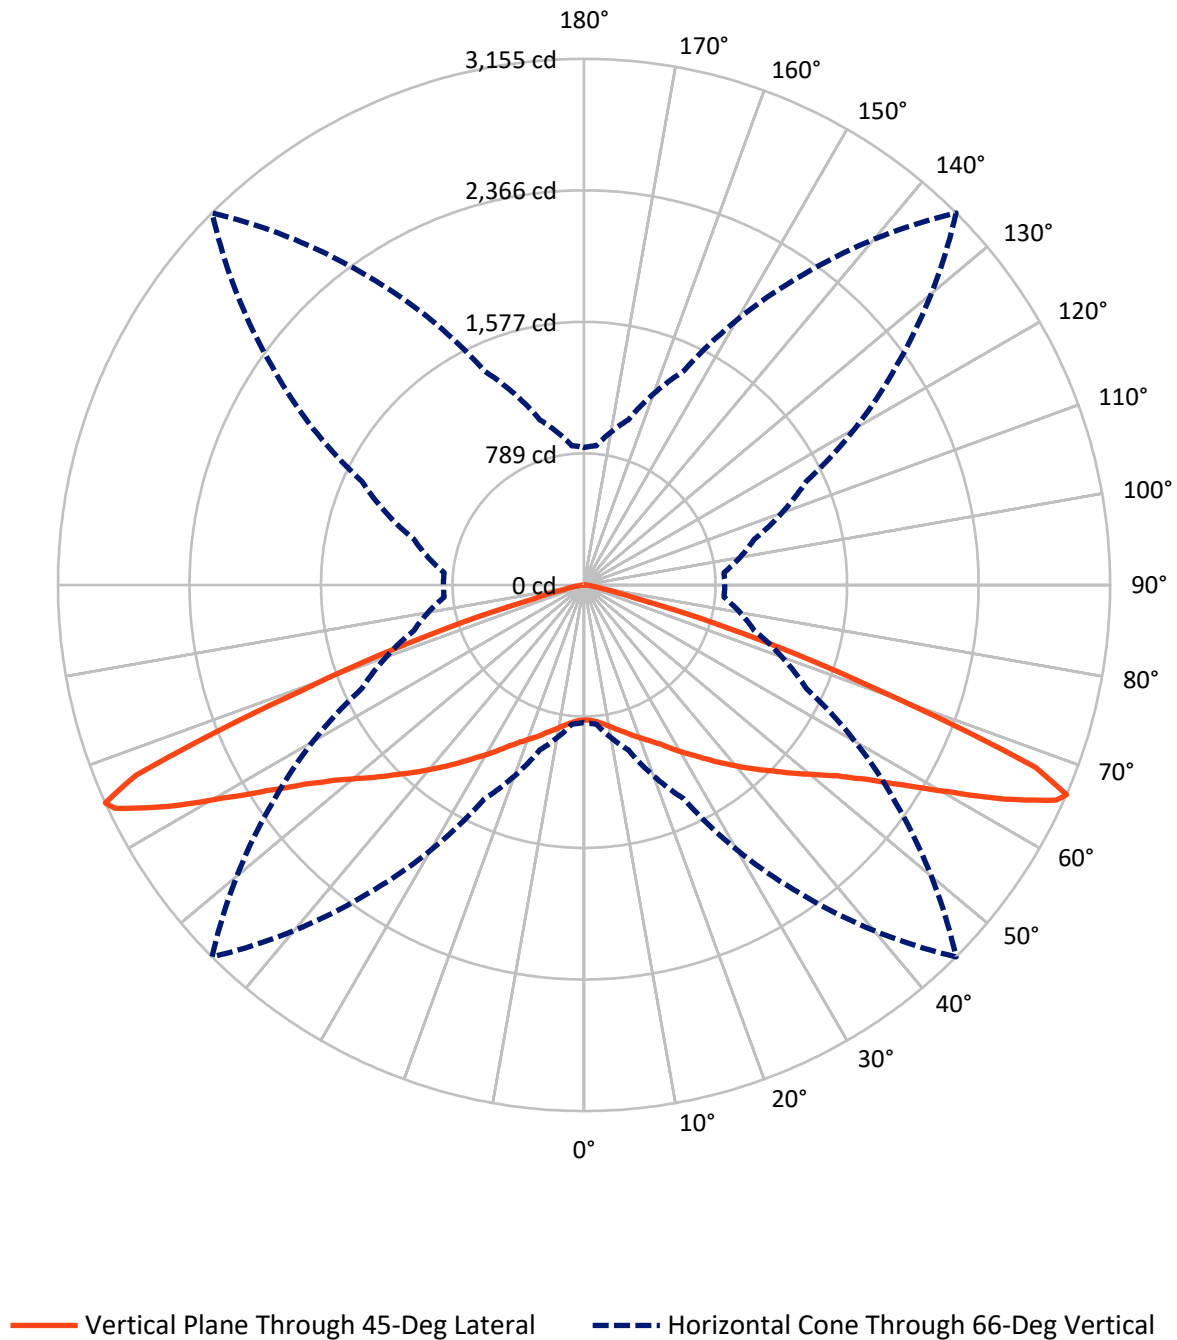

REPORT NUMBER: P1382601

CATALOG NUMBER: VAL-T-SB1C-727-U-5NQ

**FLUX DISTRIBUTION:**

|                    |           | Downward | Upward | Total  |
|--------------------|-----------|----------|--------|--------|
| <b>House Side</b>  | Lumens    | 3272.2   | 0.0    | 3272.2 |
|                    | % Fixture | 50.0     | 0.0    | 50.0   |
| <b>Street Side</b> | Lumens    | 3272.2   | 0.0    | 3272.2 |
|                    | % Fixture | 50.0     | 0.0    | 50.0   |
| <b>Total</b>       | Lumens    | 6544.4   | 0.0    | 6544.4 |
|                    | % Fixture | 100.0    | 0.0    | 100.0  |

**ZONAL LUMENS:**

| Zone      | Lumens | % Fixture |
|-----------|--------|-----------|
| 0°-10°    | 80.0   | 1.2       |
| 10°-20°   | 261.0  | 4.0       |
| 20°-30°   | 494.0  | 7.5       |
| 30°-40°   | 811.0  | 12.4      |
| 40°-50°   | 1251.0 | 19.1      |
| 50°-60°   | 1813.3 | 27.7      |
| 60°-70°   | 1595.8 | 24.4      |
| 70°-80°   | 221.1  | 3.4       |
| 80°-90°   | 17.2   | 0.3       |
| 90°-100°  | 0.0    | 0.0       |
| 100°-110° | 0.0    | 0.0       |
| 110°-120° | 0.0    | 0.0       |
| 120°-130° | 0.0    | 0.0       |
| 130°-140° | 0.0    | 0.0       |
| 140°-150° | 0.0    | 0.0       |
| 150°-160° | 0.0    | 0.0       |
| 160°-170° | 0.0    | 0.0       |
| 170°-180° | 0.0    | 0.0       |
| 0°-90°    | 6544.4 | 100.0     |
| 0°-180°   | 6544.4 | 100.0     |

**Coefficient of Utilization**



REPORT NUMBER: P1382601


CATALOG NUMBER: VAL-T-SB1C-727-U-5NQ

**LUMINAIRE CLASSIFICATION SYSTEM LUMEN TABLE AND BUG RATING:**

| Zone |             | Lumens | % Fixture | Zone Rating/Lumen Limit |      |         |
|------|-------------|--------|-----------|-------------------------|------|---------|
|      |             |        |           | B                       | U    | G       |
| FL   | (0°-30°)    | 417.5  | 6.4       |                         |      |         |
| FM   | (30°-60°)   | 1937.7 | 29.6      |                         |      |         |
| FH   | (60°-80°)   | 908.4  | 13.9      |                         |      | G1/1800 |
| FVH  | (80°-90°)   | 8.6    | 0.1       |                         |      | G0/10   |
| BL   | (0°-30°)    | 417.5  | 6.4       | B1/500                  |      |         |
| BM   | (30°-60°)   | 1937.7 | 29.6      | B2/2500                 |      |         |
| BH   | (60°-80°)   | 908.4  | 13.9      | B2/1000                 |      | G1/1800 |
| BVH  | (80°-90°)   | 8.6    | 0.1       |                         |      | G0/10   |
| UL   | (90°-100°)  | 0.0    | 0.0       |                         | U0/0 |         |
| UH   | (100°-180°) | 0.0    | 0.0       |                         | U0/0 |         |

**BUG Rating: B2-U0-G1**

Type V Short

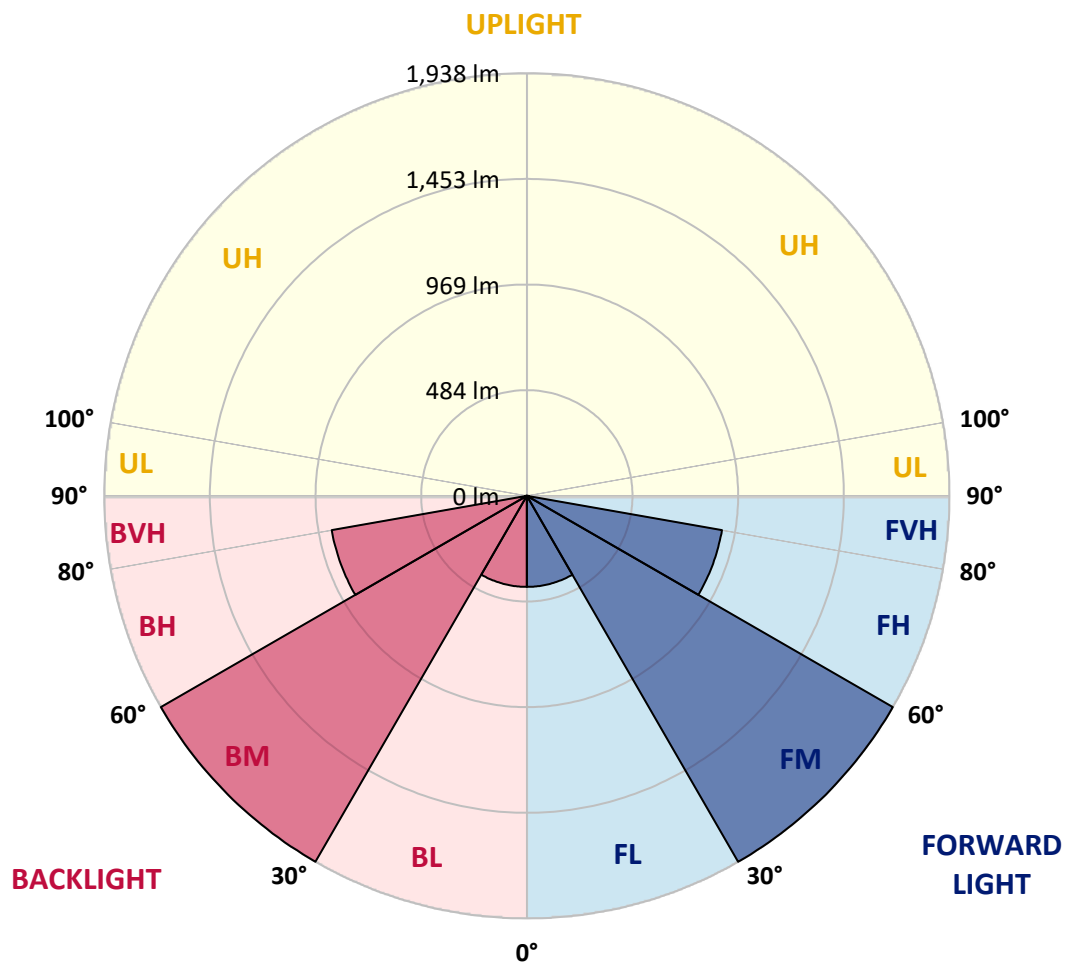

REPORT NUMBER: P1382601

CATALOG NUMBER: VAL-T-SB1C-727-U-5NQ

**CANDELA DISTRIBUTION (FULL):**

|       | 0°     | 5°     | 15°    | 25°    | 35°    | 45°    | 55°    | 65°    | 75°    | 85°    | 90°    |
|-------|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|
| 0°    | 810.2  | 810.2  | 810.2  | 810.2  | 810.2  | 810.2  | 810.2  | 810.2  | 810.2  | 810.2  | 810.2  |
| 2.5°  | 814.5  | 813.1  | 810.2  | 811.6  | 810.2  | 813.1  | 817.4  | 811.6  | 814.5  | 816.0  | 814.5  |
| 5°    | 824.7  | 824.7  | 820.4  | 823.3  | 823.3  | 824.7  | 826.2  | 823.3  | 826.2  | 826.2  | 826.2  |
| 7.5°  | 843.7  | 845.1  | 840.8  | 840.8  | 842.2  | 842.2  | 845.1  | 843.7  | 843.7  | 845.1  | 846.6  |
| 10°   | 865.5  | 865.5  | 861.2  | 861.2  | 862.6  | 864.1  | 865.5  | 862.6  | 864.1  | 864.1  | 864.1  |
| 12.5° | 888.8  | 887.4  | 883.0  | 884.5  | 884.5  | 890.3  | 890.3  | 885.9  | 884.5  | 884.5  | 884.5  |
| 15°   | 912.2  | 912.2  | 909.2  | 910.7  | 915.1  | 916.5  | 918.0  | 909.2  | 909.2  | 906.3  | 906.3  |
| 17.5° | 944.2  | 941.3  | 941.3  | 939.8  | 945.7  | 950.0  | 947.1  | 938.4  | 939.8  | 936.9  | 936.9  |
| 20°   | 980.6  | 977.7  | 973.4  | 976.3  | 976.3  | 980.6  | 979.2  | 971.9  | 971.9  | 971.9  | 971.9  |
| 22.5° | 1020.0 | 1018.5 | 1014.2 | 1018.5 | 1017.1 | 1015.6 | 1017.1 | 1015.6 | 1012.7 | 1014.2 | 1015.6 |
| 25°   | 1062.2 | 1059.3 | 1056.4 | 1063.7 | 1059.3 | 1056.4 | 1060.8 | 1060.8 | 1057.9 | 1056.4 | 1062.2 |
| 27.5° | 1106.0 | 1103.0 | 1103.0 | 1110.3 | 1103.0 | 1108.9 | 1110.3 | 1106.0 | 1104.5 | 1103.0 | 1107.4 |
| 30°   | 1154.0 | 1151.1 | 1154.0 | 1161.3 | 1157.0 | 1164.2 | 1164.2 | 1161.3 | 1152.6 | 1152.6 | 1155.5 |
| 32.5° | 1212.3 | 1208.0 | 1212.3 | 1216.7 | 1216.7 | 1221.1 | 1222.5 | 1218.2 | 1216.7 | 1210.9 | 1218.2 |
| 35°   | 1277.9 | 1275.0 | 1275.0 | 1279.4 | 1279.4 | 1286.6 | 1286.6 | 1283.7 | 1280.8 | 1277.9 | 1280.8 |
| 37.5° | 1356.6 | 1346.4 | 1352.2 | 1350.8 | 1352.2 | 1358.0 | 1358.0 | 1347.8 | 1353.7 | 1349.3 | 1355.1 |
| 40°   | 1430.9 | 1419.2 | 1433.8 | 1429.4 | 1432.4 | 1430.9 | 1433.8 | 1429.4 | 1428.0 | 1422.2 | 1428.0 |
| 42.5° | 1512.5 | 1503.8 | 1516.9 | 1516.9 | 1518.3 | 1511.0 | 1515.4 | 1514.0 | 1514.0 | 1503.8 | 1506.7 |
| 45°   | 1607.2 | 1592.6 | 1611.6 | 1611.6 | 1607.2 | 1592.6 | 1608.7 | 1605.8 | 1608.7 | 1594.1 | 1598.5 |
| 47.5° | 1699.0 | 1687.4 | 1716.5 | 1719.4 | 1707.8 | 1687.4 | 1706.3 | 1709.2 | 1707.8 | 1687.4 | 1694.6 |
| 50°   | 1795.2 | 1783.5 | 1818.5 | 1840.4 | 1821.4 | 1786.4 | 1811.2 | 1828.7 | 1818.5 | 1782.1 | 1785.0 |
| 52.5° | 1882.6 | 1876.8 | 1927.8 | 1964.2 | 1942.4 | 1903.0 | 1938.0 | 1949.6 | 1924.9 | 1876.8 | 1878.2 |
| 55°   | 1948.2 | 1949.6 | 2022.5 | 2091.0 | 2091.0 | 2057.5 | 2082.2 | 2075.0 | 2013.8 | 1943.8 | 1940.9 |
| 57.5° | 1958.4 | 1965.7 | 2066.2 | 2206.1 | 2271.7 | 2262.9 | 2249.8 | 2176.9 | 2051.6 | 1943.8 | 1938.0 |
| 60°   | 1752.9 | 1785.0 | 1962.8 | 2252.7 | 2443.6 | 2519.4 | 2423.2 | 2206.1 | 1952.6 | 1793.7 | 1779.2 |
| 62.5° | 1385.7 | 1404.7 | 1595.6 | 2040.0 | 2582.0 | 2828.3 | 2536.9 | 2056.0 | 1643.6 | 1448.4 | 1428.0 |
| 65°   | 1018.5 | 1049.1 | 1212.3 | 1594.1 | 2431.9 | 3112.4 | 2429.0 | 1642.2 | 1248.8 | 1076.8 | 1063.7 |
| 66°   | 824.7  | 837.8  | 1024.4 | 1414.9 | 2257.1 | 3154.7 | 2283.3 | 1470.2 | 1056.4 | 842.2  | 843.7  |
| 67.5° | 495.4  | 510.0  | 686.3  | 1108.9 | 1891.4 | 2917.2 | 1989.0 | 1145.3 | 687.8  | 505.6  | 464.8  |
| 70°   | 179.2  | 185.1  | 240.4  | 450.3  | 1272.1 | 1803.9 | 1321.6 | 447.3  | 228.8  | 183.6  | 177.8  |
| 72.5° | 109.3  | 110.7  | 122.4  | 170.5  | 392.0  | 1001.0 | 380.3  | 171.9  | 122.4  | 104.9  | 104.9  |
| 75°   | 62.7   | 62.7   | 83.1   | 102.0  | 145.7  | 317.7  | 141.3  | 103.5  | 84.5   | 74.3   | 71.4   |
| 77.5° | 45.2   | 46.6   | 61.2   | 69.9   | 84.5   | 128.2  | 86.0   | 64.1   | 53.9   | 43.7   | 43.7   |
| 80°   | 32.1   | 33.5   | 40.8   | 49.5   | 58.3   | 72.9   | 46.6   | 40.8   | 39.3   | 27.7   | 27.7   |
| 82.5° | 21.9   | 21.9   | 23.3   | 29.1   | 30.6   | 29.1   | 24.8   | 26.2   | 24.8   | 18.9   | 17.5   |
| 85°   | 8.7    | 8.7    | 10.2   | 11.7   | 11.7   | 10.2   | 11.7   | 13.1   | 11.7   | 8.7    | 8.7    |
| 87.5° | 4.4    | 4.4    | 4.4    | 4.4    | 4.4    | 4.4    | 4.4    | 4.4    | 4.4    | 4.4    | 4.4    |
| 90°   | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    |

LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-State Lighting Products

Report Prepared for

Cooper Lighting Solutions

McGraw-Edison

Report Number: SP1-2407-184-3

Test Date: 10/09/2024

Luminaire Tested: GSS-SB1A-727-U-5WQ

Data in this report applies to families of products including GSS-SB1A-727-U-5WQ

### Test Information

Test Method: LM-79-2019  
 Report Number: SP1-2407-184-3  
 Test Lab: COOPER LIGHTING SOLUTIONS  
 Photometer: SP1 - 76IN SPHERE  
 Measurement Geometry:  $4\pi$   
 Issue Date: 10/15/2024  
 Manufacturer: COOPER LIGHTING SOLUTIONS  
 Product Line: McGraw-Edison  
 Catalog Number: **GSS-SB1A-727-U-5WQ**  
 Description: GALLEON II SITE SLIM 1SQ 350MA 5WQ HIGH DENSITY LIGHTSQUARE WITH 70 CRI  
 2700K CCT 26 LEDS

### Spectral Parameters

|                           |          |           |      |      |       |
|---------------------------|----------|-----------|------|------|-------|
| CCT (K):                  | 2672     | CRI (Ra): | 71.1 |      |       |
| CIE u':                   | 0.2638   | R1:       | 68.3 | R9:  | -27.8 |
| CIE v':                   | 0.5276   | R2:       | 79.8 | R10: | 54.4  |
| Duv:                      | -0.0002  | R3:       | 91.2 | R11: | 65.8  |
| CIE x:                    | 0.4619   | R4:       | 69.4 | R12: | 45.6  |
| CIE y:                    | 0.4106   | R5:       | 66.5 | R13: | 69.8  |
| CIE z:                    | 0.1275   | R6:       | 72.6 | R14: | 94.5  |
| Peak Wavelength (nm):     | 601      | R7:       | 77.0 | R15: | 60.1  |
| Dominant Wavelength (nm): | 584      | R8:       | 44.1 |      |       |
| Purity:                   | 61.88407 |           |      |      |       |
| Rf:                       | 67.9     |           |      |      |       |
| Rg:                       | 98.6     |           |      |      |       |



### Test Conditions

Stabilization Time: 21M  
 Operation Time: 1H 21M  
 Sphere Temperature (°C): 25.2

REPORT NUMBER: SP1-2407-184-3

| Measurement and Test Equipment |                       |                  |                      |
|--------------------------------|-----------------------|------------------|----------------------|
| Instrument                     | Identification Number | Calibration Date | Calibration Due Date |
| Photometer                     | IN0058                | 6/18/2024        | 12/18/2024           |
| Power Meter                    | INXT2011004           | 2/8/2024         | 2/8/2025             |
| AC Power Source                | IN0063                | 10/24/2023       | 10/24/2024           |
| DC Power Source                | IN0208                | 10/24/2023       | 10/24/2024           |
| Sphere Thermometer             | IN0085                | 10/24/2023       | 10/24/2024           |
| Room Thermometer               | IN0046                | 10/24/2023       | 10/24/2024           |



REPORT NUMBER: SP1-2407-184-3

### Photopic Flux vs. Wavelength



### Photopic Lumens: NR

| $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) |
|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|
| 360               | 0                                    | NR                             | 490               | 52                                   | NR                             | 620               | 888                                  | NR                             | 750               | 27                                   | NR                             | 880               | 1                                    | NR                             |
| 365               | 0                                    | NR                             | 495               | 87                                   | NR                             | 625               | 834                                  | NR                             | 755               | 23                                   | NR                             | 885               | 1                                    | NR                             |
| 370               | 0                                    | NR                             | 500               | 135                                  | NR                             | 630               | 776                                  | NR                             | 760               | 20                                   | NR                             | 890               | 1                                    | NR                             |
| 375               | 0                                    | NR                             | 505               | 196                                  | NR                             | 635               | 712                                  | NR                             | 765               | 17                                   | NR                             | 895               | 0                                    | NR                             |
| 380               | 0                                    | NR                             | 510               | 258                                  | NR                             | 640               | 648                                  | NR                             | 770               | 15                                   | NR                             | 900               | 0                                    | NR                             |
| 385               | 1                                    | NR                             | 515               | 317                                  | NR                             | 645               | 583                                  | NR                             | 775               | 12                                   | NR                             | 905               | 0                                    | NR                             |
| 390               | 2                                    | NR                             | 520               | 368                                  | NR                             | 650               | 523                                  | NR                             | 780               | 11                                   | NR                             | 910               | 0                                    | NR                             |
| 395               | 4                                    | NR                             | 525               | 408                                  | NR                             | 655               | 465                                  | NR                             | 785               | 9                                    | NR                             | 915               | 0                                    | NR                             |
| 400               | 6                                    | NR                             | 530               | 443                                  | NR                             | 660               | 410                                  | NR                             | 790               | 8                                    | NR                             | 920               | 0                                    | NR                             |
| 405               | 11                                   | NR                             | 535               | 473                                  | NR                             | 665               | 360                                  | NR                             | 795               | 7                                    | NR                             | 925               | 0                                    | NR                             |
| 410               | 23                                   | NR                             | 540               | 498                                  | NR                             | 670               | 313                                  | NR                             | 800               | 6                                    | NR                             | 930               | 0                                    | NR                             |
| 415               | 51                                   | NR                             | 545               | 530                                  | NR                             | 675               | 272                                  | NR                             | 805               | 5                                    | NR                             | 935               | 0                                    | NR                             |
| 420               | 111                                  | NR                             | 550               | 563                                  | NR                             | 680               | 236                                  | NR                             | 810               | 4                                    | NR                             | 940               | 0                                    | NR                             |
| 425               | 214                                  | NR                             | 555               | 605                                  | NR                             | 685               | 203                                  | NR                             | 815               | 4                                    | NR                             | 945               | 0                                    | NR                             |
| 430               | 339                                  | NR                             | 560               | 651                                  | NR                             | 690               | 175                                  | NR                             | 820               | 3                                    | NR                             | 950               | 0                                    | NR                             |
| 435               | 467                                  | NR                             | 565               | 705                                  | NR                             | 695               | 150                                  | NR                             | 825               | 3                                    | NR                             | 955               | 0                                    | NR                             |
| 440               | 535                                  | NR                             | 570               | 765                                  | NR                             | 700               | 128                                  | NR                             | 830               | 3                                    | NR                             | 960               | 0                                    | NR                             |
| 445               | 372                                  | NR                             | 575               | 824                                  | NR                             | 705               | 110                                  | NR                             | 835               | 2                                    | NR                             | 965               | 0                                    | NR                             |
| 450               | 160                                  | NR                             | 580               | 882                                  | NR                             | 710               | 94                                   | NR                             | 840               | 2                                    | NR                             | 970               | 0                                    | NR                             |
| 455               | 89                                   | NR                             | 585               | 930                                  | NR                             | 715               | 80                                   | NR                             | 845               | 2                                    | NR                             | 975               | 0                                    | NR                             |
| 460               | 53                                   | NR                             | 590               | 968                                  | NR                             | 720               | 69                                   | NR                             | 850               | 1                                    | NR                             | 980               | 0                                    | NR                             |
| 465               | 31                                   | NR                             | 595               | 991                                  | NR                             | 725               | 59                                   | NR                             | 855               | 1                                    | NR                             | 985               | 0                                    | NR                             |
| 470               | 23                                   | NR                             | 600               | 999                                  | NR                             | 730               | 50                                   | NR                             | 860               | 1                                    | NR                             | 990               | 0                                    | NR                             |
| 475               | 21                                   | NR                             | 605               | 992                                  | NR                             | 735               | 43                                   | NR                             | 865               | 1                                    | NR                             | 995               | 0                                    | NR                             |
| 480               | 23                                   | NR                             | 610               | 969                                  | NR                             | 740               | 36                                   | NR                             | 870               | 1                                    | NR                             | 1000              | 0                                    | NR                             |
| 485               | 32                                   | NR                             | 615               | 935                                  | NR                             | 745               | 31                                   | NR                             | 875               | 1                                    | NR                             |                   |                                      |                                |

REPORT NUMBER: SP1-2407-184-3

### Scotopic Flux vs. Wavelength




Scotopic Lumens: NR

S/P: 1.02

| λ<br>(nm) | Power<br>W <sup>^</sup> /nm | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>W <sup>^</sup> /nm | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>W <sup>^</sup> /nm | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>W <sup>^</sup> /nm | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>W <sup>^</sup> /nm | Lumens<br>(φ/nm) |
|-----------|-----------------------------|------------------|-----------|-----------------------------|------------------|-----------|-----------------------------|------------------|-----------|-----------------------------|------------------|-----------|-----------------------------|------------------|
| 360       | 0                           | NR               | 490       | 52                          | NR               | 620       | 888                         | NR               | 750       | 27                          | NR               | 880       | 1                           | NR               |
| 365       | 0                           | NR               | 495       | 87                          | NR               | 625       | 834                         | NR               | 755       | 23                          | NR               | 885       | 1                           | NR               |
| 370       | 0                           | NR               | 500       | 135                         | NR               | 630       | 776                         | NR               | 760       | 20                          | NR               | 890       | 1                           | NR               |
| 375       | 0                           | NR               | 505       | 196                         | NR               | 635       | 712                         | NR               | 765       | 17                          | NR               | 895       | 0                           | NR               |
| 380       | 0                           | NR               | 510       | 258                         | NR               | 640       | 648                         | NR               | 770       | 15                          | NR               | 900       | 0                           | NR               |
| 385       | 1                           | NR               | 515       | 317                         | NR               | 645       | 583                         | NR               | 775       | 12                          | NR               | 905       | 0                           | NR               |
| 390       | 2                           | NR               | 520       | 368                         | NR               | 650       | 523                         | NR               | 780       | 11                          | NR               | 910       | 0                           | NR               |
| 395       | 4                           | NR               | 525       | 408                         | NR               | 655       | 465                         | NR               | 785       | 9                           | NR               | 915       | 0                           | NR               |
| 400       | 6                           | NR               | 530       | 443                         | NR               | 660       | 410                         | NR               | 790       | 8                           | NR               | 920       | 0                           | NR               |
| 405       | 11                          | NR               | 535       | 473                         | NR               | 665       | 360                         | NR               | 795       | 7                           | NR               | 925       | 0                           | NR               |
| 410       | 23                          | NR               | 540       | 498                         | NR               | 670       | 313                         | NR               | 800       | 6                           | NR               | 930       | 0                           | NR               |
| 415       | 51                          | NR               | 545       | 530                         | NR               | 675       | 272                         | NR               | 805       | 5                           | NR               | 935       | 0                           | NR               |
| 420       | 111                         | NR               | 550       | 563                         | NR               | 680       | 236                         | NR               | 810       | 4                           | NR               | 940       | 0                           | NR               |
| 425       | 214                         | NR               | 555       | 605                         | NR               | 685       | 203                         | NR               | 815       | 4                           | NR               | 945       | 0                           | NR               |
| 430       | 339                         | NR               | 560       | 651                         | NR               | 690       | 175                         | NR               | 820       | 3                           | NR               | 950       | 0                           | NR               |
| 435       | 467                         | NR               | 565       | 705                         | NR               | 695       | 150                         | NR               | 825       | 3                           | NR               | 955       | 0                           | NR               |
| 440       | 535                         | NR               | 570       | 765                         | NR               | 700       | 128                         | NR               | 830       | 3                           | NR               | 960       | 0                           | NR               |
| 445       | 372                         | NR               | 575       | 824                         | NR               | 705       | 110                         | NR               | 835       | 2                           | NR               | 965       | 0                           | NR               |
| 450       | 160                         | NR               | 580       | 882                         | NR               | 710       | 94                          | NR               | 840       | 2                           | NR               | 970       | 0                           | NR               |
| 455       | 89                          | NR               | 585       | 930                         | NR               | 715       | 80                          | NR               | 845       | 2                           | NR               | 975       | 0                           | NR               |
| 460       | 53                          | NR               | 590       | 968                         | NR               | 720       | 69                          | NR               | 850       | 1                           | NR               | 980       | 0                           | NR               |
| 465       | 31                          | NR               | 595       | 991                         | NR               | 725       | 59                          | NR               | 855       | 1                           | NR               | 985       | 0                           | NR               |
| 470       | 23                          | NR               | 600       | 999                         | NR               | 730       | 50                          | NR               | 860       | 1                           | NR               | 990       | 0                           | NR               |
| 475       | 21                          | NR               | 605       | 992                         | NR               | 735       | 43                          | NR               | 865       | 1                           | NR               | 995       | 0                           | NR               |
| 480       | 23                          | NR               | 610       | 969                         | NR               | 740       | 36                          | NR               | 870       | 1                           | NR               | 1000      | 0                           | NR               |
| 485       | 32                          | NR               | 615       | 935                         | NR               | 745       | 31                          | NR               | 875       | 1                           | NR               |           |                             |                  |

REPORT NUMBER: SP1-2407-184-3

### Melanopic Flux vs. Wavelength

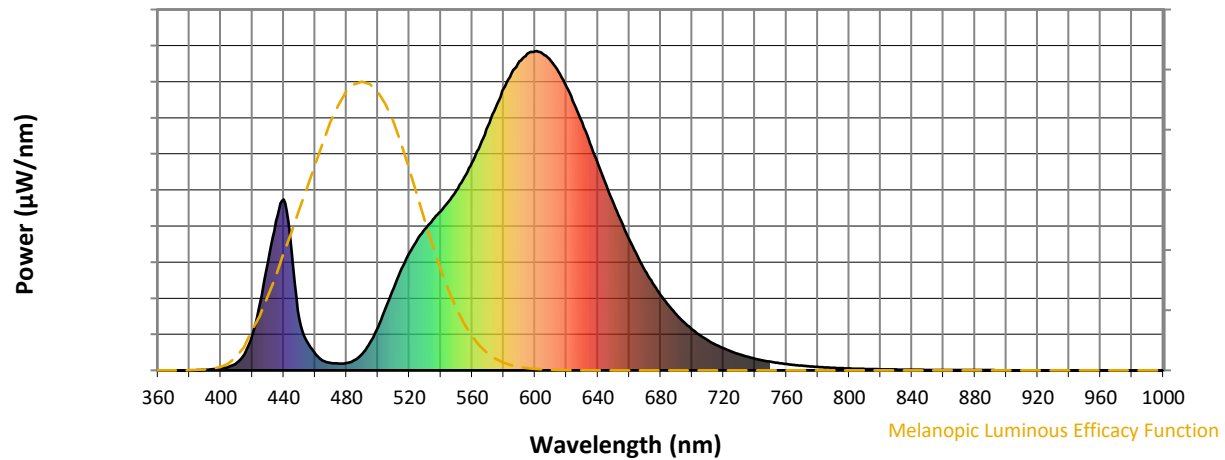
**Melanopic Lumens: NR**
**M/P: 1.71**

| $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) |
|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|
| 360               | 0                                    | NR                             | 490               | 52                                   | NR                             | 620               | 888                                  | NR                             | 750               | 27                                   | NR                             | 880               | 1                                    | NR                             |
| 365               | 0                                    | NR                             | 495               | 87                                   | NR                             | 625               | 834                                  | NR                             | 755               | 23                                   | NR                             | 885               | 1                                    | NR                             |
| 370               | 0                                    | NR                             | 500               | 135                                  | NR                             | 630               | 776                                  | NR                             | 760               | 20                                   | NR                             | 890               | 1                                    | NR                             |
| 375               | 0                                    | NR                             | 505               | 196                                  | NR                             | 635               | 712                                  | NR                             | 765               | 17                                   | NR                             | 895               | 0                                    | NR                             |
| 380               | 0                                    | NR                             | 510               | 258                                  | NR                             | 640               | 648                                  | NR                             | 770               | 15                                   | NR                             | 900               | 0                                    | NR                             |
| 385               | 1                                    | NR                             | 515               | 317                                  | NR                             | 645               | 583                                  | NR                             | 775               | 12                                   | NR                             | 905               | 0                                    | NR                             |
| 390               | 2                                    | NR                             | 520               | 368                                  | NR                             | 650               | 523                                  | NR                             | 780               | 11                                   | NR                             | 910               | 0                                    | NR                             |
| 395               | 4                                    | NR                             | 525               | 408                                  | NR                             | 655               | 465                                  | NR                             | 785               | 9                                    | NR                             | 915               | 0                                    | NR                             |
| 400               | 6                                    | NR                             | 530               | 443                                  | NR                             | 660               | 410                                  | NR                             | 790               | 8                                    | NR                             | 920               | 0                                    | NR                             |
| 405               | 11                                   | NR                             | 535               | 473                                  | NR                             | 665               | 360                                  | NR                             | 795               | 7                                    | NR                             | 925               | 0                                    | NR                             |
| 410               | 23                                   | NR                             | 540               | 498                                  | NR                             | 670               | 313                                  | NR                             | 800               | 6                                    | NR                             | 930               | 0                                    | NR                             |
| 415               | 51                                   | NR                             | 545               | 530                                  | NR                             | 675               | 272                                  | NR                             | 805               | 5                                    | NR                             | 935               | 0                                    | NR                             |
| 420               | 111                                  | NR                             | 550               | 563                                  | NR                             | 680               | 236                                  | NR                             | 810               | 4                                    | NR                             | 940               | 0                                    | NR                             |
| 425               | 214                                  | NR                             | 555               | 605                                  | NR                             | 685               | 203                                  | NR                             | 815               | 4                                    | NR                             | 945               | 0                                    | NR                             |
| 430               | 339                                  | NR                             | 560               | 651                                  | NR                             | 690               | 175                                  | NR                             | 820               | 3                                    | NR                             | 950               | 0                                    | NR                             |
| 435               | 467                                  | NR                             | 565               | 705                                  | NR                             | 695               | 150                                  | NR                             | 825               | 3                                    | NR                             | 955               | 0                                    | NR                             |
| 440               | 535                                  | NR                             | 570               | 765                                  | NR                             | 700               | 128                                  | NR                             | 830               | 3                                    | NR                             | 960               | 0                                    | NR                             |
| 445               | 372                                  | NR                             | 575               | 824                                  | NR                             | 705               | 110                                  | NR                             | 835               | 2                                    | NR                             | 965               | 0                                    | NR                             |
| 450               | 160                                  | NR                             | 580               | 882                                  | NR                             | 710               | 94                                   | NR                             | 840               | 2                                    | NR                             | 970               | 0                                    | NR                             |
| 455               | 89                                   | NR                             | 585               | 930                                  | NR                             | 715               | 80                                   | NR                             | 845               | 2                                    | NR                             | 975               | 0                                    | NR                             |
| 460               | 53                                   | NR                             | 590               | 968                                  | NR                             | 720               | 69                                   | NR                             | 850               | 1                                    | NR                             | 980               | 0                                    | NR                             |
| 465               | 31                                   | NR                             | 595               | 991                                  | NR                             | 725               | 59                                   | NR                             | 855               | 1                                    | NR                             | 985               | 0                                    | NR                             |
| 470               | 23                                   | NR                             | 600               | 999                                  | NR                             | 730               | 50                                   | NR                             | 860               | 1                                    | NR                             | 990               | 0                                    | NR                             |
| 475               | 21                                   | NR                             | 605               | 992                                  | NR                             | 735               | 43                                   | NR                             | 865               | 1                                    | NR                             | 995               | 0                                    | NR                             |
| 480               | 23                                   | NR                             | 610               | 969                                  | NR                             | 740               | 36                                   | NR                             | 870               | 1                                    | NR                             | 1000              | 0                                    | NR                             |
| 485               | 32                                   | NR                             | 615               | 935                                  | NR                             | 745               | 31                                   | NR                             | 875               | 1                                    | NR                             |                   |                                      |                                |

REPORT NUMBER: SP1-2407-184-3

TM-30-18


### Summary

$R_f = 67.9$   
 $R_g = 98.6$   
 $CIE R_a = 71.1$   
 $R_g = -27.8$

### Spectral Power Distribution Comparison



### Color Vector Graphics

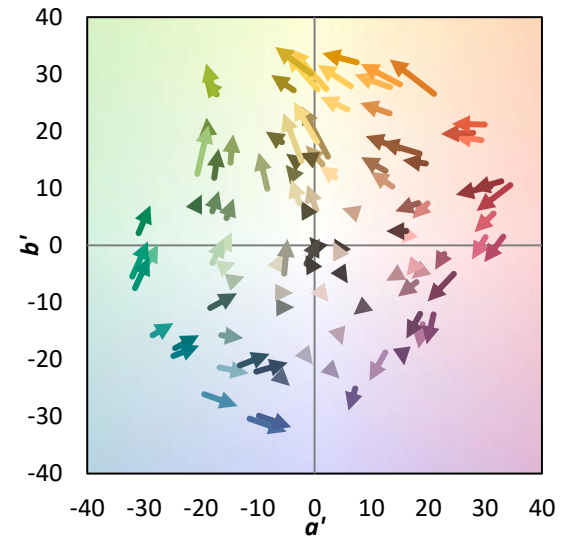

**Individual Sample Fidelity Index ( $R_{f,i}$ )**

|            |            |            |            |
|------------|------------|------------|------------|
| CES01 = 86 | CES26 = 53 | CES51 = 75 | CES76 = 51 |
| CES02 = 63 | CES27 = 70 | CES52 = 80 | CES77 = 79 |
| CES03 = 31 | CES28 = 81 | CES53 = 64 | CES78 = 58 |
| CES04 = 71 | CES29 = 37 | CES54 = 73 | CES79 = 82 |
| CES05 = 50 | CES30 = 33 | CES55 = 69 | CES80 = 82 |
| CES06 = 52 | CES31 = 44 | CES56 = 60 | CES81 = 69 |
| CES07 = 42 | CES32 = 47 | CES57 = 54 | CES82 = 92 |
| CES08 = 41 | CES33 = 45 | CES58 = 59 | CES83 = 82 |
| CES09 = 29 | CES34 = 67 | CES59 = 85 | CES84 = 92 |
| CES10 = 77 | CES35 = 84 | CES60 = 86 | CES85 = 87 |
| CES11 = 60 | CES36 = 68 | CES61 = 86 | CES86 = 60 |
| CES12 = 66 | CES37 = 77 | CES62 = 59 | CES87 = 79 |
| CES13 = 44 | CES38 = 40 | CES63 = 66 | CES88 = 70 |
| CES14 = 74 | CES39 = 88 | CES64 = 69 | CES89 = 66 |
| CES15 = 72 | CES40 = 82 | CES65 = 64 | CES90 = 64 |
| CES16 = 48 | CES41 = 70 | CES66 = 65 | CES91 = 81 |
| CES17 = 51 | CES42 = 76 | CES67 = 64 | CES92 = 69 |
| CES18 = 57 | CES43 = 63 | CES68 = 73 | CES93 = 81 |
| CES19 = 73 | CES44 = 97 | CES69 = 83 | CES94 = 53 |
| CES20 = 67 | CES45 = 74 | CES70 = 64 | CES95 = 77 |
| CES21 = 88 | CES46 = 67 | CES71 = 60 | CES96 = 79 |
| CES22 = 80 | CES47 = 55 | CES72 = 87 | CES97 = 78 |
| CES23 = 92 | CES48 = 42 | CES73 = 57 | CES98 = 69 |
| CES24 = 92 | CES49 = 65 | CES74 = 84 | CES99 = 60 |
| CES25 = 73 | CES50 = 74 | CES75 = 60 |            |



**Color Rendition by Hue-Angle Bin**


**Measure Comparisons**



(END OF REPORT)