

Scaled data based on original data using  
LM-79-08 Approved Method: Electrical and Photometric Measurements of Solid-  
State Lighting Products

Test Report Prepared for  
Cooper Lighting Solutions  
(formerly Eaton)

Brand: STREETWORKS

Report Number: P1381833

Luminaire Tested: **VAL-T-SB1C-727-U-5WQ**

Issue Date: 02/18/2026

This test was performed under the Supervised Manufacturer's Testing Program. The results of this test have not been  
influenced by sources from within Cooper Lighting Solutions or from external interests.

**Test Information**

Test Method: LM-79-08  
 Report Number: P1381833  
 Test Lab: INNOVATION CENTER(G3)  
 Issue Date: 02/18/2026  
 Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)  
 Product Line: STREETWORKS  
 Catalog Number: VAL-T-SB1C-727-U-5WQ  
 Description: GALLEON II WALL SLIM HIGH DENSITY LED ARRAYS 1SQUARE 52W 70CRI  
 2700K FIXTURE w/ TYPE V SQUARE WIDE DISTRIBUTION OPTIC  
 Light Source: (26) 2700K CCT, 70 CRI LEDS  
 Ballast/Driver: ELECTRONIC DRIVER  
 Luminaire Equipment:

| <u>Sample No.</u> | <u>Condition</u> | <u>Description</u> |
|-------------------|------------------|--------------------|
| a                 | good             | reflector          |
| b                 | good             | lens               |
| c                 | good             | housing            |
| d                 | good             | cord               |

**Summary**


Lumens per Lamp: N/A  
 Luminaire Lumens: 6225.8 lumens  
 Efficiency: N/A  
 Efficacy: 119.7 lumens/watt  
 Luminous Opening: Rectangular (W 0.5' x L: 0.5' x H: 0')  
 IES Classification: Type V - Short  
 BUG Rating: B3 - U0 - G1  
  
 Input Watts (W): 52  
 Input Voltage (V): 120  
 Input Current (Ain): NR  
 Voltage Rise (V): NR  
 Power Factor: 0.98  
 Total Harmonic Distortion (THDi): 10.1%  
 Frequency (hertz): 60  
 Stabilization Time: NR  
 Operation Time: NR  
 Ambient Temperature (°C): NR  
 Test Distance: 28.75 FT

REPORT NUMBER: P1381833

CATALOG NUMBER: VAL-T-SB1C-727-U-5WQ

## Iso-Footcandle Lines of Horizontal Illumination


× Max cd  
 - - - 1/2 Max cd

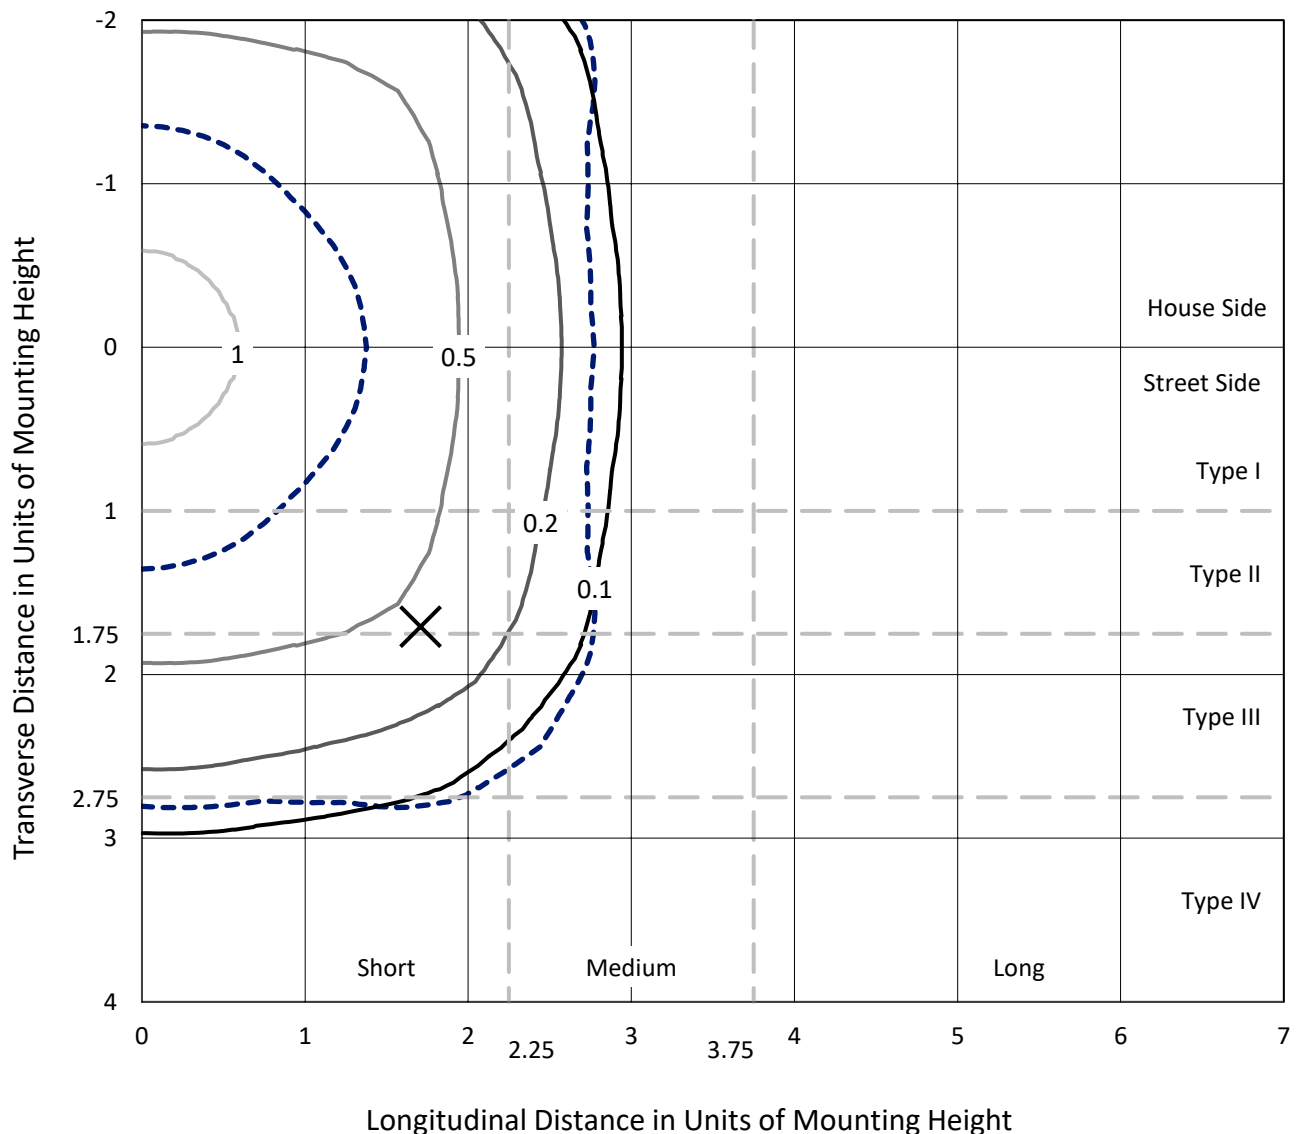

Based on 20 foot mounting height. Maximum calculated value = 1.5 fc  
 Type V - Short - N/A

REPORT NUMBER: P1381833  
CATALOG NUMBER: VAL-T-SB1C-727-U-5WQ

## Luminous Intensity Polar Plot

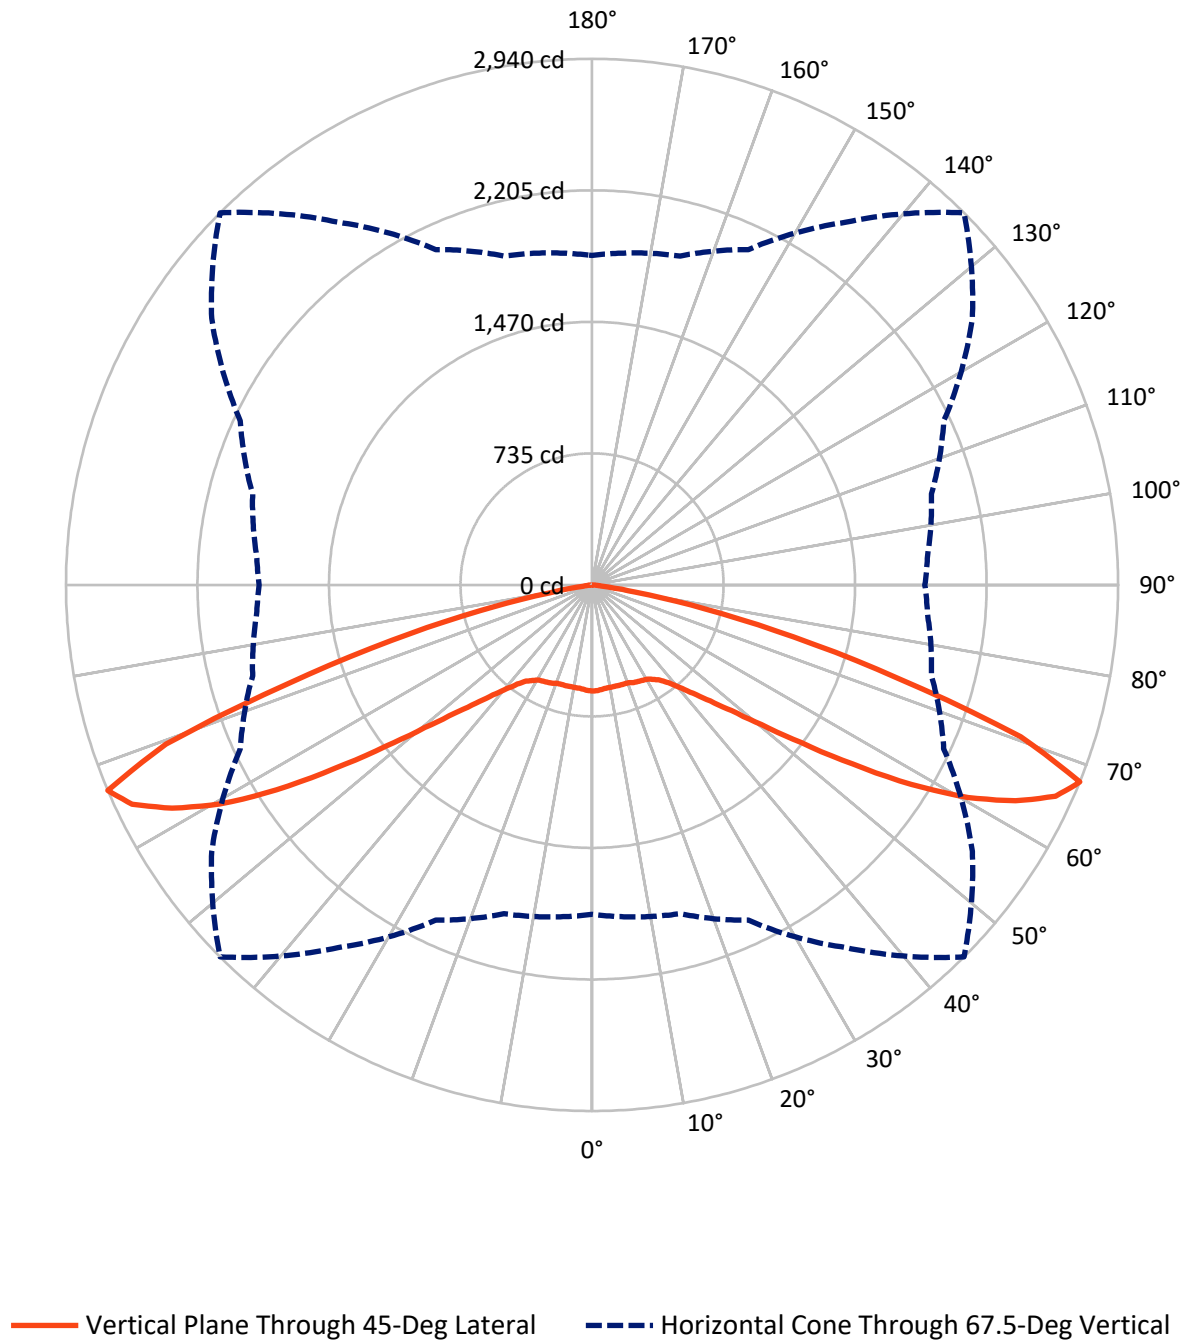

REPORT NUMBER: P1381833

CATALOG NUMBER: VAL-T-SB1C-727-U-5WQ


**FLUX DISTRIBUTION:**

|                    |           | Downward | Upward | Total  |
|--------------------|-----------|----------|--------|--------|
| <b>House Side</b>  | Lumens    | 3112.9   | 0.0    | 3112.9 |
|                    | % Fixture | 50.0     | 0.0    | 50.0   |
| <b>Street Side</b> | Lumens    | 3112.9   | 0.0    | 3112.9 |
|                    | % Fixture | 50.0     | 0.0    | 50.0   |
| <b>Total</b>       | Lumens    | 6225.8   | 0.0    | 6225.8 |
|                    | % Fixture | 100.0    | 0.0    | 100.0  |

**Coefficient of Utilization**

**ZONAL LUMENS:**

| Zone      | Lumens | % Fixture |
|-----------|--------|-----------|
| 0°-10°    | 55.8   | 0.9       |
| 10°-20°   | 165.5  | 2.7       |
| 20°-30°   | 278.3  | 4.5       |
| 30°-40°   | 426.6  | 6.9       |
| 40°-50°   | 740.0  | 11.9      |
| 50°-60°   | 1480.6 | 23.8      |
| 60°-70°   | 2199.6 | 35.3      |
| 70°-80°   | 848.4  | 13.6      |
| 80°-90°   | 30.9   | 0.5       |
| 90°-100°  | 0.0    | 0.0       |
| 100°-110° | 0.0    | 0.0       |
| 110°-120° | 0.0    | 0.0       |
| 120°-130° | 0.0    | 0.0       |
| 130°-140° | 0.0    | 0.0       |
| 140°-150° | 0.0    | 0.0       |
| 150°-160° | 0.0    | 0.0       |
| 160°-170° | 0.0    | 0.0       |
| 170°-180° | 0.0    | 0.0       |
| 0°-90°    | 6225.8 | 100.0     |
| 0°-180°   | 6225.8 | 100.0     |

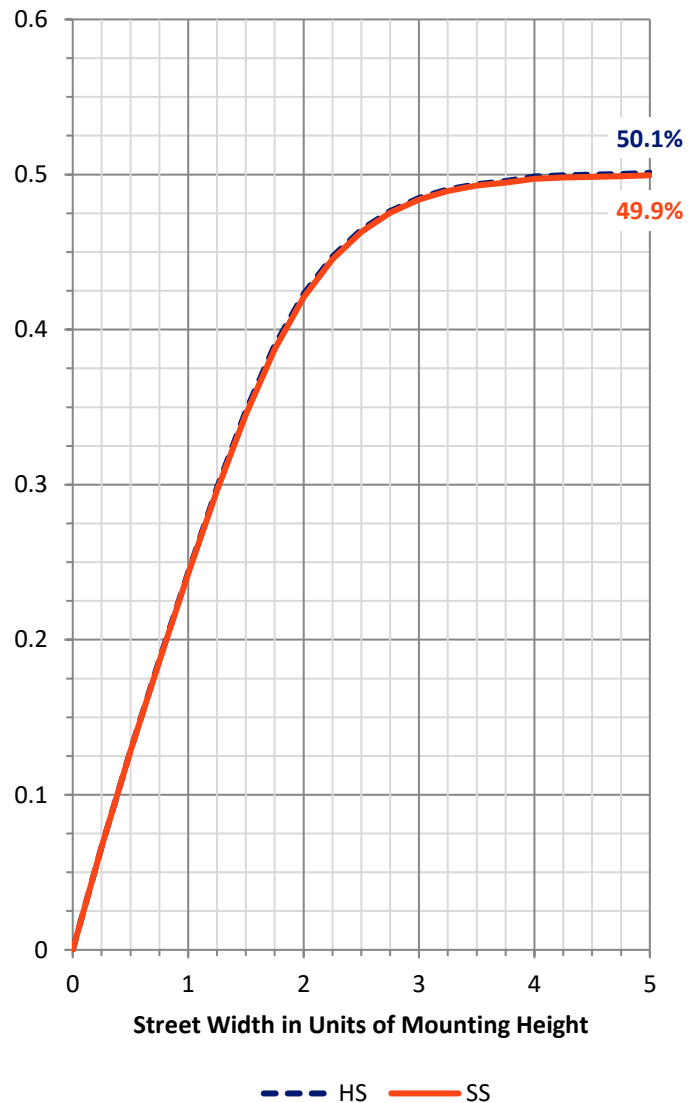

REPORT NUMBER: P1381833


CATALOG NUMBER: VAL-T-SB1C-727-U-5WQ

**LUMINAIRE CLASSIFICATION SYSTEM LUMEN TABLE AND BUG RATING:**

| Zone |             | Lumens | % Fixture | Zone Rating/Lumen Limit |      |         |
|------|-------------|--------|-----------|-------------------------|------|---------|
|      |             |        |           | B                       | U    | G       |
| FL   | (0°-30°)    | 249.8  | 4.0       |                         |      |         |
| FM   | (30°-60°)   | 1323.6 | 21.3      |                         |      |         |
| FH   | (60°-80°)   | 1524.0 | 24.5      |                         |      | G1/1800 |
| FVH  | (80°-90°)   | 15.5   | 0.2       |                         |      | G1/100  |
| BL   | (0°-30°)    | 249.8  | 4.0       | B1/500                  |      |         |
| BM   | (30°-60°)   | 1323.6 | 21.3      | B2/2500                 |      |         |
| BH   | (60°-80°)   | 1524.0 | 24.5      | B3/2500                 |      | G1/1800 |
| BVH  | (80°-90°)   | 15.5   | 0.2       |                         |      | G1/100  |
| UL   | (90°-100°)  | 0.0    | 0.0       |                         | U0/0 |         |
| UH   | (100°-180°) | 0.0    | 0.0       |                         | U0/0 |         |

**BUG Rating: B3-U0-G1**

Type V Short

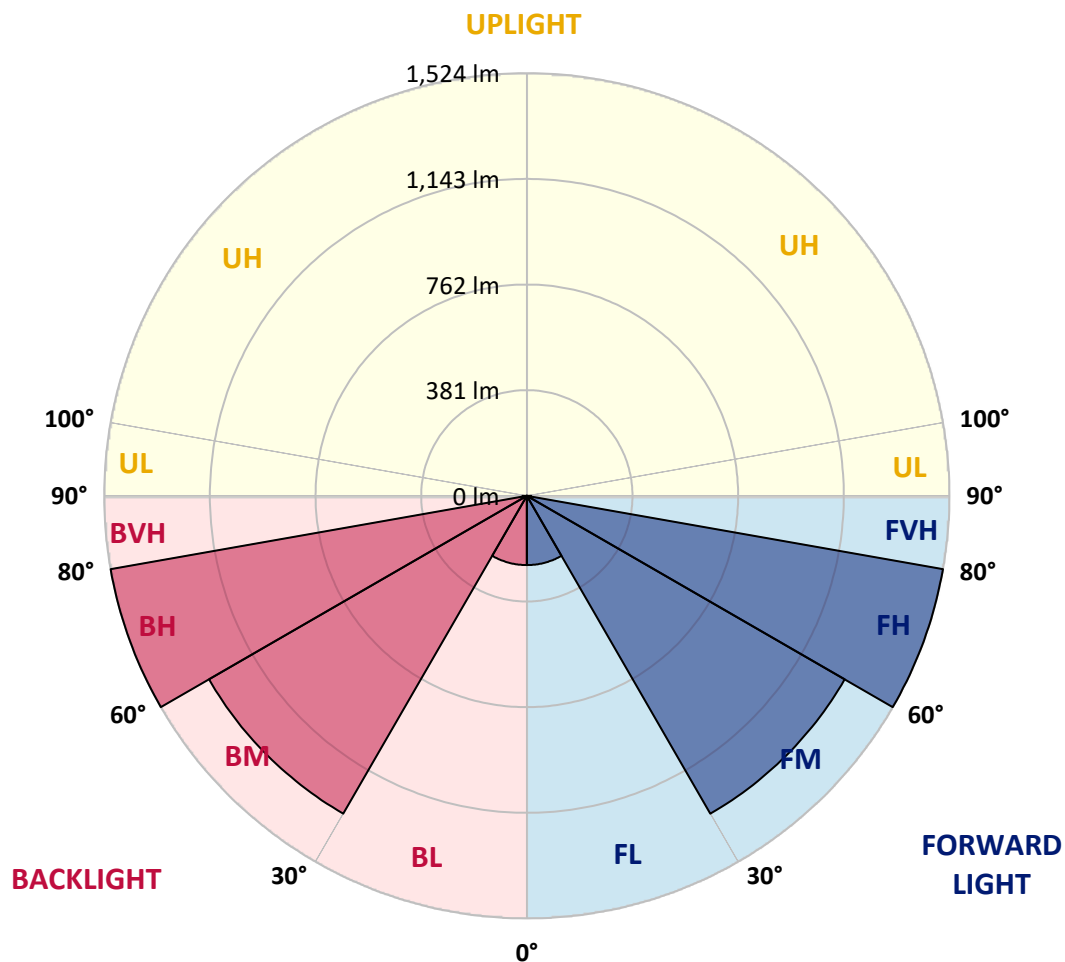



REPORT NUMBER: P1381833

CATALOG NUMBER: VAL-T-SB1C-727-U-5WQ

**CANDELA DISTRIBUTION (FULL):**

|       | 0°     | 5°     | 15°    | 25°    | 35°    | 45°    | 55°    | 65°    | 75°    | 85°    | 90°    |
|-------|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|
| 0°    | 592.5  | 592.5  | 592.5  | 592.5  | 592.5  | 592.5  | 592.5  | 592.5  | 592.5  | 592.5  | 592.5  |
| 2.5°  | 592.5  | 592.5  | 592.5  | 589.8  | 591.2  | 591.2  | 591.2  | 591.2  | 589.8  | 592.5  | 589.8  |
| 5°    | 591.2  | 588.4  | 587.1  | 587.1  | 585.7  | 585.7  | 584.4  | 584.4  | 584.4  | 588.4  | 587.1  |
| 7.5°  | 587.1  | 585.7  | 583.0  | 581.6  | 583.0  | 581.6  | 581.6  | 581.6  | 580.3  | 580.3  | 583.0  |
| 10°   | 584.4  | 584.4  | 584.4  | 581.6  | 583.0  | 581.6  | 580.3  | 580.3  | 581.6  | 581.6  | 583.0  |
| 12.5° | 585.7  | 585.7  | 584.4  | 581.6  | 581.6  | 580.3  | 580.3  | 578.9  | 581.6  | 583.0  | 581.6  |
| 15°   | 585.7  | 585.7  | 585.7  | 583.0  | 583.0  | 581.6  | 580.3  | 580.3  | 581.6  | 585.7  | 585.7  |
| 17.5° | 588.4  | 588.4  | 588.4  | 583.0  | 581.6  | 581.6  | 581.6  | 581.6  | 584.4  | 589.8  | 588.4  |
| 20°   | 593.9  | 593.9  | 589.8  | 587.1  | 585.7  | 583.0  | 581.6  | 585.7  | 591.2  | 595.3  | 596.6  |
| 22.5° | 599.4  | 596.6  | 595.3  | 589.8  | 592.5  | 592.5  | 591.2  | 592.5  | 592.5  | 600.7  | 598.0  |
| 25°   | 602.1  | 602.1  | 599.4  | 596.6  | 600.7  | 598.0  | 599.4  | 596.6  | 600.7  | 602.1  | 603.5  |
| 27.5° | 608.9  | 607.6  | 607.6  | 603.5  | 606.2  | 603.5  | 604.8  | 604.8  | 606.2  | 608.9  | 610.3  |
| 30°   | 621.2  | 619.9  | 618.5  | 617.1  | 614.4  | 610.3  | 615.8  | 614.4  | 617.1  | 619.9  | 619.9  |
| 32.5° | 640.3  | 640.3  | 641.7  | 634.9  | 632.1  | 629.4  | 632.1  | 637.6  | 641.7  | 641.7  | 641.7  |
| 35°   | 679.9  | 678.6  | 674.5  | 662.2  | 655.3  | 652.6  | 656.7  | 666.3  | 673.1  | 677.2  | 675.8  |
| 37.5° | 727.7  | 727.7  | 720.9  | 710.0  | 696.3  | 693.6  | 699.0  | 703.1  | 714.1  | 722.3  | 729.1  |
| 40°   | 782.3  | 787.8  | 779.6  | 765.9  | 753.7  | 752.3  | 757.7  | 757.7  | 765.9  | 781.0  | 783.7  |
| 42.5° | 867.0  | 861.5  | 849.2  | 831.5  | 826.0  | 827.4  | 824.6  | 827.4  | 834.2  | 849.2  | 850.6  |
| 45°   | 955.7  | 958.4  | 946.2  | 927.0  | 918.9  | 925.7  | 920.2  | 916.1  | 924.3  | 939.3  | 935.2  |
| 47.5° | 1071.8 | 1070.4 | 1058.1 | 1049.9 | 1049.9 | 1048.6 | 1037.6 | 1028.1 | 1036.3 | 1047.2 | 1040.4 |
| 50°   | 1206.9 | 1208.3 | 1205.6 | 1209.7 | 1209.7 | 1227.4 | 1213.8 | 1183.7 | 1175.5 | 1182.4 | 1178.3 |
| 52.5° | 1366.7 | 1372.1 | 1381.7 | 1395.3 | 1433.6 | 1463.6 | 1429.5 | 1389.9 | 1359.9 | 1355.8 | 1344.8 |
| 55°   | 1559.2 | 1561.9 | 1582.4 | 1611.1 | 1695.7 | 1766.7 | 1721.7 | 1613.8 | 1557.8 | 1536.0 | 1521.0 |
| 57.5° | 1761.3 | 1773.5 | 1799.5 | 1863.7 | 1985.2 | 2103.9 | 2011.1 | 1854.1 | 1768.1 | 1732.6 | 1736.7 |
| 60°   | 1975.6 | 1985.2 | 2028.9 | 2097.1 | 2285.5 | 2412.5 | 2301.9 | 2087.6 | 1994.7 | 1955.1 | 1952.4 |
| 62.5° | 2067.1 | 2088.9 | 2165.4 | 2307.4 | 2519.0 | 2656.9 | 2531.3 | 2314.2 | 2183.1 | 2109.4 | 2102.6 |
| 65°   | 1996.1 | 2008.4 | 2087.6 | 2293.7 | 2640.5 | 2846.7 | 2696.5 | 2368.8 | 2174.9 | 2093.0 | 2075.3 |
| 67.5° | 1840.4 | 1860.9 | 1901.9 | 2067.1 | 2473.9 | 2939.5 | 2594.1 | 2168.1 | 1963.3 | 1881.4 | 1859.6 |
| 70°   | 1536.0 | 1560.6 | 1605.6 | 1799.5 | 2134.0 | 2540.8 | 2245.9 | 1783.1 | 1556.5 | 1471.8 | 1486.8 |
| 72.5° | 966.6  | 1004.9 | 1104.5 | 1353.0 | 1739.4 | 1784.5 | 1725.8 | 1271.1 | 1011.7 | 916.1  | 887.5  |
| 75°   | 274.4  | 301.7  | 416.4  | 768.7  | 1010.3 | 1161.9 | 920.2  | 692.2  | 451.9  | 356.3  | 345.4  |
| 77.5° | 81.9   | 87.4   | 114.7  | 214.4  | 395.9  | 641.7  | 404.1  | 259.4  | 151.5  | 113.3  | 116.1  |
| 80°   | 50.5   | 51.9   | 62.8   | 76.5   | 107.9  | 244.4  | 122.9  | 73.7   | 68.3   | 51.9   | 53.2   |
| 82.5° | 32.8   | 31.4   | 38.2   | 42.3   | 46.4   | 50.5   | 43.7   | 42.3   | 41.0   | 31.4   | 30.0   |
| 85°   | 13.7   | 13.7   | 16.4   | 19.1   | 17.7   | 17.7   | 19.1   | 20.5   | 19.1   | 16.4   | 16.4   |
| 87.5° | 5.5    | 5.5    | 8.2    | 6.8    | 6.8    | 6.8    | 8.2    | 8.2    | 8.2    | 8.2    | 8.2    |
| 90°   | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    |

LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-State Lighting Products

Report Prepared for

Cooper Lighting Solutions

McGraw-Edison

Report Number: SP1-2407-184-3

Test Date: 10/09/2024

Luminaire Tested: GSS-SB1A-727-U-5WQ


Data in this report applies to families of products including GSS-SB1A-727-U-5WQ

### Test Information

Test Method: LM-79-2019  
 Report Number: SP1-2407-184-3  
 Test Lab: COOPER LIGHTING SOLUTIONS  
 Photometer: SP1 - 76IN SPHERE  
 Measurement Geometry:  $4\pi$   
 Issue Date: 10/15/2024  
 Manufacturer: COOPER LIGHTING SOLUTIONS  
 Product Line: McGraw-Edison  
 Catalog Number: **GSS-SB1A-727-U-5WQ**  
 Description: GALLEON II SITE SLIM 1SQ 350MA 5WQ HIGH DENSITY LIGHTSQUARE WITH 70 CRI  
 2700K CCT 26 LEDS

### Spectral Parameters

|                           |          |           |      |      |       |
|---------------------------|----------|-----------|------|------|-------|
| CCT (K):                  | 2672     | CRI (Ra): | 71.1 |      |       |
| CIE u':                   | 0.2638   | R1:       | 68.3 | R9:  | -27.8 |
| CIE v':                   | 0.5276   | R2:       | 79.8 | R10: | 54.4  |
| Duv:                      | -0.0002  | R3:       | 91.2 | R11: | 65.8  |
| CIE x:                    | 0.4619   | R4:       | 69.4 | R12: | 45.6  |
| CIE y:                    | 0.4106   | R5:       | 66.5 | R13: | 69.8  |
| CIE z:                    | 0.1275   | R6:       | 72.6 | R14: | 94.5  |
| Peak Wavelength (nm):     | 601      | R7:       | 77.0 | R15: | 60.1  |
| Dominant Wavelength (nm): | 584      | R8:       | 44.1 |      |       |
| Purity:                   | 61.88407 |           |      |      |       |
| Rf:                       | 67.9     |           |      |      |       |
| Rg:                       | 98.6     |           |      |      |       |

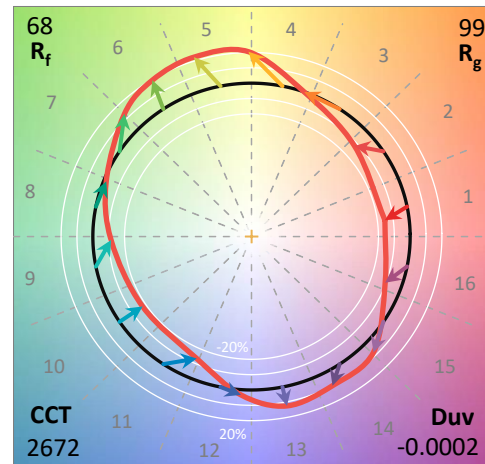

### Test Conditions

Stabilization Time: 21M  
 Operation Time: 1H 21M  
 Sphere Temperature (°C): 25.2


REPORT NUMBER: SP1-2407-184-3

| Measurement and Test Equipment |                       |                  |                      |
|--------------------------------|-----------------------|------------------|----------------------|
| Instrument                     | Identification Number | Calibration Date | Calibration Due Date |
| Photometer                     | IN0058                | 6/18/2024        | 12/18/2024           |
| Power Meter                    | INXT2011004           | 2/8/2024         | 2/8/2025             |
| AC Power Source                | IN0063                | 10/24/2023       | 10/24/2024           |
| DC Power Source                | IN0208                | 10/24/2023       | 10/24/2024           |
| Sphere Thermometer             | IN0085                | 10/24/2023       | 10/24/2024           |
| Room Thermometer               | IN0046                | 10/24/2023       | 10/24/2024           |



REPORT NUMBER: SP1-2407-184-3

### Photopic Flux vs. Wavelength

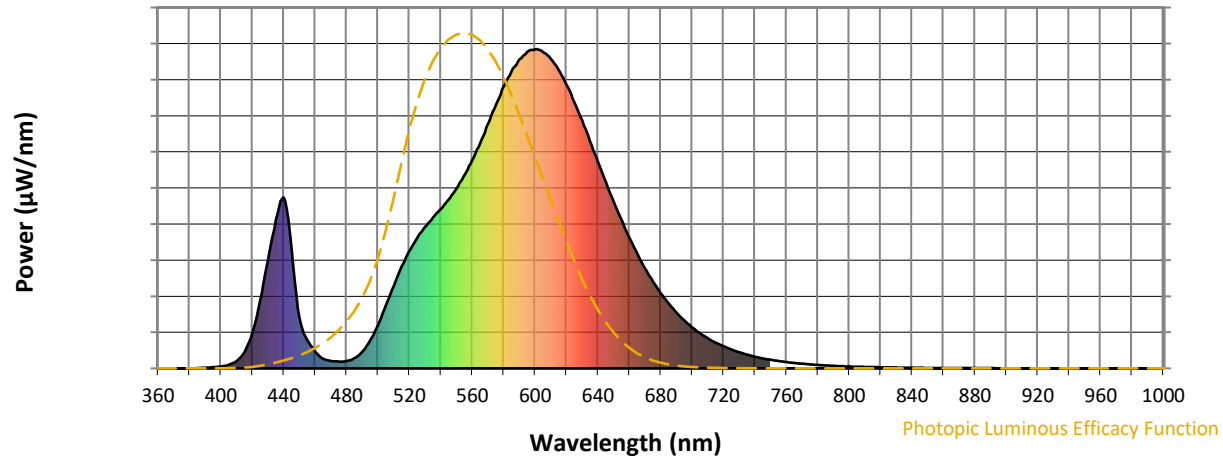


### Photopic Lumens: NR

| $\lambda$<br>(nm) | Power<br>$\text{W}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) |
|-------------------|-------------------------------|--------------------------------|-------------------|-------------------------------|--------------------------------|-------------------|-------------------------------|--------------------------------|-------------------|-------------------------------|--------------------------------|-------------------|-------------------------------|--------------------------------|
| 360               | 0                             | NR                             | 490               | 52                            | NR                             | 620               | 888                           | NR                             | 750               | 27                            | NR                             | 880               | 1                             | NR                             |
| 365               | 0                             | NR                             | 495               | 87                            | NR                             | 625               | 834                           | NR                             | 755               | 23                            | NR                             | 885               | 1                             | NR                             |
| 370               | 0                             | NR                             | 500               | 135                           | NR                             | 630               | 776                           | NR                             | 760               | 20                            | NR                             | 890               | 1                             | NR                             |
| 375               | 0                             | NR                             | 505               | 196                           | NR                             | 635               | 712                           | NR                             | 765               | 17                            | NR                             | 895               | 0                             | NR                             |
| 380               | 0                             | NR                             | 510               | 258                           | NR                             | 640               | 648                           | NR                             | 770               | 15                            | NR                             | 900               | 0                             | NR                             |
| 385               | 1                             | NR                             | 515               | 317                           | NR                             | 645               | 583                           | NR                             | 775               | 12                            | NR                             | 905               | 0                             | NR                             |
| 390               | 2                             | NR                             | 520               | 368                           | NR                             | 650               | 523                           | NR                             | 780               | 11                            | NR                             | 910               | 0                             | NR                             |
| 395               | 4                             | NR                             | 525               | 408                           | NR                             | 655               | 465                           | NR                             | 785               | 9                             | NR                             | 915               | 0                             | NR                             |
| 400               | 6                             | NR                             | 530               | 443                           | NR                             | 660               | 410                           | NR                             | 790               | 8                             | NR                             | 920               | 0                             | NR                             |
| 405               | 11                            | NR                             | 535               | 473                           | NR                             | 665               | 360                           | NR                             | 795               | 7                             | NR                             | 925               | 0                             | NR                             |
| 410               | 23                            | NR                             | 540               | 498                           | NR                             | 670               | 313                           | NR                             | 800               | 6                             | NR                             | 930               | 0                             | NR                             |
| 415               | 51                            | NR                             | 545               | 530                           | NR                             | 675               | 272                           | NR                             | 805               | 5                             | NR                             | 935               | 0                             | NR                             |
| 420               | 111                           | NR                             | 550               | 563                           | NR                             | 680               | 236                           | NR                             | 810               | 4                             | NR                             | 940               | 0                             | NR                             |
| 425               | 214                           | NR                             | 555               | 605                           | NR                             | 685               | 203                           | NR                             | 815               | 4                             | NR                             | 945               | 0                             | NR                             |
| 430               | 339                           | NR                             | 560               | 651                           | NR                             | 690               | 175                           | NR                             | 820               | 3                             | NR                             | 950               | 0                             | NR                             |
| 435               | 467                           | NR                             | 565               | 705                           | NR                             | 695               | 150                           | NR                             | 825               | 3                             | NR                             | 955               | 0                             | NR                             |
| 440               | 535                           | NR                             | 570               | 765                           | NR                             | 700               | 128                           | NR                             | 830               | 3                             | NR                             | 960               | 0                             | NR                             |
| 445               | 372                           | NR                             | 575               | 824                           | NR                             | 705               | 110                           | NR                             | 835               | 2                             | NR                             | 965               | 0                             | NR                             |
| 450               | 160                           | NR                             | 580               | 882                           | NR                             | 710               | 94                            | NR                             | 840               | 2                             | NR                             | 970               | 0                             | NR                             |
| 455               | 89                            | NR                             | 585               | 930                           | NR                             | 715               | 80                            | NR                             | 845               | 2                             | NR                             | 975               | 0                             | NR                             |
| 460               | 53                            | NR                             | 590               | 968                           | NR                             | 720               | 69                            | NR                             | 850               | 1                             | NR                             | 980               | 0                             | NR                             |
| 465               | 31                            | NR                             | 595               | 991                           | NR                             | 725               | 59                            | NR                             | 855               | 1                             | NR                             | 985               | 0                             | NR                             |
| 470               | 23                            | NR                             | 600               | 999                           | NR                             | 730               | 50                            | NR                             | 860               | 1                             | NR                             | 990               | 0                             | NR                             |
| 475               | 21                            | NR                             | 605               | 992                           | NR                             | 735               | 43                            | NR                             | 865               | 1                             | NR                             | 995               | 0                             | NR                             |
| 480               | 23                            | NR                             | 610               | 969                           | NR                             | 740               | 36                            | NR                             | 870               | 1                             | NR                             | 1000              | 0                             | NR                             |
| 485               | 32                            | NR                             | 615               | 935                           | NR                             | 745               | 31                            | NR                             | 875               | 1                             | NR                             |                   |                               |                                |

REPORT NUMBER: SP1-2407-184-3

### Scotopic Flux vs. Wavelength

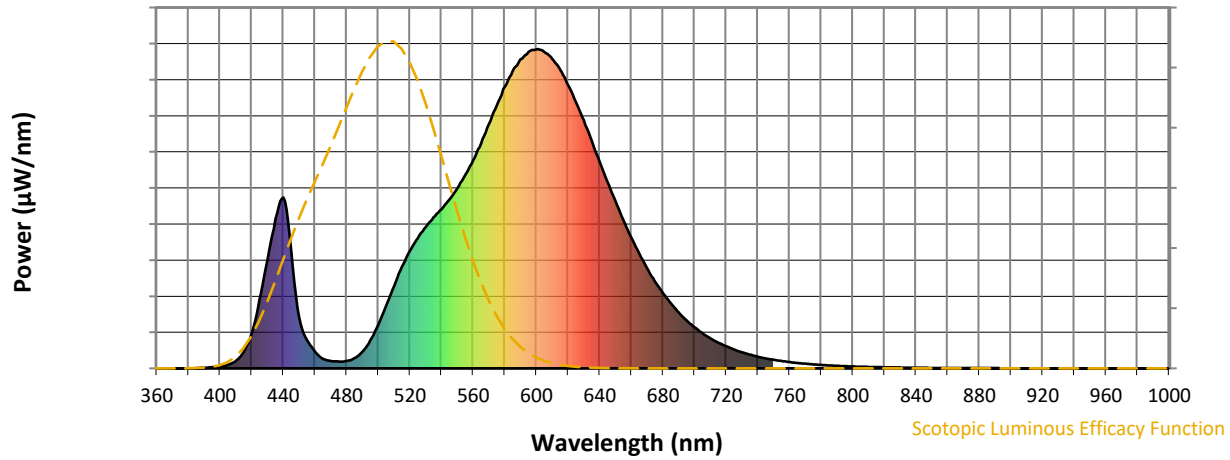


Scotopic Lumens: NR

S/P: 1.02

| $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) |
|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|
| 360               | 0                                    | NR                             | 490               | 52                                   | NR                             | 620               | 888                                  | NR                             | 750               | 27                                   | NR                             | 880               | 1                                    | NR                             |
| 365               | 0                                    | NR                             | 495               | 87                                   | NR                             | 625               | 834                                  | NR                             | 755               | 23                                   | NR                             | 885               | 1                                    | NR                             |
| 370               | 0                                    | NR                             | 500               | 135                                  | NR                             | 630               | 776                                  | NR                             | 760               | 20                                   | NR                             | 890               | 1                                    | NR                             |
| 375               | 0                                    | NR                             | 505               | 196                                  | NR                             | 635               | 712                                  | NR                             | 765               | 17                                   | NR                             | 895               | 0                                    | NR                             |
| 380               | 0                                    | NR                             | 510               | 258                                  | NR                             | 640               | 648                                  | NR                             | 770               | 15                                   | NR                             | 900               | 0                                    | NR                             |
| 385               | 1                                    | NR                             | 515               | 317                                  | NR                             | 645               | 583                                  | NR                             | 775               | 12                                   | NR                             | 905               | 0                                    | NR                             |
| 390               | 2                                    | NR                             | 520               | 368                                  | NR                             | 650               | 523                                  | NR                             | 780               | 11                                   | NR                             | 910               | 0                                    | NR                             |
| 395               | 4                                    | NR                             | 525               | 408                                  | NR                             | 655               | 465                                  | NR                             | 785               | 9                                    | NR                             | 915               | 0                                    | NR                             |
| 400               | 6                                    | NR                             | 530               | 443                                  | NR                             | 660               | 410                                  | NR                             | 790               | 8                                    | NR                             | 920               | 0                                    | NR                             |
| 405               | 11                                   | NR                             | 535               | 473                                  | NR                             | 665               | 360                                  | NR                             | 795               | 7                                    | NR                             | 925               | 0                                    | NR                             |
| 410               | 23                                   | NR                             | 540               | 498                                  | NR                             | 670               | 313                                  | NR                             | 800               | 6                                    | NR                             | 930               | 0                                    | NR                             |
| 415               | 51                                   | NR                             | 545               | 530                                  | NR                             | 675               | 272                                  | NR                             | 805               | 5                                    | NR                             | 935               | 0                                    | NR                             |
| 420               | 111                                  | NR                             | 550               | 563                                  | NR                             | 680               | 236                                  | NR                             | 810               | 4                                    | NR                             | 940               | 0                                    | NR                             |
| 425               | 214                                  | NR                             | 555               | 605                                  | NR                             | 685               | 203                                  | NR                             | 815               | 4                                    | NR                             | 945               | 0                                    | NR                             |
| 430               | 339                                  | NR                             | 560               | 651                                  | NR                             | 690               | 175                                  | NR                             | 820               | 3                                    | NR                             | 950               | 0                                    | NR                             |
| 435               | 467                                  | NR                             | 565               | 705                                  | NR                             | 695               | 150                                  | NR                             | 825               | 3                                    | NR                             | 955               | 0                                    | NR                             |
| 440               | 535                                  | NR                             | 570               | 765                                  | NR                             | 700               | 128                                  | NR                             | 830               | 3                                    | NR                             | 960               | 0                                    | NR                             |
| 445               | 372                                  | NR                             | 575               | 824                                  | NR                             | 705               | 110                                  | NR                             | 835               | 2                                    | NR                             | 965               | 0                                    | NR                             |
| 450               | 160                                  | NR                             | 580               | 882                                  | NR                             | 710               | 94                                   | NR                             | 840               | 2                                    | NR                             | 970               | 0                                    | NR                             |
| 455               | 89                                   | NR                             | 585               | 930                                  | NR                             | 715               | 80                                   | NR                             | 845               | 2                                    | NR                             | 975               | 0                                    | NR                             |
| 460               | 53                                   | NR                             | 590               | 968                                  | NR                             | 720               | 69                                   | NR                             | 850               | 1                                    | NR                             | 980               | 0                                    | NR                             |
| 465               | 31                                   | NR                             | 595               | 991                                  | NR                             | 725               | 59                                   | NR                             | 855               | 1                                    | NR                             | 985               | 0                                    | NR                             |
| 470               | 23                                   | NR                             | 600               | 999                                  | NR                             | 730               | 50                                   | NR                             | 860               | 1                                    | NR                             | 990               | 0                                    | NR                             |
| 475               | 21                                   | NR                             | 605               | 992                                  | NR                             | 735               | 43                                   | NR                             | 865               | 1                                    | NR                             | 995               | 0                                    | NR                             |
| 480               | 23                                   | NR                             | 610               | 969                                  | NR                             | 740               | 36                                   | NR                             | 870               | 1                                    | NR                             | 1000              | 0                                    | NR                             |
| 485               | 32                                   | NR                             | 615               | 935                                  | NR                             | 745               | 31                                   | NR                             | 875               | 1                                    | NR                             |                   |                                      |                                |

REPORT NUMBER: SP1-2407-184-3

### Melanopic Flux vs. Wavelength

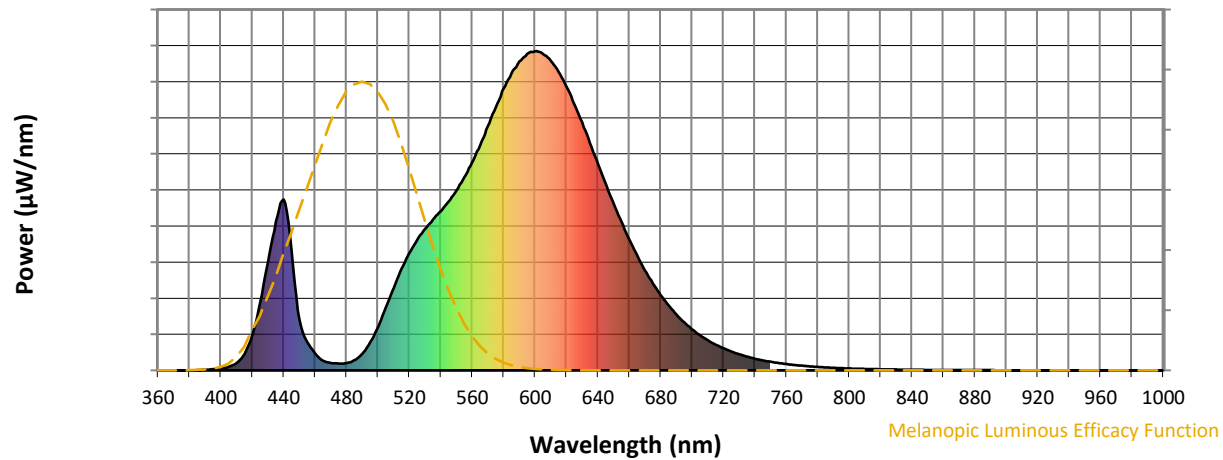

Melanopic Lumens: NR

M/P: 1.71

| λ<br>(nm) | Power<br>W <sup>λ</sup> /nm | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>W <sup>λ</sup> /nm | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>W <sup>λ</sup> /nm | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>W <sup>λ</sup> /nm | Lumens<br>(φ/nm) | λ<br>(nm) | Power<br>W <sup>λ</sup> /nm | Lumens<br>(φ/nm) |
|-----------|-----------------------------|------------------|-----------|-----------------------------|------------------|-----------|-----------------------------|------------------|-----------|-----------------------------|------------------|-----------|-----------------------------|------------------|
| 360       | 0                           | NR               | 490       | 52                          | NR               | 620       | 888                         | NR               | 750       | 27                          | NR               | 880       | 1                           | NR               |
| 365       | 0                           | NR               | 495       | 87                          | NR               | 625       | 834                         | NR               | 755       | 23                          | NR               | 885       | 1                           | NR               |
| 370       | 0                           | NR               | 500       | 135                         | NR               | 630       | 776                         | NR               | 760       | 20                          | NR               | 890       | 1                           | NR               |
| 375       | 0                           | NR               | 505       | 196                         | NR               | 635       | 712                         | NR               | 765       | 17                          | NR               | 895       | 0                           | NR               |
| 380       | 0                           | NR               | 510       | 258                         | NR               | 640       | 648                         | NR               | 770       | 15                          | NR               | 900       | 0                           | NR               |
| 385       | 1                           | NR               | 515       | 317                         | NR               | 645       | 583                         | NR               | 775       | 12                          | NR               | 905       | 0                           | NR               |
| 390       | 2                           | NR               | 520       | 368                         | NR               | 650       | 523                         | NR               | 780       | 11                          | NR               | 910       | 0                           | NR               |
| 395       | 4                           | NR               | 525       | 408                         | NR               | 655       | 465                         | NR               | 785       | 9                           | NR               | 915       | 0                           | NR               |
| 400       | 6                           | NR               | 530       | 443                         | NR               | 660       | 410                         | NR               | 790       | 8                           | NR               | 920       | 0                           | NR               |
| 405       | 11                          | NR               | 535       | 473                         | NR               | 665       | 360                         | NR               | 795       | 7                           | NR               | 925       | 0                           | NR               |
| 410       | 23                          | NR               | 540       | 498                         | NR               | 670       | 313                         | NR               | 800       | 6                           | NR               | 930       | 0                           | NR               |
| 415       | 51                          | NR               | 545       | 530                         | NR               | 675       | 272                         | NR               | 805       | 5                           | NR               | 935       | 0                           | NR               |
| 420       | 111                         | NR               | 550       | 563                         | NR               | 680       | 236                         | NR               | 810       | 4                           | NR               | 940       | 0                           | NR               |
| 425       | 214                         | NR               | 555       | 605                         | NR               | 685       | 203                         | NR               | 815       | 4                           | NR               | 945       | 0                           | NR               |
| 430       | 339                         | NR               | 560       | 651                         | NR               | 690       | 175                         | NR               | 820       | 3                           | NR               | 950       | 0                           | NR               |
| 435       | 467                         | NR               | 565       | 705                         | NR               | 695       | 150                         | NR               | 825       | 3                           | NR               | 955       | 0                           | NR               |
| 440       | 535                         | NR               | 570       | 765                         | NR               | 700       | 128                         | NR               | 830       | 3                           | NR               | 960       | 0                           | NR               |
| 445       | 372                         | NR               | 575       | 824                         | NR               | 705       | 110                         | NR               | 835       | 2                           | NR               | 965       | 0                           | NR               |
| 450       | 160                         | NR               | 580       | 882                         | NR               | 710       | 94                          | NR               | 840       | 2                           | NR               | 970       | 0                           | NR               |
| 455       | 89                          | NR               | 585       | 930                         | NR               | 715       | 80                          | NR               | 845       | 2                           | NR               | 975       | 0                           | NR               |
| 460       | 53                          | NR               | 590       | 968                         | NR               | 720       | 69                          | NR               | 850       | 1                           | NR               | 980       | 0                           | NR               |
| 465       | 31                          | NR               | 595       | 991                         | NR               | 725       | 59                          | NR               | 855       | 1                           | NR               | 985       | 0                           | NR               |
| 470       | 23                          | NR               | 600       | 999                         | NR               | 730       | 50                          | NR               | 860       | 1                           | NR               | 990       | 0                           | NR               |
| 475       | 21                          | NR               | 605       | 992                         | NR               | 735       | 43                          | NR               | 865       | 1                           | NR               | 995       | 0                           | NR               |
| 480       | 23                          | NR               | 610       | 969                         | NR               | 740       | 36                          | NR               | 870       | 1                           | NR               | 1000      | 0                           | NR               |
| 485       | 32                          | NR               | 615       | 935                         | NR               | 745       | 31                          | NR               | 875       | 1                           | NR               |           |                             |                  |


REPORT NUMBER: SP1-2407-184-3

TM-30-18





### Summary

$R_f = 67.9$   
 $R_g = 98.6$   
 $CIE\ R_a = 71.1$   
 $R_g = -27.8$

### Spectral Power Distribution Comparison

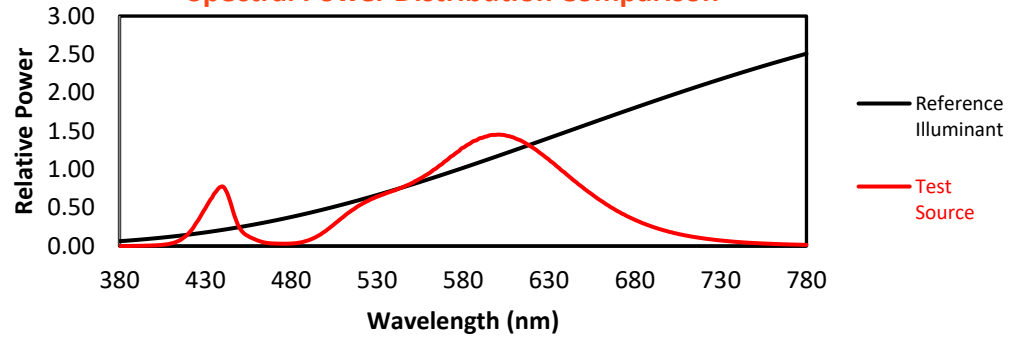





### Color Vector Graphics

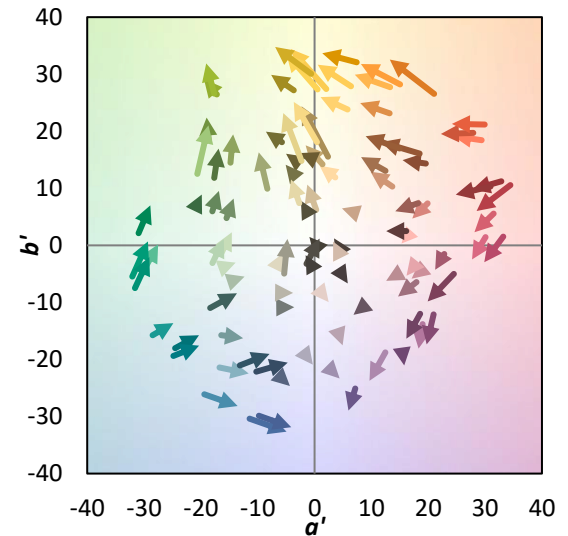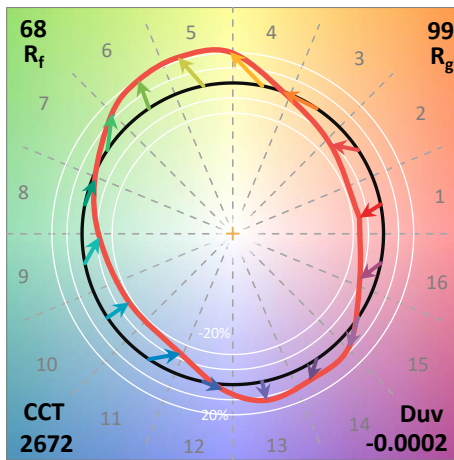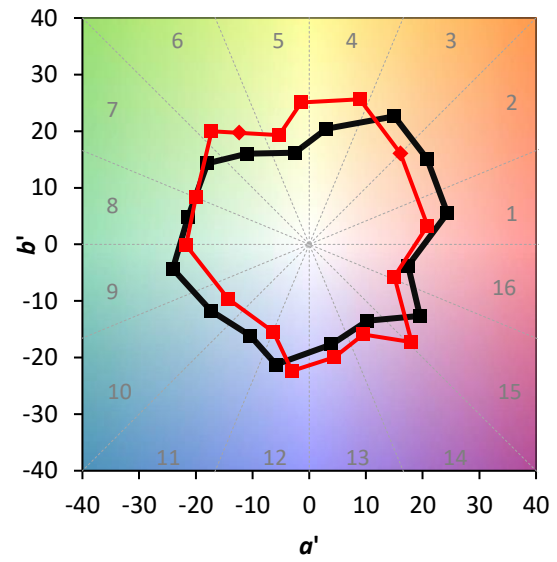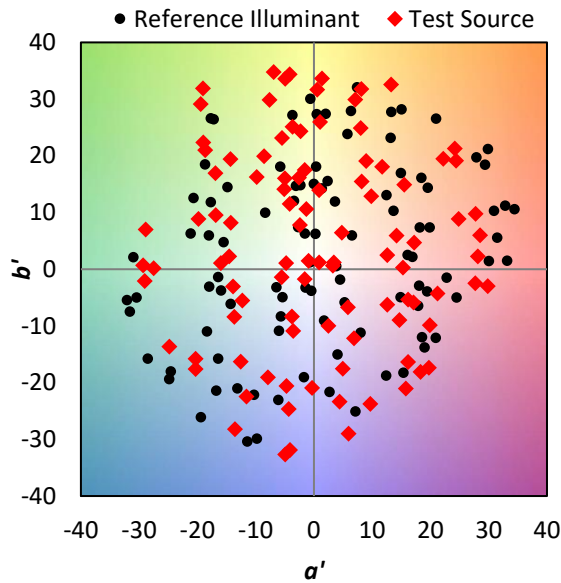


**Individual Sample Fidelity Index ( $R_{f,i}$ )**

|            |            |            |            |
|------------|------------|------------|------------|
| CES01 = 86 | CES26 = 53 | CES51 = 75 | CES76 = 51 |
| CES02 = 63 | CES27 = 70 | CES52 = 80 | CES77 = 79 |
| CES03 = 31 | CES28 = 81 | CES53 = 64 | CES78 = 58 |
| CES04 = 71 | CES29 = 37 | CES54 = 73 | CES79 = 82 |
| CES05 = 50 | CES30 = 33 | CES55 = 69 | CES80 = 82 |
| CES06 = 52 | CES31 = 44 | CES56 = 60 | CES81 = 69 |
| CES07 = 42 | CES32 = 47 | CES57 = 54 | CES82 = 92 |
| CES08 = 41 | CES33 = 45 | CES58 = 59 | CES83 = 82 |
| CES09 = 29 | CES34 = 67 | CES59 = 85 | CES84 = 92 |
| CES10 = 77 | CES35 = 84 | CES60 = 86 | CES85 = 87 |
| CES11 = 60 | CES36 = 68 | CES61 = 86 | CES86 = 60 |
| CES12 = 66 | CES37 = 77 | CES62 = 59 | CES87 = 79 |
| CES13 = 44 | CES38 = 40 | CES63 = 66 | CES88 = 70 |
| CES14 = 74 | CES39 = 88 | CES64 = 69 | CES89 = 66 |
| CES15 = 72 | CES40 = 82 | CES65 = 64 | CES90 = 64 |
| CES16 = 48 | CES41 = 70 | CES66 = 65 | CES91 = 81 |
| CES17 = 51 | CES42 = 76 | CES67 = 64 | CES92 = 69 |
| CES18 = 57 | CES43 = 63 | CES68 = 73 | CES93 = 81 |
| CES19 = 73 | CES44 = 97 | CES69 = 83 | CES94 = 53 |
| CES20 = 67 | CES45 = 74 | CES70 = 64 | CES95 = 77 |
| CES21 = 88 | CES46 = 67 | CES71 = 60 | CES96 = 79 |
| CES22 = 80 | CES47 = 55 | CES72 = 87 | CES97 = 78 |
| CES23 = 92 | CES48 = 42 | CES73 = 57 | CES98 = 69 |
| CES24 = 92 | CES49 = 65 | CES74 = 84 | CES99 = 60 |
| CES25 = 73 | CES50 = 74 | CES75 = 60 |            |

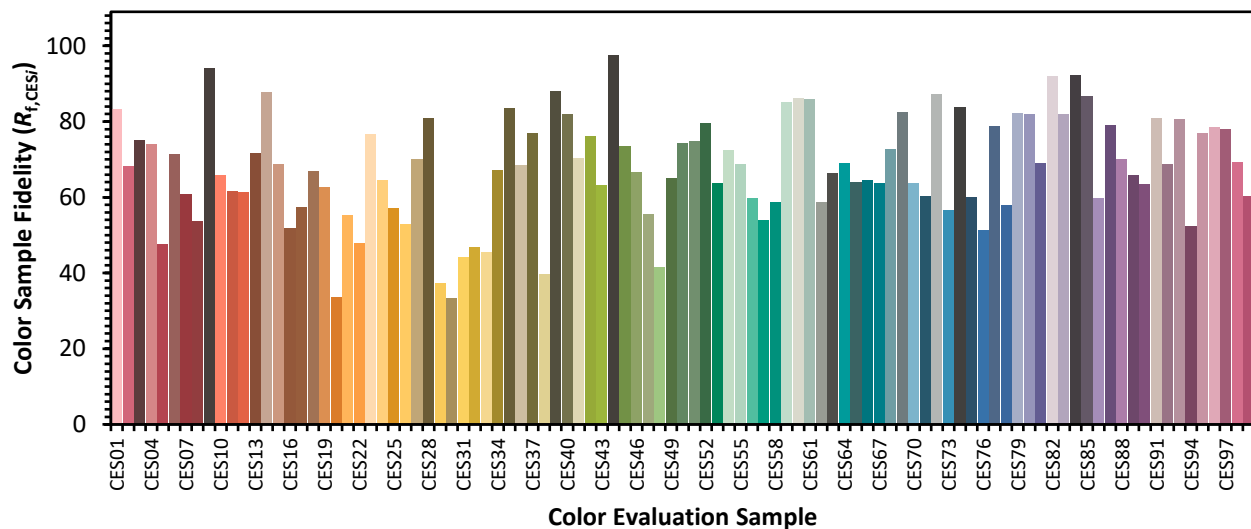

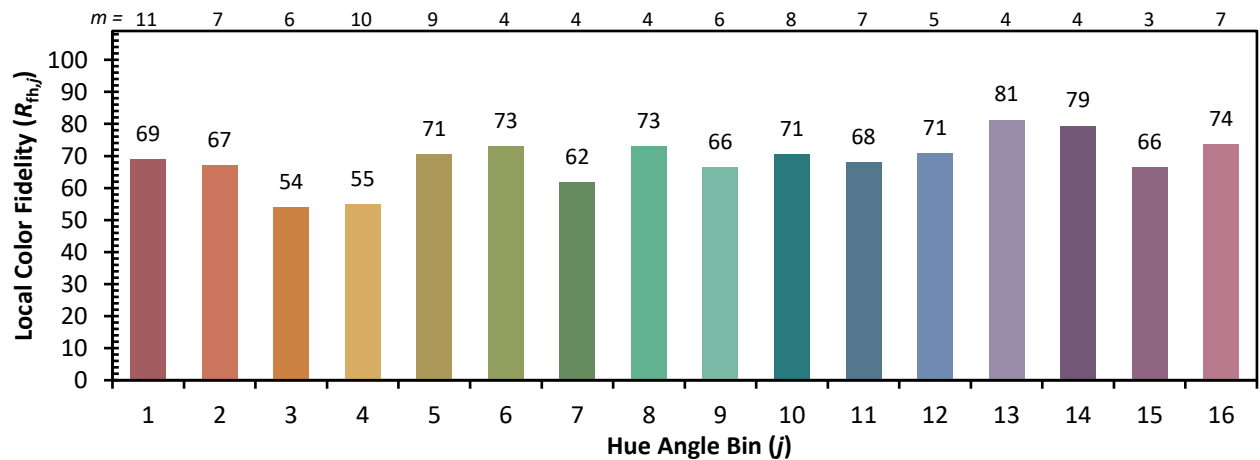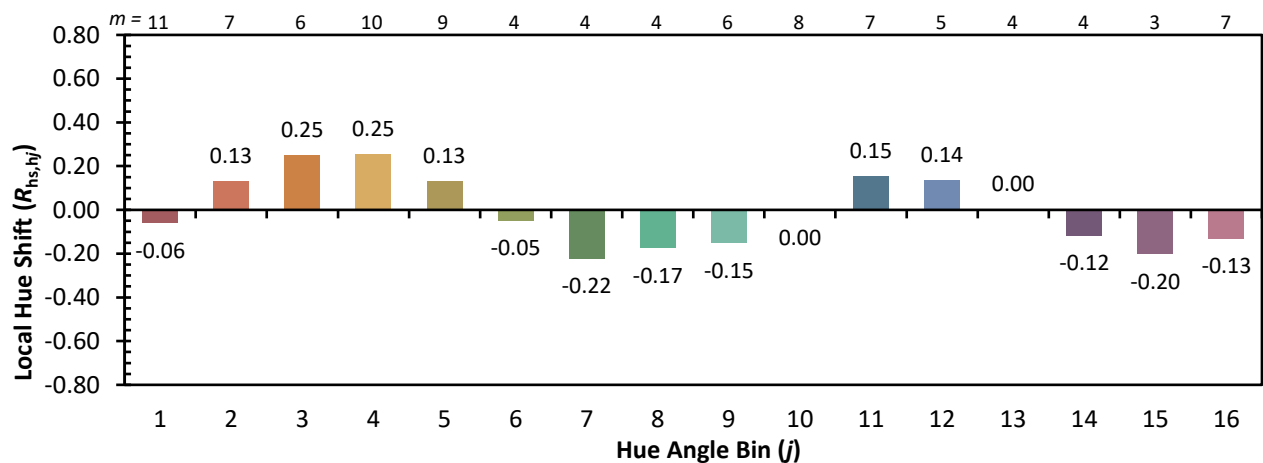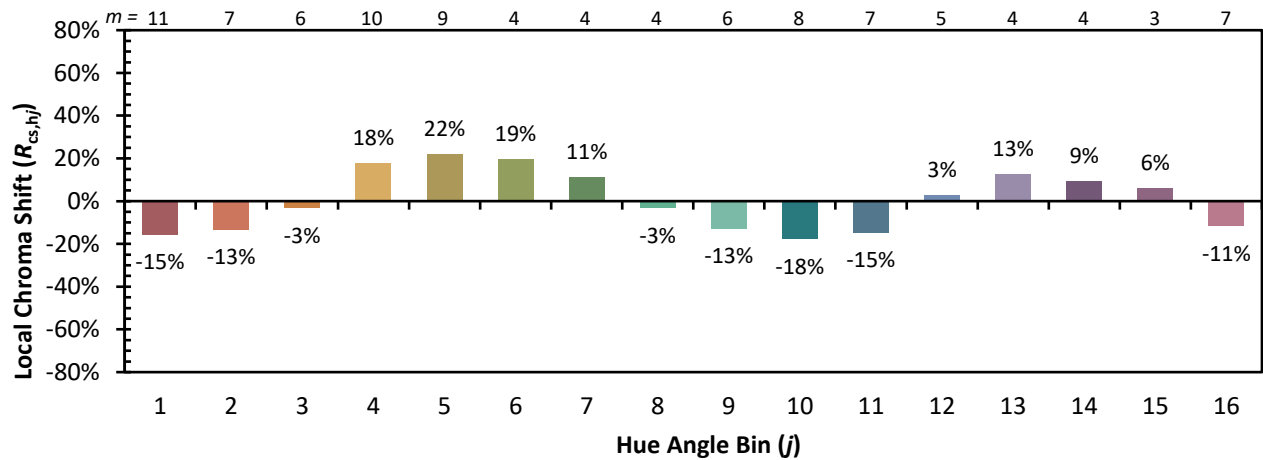**Color Rendition by Hue-Angle Bin**


**Measure Comparisons**

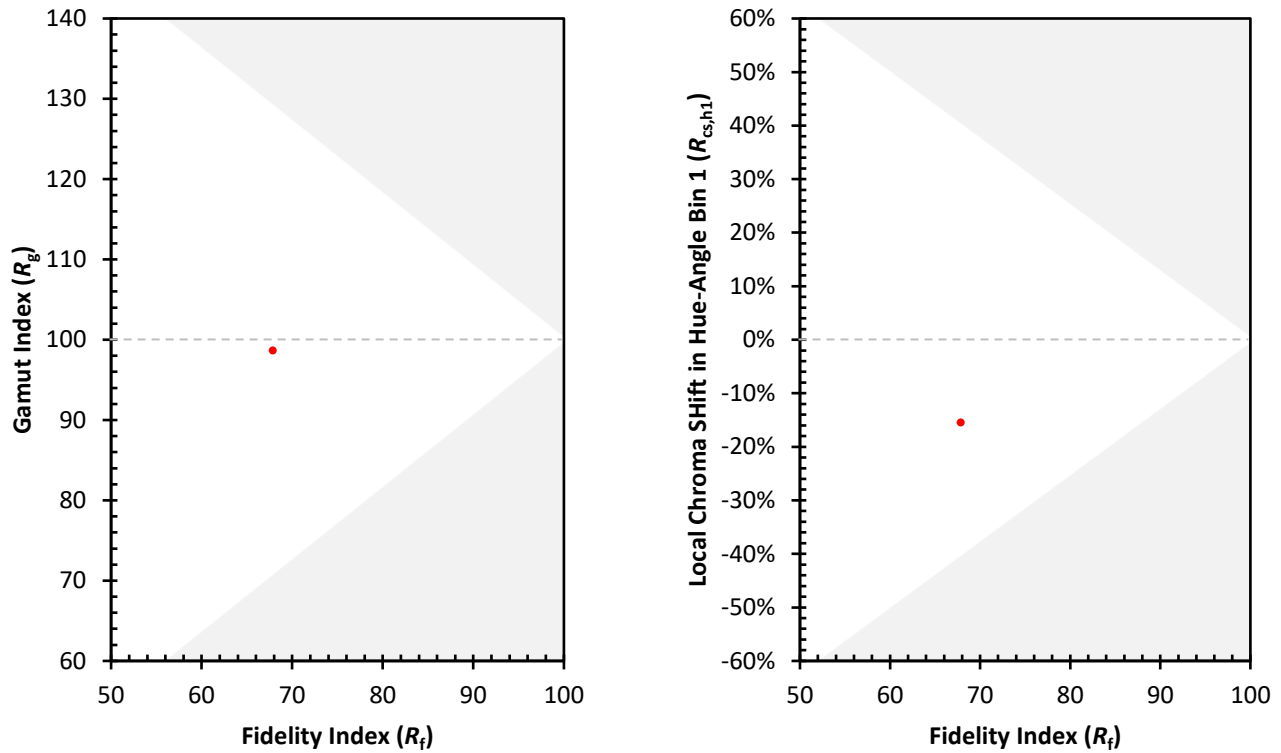

(END OF REPORT)