

Scaled data based on original data using  
LM-79-08 Approved Method: Electrical and Photometric Measurements of Solid-  
State Lighting Products

Test Report Prepared for  
Cooper Lighting Solutions  
(formerly Eaton)

Brand: STREETWORKS

Report Number: P1383023

Luminaire Tested: **VAL-T-SB5A-730-U-RW**

Issue Date: 02/18/2026

This test was performed under the Supervised Manufacturer's Testing Program. The results of this test have not been  
influenced by sources from within Cooper Lighting Solutions or from external interests.

**Test Information**

Test Method: LM-79-08  
Report Number: P1383023  
Test Lab: INNOVATION CENTER(G1)  
Issue Date: 02/18/2026  
Manufacturer: COOPER LIGHTING SOLUTIONS (FORMERLY EATON)  
Product Line: STREETWORKS  
Catalog Number: VAL-T-SB5A-730-U-RW  
Description: GALLEON II WALL SLIM HIGH DENSITY LED ARRAYS 55 SQUARE 143W 70CRI  
3000K FIXTURE w/ RECTANGULAR WIDE DISTRIBUTION OPTIC  
Light Source: (130) 3000K CCT, 70 CRI LEDS  
Ballast/Driver: ELECTRONIC DRIVER  
Luminaire Equipment:

| <u>Sample No.</u> | <u>Condition</u> | <u>Description</u> |
|-------------------|------------------|--------------------|
| a                 | good             | reflector          |
| b                 | good             | lens               |
| c                 | good             | housing            |
| d                 | good             | cord               |


**Summary**

Lumens per Lamp: N/A  
Luminaire Lumens: 22052 lumens  
Efficiency: N/A  
Efficacy: 154.2 lumens/watt  
Luminous Opening: Rectangular (W 1.5' x L: 1' x H: 0')  
IES Classification: Type III - Short  
BUG Rating: B4 - U0 - G4  
  
Input Watts (W): 143  
Input Voltage (V): 120  
Input Current (Ain): NR  
Voltage Rise (V): NR  
Power Factor: 0.98  
Total Harmonic Distortion (THDi): 10.5%  
Frequency (hertz): 60  
Stabilization Time: NR  
Operation Time: NR  
Ambient Temperature (°C): NR  
Test Distance: 28.75 FT

REPORT NUMBER: P1383023  
 CATALOG NUMBER: VAL-T-SB5A-730-U-RW

## Iso-Footcandle Lines of Horizontal Illumination


× Max cd  
 - - - 1/2 Max cd

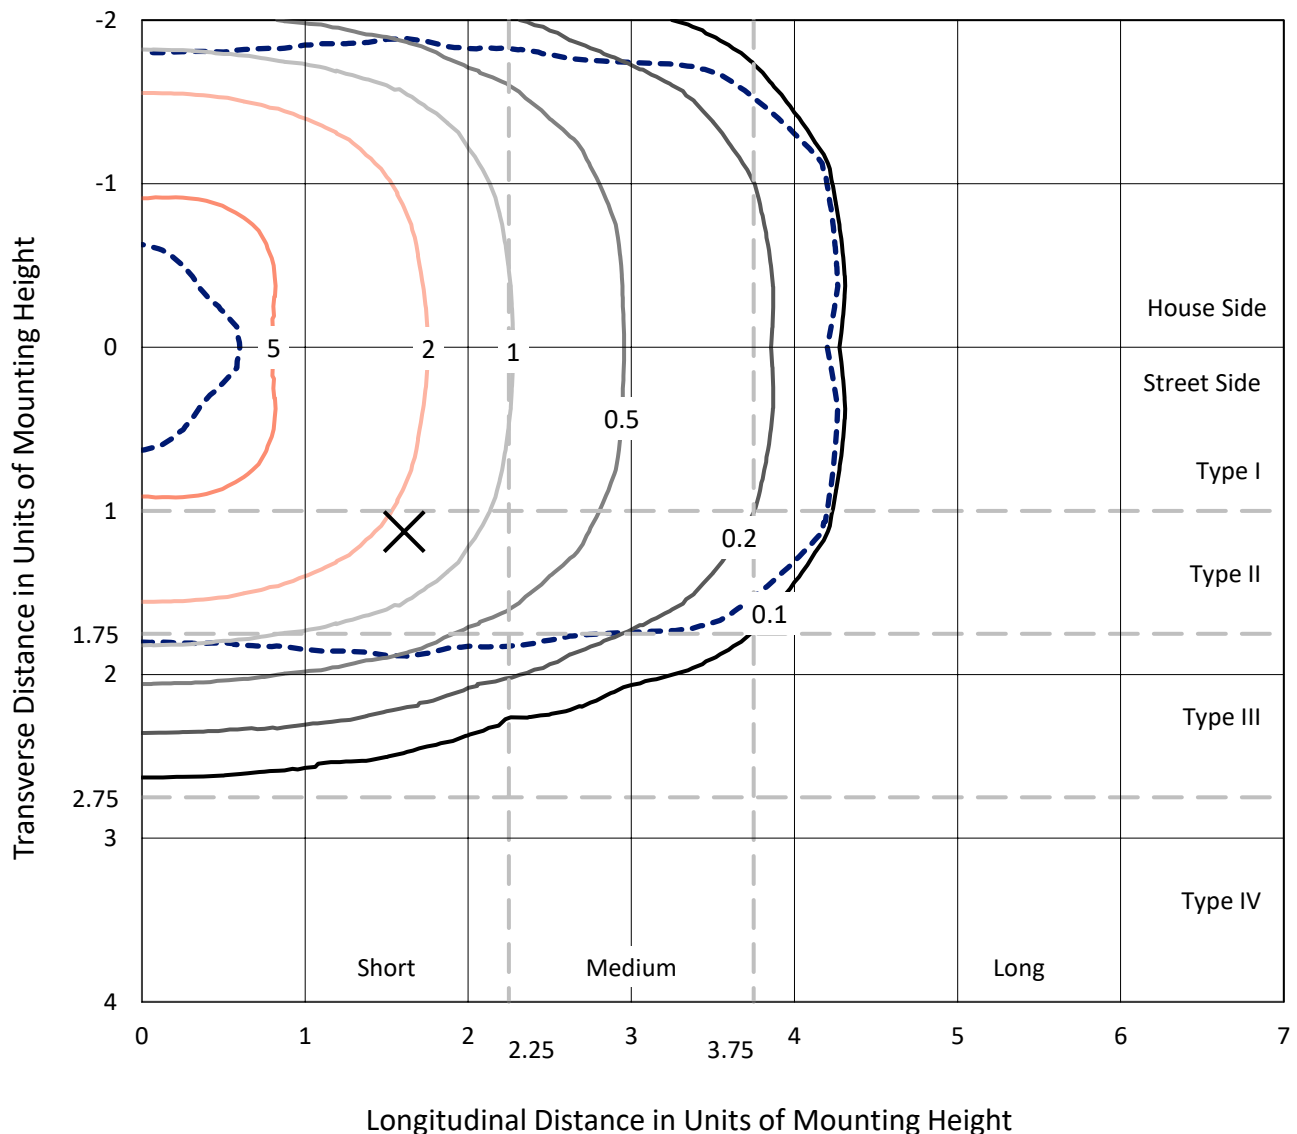

Based on 20 foot mounting height. Maximum calculated value = 6.8 fc  
 Type III - Short - N/A

REPORT NUMBER: P1383023  
CATALOG NUMBER: VAL-T-SB5A-730-U-RW

## Luminous Intensity Polar Plot

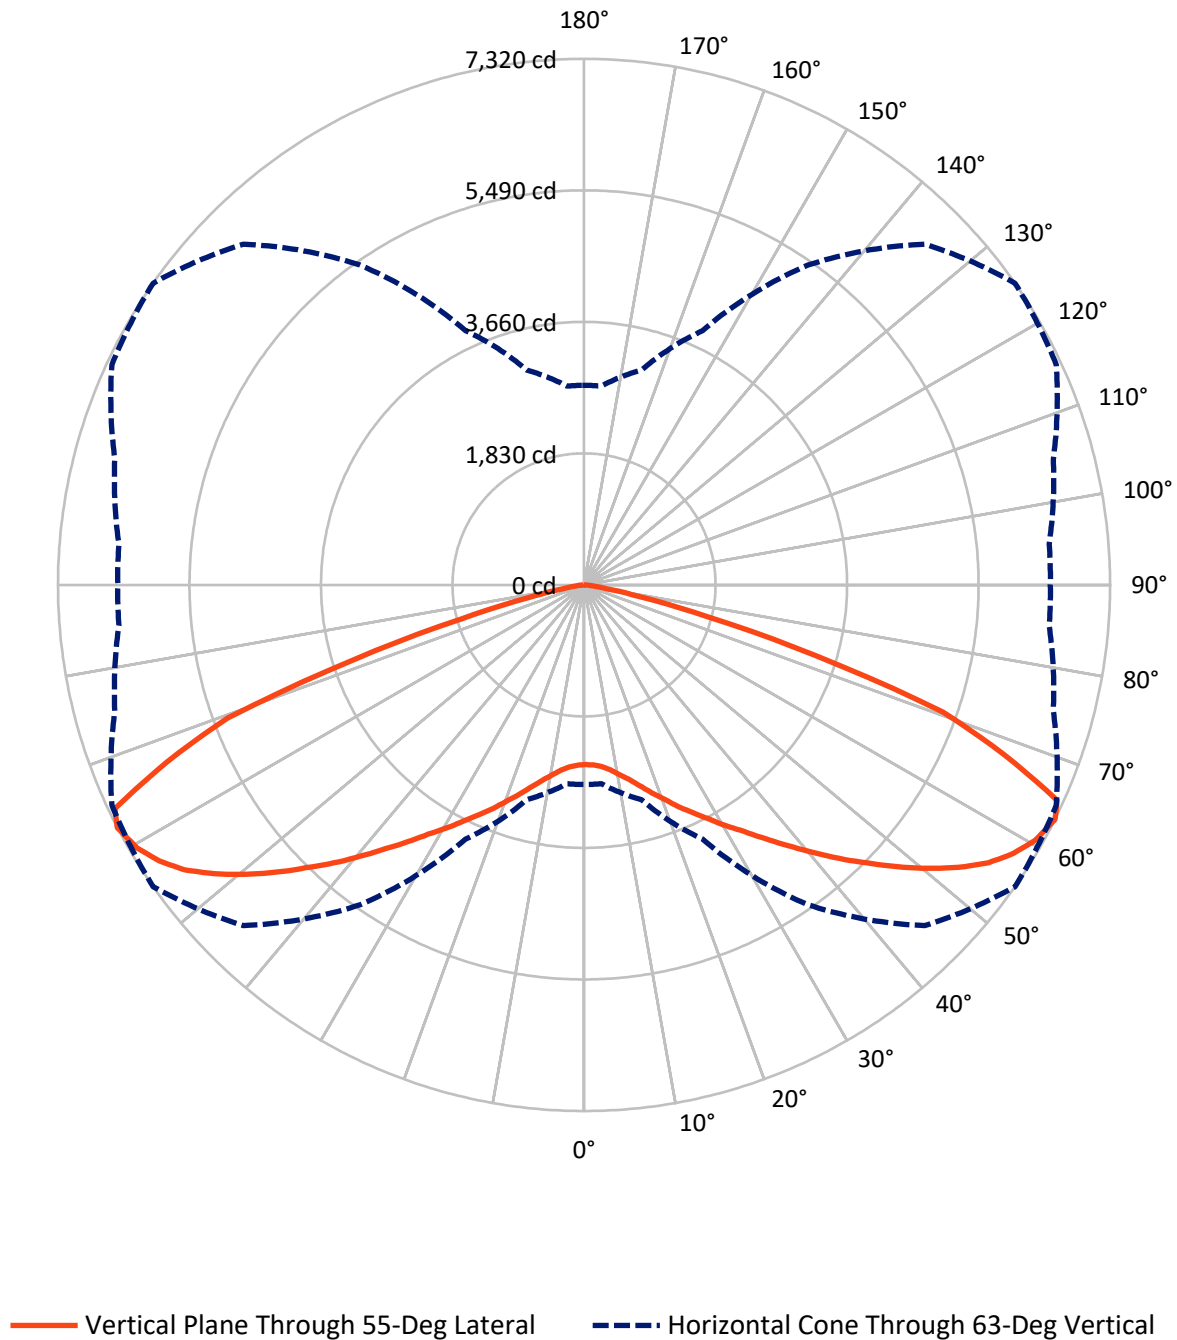

REPORT NUMBER: P1383023

CATALOG NUMBER: VAL-T-SB5A-730-U-RW

**FLUX DISTRIBUTION:**

|                    |           | Downward | Upward | Total   |
|--------------------|-----------|----------|--------|---------|
| <b>House Side</b>  | Lumens    | 11026.0  | 0.0    | 11026.0 |
|                    | % Fixture | 50.0     | 0.0    | 50.0    |
| <b>Street Side</b> | Lumens    | 11026.0  | 0.0    | 11026.0 |
|                    | % Fixture | 50.0     | 0.0    | 50.0    |
| <b>Total</b>       | Lumens    | 22052.0  | 0.0    | 22052.0 |
|                    | % Fixture | 100.0    | 0.0    | 100.0   |

**Coefficient of Utilization**

**ZONAL LUMENS:**

| Zone      | Lumens  | % Fixture |
|-----------|---------|-----------|
| 0°-10°    | 243.6   | 1.1       |
| 10°-20°   | 805.3   | 3.7       |
| 20°-30°   | 1558.0  | 7.1       |
| 30°-40°   | 2637.9  | 12.0      |
| 40°-50°   | 4160.9  | 18.9      |
| 50°-60°   | 5533.9  | 25.1      |
| 60°-70°   | 4841.4  | 22.0      |
| 70°-80°   | 2149.7  | 9.7       |
| 80°-90°   | 121.4   | 0.6       |
| 90°-100°  | 0.0     | 0.0       |
| 100°-110° | 0.0     | 0.0       |
| 110°-120° | 0.0     | 0.0       |
| 120°-130° | 0.0     | 0.0       |
| 130°-140° | 0.0     | 0.0       |
| 140°-150° | 0.0     | 0.0       |
| 150°-160° | 0.0     | 0.0       |
| 160°-170° | 0.0     | 0.0       |
| 170°-180° | 0.0     | 0.0       |
| 0°-90°    | 22052.0 | 100.0     |
| 0°-180°   | 22052.0 | 100.0     |



REPORT NUMBER: P1383023


CATALOG NUMBER: VAL-T-SB5A-730-U-RW

**LUMINAIRE CLASSIFICATION SYSTEM LUMEN TABLE AND BUG RATING:**

| Zone |             | Lumens | % Fixture | Zone Rating/Lumen Limit |      |         |
|------|-------------|--------|-----------|-------------------------|------|---------|
|      |             |        |           | B                       | U    | G       |
| FL   | (0°-30°)    | 1303.4 | 5.9       |                         |      |         |
| FM   | (30°-60°)   | 6166.3 | 28.0      |                         |      |         |
| FH   | (60°-80°)   | 3495.5 | 15.9      |                         |      | G2/5000 |
| FVH  | (80°-90°)   | 60.7   | 0.3       |                         |      | G1/100  |
| BL   | (0°-30°)    | 1303.4 | 5.9       | B3/2500                 |      |         |
| BM   | (30°-60°)   | 6166.3 | 28.0      | B4/8500                 |      |         |
| BH   | (60°-80°)   | 3495.5 | 15.9      | B4/5000                 |      | G4/5000 |
| BVH  | (80°-90°)   | 60.7   | 0.3       |                         |      | G1/100  |
| UL   | (90°-100°)  | 0.0    | 0.0       |                         | U0/0 |         |
| UH   | (100°-180°) | 0.0    | 0.0       |                         | U0/0 |         |

**BUG Rating: B4-U0-G4**

Type III Short

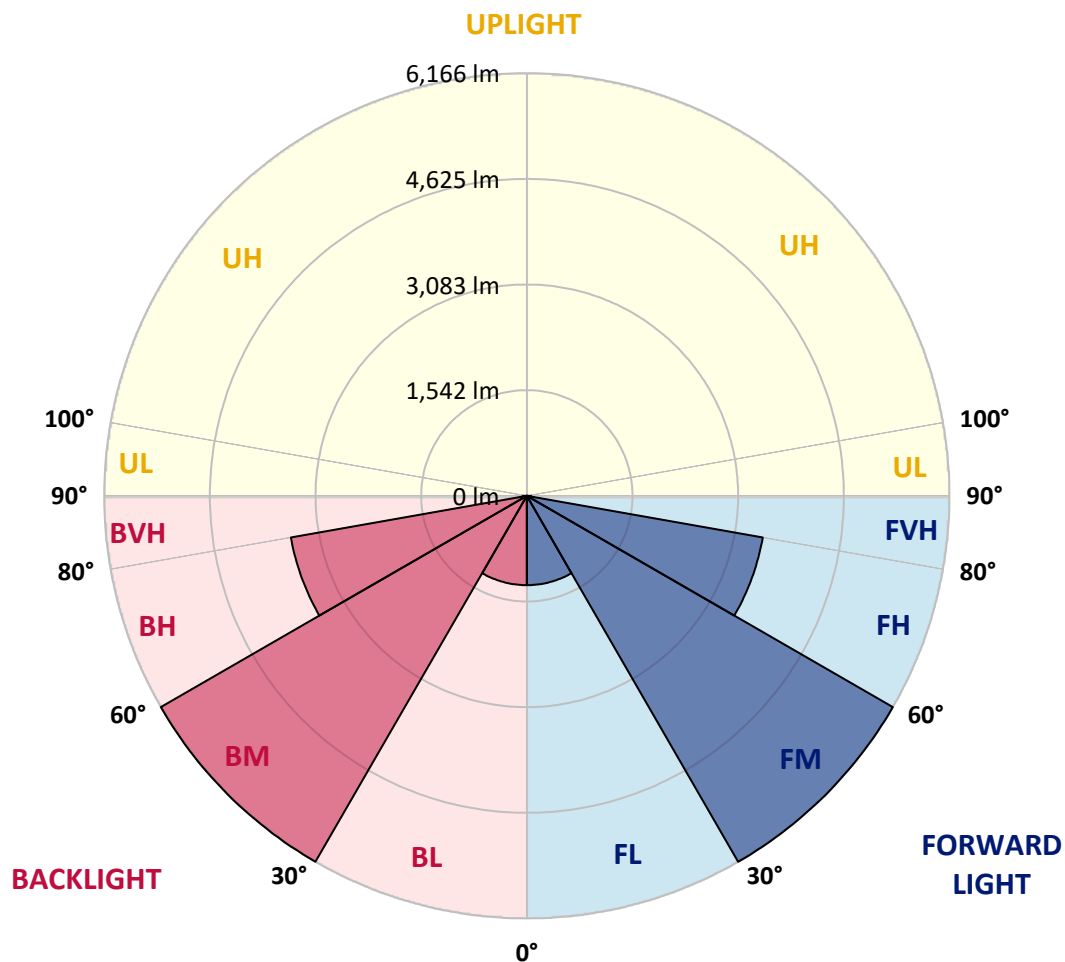



REPORT NUMBER: P1383023

CATALOG NUMBER: VAL-T-SB5A-730-U-RW

**CANDELA DISTRIBUTION (FULL):**

|       | 0°     | 5°     | 15°    | 25°    | 35°    | 45°    | 55°    | 65°    | 75°    | 85°    | 90°    |
|-------|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|--------|
| 0°    | 2498.9 | 2498.9 | 2498.9 | 2498.9 | 2498.9 | 2498.9 | 2498.9 | 2498.9 | 2498.9 | 2498.9 | 2498.9 |
| 2.5°  | 2498.9 | 2483.7 | 2478.7 | 2488.8 | 2488.8 | 2498.9 | 2509.0 | 2503.9 | 2519.1 | 2519.1 | 2509.0 |
| 5°    | 2473.6 | 2463.5 | 2463.5 | 2478.7 | 2493.8 | 2519.1 | 2539.3 | 2544.3 | 2569.5 | 2569.5 | 2574.6 |
| 7.5°  | 2458.5 | 2453.4 | 2458.5 | 2478.7 | 2514.0 | 2554.4 | 2594.8 | 2620.0 | 2660.4 | 2670.5 | 2680.6 |
| 10°   | 2483.7 | 2468.6 | 2488.8 | 2519.1 | 2564.5 | 2620.0 | 2680.6 | 2721.0 | 2766.4 | 2791.7 | 2796.7 |
| 12.5° | 2529.2 | 2519.1 | 2544.3 | 2594.8 | 2655.4 | 2721.0 | 2776.5 | 2827.0 | 2877.5 | 2912.8 | 2917.9 |
| 15°   | 2554.4 | 2549.4 | 2604.9 | 2680.6 | 2771.5 | 2842.1 | 2897.7 | 2938.1 | 2988.5 | 3028.9 | 3044.1 |
| 17.5° | 2609.9 | 2609.9 | 2685.7 | 2786.6 | 2902.7 | 2983.5 | 3039.0 | 3059.2 | 3084.5 | 3119.8 | 3150.1 |
| 20°   | 2705.8 | 2710.9 | 2791.7 | 2917.9 | 3049.1 | 3145.0 | 3180.4 | 3180.4 | 3175.3 | 3205.6 | 3220.8 |
| 22.5° | 2842.1 | 2842.1 | 2948.2 | 3074.4 | 3210.7 | 3321.7 | 3347.0 | 3301.5 | 3271.2 | 3291.4 | 3301.5 |
| 25°   | 3018.8 | 3013.8 | 3124.8 | 3261.2 | 3397.5 | 3508.5 | 3508.5 | 3437.8 | 3372.2 | 3382.3 | 3397.5 |
| 27.5° | 3205.6 | 3215.7 | 3331.8 | 3463.1 | 3604.4 | 3705.4 | 3685.2 | 3589.3 | 3488.3 | 3473.2 | 3488.3 |
| 30°   | 3427.7 | 3432.8 | 3548.9 | 3695.3 | 3821.5 | 3907.3 | 3887.1 | 3755.9 | 3619.6 | 3579.2 | 3594.3 |
| 32.5° | 3690.2 | 3690.2 | 3806.4 | 3937.6 | 4063.8 | 4144.6 | 4089.1 | 3942.7 | 3766.0 | 3725.6 | 3735.7 |
| 35°   | 3983.0 | 3998.2 | 4109.3 | 4225.4 | 4336.4 | 4402.0 | 4336.4 | 4154.7 | 3947.7 | 3902.3 | 3907.3 |
| 37.5° | 4316.2 | 4331.4 | 4437.4 | 4548.4 | 4639.3 | 4689.8 | 4598.9 | 4392.0 | 4154.7 | 4099.2 | 4109.3 |
| 40°   | 4664.6 | 4679.7 | 4800.9 | 4896.8 | 4982.6 | 5012.9 | 4891.7 | 4664.6 | 4402.0 | 4351.6 | 4351.6 |
| 42.5° | 4997.7 | 5012.9 | 5129.0 | 5265.3 | 5341.0 | 5351.1 | 5204.7 | 4947.3 | 4674.7 | 4614.1 | 4634.3 |
| 45°   | 5275.4 | 5275.4 | 5431.9 | 5593.4 | 5714.6 | 5719.6 | 5517.7 | 5240.1 | 4947.3 | 4886.7 | 4906.9 |
| 47.5° | 5467.2 | 5477.3 | 5659.1 | 5871.1 | 6032.6 | 6078.1 | 5861.0 | 5573.2 | 5245.1 | 5169.4 | 5199.7 |
| 50°   | 5588.4 | 5603.5 | 5800.4 | 6062.9 | 6305.2 | 6411.2 | 6199.2 | 5881.2 | 5558.1 | 5477.3 | 5502.6 |
| 52.5° | 5628.8 | 5628.8 | 5850.9 | 6158.8 | 6481.9 | 6683.8 | 6527.3 | 6189.1 | 5861.0 | 5765.1 | 5795.4 |
| 55°   | 5467.2 | 5492.5 | 5749.9 | 6138.6 | 6552.6 | 6870.6 | 6825.2 | 6476.9 | 6143.7 | 6042.7 | 6103.3 |
| 57.5° | 5048.2 | 5098.7 | 5406.6 | 5926.6 | 6517.3 | 6991.8 | 7047.3 | 6749.5 | 6411.2 | 6320.4 | 6355.7 |
| 60°   | 4099.2 | 4119.3 | 4558.5 | 5406.6 | 6249.7 | 6991.8 | 7213.9 | 7012.0 | 6673.7 | 6582.9 | 6613.2 |
| 62.5° | 2933.0 | 2973.4 | 3286.4 | 4190.0 | 5674.2 | 6794.9 | 7299.7 | 7229.1 | 6800.0 | 6587.9 | 6587.9 |
| 63°   | 2776.5 | 2776.5 | 3094.6 | 3902.3 | 5431.9 | 6704.0 | 7319.9 | 7249.2 | 6759.6 | 6497.1 | 6487.0 |
| 65°   | 2004.1 | 2019.3 | 2317.1 | 2963.3 | 4275.8 | 6234.6 | 7234.1 | 6996.8 | 6396.1 | 6128.5 | 6128.5 |
| 67.5° | 1166.1 | 1176.2 | 1352.9 | 1903.2 | 2887.6 | 4957.4 | 6305.2 | 6638.4 | 6365.8 | 6148.7 | 6158.8 |
| 70°   | 752.2  | 762.3  | 848.1  | 1070.2 | 1721.4 | 2822.0 | 5295.6 | 6436.5 | 6290.1 | 5977.1 | 5967.0 |
| 72.5° | 520.0  | 520.0  | 560.4  | 681.5  | 888.5  | 1539.7 | 3362.1 | 5684.3 | 6350.7 | 6174.0 | 6158.8 |
| 75°   | 338.2  | 373.6  | 403.9  | 459.4  | 509.9  | 737.0  | 1771.9 | 4321.3 | 5780.2 | 5840.8 | 5613.6 |
| 77.5° | 237.3  | 237.3  | 307.9  | 323.1  | 323.1  | 439.2  | 787.5  | 2019.3 | 3094.6 | 2892.6 | 2569.5 |
| 80°   | 186.8  | 176.7  | 186.8  | 227.2  | 232.2  | 247.4  | 323.1  | 530.1  | 1055.1 | 514.9  | 378.6  |
| 82.5° | 121.2  | 116.1  | 121.2  | 146.4  | 136.3  | 126.2  | 136.3  | 232.2  | 292.8  | 166.6  | 151.4  |
| 85°   | 35.3   | 40.4   | 50.5   | 55.5   | 55.5   | 55.5   | 65.6   | 90.9   | 101.0  | 75.7   | 70.7   |
| 87.5° | 10.1   | 15.1   | 15.1   | 15.1   | 20.2   | 20.2   | 30.3   | 35.3   | 40.4   | 40.4   | 40.4   |
| 90°   | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    | 0.0    |

LM-79-2019: Approved Method: Electrical and Photometric Measurements of Solid-State Lighting Products

Report Prepared for

Cooper Lighting Solutions

McGraw-Edison

Report Number: SP1-2407-184-4

Test Date: 10/10/2024

Luminaire Tested: GSS-SB1A-730-U-5WQ

Data in this report applies to families of products including GSS-SB1A-730-U-5WQ

### Test Information

Test Method: LM-79-2019  
 Report Number: SP1-2407-184-4  
 Test Lab: COOPER LIGHTING SOLUTIONS  
 Photometer: SP1 - 76IN SPHERE  
 Measurement Geometry:  $4\pi$   
 Issue Date: 10/15/2024  
 Manufacturer: COOPER LIGHTING SOLUTIONS  
 Product Line: McGraw-Edison  
 Catalog Number: **GSS-SB1A-730-U-5WQ**  
 Description: GALLEON II SITE SLIM 1SQ 350MA 5WQ HIGH DENSITY LIGHTSQUARE WITH 70 CRI  
 3000K CCT 26 LEDS

### Spectral Parameters

CCT (K): 2985  
 CIE  $u'$ : 0.2504  
 CIE  $v'$ : 0.5243  
 Duv: 0.0019  
 CIE x: 0.4408  
 CIE y: 0.4101  
 CIE z: 0.1491  
 Peak Wavelength (nm): 595  
 Dominant Wavelength (nm): 582  
 Purity: 55.41818  
 R<sub>f</sub>: 73.8  
 R<sub>g</sub>: 94.4

CRI (Ra): 70.8  
 R1: 66.3  
 R2: 80.6  
 R3: 94.5  
 R4: 68.2  
 R5: 66.5  
 R6: 74.7  
 R7: 76.2  
 R8: 39.6  
 R9: -43.2  
 R10: 57.6  
 R11: 64.8  
 R12: 53.5  
 R13: 68.7  
 R14: 97.0  
 R15: 56.4



### Test Conditions

Stabilization Time: 36M  
 Operation Time: 1H 36M  
 Sphere Temperature (°C): 25.2

REPORT NUMBER: SP1-2407-184-4

| Measurement and Test Equipment |                       |                  |                      |
|--------------------------------|-----------------------|------------------|----------------------|
| Instrument                     | Identification Number | Calibration Date | Calibration Due Date |
| Photometer                     | IN0058                | 6/18/2024        | 12/18/2024           |
| Power Meter                    | INXT2011004           | 2/8/2024         | 2/8/2025             |
| AC Power Source                | IN0063                | 10/24/2023       | 10/24/2024           |
| DC Power Source                | IN0208                | 10/24/2023       | 10/24/2024           |
| Sphere Thermometer             | IN0085                | 10/24/2023       | 10/24/2024           |
| Room Thermometer               | IN0046                | 10/24/2023       | 10/24/2024           |



REPORT NUMBER: SP1-2407-184-4

### Photopic Flux vs. Wavelength



### Photopic Lumens: NR

| $\lambda$<br>(nm) | Power<br>$\text{W}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) |
|-------------------|-------------------------------|--------------------------------|-------------------|-------------------------------|--------------------------------|-------------------|-------------------------------|--------------------------------|-------------------|-------------------------------|--------------------------------|-------------------|-------------------------------|--------------------------------|
| 360               | 0                             | NR                             | 490               | 142                           | NR                             | 620               | 803                           | NR                             | 750               | 17                            | NR                             | 880               | 0                             | NR                             |
| 365               | 0                             | NR                             | 495               | 189                           | NR                             | 625               | 734                           | NR                             | 755               | 15                            | NR                             | 885               | 0                             | NR                             |
| 370               | 0                             | NR                             | 500               | 240                           | NR                             | 630               | 670                           | NR                             | 760               | 13                            | NR                             | 890               | 0                             | NR                             |
| 375               | 0                             | NR                             | 505               | 290                           | NR                             | 635               | 600                           | NR                             | 765               | 11                            | NR                             | 895               | 0                             | NR                             |
| 380               | 0                             | NR                             | 510               | 335                           | NR                             | 640               | 535                           | NR                             | 770               | 9                             | NR                             | 900               | 0                             | NR                             |
| 385               | 0                             | NR                             | 515               | 375                           | NR                             | 645               | 473                           | NR                             | 775               | 8                             | NR                             | 905               | 0                             | NR                             |
| 390               | 1                             | NR                             | 520               | 408                           | NR                             | 650               | 415                           | NR                             | 780               | 7                             | NR                             | 910               | 0                             | NR                             |
| 395               | 2                             | NR                             | 525               | 434                           | NR                             | 655               | 362                           | NR                             | 785               | 6                             | NR                             | 915               | 0                             | NR                             |
| 400               | 4                             | NR                             | 530               | 461                           | NR                             | 660               | 313                           | NR                             | 790               | 5                             | NR                             | 920               | 0                             | NR                             |
| 405               | 8                             | NR                             | 535               | 486                           | NR                             | 665               | 271                           | NR                             | 795               | 4                             | NR                             | 925               | 0                             | NR                             |
| 410               | 16                            | NR                             | 540               | 514                           | NR                             | 670               | 231                           | NR                             | 800               | 4                             | NR                             | 930               | 0                             | NR                             |
| 415               | 33                            | NR                             | 545               | 549                           | NR                             | 675               | 198                           | NR                             | 805               | 3                             | NR                             | 935               | 0                             | NR                             |
| 420               | 69                            | NR                             | 550               | 591                           | NR                             | 680               | 169                           | NR                             | 810               | 3                             | NR                             | 940               | 0                             | NR                             |
| 425               | 131                           | NR                             | 555               | 640                           | NR                             | 685               | 144                           | NR                             | 815               | 2                             | NR                             | 945               | 0                             | NR                             |
| 430               | 227                           | NR                             | 560               | 695                           | NR                             | 690               | 123                           | NR                             | 820               | 2                             | NR                             | 950               | 0                             | NR                             |
| 435               | 369                           | NR                             | 565               | 757                           | NR                             | 695               | 104                           | NR                             | 825               | 2                             | NR                             | 955               | 0                             | NR                             |
| 440               | 517                           | NR                             | 570               | 822                           | NR                             | 700               | 88                            | NR                             | 830               | 2                             | NR                             | 960               | 0                             | NR                             |
| 445               | 498                           | NR                             | 575               | 882                           | NR                             | 705               | 75                            | NR                             | 835               | 1                             | NR                             | 965               | 0                             | NR                             |
| 450               | 315                           | NR                             | 580               | 935                           | NR                             | 710               | 63                            | NR                             | 840               | 1                             | NR                             | 970               | 0                             | NR                             |
| 455               | 204                           | NR                             | 585               | 972                           | NR                             | 715               | 54                            | NR                             | 845               | 1                             | NR                             | 975               | 0                             | NR                             |
| 460               | 145                           | NR                             | 590               | 996                           | NR                             | 720               | 46                            | NR                             | 850               | 1                             | NR                             | 980               | 0                             | NR                             |
| 465               | 100                           | NR                             | 595               | 1000                          | NR                             | 725               | 39                            | NR                             | 855               | 1                             | NR                             | 985               | 0                             | NR                             |
| 470               | 78                            | NR                             | 600               | 989                           | NR                             | 730               | 33                            | NR                             | 860               | 1                             | NR                             | 990               | 0                             | NR                             |
| 475               | 76                            | NR                             | 605               | 960                           | NR                             | 735               | 28                            | NR                             | 865               | 1                             | NR                             | 995               | 0                             | NR                             |
| 480               | 83                            | NR                             | 610               | 918                           | NR                             | 740               | 24                            | NR                             | 870               | 1                             | NR                             | 1000              | 0                             | NR                             |
| 485               | 105                           | NR                             | 615               | 864                           | NR                             | 745               | 20                            | NR                             | 875               | 1                             | NR                             |                   |                               |                                |

REPORT NUMBER: SP1-2407-184-4

### Scotopic Flux vs. Wavelength



Scotopic Lumens: NR

S/P: 1.19

| $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) |
|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|
| 360               | 0                                    | NR                             | 490               | 142                                  | NR                             | 620               | 803                                  | NR                             | 750               | 17                                   | NR                             | 880               | 0                                    | NR                             |
| 365               | 0                                    | NR                             | 495               | 189                                  | NR                             | 625               | 734                                  | NR                             | 755               | 15                                   | NR                             | 885               | 0                                    | NR                             |
| 370               | 0                                    | NR                             | 500               | 240                                  | NR                             | 630               | 670                                  | NR                             | 760               | 13                                   | NR                             | 890               | 0                                    | NR                             |
| 375               | 0                                    | NR                             | 505               | 290                                  | NR                             | 635               | 600                                  | NR                             | 765               | 11                                   | NR                             | 895               | 0                                    | NR                             |
| 380               | 0                                    | NR                             | 510               | 335                                  | NR                             | 640               | 535                                  | NR                             | 770               | 9                                    | NR                             | 900               | 0                                    | NR                             |
| 385               | 0                                    | NR                             | 515               | 375                                  | NR                             | 645               | 473                                  | NR                             | 775               | 8                                    | NR                             | 905               | 0                                    | NR                             |
| 390               | 1                                    | NR                             | 520               | 408                                  | NR                             | 650               | 415                                  | NR                             | 780               | 7                                    | NR                             | 910               | 0                                    | NR                             |
| 395               | 2                                    | NR                             | 525               | 434                                  | NR                             | 655               | 362                                  | NR                             | 785               | 6                                    | NR                             | 915               | 0                                    | NR                             |
| 400               | 4                                    | NR                             | 530               | 461                                  | NR                             | 660               | 313                                  | NR                             | 790               | 5                                    | NR                             | 920               | 0                                    | NR                             |
| 405               | 8                                    | NR                             | 535               | 486                                  | NR                             | 665               | 271                                  | NR                             | 795               | 4                                    | NR                             | 925               | 0                                    | NR                             |
| 410               | 16                                   | NR                             | 540               | 514                                  | NR                             | 670               | 231                                  | NR                             | 800               | 4                                    | NR                             | 930               | 0                                    | NR                             |
| 415               | 33                                   | NR                             | 545               | 549                                  | NR                             | 675               | 198                                  | NR                             | 805               | 3                                    | NR                             | 935               | 0                                    | NR                             |
| 420               | 69                                   | NR                             | 550               | 591                                  | NR                             | 680               | 169                                  | NR                             | 810               | 3                                    | NR                             | 940               | 0                                    | NR                             |
| 425               | 131                                  | NR                             | 555               | 640                                  | NR                             | 685               | 144                                  | NR                             | 815               | 2                                    | NR                             | 945               | 0                                    | NR                             |
| 430               | 227                                  | NR                             | 560               | 695                                  | NR                             | 690               | 123                                  | NR                             | 820               | 2                                    | NR                             | 950               | 0                                    | NR                             |
| 435               | 369                                  | NR                             | 565               | 757                                  | NR                             | 695               | 104                                  | NR                             | 825               | 2                                    | NR                             | 955               | 0                                    | NR                             |
| 440               | 517                                  | NR                             | 570               | 822                                  | NR                             | 700               | 88                                   | NR                             | 830               | 2                                    | NR                             | 960               | 0                                    | NR                             |
| 445               | 498                                  | NR                             | 575               | 882                                  | NR                             | 705               | 75                                   | NR                             | 835               | 1                                    | NR                             | 965               | 0                                    | NR                             |
| 450               | 315                                  | NR                             | 580               | 935                                  | NR                             | 710               | 63                                   | NR                             | 840               | 1                                    | NR                             | 970               | 0                                    | NR                             |
| 455               | 204                                  | NR                             | 585               | 972                                  | NR                             | 715               | 54                                   | NR                             | 845               | 1                                    | NR                             | 975               | 0                                    | NR                             |
| 460               | 145                                  | NR                             | 590               | 996                                  | NR                             | 720               | 46                                   | NR                             | 850               | 1                                    | NR                             | 980               | 0                                    | NR                             |
| 465               | 100                                  | NR                             | 595               | 1000                                 | NR                             | 725               | 39                                   | NR                             | 855               | 1                                    | NR                             | 985               | 0                                    | NR                             |
| 470               | 78                                   | NR                             | 600               | 989                                  | NR                             | 730               | 33                                   | NR                             | 860               | 1                                    | NR                             | 990               | 0                                    | NR                             |
| 475               | 76                                   | NR                             | 605               | 960                                  | NR                             | 735               | 28                                   | NR                             | 865               | 1                                    | NR                             | 995               | 0                                    | NR                             |
| 480               | 83                                   | NR                             | 610               | 918                                  | NR                             | 740               | 24                                   | NR                             | 870               | 1                                    | NR                             | 1000              | 0                                    | NR                             |
| 485               | 105                                  | NR                             | 615               | 864                                  | NR                             | 745               | 20                                   | NR                             | 875               | 1                                    | NR                             |                   |                                      |                                |

REPORT NUMBER: SP1-2407-184-4

### Melanopic Flux vs. Wavelength


**Melanopic Lumens: NR**
**M/P: 2.13**

| $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) | $\lambda$<br>(nm) | Power<br>$\text{W}^\wedge/\text{nm}$ | Lumens<br>( $\phi/\text{nm}$ ) |
|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|-------------------|--------------------------------------|--------------------------------|
| 360               | 0                                    | NR                             | 490               | 142                                  | NR                             | 620               | 803                                  | NR                             | 750               | 17                                   | NR                             | 880               | 0                                    | NR                             |
| 365               | 0                                    | NR                             | 495               | 189                                  | NR                             | 625               | 734                                  | NR                             | 755               | 15                                   | NR                             | 885               | 0                                    | NR                             |
| 370               | 0                                    | NR                             | 500               | 240                                  | NR                             | 630               | 670                                  | NR                             | 760               | 13                                   | NR                             | 890               | 0                                    | NR                             |
| 375               | 0                                    | NR                             | 505               | 290                                  | NR                             | 635               | 600                                  | NR                             | 765               | 11                                   | NR                             | 895               | 0                                    | NR                             |
| 380               | 0                                    | NR                             | 510               | 335                                  | NR                             | 640               | 535                                  | NR                             | 770               | 9                                    | NR                             | 900               | 0                                    | NR                             |
| 385               | 0                                    | NR                             | 515               | 375                                  | NR                             | 645               | 473                                  | NR                             | 775               | 8                                    | NR                             | 905               | 0                                    | NR                             |
| 390               | 1                                    | NR                             | 520               | 408                                  | NR                             | 650               | 415                                  | NR                             | 780               | 7                                    | NR                             | 910               | 0                                    | NR                             |
| 395               | 2                                    | NR                             | 525               | 434                                  | NR                             | 655               | 362                                  | NR                             | 785               | 6                                    | NR                             | 915               | 0                                    | NR                             |
| 400               | 4                                    | NR                             | 530               | 461                                  | NR                             | 660               | 313                                  | NR                             | 790               | 5                                    | NR                             | 920               | 0                                    | NR                             |
| 405               | 8                                    | NR                             | 535               | 486                                  | NR                             | 665               | 271                                  | NR                             | 795               | 4                                    | NR                             | 925               | 0                                    | NR                             |
| 410               | 16                                   | NR                             | 540               | 514                                  | NR                             | 670               | 231                                  | NR                             | 800               | 4                                    | NR                             | 930               | 0                                    | NR                             |
| 415               | 33                                   | NR                             | 545               | 549                                  | NR                             | 675               | 198                                  | NR                             | 805               | 3                                    | NR                             | 935               | 0                                    | NR                             |
| 420               | 69                                   | NR                             | 550               | 591                                  | NR                             | 680               | 169                                  | NR                             | 810               | 3                                    | NR                             | 940               | 0                                    | NR                             |
| 425               | 131                                  | NR                             | 555               | 640                                  | NR                             | 685               | 144                                  | NR                             | 815               | 2                                    | NR                             | 945               | 0                                    | NR                             |
| 430               | 227                                  | NR                             | 560               | 695                                  | NR                             | 690               | 123                                  | NR                             | 820               | 2                                    | NR                             | 950               | 0                                    | NR                             |
| 435               | 369                                  | NR                             | 565               | 757                                  | NR                             | 695               | 104                                  | NR                             | 825               | 2                                    | NR                             | 955               | 0                                    | NR                             |
| 440               | 517                                  | NR                             | 570               | 822                                  | NR                             | 700               | 88                                   | NR                             | 830               | 2                                    | NR                             | 960               | 0                                    | NR                             |
| 445               | 498                                  | NR                             | 575               | 882                                  | NR                             | 705               | 75                                   | NR                             | 835               | 1                                    | NR                             | 965               | 0                                    | NR                             |
| 450               | 315                                  | NR                             | 580               | 935                                  | NR                             | 710               | 63                                   | NR                             | 840               | 1                                    | NR                             | 970               | 0                                    | NR                             |
| 455               | 204                                  | NR                             | 585               | 972                                  | NR                             | 715               | 54                                   | NR                             | 845               | 1                                    | NR                             | 975               | 0                                    | NR                             |
| 460               | 145                                  | NR                             | 590               | 996                                  | NR                             | 720               | 46                                   | NR                             | 850               | 1                                    | NR                             | 980               | 0                                    | NR                             |
| 465               | 100                                  | NR                             | 595               | 1000                                 | NR                             | 725               | 39                                   | NR                             | 855               | 1                                    | NR                             | 985               | 0                                    | NR                             |
| 470               | 78                                   | NR                             | 600               | 989                                  | NR                             | 730               | 33                                   | NR                             | 860               | 1                                    | NR                             | 990               | 0                                    | NR                             |
| 475               | 76                                   | NR                             | 605               | 960                                  | NR                             | 735               | 28                                   | NR                             | 865               | 1                                    | NR                             | 995               | 0                                    | NR                             |
| 480               | 83                                   | NR                             | 610               | 918                                  | NR                             | 740               | 24                                   | NR                             | 870               | 1                                    | NR                             | 1000              | 0                                    | NR                             |
| 485               | 105                                  | NR                             | 615               | 864                                  | NR                             | 745               | 20                                   | NR                             | 875               | 1                                    | NR                             |                   |                                      |                                |

REPORT NUMBER: SP1-2407-184-4


TM-30-18

### Summary

$R_f = 73.8$   
 $R_g = 94.4$   
 $CIE R_a = 70.8$   
 $R_g = -43.2$



### Color Vector Graphics



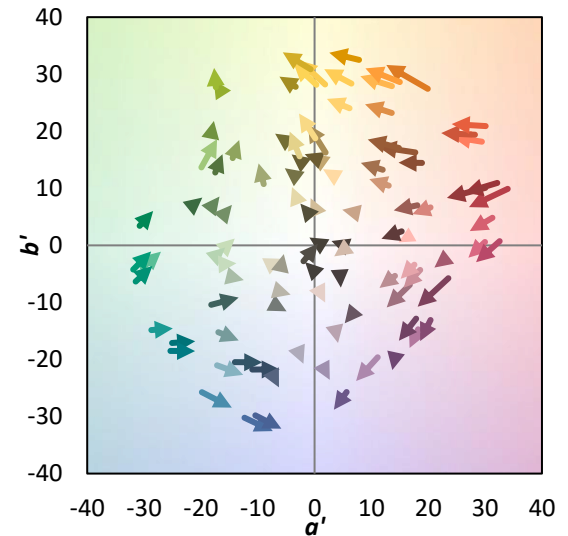


**Individual Sample Fidelity Index ( $R_{f,i}$ )**



|            |            |            |            |
|------------|------------|------------|------------|
| CES01 = 86 | CES26 = 63 | CES51 = 86 | CES76 = 61 |
| CES02 = 62 | CES27 = 83 | CES52 = 86 | CES77 = 81 |
| CES03 = 31 | CES28 = 86 | CES53 = 75 | CES78 = 64 |
| CES04 = 71 | CES29 = 58 | CES54 = 81 | CES79 = 86 |
| CES05 = 49 | CES30 = 61 | CES55 = 80 | CES80 = 86 |
| CES06 = 51 | CES31 = 63 | CES56 = 71 | CES81 = 70 |
| CES07 = 41 | CES32 = 61 | CES57 = 69 | CES82 = 94 |
| CES08 = 40 | CES33 = 65 | CES58 = 72 | CES83 = 88 |
| CES09 = 29 | CES34 = 77 | CES59 = 85 | CES84 = 90 |
| CES10 = 76 | CES35 = 88 | CES60 = 93 | CES85 = 80 |
| CES11 = 59 | CES36 = 89 | CES61 = 86 | CES86 = 60 |
| CES12 = 65 | CES37 = 85 | CES62 = 81 | CES87 = 78 |
| CES13 = 43 | CES38 = 69 | CES63 = 73 | CES88 = 75 |
| CES14 = 74 | CES39 = 93 | CES64 = 72 | CES89 = 66 |
| CES15 = 71 | CES40 = 89 | CES65 = 67 | CES90 = 72 |
| CES16 = 47 | CES41 = 83 | CES66 = 70 | CES91 = 95 |
| CES17 = 50 | CES42 = 87 | CES67 = 68 | CES92 = 59 |
| CES18 = 56 | CES43 = 77 | CES68 = 73 | CES93 = 76 |
| CES19 = 73 | CES44 = 99 | CES69 = 83 | CES94 = 48 |
| CES20 = 66 | CES45 = 83 | CES70 = 66 | CES95 = 70 |
| CES21 = 87 | CES46 = 77 | CES71 = 66 | CES96 = 76 |
| CES22 = 79 | CES47 = 74 | CES72 = 88 | CES97 = 82 |
| CES23 = 92 | CES48 = 62 | CES73 = 59 | CES98 = 73 |
| CES24 = 91 | CES49 = 77 | CES74 = 93 | CES99 = 60 |
| CES25 = 73 | CES50 = 85 | CES75 = 67 |            |



Color Rendition by Hue-Angle Bin

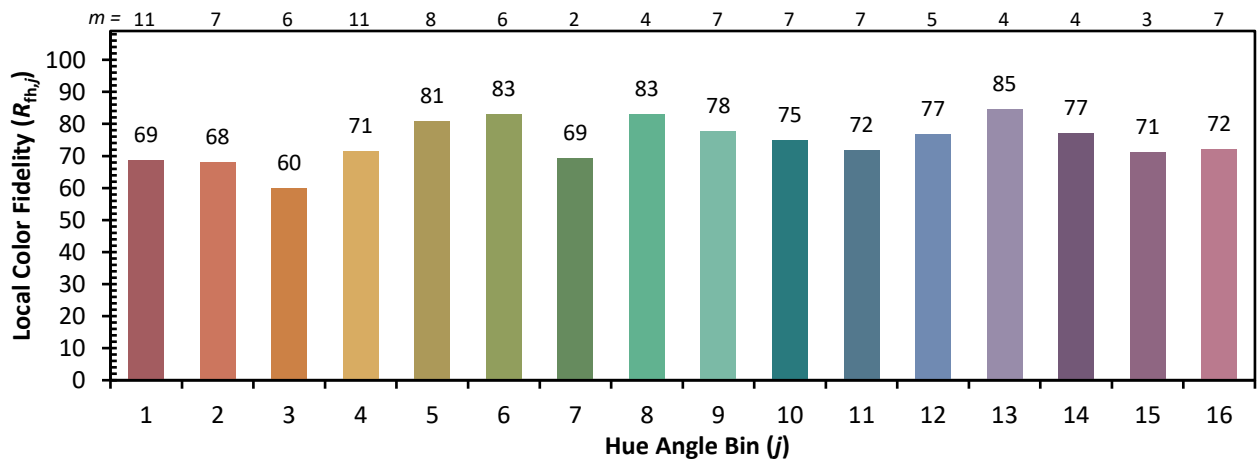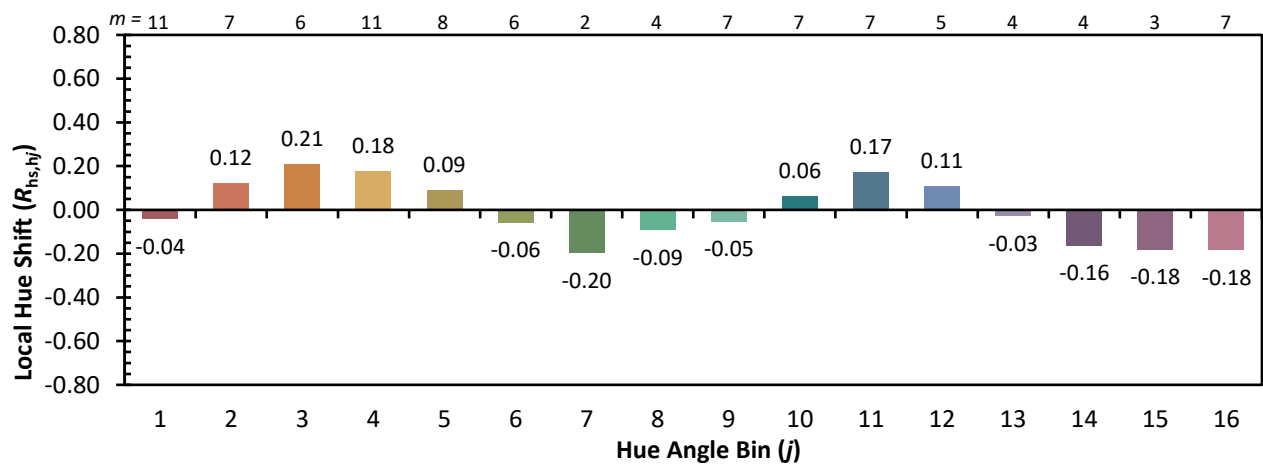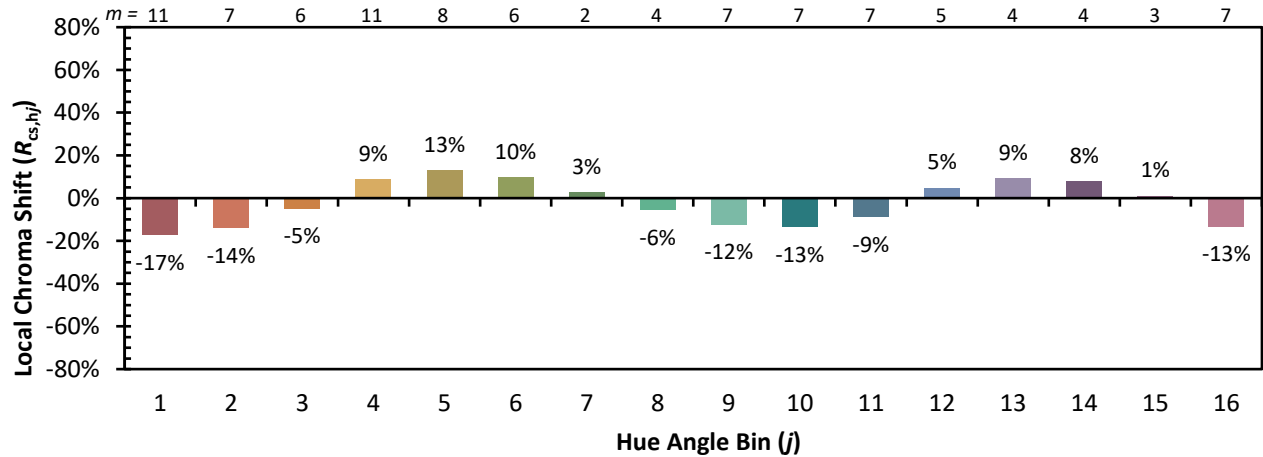

**Measure Comparisons**

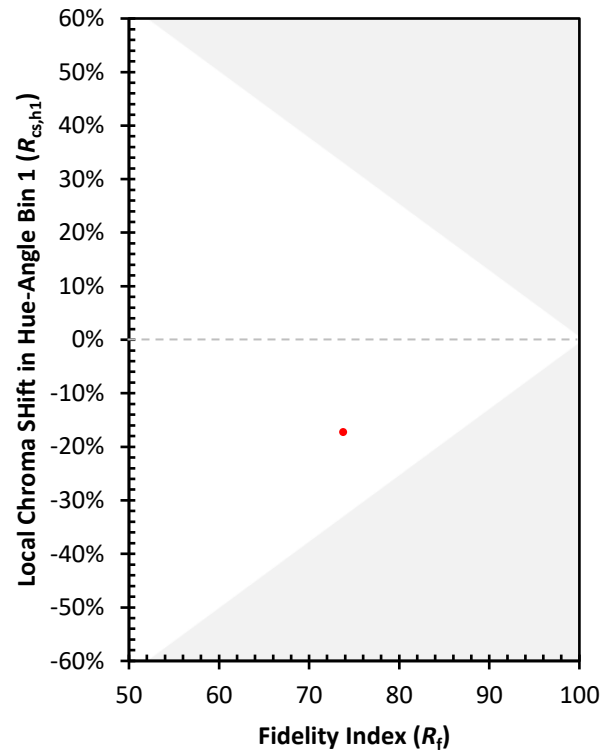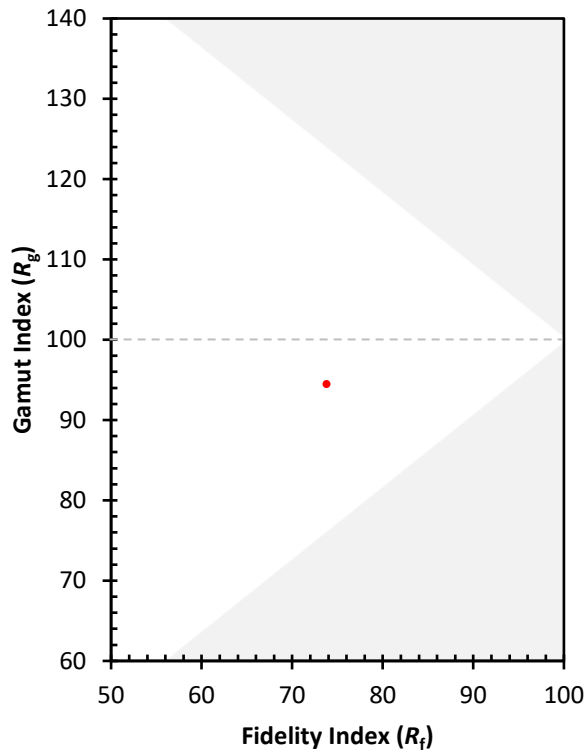

(END OF REPORT)